



4Core1333-Viiv

User Manual

Version 1.0

Published June 2007

Copyright©2007 ASRock INC. All rights reserved.

Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

CALIFORNIA, USA ONLY

The Lithium battery adopted on this motherboard contains Perchlorate, a toxic substance controlled in Perchlorate Best Management Practices (BMP) regulations passed by the California Legislature. When you discard the Lithium battery in California, USA, please follow the related regulations in advance.

"Perchlorate Material-special handling may apply, see www.dtsc.ca.gov/hazardouswaste/perchlorate"

ASRock Website: <http://www.asrock.com>

Contents

1 Introduction	5
1.1 Package Contents	5
1.2 Specifications	6
1.3 Minimum Hardware Requirement Table for Windows® Vista™ Premium 2007 and Basic Logo.....	9
1.4 Minimum Hardware Requirement Table for Intel® Viiv™ Technology.....	10
1.5 Motherboard Layout	11
1.6 ASRock 1394_eSATAII I/O Plus	12
1.7 ASRock DeskExpress Specifications	13
2 Installation.....	14
2.1 Screw Holes	14
2.2 Pre-installation Precautions	14
2.3 CPU Installation	15
2.4 Installation of Heatsink and CPU fan	17
2.5 Installation of Memory Modules (DIMM).....	18
2.6 Expansion Slots	20
2.7 ASRock DeskExpress Installation Guide	22
2.8 CrossFire™ Operation Guide	25
2.9 Surround Display Feature	29
2.10 Jumpers Setup	30
2.11 Onboard Headers and Connectors	31
2.12 HDMI_SPDIF Header Connection Guide	37
2.13 eSATAII Interface Introduction	38
2.14 SATAII Hard Disk Setup Guide	41
2.15 Serial ATA (SATA) / Serial ATAII (SATAII) Hard Disks Installation	42
2.16 Hot Plug and Hot Swap Functions for SATA / SATAII ... HDDs and eSATAII Devices	43
2.17 SATA / SATAII HDD Hot Plug Feature and Operation Guide	44
2.18 Driver Installation Guide	46
2.19 Installing Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit With RAID Functions	46
2.19.1 Installing Windows® 2000 / XP / XP 64-bit With RAID Functions	46
2.19.2 Setting Up a RAID Ready System	47
2.19.3 Migrating a "RAID Ready" System to RAID 0, RAID 1 or RAID 5	48

2.19.4	Installing Windows® Vista™ / Vista™ 64-bit With RAID Functions	49
2.20	Installing Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit Without RAID Functions	50
2.20.1	Installing Windows® 2000 / XP / XP 64-bit Without RAID Functions	50
2.20.2	Installing Windows® Vista™ / Vista™ 64-bit Without RAID Functions	51
2.21	Untied Overclocking Technology	51
3	BIOS SETUP UTILITY	52
3.1	Introduction	52
3.1.1	BIOS Menu Bar	52
3.1.2	Navigation Keys	53
3.2	Main Screen	53
3.3	Advanced Screen	53
3.3.1	CPU Configuration	54
3.3.2	Chipset Configuration	56
3.3.3	ACPI Configuration	58
3.3.4	IDE Configuration	59
3.3.5	PCIPnP Configuration	61
3.3.6	Floppy Configuration	62
3.3.7	Super IO Configuration	62
3.3.8	USB Configuration	64
3.4	Hardware Health Event Monitoring Screen	65
3.5	Boot Screen	65
3.5.1	Boot Settings Configuration	66
3.6	Security Screen	66
3.7	Exit Screen	67
4	Software Support	68
4.1	Install Operating System	68
4.2	Support CD Information	68
4.2.1	Running Support CD	68
4.2.2	Drivers Menu	68
4.2.3	Utilities Menu	68
4.2.4	Contact Information	68

Chapter 1 Introduction

Thank you for purchasing ASRock **4Core1333-Viiv** motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest VGA cards and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com>

1.1 Package Contents

ASRock **4Core1333-Viiv** Motherboard

(ATX Form Factor: 12.0-in x 9.0-in, 30.5 cm x 22.9 cm)

ASRock **4Core1333-Viiv** Quick Installation Guide

ASRock **4Core1333-Viiv** Support CD

Motherboard Accessories

- One 80-conductor Ultra ATA 66/100/133 IDE Ribbon Cable
- One Ribbon Cable for a 3.5-in Floppy Drive
- Two Serial ATA (SATA) Data Cables (Optional)
- One Serial ATA (SATA) HDD Power Cable (Optional)
- One HDMI_SPDIF Cable (Optional)
- One "ASRock 1394_eSATAII I/O Plus" I/O Panel Shield

ASRock DeskExpress Accessories (Optional)

- One ASRock DeskExpress
- One ASRock PCIE_DE Card
- Two Serial ATA (SATA) Data Cables
- One DeskExpress Hot Plug Detection Cable
- One USB Header Data Cable
- Four Screws

1.2 Specifications

Platform	- ATX Form Factor: 12.0-in x 9.0-in, 30.5 cm x 22.9 cm
CPU	- LGA 775 for Intel® Core™ 2 Quad / Core™ 2 Extreme / Core™ 2 Duo / Pentium® XE / Pentium® D / Pentium® Dual Core / Pentium® 4 / Celeron® / Celeron® D, supporting Quad Core Kentsfield processors - Compatible with all FSB1333/1066/800/533MHz CPUs (see CAUTION 1) - Intel® ViiV™ Ready (see CAUTION 2) - Supports Hyper-Threading Technology (see CAUTION 3) - Supports Untied Overclocking Technology (see CAUTION 4) - Supports EM64T CPU
Chipset	- Northbridge: Intel® P965 - Southbridge: Intel® ICH8DH
Memory	- Dual Channel DDRII Memory Technology (see CAUTION 5) - 4 x DDRII DIMM slots - Support DDRII800/667/533 (see CAUTION 6) - Max. capacity: 8GB (see CAUTION 7)
Hybrid Booster	- CPU Frequency Stepless Control (see CAUTION 8) - ASRock U-COP (see CAUTION 9) - Boot Failure Guard (B.F.G.)
Expansion Slot	- Supports ATI™ CrossFire™ - 1 x PCI Express x16 slot - 1 x AGI Express slot (PCI Express x4) - 1 x PCI Express x1 slot - 3 x PCI slots
Audio	- 7.1 CH Windows® Vista™ Premium Level HD Audio (ALC888 Audio Codec)
LAN	- Gigabit LAN 10/100/1000 Mb/s - Giga PHY Intel® 82566DC - Supports Wake-On-LAN
Rear Panel I/O	ASRock 1394_eSATAII I/O Plus - 1 x PS/2 Mouse Port - 1 x PS/2 Keyboard Port - 1 x Serial Port: COM1 - 1 x Parallel Port (ECP/EPP Support) - 4 x Ready-to-Use USB 2.0 Ports - 1 x eSATAII Port - 1 x RJ-45 Port - 1 x IEEE 1394 Port

	- HD Audio Jack: Side Speaker/Rear Speaker/Central/Bass/Line in/Front Speaker/Microphone (see CAUTION 10)
Connector	<ul style="list-style-type: none"> - 6 x SATAII 3.0Gb/s connectors, support RAID (RAID 0, RAID 1, RAID 10, RAID 5 and Intel Matrix Storage), NCQ, AHCI and "Hot Plug" functions (see CAUTION 11) - 1 x eSATAII 3.0Gb/s connector (shared with 1 SATAII connector), support NCQ, AHCI and "Hot Plug" function (see CAUTION 12) - 1 x ATA133 IDE connector (supports 2 x IDE devices) - 1 x Floppy connector - 1 x DeskExpress Hot Plug Detection header - 1 x Game header - 1 x HDMI_SPDIF header - 1 x IEEE 1394 header - CPU/Chassis FAN connector - 20 pin ATX power connector - 4 pin 12V power connector - SLI/XFIRE power connector - CD in header - Front panel audio connector - 3 x USB 2.0 headers (support 6 USB 2.0 ports) (see CAUTION 13)
BIOS Feature	<ul style="list-style-type: none"> - 4Mb AMI BIOS - AMI Legal BIOS - Supports "Plug and Play" - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - AMBIOS 2.3.1 Support
Support CD	- Drivers, Utilities, AntiVirus Software (Trial Version)
Hardware Monitor	<ul style="list-style-type: none"> - CPU Temperature Sensing - Chassis Temperature Sensing - CPU Fan Tachometer - Chassis Fan Tachometer - CPU Quiet Fan - Voltage Monitoring: +12V, +5V, +3.3V, CPU Vcore
OS	- Microsoft® Windows® 2000 / XP / XP Media Center / XP 64-bit / Vista™ / Vista™ 64-bit compliant (see CAUTION 14)
Certifications	- FCC, CE, WHQL

WARNING

Please realize that there is a certain risk involved with overclocking, including adjusting the setting in the BIOS, applying Untied Overclocking Technology, or using the third-party overclocking tools. Overclocking may affect your system stability, or even cause damage to the components and devices of your system. It should be done at your own risk and expense. We are not responsible for possible damage caused by overclocking.

CAUTION!

1. FSB1333-CPU will operate in overclocking mode.
2. Intel® Viiv™ technology is only supported under 32-bit OS of Windows® XP Media Center and Windows® Vista™ Home Premium and Ultimate Edition. For the minimum hardware requirements of Intel® Viiv™ technology, please refer to page 10 for details.
3. About the setting of "Hyper Threading Technology", please check page 55.
4. This motherboard supports Untied Overclocking Technology. Please read "Untied Overclocking Technology" on page 51 for details.
5. This motherboard supports Dual Channel Memory Technology. Before you implement Dual Channel Memory Technology, make sure to read the installation guide of memory modules on page 18 for proper installation.
6. Please check the table below for the CPU FSB frequency and its corresponding memory support frequency.

CPU FSB Frequency	Memory Support Frequency
1333	DDRII667
1066	DDRII533, DDRII667, DDRII800
800	DDRII533, DDRII667, DDRII800
533	DDRII533

7. Due to the operating system limitation, the actual memory size may be less than 4GB for the reservation for system usage under Windows® XP and Windows® Vista™. For Windows® XP 64-bit and Windows® Vista™ 64-bit with 64-bit CPU, there is no such limitation.
8. Although this motherboard offers stepless control, it is not recommended to perform over-clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.
9. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
10. For microphone input, this motherboard supports both stereo and mono modes. For audio output, this motherboard supports 2-channel, 4-channel, 6-channel, and 8-channel modes. Please check the table on page 12 for proper connection.

11. Before installing SATAII hard disk to SATAII connector, please read the "SATAII Hard Disk Setup Guide" on page 41 to adjust your SATAII hard disk drive to SATAII mode. You can also connect SATA hard disk to SATAII connector directly.
12. This motherboard supports eSATAII interface, the external SATAII specification. Please read "eSATAII Interface Introduction" on page 38 for details about eSATAII and eSATAII installation procedures.
13. Power Management for USB 2.0 works fine under Microsoft® Windows® Vista™ 64-bit / Vista™ / XP 64-bit / XP SP1 or SP2 / 2000 SP4.
14. Microsoft® Windows® Vista™ / Vista™ 64-bit driver keeps on updating now. As long as we have the latest driver, we will update it to our website in the future. Please visit our website for Microsoft® Windows® Vista™ / Vista™ 64-bit driver and related information.
ASRock website <http://www.asrock.com>

1.3 Minimum Hardware Requirement Table for Windows® Vista™ Premium 2007 and Basic Logo

For system integrators and users who purchase this motherboard and plan to submit Windows® Vista™ Premium 2007 and Basic logo, please follow below table for minimum hardware requirements.

CPU	Celeron D 326
Memory	1GB system memory (Premium)
	512MB Single Channel (Basic)
VGA	DX9.0 with WDDM Driver
	with 128bit VGA memory (Premium)
	with 64bit VGA memory (Basic)

* After June 1, 2007, all Windows® Vista™ systems are required to meet above minimum hardware requirements in order to qualify for Windows® Vista™ Premium 2007 logo.


1.4 Minimum Hardware Requirement Table for Intel® Viiv™ Technology

If you want to use Intel® Viiv™ technology on this motherboard, please follow below table for minimum hardware requirements.

CPU	Intel® Dual Core CPU *
HDD	SATAII HDD with NCQ function
Suggested OS	Windows® XP 32-bit Media Center or Windows® Vista™ 32-bit Home Premium and Ultimate Edition


* Currently, Intel® Viiv™ technology requires Intel® Dual Core CPU or above except Intel® Pentium® Dual Core E2XXX CPU. For further information of CPU support list, please refer to Intel® website for updates.

1.5 Motherboard Layout

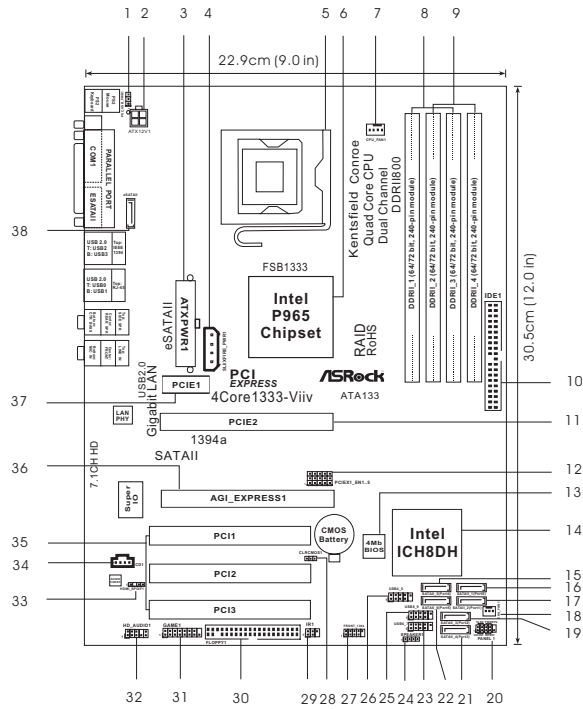

- | | |
|--|--|
| 1 PS2_USB_PWR1 Jumper | 20 System Panel Header (PANEL1) |
| 2 ATX 12V Connector (ATX12V1) | 21 SATAII Connector (SATAII_4 (PORT3)) |
| 3 ATX Power Connector (ATXPWR1) | 22 SATAII Connector (SATAII_6 (PORT5)) |
| 4 SLI/XFIRE Power Connector | 23 USB 2.0 Header (USB6_7, Blue) |
| 5 775-Pin CPU Socket | 24 Chassis Speaker Header (SPEAKER 1) |
| 6 North Bridge Controller | 25 USB 2.0 Header (USB8_9, Blue) |
| 7 CPU Fan Connector (CPU_FAN1) | 26 USB 2.0 Header (USB4_5, Blue) |
| 8 2 x 240-pin DDRII DIMM Slots
(Dual Channel A: DDRII_1, DDRII_3; Yellow) | 27 Front Panel IEEE 1394 Header (FRONT_1394) |
| 9 2 x 240-pin DDRII DIMM Slots
(Dual Channel B: DDRII_2, DDRII_4; Orange) | 28 Clear CMOS Jumper (CLRCMOS1) |
| 10 IDE1 Connector (IDE1, Blue) | 29 DeskExpress Hot Plug Detection Header (IR1) |
| 11 PCI Express x16 Slot (PCIE2) | 30 Floppy Connector (FLOPPY1) |
| 12 PCIEX1_EN1 - 5 | 31 Game Port Header (GAME1) |
| 13 Flash Memory | 32 Front Panel Audio Header (HD_AUDIO1) |
| 14 South Bridge Controller | 33 HDMI_SPDIF Header (HDMI_SPDIF1) |
| 15 SATAII Connector (SATAII_5 (PORT4)) | 34 Internal Audio Connector: CD1 (Black) |
| 16 SATAII Connector (SATAII_1 (PORT0)) | 35 PCI Slots (PCI1 - 3) |
| 17 SATAII Connector (SATAII_2 (PORT1)) | 36 AGI Express Slot (PCI Express x4) |
| 18 Chassis Fan Connector (CHA_FAN1) | 37 PCI Express x1 Slot (PCIE1) |
| 19 SATAII Connector (SATAII_3 (PORT2)) | 38 eSATAII Connector (eSATAII) |

1.6 ASRock 1394_eSATAII I/O Plus

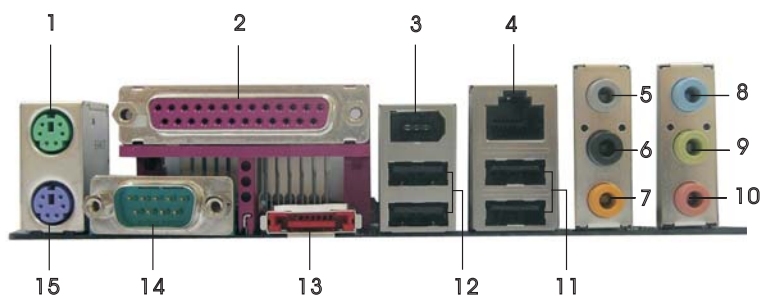


- | | |
|---------------------------|--------------------------------|
| 1 PS/2 Mouse Port (Green) | *9 Front Speaker (Lime) |
| 2 Parallel Port | 10 Microphone (Pink) |
| 3 IEEE 1394 Port | 11 USB 2.0 Ports (USB23) |
| 4 RJ-45 Port | 12 USB 2.0 Ports (USB01) |
| 5 Side Speaker (Gray) | 13 eSATAII Port |
| 6 Rear Speaker (Black) | 14 COM Port |
| 7 Central / Bass (Orange) | 15 PS/2 Keyboard Port (Purple) |
| 8 Line In (Light Blue) | |

* If you use 2-channel speaker, please connect the speaker's plug into "Front Speaker Jack". See the table below for connection details in accordance with the type of speaker you use.

TABLE for Audio Output Connection

Audio Output Channels	Front Speaker (No. 9)	Rear Speaker (No. 6)	Central / Bass (No. 7)	Side Speaker (No. 5)
2	√	--	--	--
4	√	√	--	--
6	√	√	√	--
8	√	√	√	√

* To enable Multi-Streaming function, you need to connect a front panel audio cable to the front panel audio header. After restarting your computer, you will find "Mixer" tool on your system. Please select "Mixer ToolBox" , click "Enable playback multi-streaming", and click "ok". Choose "2CH", "4CH", "6CH", or "8CH" and then you are allowed to select "Realtek HDA Primary output" to use Rear Speaker, Central/Bass, and Front Speaker, or select "Realtek HDA Audio 2nd output" to use front panel audio.

1.7 ASRock DeskExpress Specifications



ASRock DeskExpress, providing one front USB 2.0 port and one Express card slot to support all kinds of Express cards, such as eSATAII card, USB 2.0 card, LAN card and flash disc, offers you a device to expand the availability conveniently in addition to the PCI Express interface on this motherboard. Please refer to below table for ASRock DeskExpress specifications. For installation procedures of ASRock DeskExpress, please refer to page 22 for details.

Interface	- Express card / USB 2.0
Slot	- 1 x 54 mm Express card slot (compatible with ExpressCard/54 and ExpressCard/34) - 1 x USB 2.0 port
Connector	- 1 x Hot Plug Detection header (JHP1; black) - 1 x USB 2.0 header (USB1; blue) - 1 x 4 pin power connector (PWR1; white) - 2 x PCIE ports (PCIE1; yellow / PCIE2; white)
Case Dimension	- 115 mm x 99 mm x 25 mm, fit in 3.5-in bay

Chapter 2 Installation

4Core1333-Viiv is an ATX form factor (12.0" x 9.0", 30.5 x 22.9 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.


1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, **NEVER** place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 CPU Installation

For the installation of Intel 775-LAND CPU, please follow the steps below.

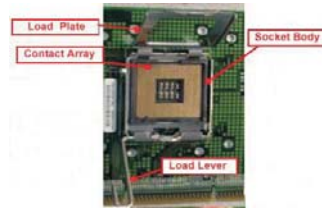


775-Pin Socket Overview



Before you insert the 775-LAND CPU into the socket, please check if the CPU surface is unclean or if there is any bent pin on the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.

Step 1. Open the socket:

Step 1-1. Disengaging the lever by depressing down and out on the hook to clear retention tab.

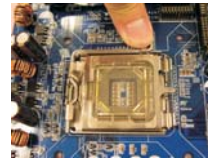


Step 1-2. Rotate the load lever to fully open position at approximately 135 degrees.

Step 1-3. Rotate the load plate to fully open position at approximately 100 degrees.




Step 2. Insert the 775-LAND CPU:


Step 2-1. Hold the CPU by the edges where are marked with black lines.

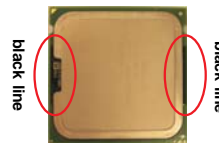

 Step 2-2. Orient the CPU with IHS (Integrated Heat Sink) up. Locate Pin1 and the two orientation key notches.



775-LAND CPU

 

775-Pin Socket



For proper inserting, please ensure to match the two orientation key notches of the CPU with the two alignment keys of the socket.

Step 2-3. Carefully place the CPU into the socket by using a purely vertical motion.

Step 2-4. Verify that the CPU is within the socket and properly mated to the orient keys.



Step 3. Remove PnP Cap (Pick and Place Cap):

Use your left hand index finger and thumb to support the load plate edge, engage PnP cap with right hand thumb and peel the cap from the socket while pressing on center of PnP cap to assist in removal.



1. It is recommended to use the cap tab to handle and avoid kicking off the PnP cap.
2. This cap must be placed if returning the motherboard for after service.

Step 4. Close the socket:

Step 4-1. Rotate the load plate onto the IHS.

Step 4-2. While pressing down lightly on load plate, engage the load lever.

Step 4-3. Secure load lever with load plate tab under retention tab of load lever.



2.4 Installation of CPU Fan and Heatsink

This motherboard is equipped with 775-Pin socket that supports Intel 775-LAND CPU. Please adopt the type of heatsink and cooling fan compliant with Intel 775-LAND CPU to dissipate heat. Before you installed the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation. Ensure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU_FAN connector (CPU_FAN1, see page 11, No. 7).

For proper installation, please kindly refer to the instruction manuals of your CPU fan and heatsink.

Below is an example to illustrate the installation of the heatsink for 775-LAND CPU.

Step 1. Apply thermal interface material onto center of IHS on the socket surface.



Step 2. Place the heatsink onto the socket. Ensure fan cables are oriented on side closest to the CPU fan connector on the motherboard (CPU_FAN1, see page 11, No. 7).



Step 3. Align fasteners with the motherboard throughholes.

Step 4. Rotate the fastener clockwise, then press down on fastener caps with thumb to install and lock. Repeat with remaining fasteners.



If you press down the fasteners without rotating them clockwise, the heatsink cannot be secured on the motherboard.

Step 5. Connect fan header with the CPU fan connector on the motherboard.

Step 6. Secure excess cable with tie-wrap to ensure cable does not interfere with fan operation or contact other components.

2.5 Installation of Memory Modules (DIMM)

4Core1333-Viiv motherboard provides four 240-pin DDRII (Double Data Rate II) DIMM slots, and supports Dual Channel Memory Technology. For dual channel configuration, you always need to install **identical** (the same brand, speed, size and chip-type) DDRII DIMM pair in the slots of the same color. In other words, you have to install **identical** DDRII DIMM pair in **Dual Channel A** (DDRII_1 and DDRII_3; Yellow slots; see p.11 No.8) or **identical** DDRII DIMM pair in **Dual Channel B** (DDRII_2 and DDRII_4; Orange slots; see p.11 No.9), so that Dual Channel Memory Technology can be activated. This motherboard also allows you to install four DDRII DIMMs for dual channel configuration, and please install **identical** DDRII DIMMs in all four slots. You may refer to the Dual Channel Memory Configuration Table below.

Dual Channel Memory Configurations

	DDRII_1 (Yellow Slot)	DDRII_2 (Orange Slot)	DDRII_3 (Yellow Slot)	DDRII_4 (Orange Slot)
(1)	Populated	-	Populated	-
(2)	-	Populated	-	Populated
(3)*	Populated	Populated	Populated	Populated

* For the configuration (3), please install **identical** DDRII DIMMs in all four slots.





1. If you want to install two memory modules, for optimal compatibility and reliability, it is recommended to install them in the slots of the same color. In other words, install them either in the set of yellow slots (DDRII_1 and DDRII_3), or in the set of orange slots (DDRII_2 and DDRII_4).
2. If only one memory module or three memory modules are installed in the DDRII DIMM slots on this motherboard, it is unable to activate the Dual Channel Memory Technology.
3. If a pair of memory modules is NOT installed in the same Dual Channel, for example, installing a pair of memory modules in DDRII_1 and DDRII_2, it is unable to activate the Dual Channel Memory Technology .
4. It is not allowed to install a DDR memory module into DDRII slot; otherwise, this motherboard and DIMM may be damaged.
5. If you plan to use ATI™ PCI Express VGA card on this motherboard, the total system memory size should be above 512MB.

Installing a DIMM



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

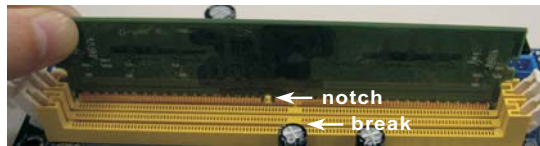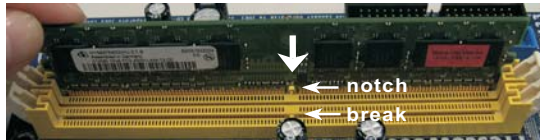

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

- Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

2.6 Expansion Slots (PCI, PCI Express, and AGI Express Slots)

There are 3 PCI slots, 2 PCI Express slots, and 1 AGI Express slot (PCI Express x4) on this motherboard.

PCI slots: PCI slots are used to install expansion cards that have the 32-bit PCI interface.

PCIE slots: PCIE1 (PCIE x1 slot) is used for PCI Express cards with x1 lane width cards, such as Gigabit LAN card, SATA2 card and ASRock PCIE_DE card (optional).

PCIE2 (PCIE x16 slot) is used for PCI Express cards with x16 lane width graphics cards.

AGI Express slot (PCI Express x4):

AGI Express slot (PCI Express x4) is used to install PCI Express expansion cards. You need to adjust the jumpers in advance to enable AGI Express slot (PCI Express x4), but under this situation, onboard IDE connector (IDE1) will be disabled. Please refer to below table for proper jumper settings.



If you plan to install only one PCI Express card on this motherboard, please install it on PCIE2 (PCIE x16 slot).

Function	Jumper Settings
Enable AGI Express slot (PCIE x4) / Disable onboard IDE connector (IDE1)	<p>PCIE x1_EN1 PCIE x1_EN2 PCIE x1_EN3 PCIE x1_EN4 PCIE x1_EN5</p>
Enable onboard IDE connector (IDE1) / Disable AGI Express slot (PCIE x4) (Default)	<p>PCIE x1_EN1 PCIE x1_EN2 PCIE x1_EN3 PCIE x1_EN4 PCIE x1_EN5</p>

Installing an expansion card

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 3. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 4. Fasten the card to the chassis with screws.

2.7 ASRock DeskExpress Installation Guide

This motherboard supports ASRock DeskExpress, providing PCI Express slot for one front USB 2.0 port and all kinds of PCI Express interface cards, such as eSATAII card, USB 2.0 card, LAN card and flash disc. ASRock DeskExpress provides a device for you to expand the availability conveniently in addition to the PCI Express interface on this motherboard. To use ASRock DeskExpress function, please check below accessories (optional) from the motherboard gift box pack in advance.

- A. ASRock DeskExpress
- B. ASRock PCIE_DE card
- C. DeskExpress Hot Plug Detection Cable
- D. USB Header Data Cable
- E. Screws



A. ASRock DeskExpress



B. ASRock PCIE_DE Card



C. DeskExpress Hot Plug Detection Cable



D. USB Header Data Cable




E. Screws


Step 1. Install ASRock PCIE_DE card to PCIE1 slot on this motherboard. For the proper installation of ASRock PCIE_DE card, please refer to the installation guide on page 20.



Step 2. Connect either end of SATA data cable to PCIE1 (yellow) / PCIE2 (white) port on ASRock PCIE_DE card.

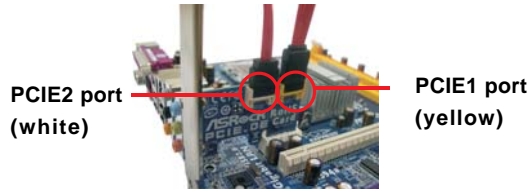


Step 3. Connect the other end of SATA data cable to PCIE1 (yellow) / PCIE2 (white) port on ASRock DeskExpress. Please correctly connect the SATA data cables to the ports with corresponding colors on ASRock PCIE_DE card and ASRock DeskExpress. (PCIE1 (yellow) port to PCIE1 (yellow) port; PCIE2 (white) port to PCIE2 (white) port.)

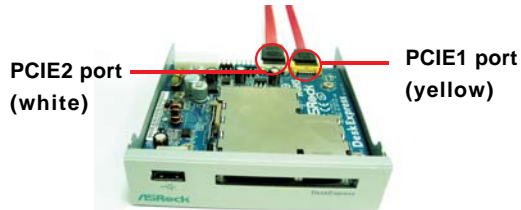

If you do not connect SATA data cable to the correct port, ASRock PCIE_DE card and ASRock DeskExpress will not function.

Step 4. Connect either end of DeskExpress Hot Plug detection cable to Hot Plug detection header (JHP1; black) on ASRock DeskExpress.

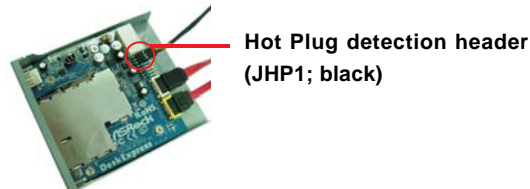


- Step 5. Connect the other end of DeskExpress Hot Plug detection cable to DeskExpress Hot Plug detection header (IR1; see p.11 No.29) on this motherboard.



**DeskExpress Hot Plug
detection header (IR1)**

- Step 6. Connect either end of USB header data cable to USB 2.0 header (USB1; blue) on ASRock DeskExpress.

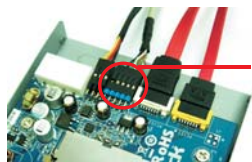

USB 2.0 header (USB1; blue)

- Step 7. Connect the other end of USB header data cable to any USB 2.0 header (USB4_5, USB6_7 or USB8_9; see p.11 No.26, 23 or 25) on this motherboard.



USB 2.0 header (blue)

- Step 8. Fasten ASRock DeskExpress to 3.5-in bay on the chassis with screws.
Step 9. Boot your system.
Step 10. The function of ASRock DeskExpress is enabled. You can insert your USB flash drive or any PCI Express interface card to ASRock DeskExpress. (USB flash drive and PCI Express interface card are not bundled with this motherboard. Please refer to the product vendor for related information.)



2.8 CrossFire™ Operation Guide

This motherboard supports CrossFire™ feature. CrossFire™ technology offers the most advantageous means available of combining multiple high performance Graphics Processing Units (GPU) in a single PC. Combining a range of different operating modes with intelligent software design and an innovative interconnect mechanism, CrossFire™ enables the highest possible level of performance and image quality in any 3D application. Currently CrossFire™ feature is supported with Windows® XP with Service Pack 2. Please check ATI™ website for driver updates.



What graphics cards work with CrossFire™?

A complete CrossFire™ system requires a CrossFire™ Ready motherboard, a CrossFire™ Edition graphics card and a compatible standard Radeon (CrossFire™ Ready) graphics card from the same series, or two CrossFire™ Ready cards if they are software enabled. This applies to cards from ATI™ or any of its partners.

Cards For AGI Express Slot	Cards For PCI-E Slot
Radeon X1950Pro Series	Radeon X1950Pro Series
Radeon X1950XTX Series	Radeon X1950XTX CrossFire™ Edition
Radeon X1950 Series	Radeon X1950 CrossFire™ Edition
Radeon X1900 Series	Radeon X1900 CrossFire™ Edition
Radeon X1800 Series	Radeon X1800 CrossFire™ Edition
Radeon X1650Pro Series	Radeon X1650Pro Series
Radeon X1600 Series	Radeon X1600 Series
Radeon X1300 Series	Radeon X1300 Series
Radeon X850 Series	Radeon X850 CrossFire™ Edition



1. If a customer incorrectly configures their system they will not see the performance benefits of CrossFire™. All three CrossFire™ components, a CrossFire™ Ready graphics card, a CrossFire™ Ready motherboard and a CrossFire™ Edition co-processor graphics card, must be installed correctly to benefit from the CrossFire™ multi-GPU platform.
2. If you pair a 12-pipe CrossFire™ Edition card with a 16-pipe card, both cards will operate as 12-pipe cards while in CrossFire™ mode.

Enjoy the benefit of CrossFire™



Currently, ATI™ has released Radeon X850XT, X1800XT, X1900XT, X1950XT, X1950Pro, X1950XTX, X1300, X1650 and X1600 CrossFire™ cards, which require different methods to enable CrossFire™ feature. In the below procedures, we use Radeon X850XT as the example graphics card. For other CrossFire™ cards that ATI™ has released or will release in the future, please refer to ATI™ graphics card manuals for detailed installation guide.

Step 1. Adjust the jumpers on this motherboard to enable AGI Express slot (PCI Express x4). Please refer to the pictures below for proper jumper setting.



PCIEX1_EN1-5: Short Pin1, Pin2

Step 2. Connect to the system power supply. Please connect a hard disk power connector to SLI/XFIRE Power connector on this motherboard.




It is recommended to use 500-Watt power supply or greater to perform the benefit of CrossFire™ feature for Radeon X850XT, X1900 and X1950 series.



Step 3. Install the standard Radeon (CrossFire™ Ready) graphics card to AGI Express slot (PCI Express x4). For the proper installation procedures, please refer to section “Expansion Slots”.

Standard Radeon
(CrossFire™ Ready)
graphics card

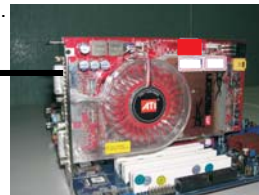

Step 4. Install the Radeon CrossFire™ Edition graphics card to PCIE2 slot. For the proper installation procedures, please refer to section “Expansion Slots”.

Radeon CrossFire™
Edition graphics card

Standard Radeon
(CrossFire™ Ready)
graphics card



1. You are allowed to install two CrossFire™ Edition graphics cards to both slots, or you may use one CrossFire™ Edition graphics cards and a compatible standard Radeon (CrossFire™ Ready) graphics card from the same series.
2. For ATI™ Radeon X1300, X1600, X1650 and X1950Pro series, there are no CrossFire™ Edition graphics cards. You can still install two regular graphics cards from the same series on PCIE2 slot and AGI Express slot (PCI Express x4) to support CrossFire™. Besides, please connect the monitor cable to the graphics card on PCIE2 slot.

Step 5. Correctly connect the DVI-DMS cable to the monitor connector and two graphics cards that you install. (If you install two standard Radeon (CrossFire™ Ready) graphics cards to this motherboard, please skip this step.)



DVI-DMS cable



DMS connector



DVI connector



Connect the DVI-DMS cable to DVI connector of the compatible standard Radeon (CrossFire™ Ready) graphics card.



Standard Radeon (CrossFire™ Ready) graphics card

DVI connector

There are two DVI connectors on the standard Radeon (CrossFire™ Ready) graphics card. Please connect the DVI-DMS cable to the correct DVI connector; otherwise, the graphics card will not work.

Radeon CrossFire™ Edition graphics card



Connect the DVI-DMS cable to DMS connector of the CrossFire™ Edition graphics card.

DMS connector



Connect the DVI-DMS cable to the monitor connector.




If you install two CrossFire™ Edition graphics cards to this motherboard, please connect one end of DVI-DMS cable to the monitor, another end to DMS of one of the CrossFire™ Edition graphics cards to PCIE2 slot, and the other end to DVI of another CrossFire™ Edition graphics card to AGI Express slot (PCI Express x4). If you install one CrossFire™ Edition graphics card and one compatible standard Radeon (CrossFire™ Ready) graphics card to this motherboard, please connect one end of DVI-DMS cable to the monitor, another end to DMS of the CrossFire™ Edition graphics card, and the other end to DVI of the compatible standard Radeon (CrossFire™ Ready) graphics card.

-
- Step 6. Power on your computer and boot into OS.
Step 7. Remove the ATI™ driver if you have any VGA driver installed in your system.




The Catalyst Uninstaller is an optional download. We recommend using this utility to uninstall any previously installed Catalyst drivers prior to installation. Please visit this website for the driver:
<http://support.ati.com/ics/support/DLRedirect.asp?fileIDExt=050553d40196ef109ff37cbb40aaf28&accountID=737&deptID=894>

- Step 8. Install the required drivers to your system. Please visit the websites below for installing the drivers that ATI™ recommends:
- A. ATI™ recommends Windows® XP Service Pack 2 or higher to be installed (If you have Windows® XP Service Pack 2 or higher installed in your system, there is no need to download it again):
<http://www.microsoft.com/windowsxp/sp2/default.msp>
 - B. You must have Microsoft .NET Framework installed prior to downloading and installing the CATALYST Control Center:
<http://www.microsoft.com/downloads/details.aspx?FamilyId=262D25E3-F589-4842-8157-034D1E7CF3A3&displaylang=en>
- Step 9. Restart your computer.
Step 10. Install the VGA card drivers to your system, and restart your computer. Then you will find “ATI Catalyst Control Center” on your desktop.

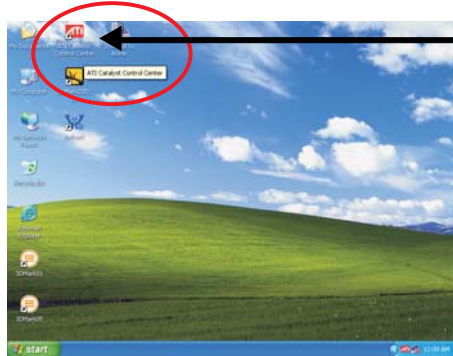

You will find “ATI Catalyst Control Center” on your desktop.

Step 11. Double-click "ATI Catalyst Control Center". Click "View", and select "Advanced View". Click "CrossFire™", and then set the option "Enable CrossFire™" to "Yes".

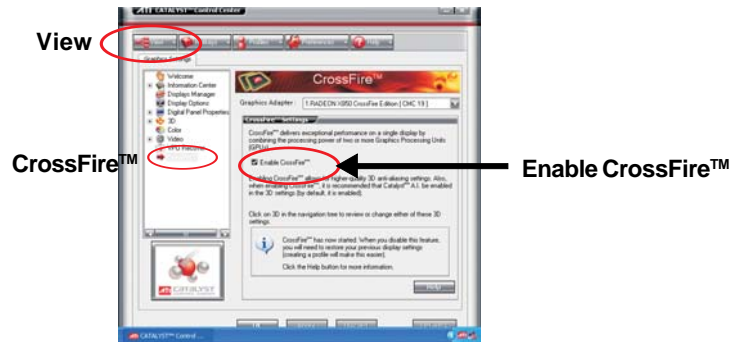

If you install one Radeon CrossFire™ Edition graphics card and one compatible standard Radeon (CrossFire™ Ready) graphics card to this motherboard but not two Radeon CrossFire™ Edition graphics cards, please as well follow the above steps. However, although you have selected the option "Enable CrossFire™", the CrossFire™ function can not work actually. Your computer will automatically reboot. After restarting your computer, please confirm whether the option "Enable CrossFire™" in "ATI Catalyst Control Center" is selected or not; if not, please select it again, and then you are able to enjoy the benefit of CrossFire™ feature.

Step 12. You can freely enjoy the benefit of CrossFire™ feature.

* **CrossFire™** appearing here is a registered trademark of ATI™ Technologies Inc., and is used only for identification or explanation and to the owners' benefit, without intent to infringe.


2.9 Surround Display Feature



This motherboard supports Surround Display upgrade. With the external add-on PCI Express VGA card, you can easily enjoy the benefits of Surround Display feature. For the detailed instruction, please refer to the document at the following path in the Support CD:

..\ Surround Display Information

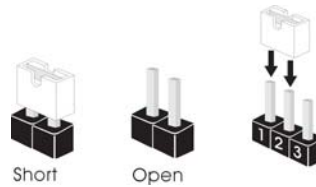

2.10 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.





Jumper	Setting	Description
PS2_USB_PWR1 (see p.11 No. 1)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1_2</p>  <p>+5V</p> </div> <div style="text-align: center;"> <p>2_3</p>  <p>+5VSB</p> </div> </div>	Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

Clear CMOS Jumper (CLRCMOS1) (see p.11, No. 28)	Setting
	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1_2</p>  <p>Default</p> </div> <div style="text-align: center;"> <p>2_3</p>  <p>Clear CMOS</p> </div> </div>

Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short pin2 and pin3 on CLRCMOS1 for 5 seconds. However, please do not clear the CMOS right after you update the BIOS. If you need to clear the CMOS when you just finish updating the BIOS, you must boot up the system first, and then shut it down before you do the clear-CMOS action.

PCIEX1_EN1-5 (see p.11 No. 12)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>2_3</p>  <p>Default</p> </div> <div style="text-align: center;"> <p>1_2</p>  </div> </div>	Short pin2, pin3 to enable onboard IDE connector (IDE1) and disable AGI Express slot (PCI Express x4). Short pin1, pin2 to enable AGI Express slot (PCI Express x4) and disable onboard IDE connector (IDE1).
-----------------------------------	---	---

2.11 Onboard Headers and Connectors



 
Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!

FDD connector
(33-pin FLOPPY1)
(see p.11 No. 30)



Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

Primary IDE connector (Blue)
(39-pin IDE1, see p.11 No. 10)




connect the blue end to the motherboard connect the black end to the IDE devices
80-conductor ATA 66/100 cable

Note: Please refer to the instruction of your IDE device vendor for the details.

Serial ATAII Connectors

(SATAII_1 (Port0): see p.11, No. 16)
(SATAII_2 (Port1): see p.11, No. 17)
(SATAII_3 (Port2): see p.11, No. 19)
(SATAII_4 (Port3): see p.11, No. 21)
(SATAII_5 (Port4): see p.11, No. 15)
(SATAII_6 (Port5): see p.11, No. 22)

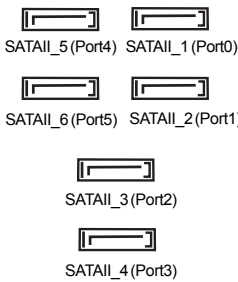

These six Serial ATAII (SATAII) connectors support SATA data cables for internal storage devices. The current SATAII interface allows up to 3.0 Gb/s data transfer rate.



SATAII_6 (Port5) connector can be used for internal storage device or be connected to eSATAII connector to support eSATAII device. Please read "eSATAII Interface Introduction" on page 38 for details about eSATAII and eSATAII installation procedures.

eSATAII Connector
(eSATAII: see p.11, No. 38)




This eSATAII connector supports SATA data cable for external SATAII function. The current eSATAII interface allows up to 3.0 Gb/s data transfer rate.

Serial ATA (SATA) Data Cable
(Optional)



Either end of the SATA data cable can be connected to the SATA / SATAII hard disk or the SATAII connector on this motherboard. You can also use the SATA data cable to connect SATAII_6 (Port5) connector and eSATAII connector. If you use ASRock DeskExpress on this motherboard, please connect PCIE1 / PCIE2 port on ASRock PCIE_DE card and PCIE1 / PCIE2 port on ASRock DeskExpress.


Serial ATA (SATA) Power Cable
(Optional)

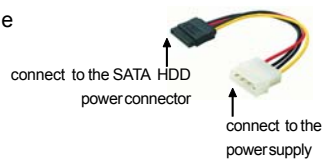

Please connect the black end of SATA power cable to the power connector on each drive. Then connect the white end of SATA power cable to the power connector of the power supply.

DeskExpress Hot Plug Detection Header

 
(5-pin IR1)
(see p.11 No. 29)



This header supports the Hot Plug detection function for ASRock DeskExpress.

Internal Audio Connectors

 
(4-pin CD1)
(CD1: see p.11 No. 34)



This connector allows you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.


USB 2.0 Headers

(9-pin USB8_9)
(see p.11 No. 25)

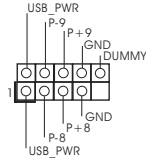


Besides four default USB 2.0 ports on the I/O panel, there are three USB 2.0 headers on this motherboard. Each USB 2.0 header can support two USB 2.0 ports.

(9-pin USB6_7)
(see p.11 No. 23)

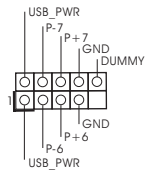


(9-pin USB4_5)
(see p.11 No. 26)

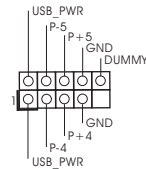


Front Panel Audio Header

(9-pin HD_AUDIO1)
(see p.11 No. 32)

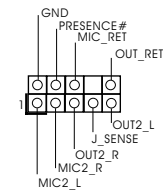


This is an interface for front panel audio cable that allows convenient connection and control of audio devices.




1. High Definition Audio supports Jack Sensing, but the panel wire on the chassis must support HDA to function correctly. Please follow the instruction in our manual and chassis manual to install your system.
2. If you use AC'97 audio panel, please install it to the front panel audio header as below:
 - A. Connect Mic_IN (MIC) to MIC2_L.
 - B. Connect Audio_R (RIN) to OUT2_R and Audio_L (LIN) to OUT2_L.
 - C. Connect Ground (GND) to Ground (GND).
 - D. MIC_RET and OUT_RET are for HD audio panel only. You don't need to connect them for AC'97 audio panel.
 - E. Enter BIOS Setup Utility. Enter Advanced Settings, and then select Chipset Configuration. Set the Front Panel Control option from [Auto] to [Enabled].
 - F. Enter Windows system. Click the icon on the lower right hand taskbar to enter Realtek HD Audio Manager.
For Windows® 2000 / XP / XP 64-bit OS:
Click "Audio I/O", select "Connector Settings" , choose "Disable front panel jack detection", and save the change by clicking "OK".

For Windows® Vista™ / Vista™ 64-bit OS:

Click the right-top "Folder" icon , choose "Disable front panel jack detection", and save the change by clicking "OK".

System Panel Header


(9-pin PANEL1)
(see p.11 No. 20)

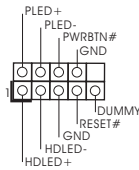

This header accommodates several system front panel functions.

Chassis Speaker Header

 
(4-pin SPEAKER 1)
(see p.11 No. 24)



Please connect the chassis speaker to this header.

Chassis Fan Connector

 
(3-pin CHA_FAN1)
(see p.11 No. 18)



Please connect a chassis fan cable to this connector and match the black wire to the ground pin.

CPU Fan Connector

 (4-pin CPU_FAN1)
(see p.11 No. 7)




Please connect a CPU fan cable to this connector and match the black wire to the ground pin.



Though this motherboard provides 4-Pin CPU fan (Quiet Fan) support, the 3-Pin CPU fan still can work successfully even without the fan speed control function. If you plan to connect the 3-Pin CPU fan to the CPU fan connector on this motherboard, please connect it to Pin 1-3.

 Pin 1-3 Connected ←



3-Pin Fan Installation

ATX Power Connector

(20-pin ATXPWR1)
(see p.11 No. 3)



Please connect an ATX power supply to this connector.

ATX 12V Connector

(4-pin ATX12V1)
(see p.11 No. 2)



Please connect an ATX 12V power supply to this connector.

SLI/XFIRE Power Connector

(4-pin SLI_XFIRE_POWER1)

(see p.11 No. 4)




SLI_XFIRE_POWER1

It is not necessary to use this connector, but please connect it with a hard disk power connector when two graphics cards are plugged to this motherboard at the same time.

Game Port Header

(15-pin GAME1)

(see p.11 No. 31)

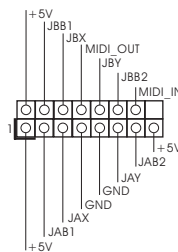


Connect a Game cable to this header if the Game port bracket is installed.

IEEE 1394 Header

(9-pin FRONT_1394)

(see p.11 No. 27)

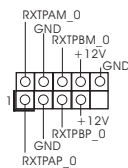

Besides one default IEEE 1394 port on the I/O panel, there is one IEEE 1394 header (FRONT_1394) on this motherboard. This IEEE 1394 header can support one IEEE 1394 port.

HDMI_SPDIF Header


(3-pin HDMI_SPDIF1)

(see p.11 No. 33)



HDMI_SPDIF header, providing SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. Please connect the HDMI_SPDIF connector of HDMI VGA card to this header.

HDMI_SPDIF Cable
(Optional)

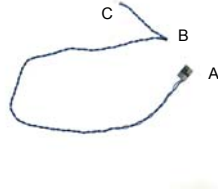


Please connect the black end (A) of HDMI_SPDIF cable to the HDMI_SPDIF header on the motherboard. Then connect the white end (B or C) of HDMI_SPDIF cable to the HDMI_SPDIF connector of HDMI VGA card.

A. black end



 B. white end (2-pin)



C. white end (3-pin)



DeskExpress Hot Plug Detection Cable
(Optional)



If you use ASRock DeskExpress on this motherboard, please connect either end of DeskExpress Hot Plug detection cable to DeskExpress Hot Plug detection header (IR1) on this motherboard or Hot Plug detection header (JHP1; black) on ASRock DeskExpress.

USB Header Data Cable
(Optional)



If you use ASRock DeskExpress on this motherboard, please connect either end of USB header data cable to USB 2.0 header (USB4_5, USB6_7 or USB8_9) on this motherboard or USB 2.0 header (USB1; blue) on ASRock DeskExpress.

2.12 HDMI_SPDIF Header Connection Guide

HDMI (High-Definition Multi-media Interface) is an all-digital audio/video specification, which provides an interface between any compatible digital audio/video source, such as a set-top box, DVD player, A/V receiver and a compatible digital audio or video monitor, such as a digital television (DTV). A complete HDMI system requires a HDMI VGA card and a HDMI ready motherboard with a HDMI_SPDIF header. This motherboard is equipped with a HDMI_SPDIF header, which provides SPDIF audio output to HDMI VGA card, allows the system to connect HDMI Digital TV/projector/LCD devices. To use HDMI function on this motherboard, please carefully follow the below steps.

Step 1. Install the HDMI VGA card to the PCI Express Graphics slot on this motherboard. For the proper installation of HDMI VGA card, please refer to the installation guide on page 20.

Step 2. Connect the black end (A) of HDMI_SPDIF cable to the HDMI_SPDIF header (HDMI_SPDIF1, yellow, see page 11, No. 33) on the motherboard.



Make sure to correctly connect the HDMI_SPDIF cable to the motherboard and the HDMI VGA card according to the same pin definition. For the pin definition of HDMI_SPDIF header and HDMI_SPDIF cable connectors, please refer to page 36. For the pin definition of HDMI_SPDIF connectors on HDMI VGA card, please refer to the user manual of HDMI VGA card vendor. Incorrect connection may cause permanent damage to this motherboard and the HDMI VGA card.


Step 3. Connect the white end (B or C) of HDMI_SPDIF cable to the HDMI_SPDIF connector of HDMI VGA card. (There are two white ends (2-pin and 3-pin) on HDMI_SPDIF cable. Please choose the appropriate white end according to the HDMI_SPDIF connector of the HDMI VGA card you install.



white end
(2-pin) (B)



white end
(3-pin) (C)

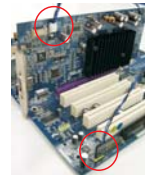

Please do not connect the white end of HDMI_SPDIF cable to the wrong connector of HDMI VGA card or other VGA card. Otherwise, the motherboard and the VGA card may be damaged. For example, this picture shows the wrong example of connecting HDMI_SPDIF cable to the fan connector of PCI Express VGA card. Please refer to the VGA card user manual for connector usage in advance.



Step 4. Connect the HDMI output connector on HDMI VGA card to HDMI device, such as HDTV. Please refer to the user manual of HDTV and HDMI VGA card vendor for detailed connection procedures.



Step 5. Install HDMI VGA card driver to your system.

2.13 eSATAII Interface Introduction


What is eSATAII?

This motherboard supports eSATAII interface, the external SATAII specification. eSATAII allows you to enjoy the SATAII function provided by the I/O of your computer, offering the high speed data transfer rate up to 3.0Gb/s, and the convenient mobility like USB. eSATAII is equipped with Hot Plug capability that enables you to exchange drives easily. For example, with eSATAII interface, you may simply plug your eSATAII hard disk to the eSATAII ports instead of opening your chassis to exchange your SATAII hard disk. Currently, on the market, the data transfer rate of USB 2.0 is up to 480Mb/s, and for IEEE 1394 is up to 400Mb/s. However, eSATAII provides the data transfer rate up to 3000Mb/s, which is much higher than USB 2.0 and IEEE 1394, and still keeps the convenience of Hot Plug feature. Therefore, on the basis of the advantageous transfer speed and the facilitating mobile capability, in the near future, eSATAII will replace USB 2.0 and IEEE 1394 to be a trend for external interface.

NOTE:

1. If you set "Configure SATAII as" option in BIOS setup to AHCI or RAID mode, Hot Plug function is supported with eSATAII devices. Therefore, you can insert or remove your eSATAII devices to the eSATAII ports while the system is power-on and in working condition.
2. If you set "Configure SATAII as" option in BIOS setup to IDE mode, Hot Plug function is not supported with eSATAII devices. If you still want to use eSATAII function in IDE mode, please insert or remove your eSATAII devices to the eSATAII ports only when the system is power-off.
3. Please refer to page 46 to 51 for detailed information of RAID mode, IDE mode, and AHCI mode.

How to install eSATAII?

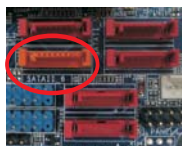

SATAII connector
SATAII_6 (Port5)



eSATAII connector
(eSATAII)

1. In order to enable the eSATAII port of the I/O shield, you need to connect the orange SATAII connector (SATAII_6 (Port5); see p.11 No.22) and the eSATAII connector (eSATAII; see p.11 No.38) with a SATA data cable first.



Connect the SATA data cable to the orange SATAII connector (SATAII_6 (Port5))



Connect the SATA data cable to the eSATAII connector (eSATAII)



2. Use the eSATAII device cable to connect eSATAII device and the eSATAII port of the I/O shield.




Connect one end of the eSATAII device cable to eSATAII device



Connect the other end of the eSATAII device cable to eSATAII port of the I/O shield

Comparison between eSATAII and other devices


IEEE 1394	400Mb/s
USB 2.0	480Mb/s
SATA	1.5Gb/s (1500Mb/s)
eSATAII/SATAII	3.0Gb/s (3000Mb/s)

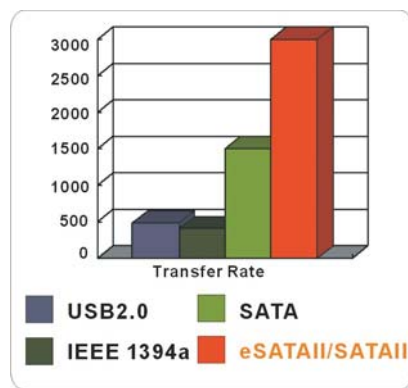

2.14 SATAII Hard Disk Setup Guide

Before installing SATAII hard disk to your computer, please carefully read below SATAII hard disk setup guide. Some default setting of SATAII hard disks may not be at SATAII mode, which operate with the best performance. In order to enable SATAII function, please follow the below instruction with different vendors to correctly adjust your SATAII hard disk to SATAII mode in advance; otherwise, your SATAII hard disk may fail to run at SATAII mode.

Western Digital

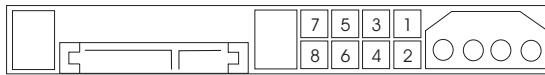

If pin 5 and pin 6 are shorted, SATA 1.5Gb/s will be enabled.

On the other hand, if you want to enable SATAII 3.0Gb/s, please remove the jumpers from pin 5 and pin 6.

SAMSUNG



If pin 3 and pin 4 are shorted, SATA 1.5Gb/s will be enabled.

On the other hand, if you want to enable SATAII 3.0Gb/s, please remove the jumpers from pin 3 and pin 4.

HITACHI

Please use the Feature Tool, a DOS-bootable tool, for changing various ATA features. Please visit HITACHI's website for details:

<http://www.hitachigst.com/hdd/support/download.htm>



The above examples are just for your reference. For different SATAII hard disk products of different vendors, the jumper pin setting methods may not be the same. Please visit the vendors' website for the updates.

2.15 Serial ATA (SATA) / Serial ATAII (SATAII) Hard Disks Installation

This motherboard adopts Intel® ICH8DH south bridge chipset that supports Serial ATA (SATA) / Serial ATAII (SATAII) hard disks and RAID (RAID 0, RAID 1, RAID 10, RAID 5, and Intel Matrix Storage) functions. You may install SATA / SATAII hard disks on this motherboard for internal storage devices. This section will guide you to install the SATA / SATAII hard disks.

STEP 1: Install the SATA / SATAII hard disks into the drive bays of your chassis.

STEP 2: Connect the SATA power cable to the SATA / SATAII hard disk.

STEP 3: Connect one end of the SATA data cable to the motherboard's SATAII connector.

STEP 4: Connect the other end of the SATA data cable to the SATA / SATAII hard disk.



1. If you plan to use RAID 0, RAID 1, or Intel Matrix Storage function, you need to install at least 2 SATA / SATAII hard disks. If you plan to use RAID 5 function, you need to install at least 3 SATA / SATAII hard disks. If you plan to use RAID 10 function, you need to install at least 4 SATA / SATAII hard disks.
2. It is not recommended to switch the "Configure SATAII as" setting between AHCI, RAID, and IDE mode after OS installation.

2.16 Hot Plug and Hot Swap Functions for SATA / SATAII HDDs and eSATAII Devices

This motherboard supports Hot Plug and Hot Swap functions for SATA / SATAII / eSATAII Devices in RAID mode. Intel® ICH8DH south bridge chipset provides hardware support for Advanced Host controller Interface (AHCI), a new programming interface for SATA host controllers developed thru a joint industry effort.



NOTE

What is Hot Plug Function?

If the SATA / SATAII HDDs are NOT set for RAID configuration, it is called "Hot Plug" for the action to insert and remove the SATA / SATAII HDDs while the system is still power-on and in working condition.

However, please note that it cannot perform Hot Plug if the OS has been installed into the SATA / SATAII HDD.

What is Hot Swap Function?

If SATA / SATAII HDDs are built as RAID1 or RAID 5 then it is called "Hot Swap" for the action to insert and remove the SATA / SATAII HDDs while the system is still power-on and in working condition.

eSATAII is equipped with Hot Plug capability that enables you to exchange drives easily. For example, with eSATAII interface, you may simply plug your eSATAII devices to the eSATAII ports instead of opening your chassis to exchange your SATAII hard disk.

2.17 SATA / SATAII HDD Hot Plug Feature and Operation Guide

This motherboard supports Hot Plug feature for SATA / SATAII HDD. Please read below operation guide of SATA / SATAII HDD Hot Plug feature carefully. Before you process the SATA / SATAII HDD Hot Plug, please check below cable accessories from the motherboard gift box pack.

A. 7-pin SATA data cable

B. SATA power cable with SATA 15-pin power connector interface

A. SATA data cable (Red)



SATA 7-pin connector

B. SATA power cable



The SATA 15-pin power connector (Black) connect to SATA / SATAII HDD

1x4-pin conventional power connector (White) connect to power supply

Caution

1. Without SATA 15-pin power connector interface, the SATA / SATAII Hot Plug cannot be processed.
2. Even some SATA / SATAII HDDs provide both SATA 15-pin power connector and IDE 1x4-pin conventional power connector interfaces, the IDE 1x4-pin conventional power connector interface is definitely not able to support Hot Plug and will cause the HDD damage and data loss.

Points of attention, before you process the Hot Plug:


1. Below operation procedure is designed only for our motherboard, which supports SATA / SATAII HDD Hot Plug.
 - * The SATA / SATAII Hot Plug feature might not be supported by the chipset because of its limitation, the SATA / SATAII Hot Plug support information of our motherboard is indicated in the product spec on our website:
www.asrock.com
2. Make sure your SATA / SATAII HDD can support Hot Plug function from your dealer or HDD user manual. The SATA / SATAII HDD, which cannot support Hot Plug function, will be damaged under the Hot Plug operation.
3. Please make sure the SATA / SATAII driver is installed into system properly. The latest SATA / SATAII driver is available on our support website:
www.asrock.com
4. Make sure to use the SATA power cable & data cable, which are from our motherboard package.
5. Please follow below instructions step by step to reduce the risk of HDD crash or data loss.

How to Hot Plug a SATA / SATAII HDD:


Points of attention, before you process the Hot Plug:

Please do follow below instruction sequence to process the Hot Plug, improper procedure will cause the SATA / SATAII HDD damage and data loss.

Step 1 Please connect SATA power cable 1x4-pin end (White) to the power supply 1x4-pin cable.

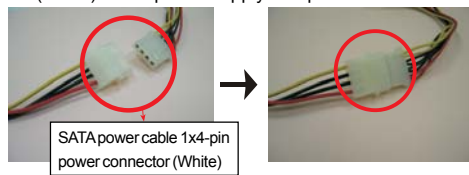

Step 2 Connect SATA data cable to the motherboard's SATAII connector.

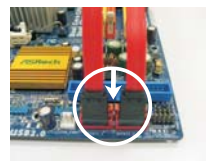

Step 3 Connect SATA 15-pin power cable connector (Black) end to SATA / SATAII HDD.



Step 4 Connect SATA data cable to the SATA / SATAII HDD.




How to Hot Unplug a SATA / SATAII HDD:


Points of attention, before you process the Hot Unplug:

Please do follow below instruction sequence to process the Hot Unplug, improper procedure will cause the SATA / SATAII HDD damage and data loss.

Step 1 Unplug SATA data cable from SATA / SATAII HDD side.

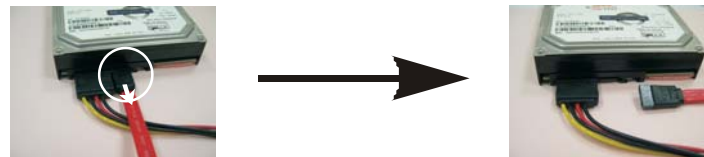

Step 2 Unplug SATA 15-pin power cable connector (Black) from SATA / SATAII HDD side.

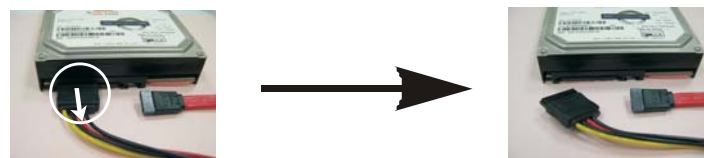

2.18 Driver Installation Guide

To install the drivers to your system, please insert the support CD to your optical drive first. Then, the drivers compatible to your system can be auto-detected and listed on the support CD driver page. Please follow the order from up to bottom side to install those required drivers. Therefore, the drivers you install can work properly.



If you install Windows® XP 64-bit OS, there may be a “!” mark on the item “USB Root Hub” in “Device Manager” after you install “Intel Viiv Driver” from our support CD. Please follow below steps to remove it.

1. Enter “Device Manager” and select “Universal Serial Bus controllers”.
2. Right-click “USB Root Hub”, choose “Uninstall”, and select “OK” to save the change.
3. Click the icon “Scan for hardware changes” on the top.

As soon as we have the updated USB driver, we will update it to our website. Please visit our website for driver update in the future.

ASRock website <http://www.asrock.com>

2.19 Installing Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit With RAID Functions

If you want to install Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit OS on your SATA / SATAII HDDs with RAID functions, please follow below procedures according to the OS you install.

2.19.1 Installing Windows® 2000 / XP / XP 64-bit With RAID Functions

If you want to install Windows® 2000 / XP / XP 64-bit on your SATA / SATAII HDDs with RAID functions, please follow below steps.

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set “ATA/IDE Configuration” to [Enhanced], and then in the option “Configure SATAII as”, please set the option to [RAID].

STEP 2: Make a SATA / SATAII Driver Diskette.

- A. Insert the Support CD into your optical drive to boot your system.
- B. During POST at the beginning of system boot-up, press <F11> key, and then a window for boot devices selection appears. Please select CD-ROM as the boot device.
- C. When you see the message on the screen, “Do you want to generate Serial ATA driver diskette [YN]?”, press <Y>.
- D. Then you will see these messages,

Please insert a diskette into the floppy drive.

WARNING! Formatting the floppy diskette will lose ALL data in it!

Start to format and copy files [Y/N]?

Please insert a floppy diskette into the floppy drive, and press <Y>.

E. The system will start to format the floppy diskette and copy SATA / SATAII drivers into the floppy diskette.

STEP 3: Use “RAID Installation Guide” to set RAID configuration.

Before you start to configure the RAID function, you need to check the installation guide in the Support CD for proper configuration. Please refer to the document in the Support CD, “Guide to SATA Hard Disks Installation and RAID Configuration”, which is located in the folder at the following path: .. \ **RAID Installation Guide**

STEP 4: Install Windows® 2000 / XP / XP 64-bit OS on your system.

After making a SATA / SATAII driver diskette and using “RAID Installation Guide” to set RAID configuration, you can start to install Windows® 2000 / XP / XP 64-bit on your system. At the beginning of Windows setup, press F6 to install a third-party RAID driver. When prompted, insert the SATA / SATAII driver diskette containing the Intel® RAID driver. After reading the floppy disk, the driver will be presented. Select the driver to install according to the mode you choose and the OS you install. You may select: “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows 2000)” for Windows® 2000, “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows XP)” for Windows® XP or “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows XP64)” for Windows® XP 64-bit.

After the installation of Windows® 2000 / Windows® XP / Windows® XP-64bit OS, if you want to manage RAID functions, you are allowed to use both “RAID Installation Guide” and “Intel Matrix Storage Manager Information” for RAID configuration. Please refer to the document in the Support CD, “Guide to SATA Hard Disks Installation and RAID Configuration”, which is located in the folder at the following path: .. \ **RAID Installation Guide** and the document in the support CD, “Guide to Intel Matrix Storage Manager”, which is located in the folder at the following path: .. \ **Intel Matrix Storage Manager Information**



If you want to use “Intel Matrix Storage Manager” in Windows® environment, please install SATA / SATAII drivers from the Support CD again so that “Intel Matrix Storage Manager” will be installed to your system as well.

2.19.2 Setting Up a “RAID Ready” System

You can also set up a “RAID Ready” system with a single SATA / SATAII hard disk. A “RAID Ready” system can be seamlessly upgraded to RAID 0, RAID 1 or RAID 5 at a later date by using RAID migration feature of Intel Matrix Storage. The following steps outline how to build an Intel “RAID Ready” system.

-
1. Assemble the system and attach a single SATA / SATAII hard drive.
 2. Set up system BIOS as step 1 of page 46. When done, exit Setup.
 3. Make a SATA / SATAII driver diskette as step 2 of page 46. Begin Windows® setup by booting from the installation CD.
 4. At the beginning of Windows® setup, press F6 to install a third-party RAID driver. When prompted, insert the SATA / SATAII driver diskette containing the Intel® RAID driver. After reading the floppy disk, the driver will be presented. Select the driver to install according to the mode you choose and the OS you install. You may select: “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows 2000)” for Windows® 2000, “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows XP)” for Windows® XP or “Intel(R) ICH8R/DO/DH SATA RAID Controller (Desktop ICH8R-Windows XP64)” for Windows® XP 64-bit.
 5. Finish the Windows® installation and install all necessary drivers.
 6. Install the Intel(R) Matrix Storage Manager software via the CD-ROM included with your motherboard or after downloading it from the Internet. This will add the Intel(R) Matrix Storage Console which can be used to manage the RAID configuration.
 7. After setting up a “RAID Ready” system as the above steps, you can follow the procedures of the next section to migrate the system to RAID 0, RAID 1 or RAID 5.

2.19.3 Migrating a “RAID Ready” System to RAID 0, RAID 1 or RAID 5

If you have an existing “RAID Ready” system, then you can use the following steps to perform a migration from a single non-RAID configuration to a two drive RAID 0, RAID 1 configuration or three drive RAID 5 configuration. To prepare for this, you will need another SATA / SATAII hard drive with a capacity equal to or greater than that currently being used as the source hard drive.

1. Physically attach one additional SATA / SATAII hard drive to the SATAII port not being used. Note the serial number of the hard drive already in the system; you will use this to select it as the source hard drive when initiating the migration.
2. Boot Windows®, install the Intel(R) Matrix Storage Manager software, if not already installed, using the setup package obtained from a CD-ROM or from the Internet. This will install the necessary Intel Storage Utility and start menu links.
3. Open the Intel Storage Utility from the Start Menu and select “Create RAID volume from Existing Hard Drive” from the Actions menu. This will activate the Create RAID volume from Existing Hard Drive Wizard. Click through the dialogs as prompted. It’s important to understand what will occur during the migration process because any data on the destination hard drive will be lost.

4. Once the migration is complete, reboot the system. If you migrated to a RAID 0 volume, use Disk Management from within Windows® in order to partition and format the empty space created when the two hard drive capacities are combined. You may also use third-party software to extend any existing partitions within the RAID volume.

2.19.4 Installing Windows® Vista™ / Vista™ 64-bit With RAID Functions

If you want to install Windows® Vista™ / Vista™ 64-bit on your SATA / SATAII HDDs with RAID functions, please follow below steps.

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
B. Set “ATA/IDE Configuration” to [Enhanced], and then in the option “Configure SATAII as”, please set the option to [RAID].

STEP 2: Use “RAID Installation Guide” to set RAID configuration.

Before you start to configure the RAID function, you need to check the installation guide in the Support CD for proper configuration. Please refer to the document in the Support CD, “Guide to SATA Hard Disks Installation and RAID Configuration”, which is located in the folder at the following path: .. \ **RAID Installation Guide**

STEP 3: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

Insert the Windows® Vista™ / Vista™ 64-bit optical disk into the optical drive to boot your system, and follow the instruction to install Windows® Vista™ / Vista™ 64-bit OS on your system. When you see “Where do you want to install Windows?” page, please insert the ASRock Support CD into your optical drive, and click the “Load Driver” button on the left on the bottom to load the Intel® RAID drivers. Intel® RAID drivers are in the following path in our Support CD:

.. \ **I386 \ Vista** (For Windows® Vista™ OS)

.. \ **AMD64 \ Vista64** (For Windows® Vista™ 64-bit OS)

After that, please insert Windows® Vista™ / Vista™ 64-bit optical disk into the optical drive again to continue the installation.

After the installation of Windows® Vista™ / Vista™ 64-bit OS, if you want to manage RAID functions, you are allowed to use both “RAID Installation Guide” and “Intel Matrix Storage Manager Information” for RAID configuration. Please refer to the document in the Support CD, “Guide to SATA Hard Disks Installation and RAID Configuration”, which is located in the folder at the following path: .. \ **RAID Installation Guide** and the document in the support CD, “Guide to Intel Matrix Storage Manager”, which is located in the folder at the following path: .. \ **Intel Matrix Storage Manager Information**



1. If you want to use “Intel Matrix Storage Manager” in Windows® environment, please install SATA / SATAII drivers from the Support CD again so that “Intel Matrix Storage Manager” will be installed to your system as well.
2. If you install Windows® Vista™ / Vista™ 64-bit OS, please do not create RAID 0 and RAID 5 or RAID 1 and RAID 5 at the same time under BIOS environment. It is recommended to create RAID array one by one.

2.20 Installing Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit Without RAID Functions

If you want to install Windows® 2000 / XP / XP 64-bit / Vista™ / Vista™ 64-bit OS on your SATA / SATAII HDDs without RAID functions, please follow below procedures according to the OS you install.

2.20.1 Installing Windows® 2000 / XP / XP 64-bit Without RAID Functions

If you want to install Windows® 2000 / XP / XP 64-bit OS on your SATA / SATAII HDDs without RAID functions, please follow below steps.

Using SATA / SATAII HDDs and eSATAII devices with NCQ function

STEP 1: Set Up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set “ATA/IDE Configuration” to [Enhanced], and then in the option “Configure SATAII as”, please set the option to [AHCI].

STEP 2: Make a SATA / SATAII driver diskette.

Please make a SATA / SATAII driver diskette by following section 2.19.1 step 2 on page 46.

STEP 3: Install Windows® 2000 / XP / XP 64-bit OS on your system.

After making a SATA / SATAII driver diskette, you can start to install Windows® 2000 / XP / XP 64-bit on your system. At the beginning of Windows® setup, press F6 to install a third-party AHCI driver. When prompted, insert the SATA / SATAII driver diskette containing the Intel® AHCI driver. After reading the floppy disk, the driver will be presented. Select the driver to install according to the mode you choose and the OS you install. You may select: “Intel(R) ICH8R/DO/DH SATA AHCI Controller (Desktop ICH8R-Windows 2000)” for Windows® 2000, “Intel(R) ICH8R/DO/DH SATA AHCI Controller (Desktop ICH8R-Windows XP)” for Windows® XP or “Intel(R) ICH8R/DO/DH SATA AHCI Controller (Desktop ICH8R-Windows XP64)” for Windows® XP 64-bit.

Using SATA / SATAII HDDs and eSATAII devices without NCQ function

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set “ATA/IDE Configuration” to [Enhanced], and then in the option “Configure SATAII as”, please set the option to [IDE].

STEP 2: Install Windows® 2000 / XP / XP 64-bit OS on your system.

2.20.2 Installing Windows® Vista™ / Vista™ 64-bit Without RAID Functions

If you want to install Windows® Vista™ / Vista™ 64-bit OS on your SATA / SATAII HDDs without RAID functions, please follow below steps.

Using SATA / SATAII HDDs and eSATAII devices with NCQ function

STEP 1: Set Up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set "ATA/IDE Configuration" to [Enhanced], and then in the option "Configure SATAII as", please set the option to [AHCI].

STEP 2: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

After setting up BIOS, you can start to install Windows® Vista™ / Vista™ 64-bit on your system.

Using SATA / SATAII HDDs and eSATAII devices without NCQ function

STEP 1: Set up BIOS.

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set "ATA/IDE Configuration" to [Enhanced], and then in the option "Configure SATAII as", please set the option to [IDE].

STEP 2: Install Windows® Vista™ / Vista™ 64-bit OS on your system.

After setting up BIOS, you can start to install Windows® Vista™ / Vista™ 64-bit on your system.

2.21 Untied Overclocking Technology

This motherboard supports Untied Overclocking Technology, which means during overclocking, FSB enjoys better margin due to fixed PCI / PCIE buses. Before you enable Untied Overclocking function, please enter "Overclock Mode" option of BIOS setup to set the selection from [Auto] to [CPU, PCIE, Async.]. Therefore, CPU FSB is untied during overclocking, but PCI / PCIE buses are in the fixed mode so that FSB can operate under a more stable overclocking environment.



Please refer to the warning on page 8 for the possible overclocking risk before you apply Untied Overclocking Technology.

Chapter 3 BIOS SETUP UTILITY

3.1 Introduction

This section explains how to use the BIOS SETUP UTILITY to configure your system. The BIOS FWH chip on the motherboard stores the BIOS SETUP UTILITY. You may run the BIOS SETUP UTILITY when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS SETUP UTILITY, otherwise, POST will continue with its test routines.

If you wish to enter the BIOS SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

- Main** To set up the system time/date information
- Advanced** To set up the advanced BIOS features
- H/W Monitor** To display current hardware status
- Boot** To set up the default system device to locate and load the Operating System
- Security** To set up the security features
- Exit** To exit the current screen or the BIOS SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Enter>	To bring up the selected screen
<F1>	To display the General Help Screen
<F9>	To load optimal default values for all the settings
<F10>	To save changes and exit the BIOS SETUP UTILITY
<ESC>	To jump to the Exit Screen or exit the current screen

3.2 Main Screen

When you enter the BIOS SETUP UTILITY, the Main screen will appear and display the system overview

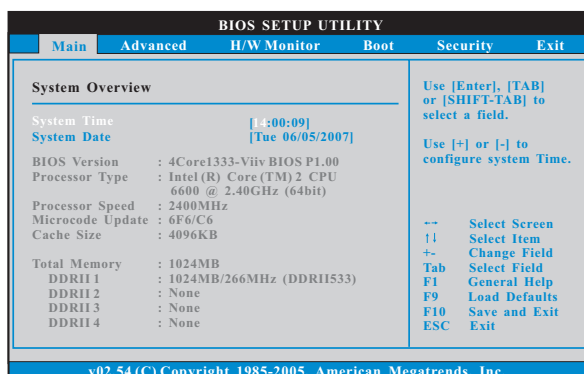

System Time [Hour:Minute:Second]


Use this item to specify the system time.

System Date [Day Month/Date/Year]

Use this item to specify the system date.


3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, ACPI Configuration, IDE Configuration, PCIPnP Configuration, Floppy Configuration, SuperIO Configuration, and USB Configuration.

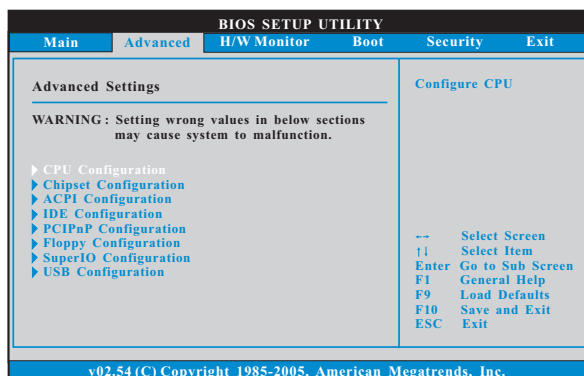

Setting wrong values in this section may cause the system to malfunction.

3.3.1 CPU Configuration

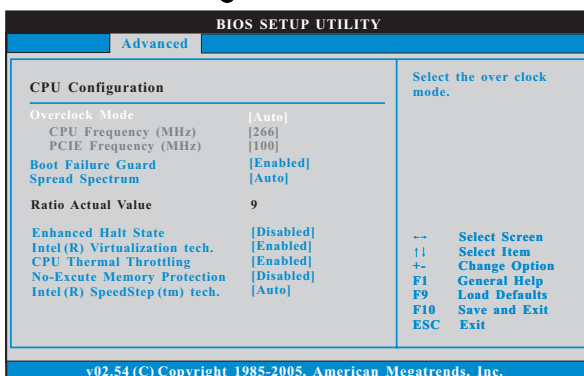

Overclock Mode

Use this to select Overclock Mode. The default value is [Auto].

Configuration options: [Auto], [CPU, PCIE, Sync.] and [CPU, PCIE, Async.].

CPU Frequency (MHz)

Use this option to adjust CPU frequency.

PCIE Frequency (MHz)

Use this option to adjust PCIE frequency.

Boot Failure Guard

Enable or disable the feature of Boot Failure Guard.

Spread Spectrum

Select [Auto] for the spread spectrum feature.

Ratio Actual Value

This is a read-only item, which displays the ratio actual value of this motherboard.

Enhance Halt State

All processors support the Halt State (C1). The C1 state is supported through the native processor instructions HLT and MWAIT and requires no hardware support from the chipset. In the C1 power state, the processor maintains the context of the system caches.

Intel (R) Virtualization tech.

When this option is set to [Enabled], a VMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by Vanderpool Technology. This option will be hidden if the installed CPU does not support Intel (R) Virtualization Technology.

CPU Thermal Throttling

You may select [Enabled] to enable P4 CPU internal thermal control mechanism to keep the CPU from overheated. This option will be hidden if the current CPU does not support CPU Thermal Throttling.

No-Execute Memory Protection

No-Execution (NX) Memory Protection Technology is an enhancement to the IA-32 Intel Architecture. An IA-32 processor with "No Execute (NX) Memory Protection" can prevent data pages from being used by malicious software to execute code. This option will be hidden if the current CPU does not support No-Execute Memory Protection.

Hyper Threading Technology

To enable this feature, it requires a computer system with an Intel Pentium® 4 processor that supports Hyper-Threading technology and an operating system that includes optimization for this technology, such as Microsoft® Windows® XP. Set to [Enabled] if using Microsoft® Windows® XP, or Linux kernel version 2.4.18 or higher. This option will be hidden if the installed CPU does not support Hyper-Threading technology.

Intel (R) SpeedStep(tm) tech.

Intel (R) SpeedStep(tm) tech. is Intel's new power saving technology. Processor can switch between multiple frequency and voltage points to enable power savings. The default value is [Auto]. Configuration options: [Auto], [Enabled] and [Disabled]. If you install Windows® XP and select [Auto], you need to set the "Power Schemes" as "Portable/Laptop" to enable this function. If you install Windows® Vista™ and want to enable this function, please set this item to [Enabled]. This item will be hidden if the current CPU does not support Intel (R) SpeedStep(tm) tech..



Please note that enabling this function may reduce CPU voltage and lead to system stability or compatibility issue with some power supplies. Please set this item to [Disable] if above issue occurs.

3.3.2 Chipset Configuration

BIOS SETUP UTILITY		
Advanced		
Chipset Configuration		
Memory Remap Feature	[Disabled]	ENABLE: Allow remapping of overlapped PCI memory above the total physical memory.
DRAM Frequency	[Auto]	
Flexibility Option	[Disabled]	DISABLE: Do not allow remapping of memory.
Configure DRAM Timing by SPD	[Enabled]	
DRAM CAS# Latency	[Auto]	
Primary Graphics Adapter	[PCI]	
OnBoard HD Audio	[Auto]	-- Select Screen
Front Panel	[Auto]	↑↓ Select Item
CD-In	[Enabled]	+ - Change Option
OnBoard Lan	[Enabled]	F1 General Help
OnBoard 1394	[Enabled]	F9 Load Defaults
VCCM Voltage	[Auto]	F10 Save and Exit
VDDQ Voltage	[Low]	ESC Exit
ICH8 Voltage	[Low]	
v02.54 (C) Copyright 1985-2005, American Megatrends, Inc.		

Memory Remap Feature

Use this item to enable or disable memory remap feature. Configuration options: [Enabled] and [Disabled]. The default value is [Disabled].

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assigns appropriate frequency automatically. You may also select other value as operating frequency: [266MHz (DDRII533)], [333MHz (DDRII667)], [400MHz (DDRII800)].

Flexibility Option

The default value of this option is [Disabled]. It will allow better tolerance for memory compatibility when it is set to [Enabled].

Configure DRAM Timing by SPD

Select [Enabled] will configure the following items by the contents in the SPD (Serial Presence Detect) device. If you select [Disabled], you will find the items "DRAM RAS# to CAS# Delay", "DRAM RAS# Precharge", and "DRAM RAS# Activate to Precharge" appear to allow you adjusting them.

DRAM CAS# Latency

Use this item to adjust the means of memory accessing.

DRAM RAS# to CAS# Delay

This controls the latency between the DRAM active command and the read / write command. Configuration options: [2 DRAM Clocks], [3 DRAM Clocks], [4 DRAM Clocks], [5 DRAM Clocks], and [6 DRAM Clocks].

DRAM RAS# Precharge

This controls the idle clocks after a precharge command is issued. Configuration options: [2 DRAM Clocks], [3 DRAM Clocks], [4 DRAM Clocks], [5 DRAM Clocks], and [6 DRAM Clocks].

Primary Graphics Adapter

This allows you to select [PCI] or [PCI Express] as the boot graphic adapter priority. The default value is [PCI].

OnBoard HD Audio

Select [Auto], [Enabled] or [Disabled] for the onboard HD Audio feature. If you select [Auto], the onboard HD Audio will be disabled when PCI Sound Card is plugged.

Front Panel

Select [Auto], [Enabled] or [Disabled] for the onboard HD Audio Front Panel.

CD-In

Use this item to enable or disable CD-In of OnBoard HD Audio. If you plan to use this motherboard to submit Windows® Vista™ logo test, please disable this option.

OnBoard Lan

This allows you to enable or disable the "OnBoard LAN" feature.

OnBoard 1394

This allows you to enable or disable the "OnBoard 1394" feature.

VCCM Voltage

Use this to select VCCM Voltage. Configuration options: [Highest], [High], [Middle], [Low], [Lowest] and [Auto]. The default value of this feature is [Auto].

VDDQ Voltage

Use this to select VDDQ Voltage. Configuration options: [High] and [Low]. The default value of this feature is [Low].

ICH8 Voltage

Use this to select the south bridge Voltage. Configuration options: [High] and [Low]. The default value of this feature is [Low].


VTT Voltage

Use this to select VTT Voltage. Configuration options: [High] and [Low]. The default value of this feature is [Low].

DIMM 1N Mode

Use this to select DIMM 1N mode. Configuration options: [Auto] and [Disabled]. The default value of this feature is [Disabled].

3.3.3 ACPI Configuration

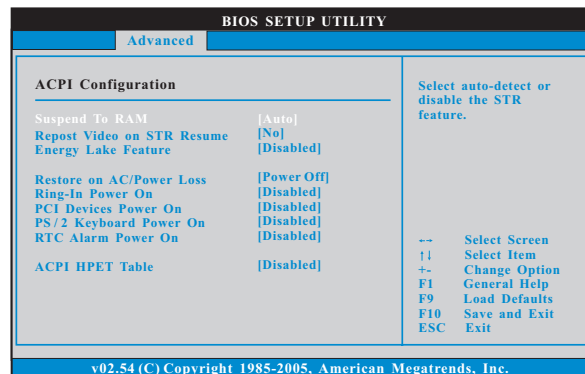

Suspend to RAM

Use this item to select whether to auto-detect or disable the Suspend-to-RAM feature. Select [Auto] will enable this feature if the OS supports it. If you set this item to [Disabled], the function “Repost Video on STR Resume” will be hidden.

Repost Video on STR Resume

This feature allows you to repost video on STR resume. (STR refers to suspend to RAM.)

Energy Lake Feature

Use this item to enable or disable energy lake feature under Windows® XP Media Center OS. The default value is [Disabled].

Restore on AC/Power Loss

This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

PCI Devices Power On

Use this item to enable or disable PCI devices to turn on the system from the power-soft-off mode.

PS/2 Keyboard Power On

Use this item to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.


RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

ACPI HPET Table

Use this item to enable or disable ACPI HPET Table. The default value is [Disabled]. Please set this option to [Enabled] if you plan to use this motherboard to submit Windows® Vista™ certification.

3.3.4 IDE Configuration

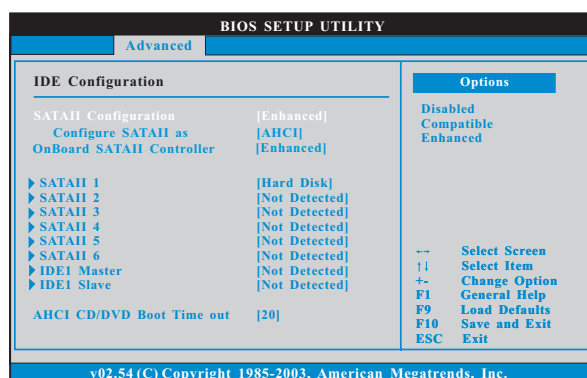

SATAII Configuration

Please select [**Compatible**] when you install legacy OS (Windows NT). If native OS (Windows 2000 / XP) is installed, please select [**Enhanced**]. Then in the option “Configure SATAII as”, you are allowed to set the selection from [AHCI] to [RAID] if you plan to enable RAID function. Configuration options: [AHCI], [IDE], and [RAID]. The default value is [AHCI].




1. AHCI (Advanced Host Controller Interface) supports Hot Plug, NCQ and other new features that will improve SATA disk performance but IDE mode does not have these advantages.
2. Only AHCI and RAID modes support Hot Plug function.

OnBoard SATAII Controller

Use this item to enable or disable the “OnBoard SATAII Controller” feature.

IDE Device Configuration

You may set the IDE configuration for the device that you specify. We will use the “IDE Master” as the example in the following instruction, which can be applied to the configurations of “IDE Slave” as well.

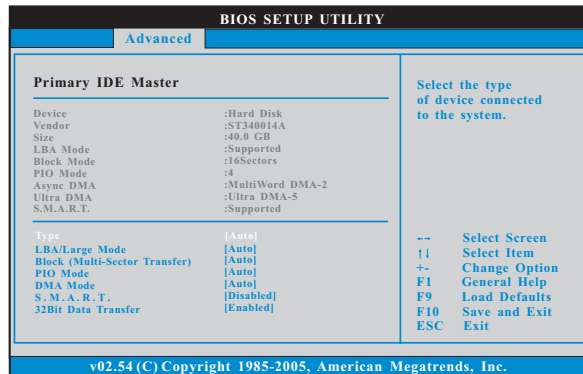

TYPE

Use this item to configure the type of the IDE device that you specify. Configuration options: [Not Installed], [Auto], [CD/DVD], and [ARMD].

[Not Installed]: Select [Not Installed] to disable the use of IDE device.

[Auto]: Select [Auto] to automatically detect the hard disk drive.



After selecting the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format the new IDE hard disk drives. This is necessary so that you can write or read data from the hard disk. Make sure to set the partition of the Primary IDE hard disk drives to active.

[CD/DVD]: This is used for IDE CD/DVD drives.

[ARMD]: This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

LBA/Large Mode

Use this item to select the LBA/Large mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Disabled] to disable the LBA/Large mode.

Block (Multi-Sector Transfer)

The default value of this item is [Auto]. If this feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

PIO Mode

Use this item to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

DMA Mode

DMA capability allows the improved transfer-speed and data-integrity for compatible IDE devices.

S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled], [Auto], [Enabled].


32-Bit Data Transfer

Use this item to enable 32-bit access to maximize the IDE hard disk data transfer rate.

AHCI CD/DVD Boot Time out

Some SATA CD/DVD in AHCI mode need to wait longer. This item indicates the time you may wait. Configuration options: [0], [5], [10], [15], [20], [25], [30] and [35]. The default value is [20].

3.3.5 PCIPnP Configuration

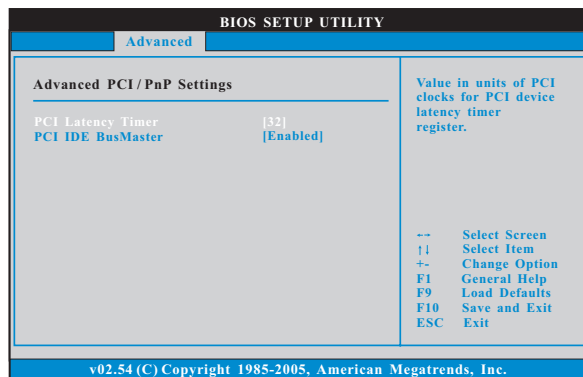

PCI Latency Timer


The default value is 32. It is recommended to keep the default value unless the installed PCI expansion cards' specifications require other settings.

PCI IDE BusMaster


Use this item to enable or disable the PCI IDE BusMaster feature.

3.3.6 Floppy Configuration

In this section, you may configure the type of your floppy drive.

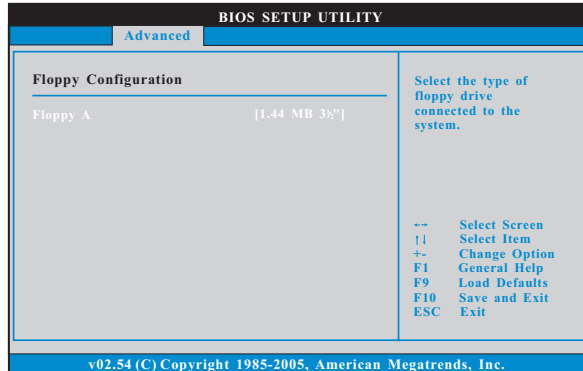

3.3.7 Super IO Configuration

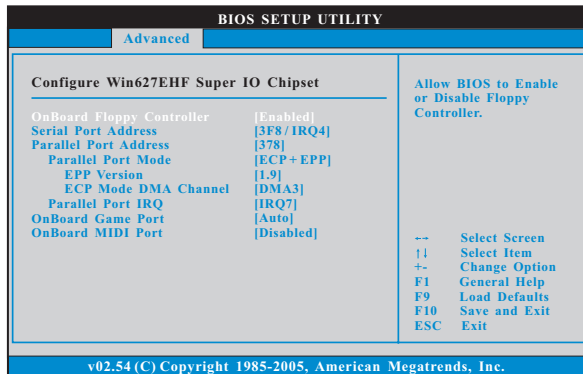

OnBoard Floppy Controller

Use this item to enable or disable floppy drive controller.

Serial Port Address

Use this item to set the address for the onboard serial port or disable it.

Configuration options: [Disabled], [3F8 / IRQ4], [2F8 / IRQ3], [3E8 / IRQ4], [2E8 / IRQ3].

Parallel Port Address

Use this item to set the address for the onboard parallel port or disable it.

Configuration options: [Disabled], [378], and [278].

Parallel Port Mode

Use this item to set the operation mode of the parallel port. The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version". Configuration options: [Normal], [Bi-Directional], and [ECP+EPP].

EPP Version

Use this item to set the EPP version. Configuration options: [1.9] and [1.7].

ECP Mode DMA Channel

Use this item to set the ECP mode DMA channel. Configuration options: [DMA0], [DMA1], and [DMA3].

Parallel Port IRQ

Use this item to set the IRQ for the parallel port. Configuration options: [IRQ5] and [IRQ7].


OnBoard Game Port

Use this item to enable the Game Port or disable it. The default value is [Auto].

OnBoard MIDI Port

Use this item to select the address for the MIDI Port or disable it. Configuration options: [Disabled], [300], and [330].

3.3.8 USB Configuration

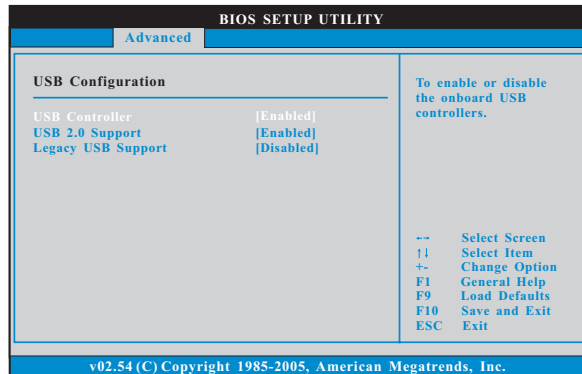

USB Controller

Use this item to enable or disable the use of USB controller.

USB 2.0 Support

Use this item to enable or disable the USB 2.0 support. If you set this item to [Disabled], the function of USB 2.0 header (USB8_9) will be disabled.

Legacy USB Support

Use this item to enable or disable the support to emulate legacy I/O devices such as mouse, keyboard,... etc. Or you may select [Auto] so that the system will start to auto-detect; if there is no USB device connected, "Auto" option will disable the legacy USB support.

3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.

BIOS SETUP UTILITY					
Main	Advanced	H/W Monitor	Boot	Security	Exit
Hardware Health Event Monitoring			Target Fan Speed		
CPU Temperature	:	37°C / 98°F	Fast		
M / B Temperature	:	31°C / 87°F	Middle		
CPU Fan Speed	:	3400 RPM	Slow		
Chassis Fan Speed	:	N/A			
Vcore	:	1.629V	-- Select Screen		
+ 3.30V	:	3.306V	↑↓ Select Item		
+ 5.00V	:	5.067V	F1 General Help		
+ 12.00V	:	11.890V	F9 Load Defaults		
CPU Quiet Fan	:	[Disabled]	F10 Save and Exit		
			ESC Exit		
v02.54 (C) Copyright 1985-2003, American Megatrends, Inc.					

CPU Quiet Fan


This item allows you to identify the temperature of CPU fan. Configuration options: [Disabled] and [Enabled]. The default value is [Disabled]. You are allowed to enable this function only when you install 4-pin CPU fan.

3.5 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

BIOS SETUP UTILITY					
Main	Advanced	H/W Monitor	Boot	Security	Exit
Boot Settings			Configure Settings during System Boot.		
▶ Boot Settings Configuration					
1st Boot Device	:	[1st Floppy Device]			
2nd Boot Device	:	[HDD: PM - HDS722580VL]			
3rd Boot Device	:	[CD / DVD: 3S - CD - ROM C]			
4th Boot Device	:	[USB]			
▶ Hard Disk Drives	:		-- Select Screen		
▶ Removable Drives	:		↑↓ Select Item		
▶ CD/DVD Drives	:		Enter Go to Sub Screen		
			F1 General Help		
			F9 Load Defaults		
			F10 Save and Exit		
			ESC Exit		
v02.54 (C) Copyright 1985-2005, American Megatrends, Inc.					

3.5.1 Boot Settings Configuration

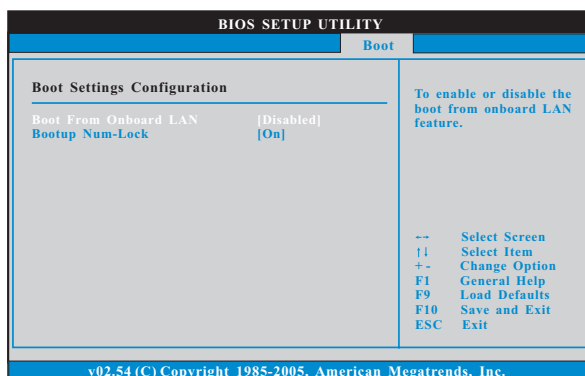

Boot From Onboard LAN


Use this item to enable or disable the Boot From Onboard LAN feature.

Boot Up Num-Lock


If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.

3.6 Security Screen

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

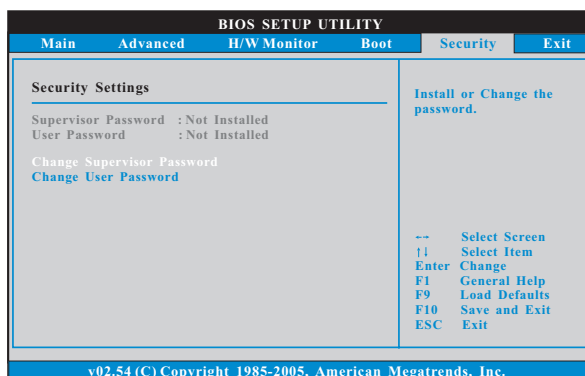

3.7 Exit Screen

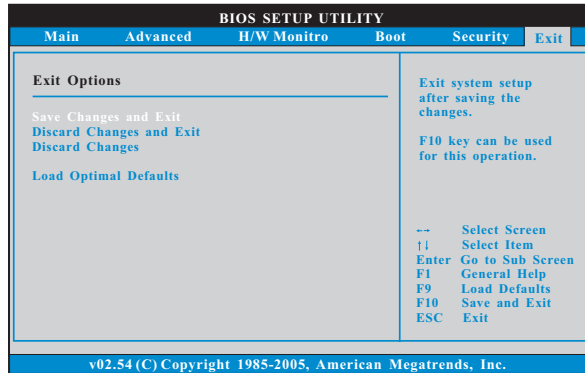

Save Changes and Exit

When you select this option, it will pop-out the following message, "Save configuration changes and exit setup?" Select [OK] to save the changes and exit the BIOS SETUP UTILITY.

Discard Changes and Exit

When you select this option, it will pop-out the following message, "Discard changes and exit setup?" Select [OK] to exit the BIOS SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, it will pop-out the following message, "Discard changes?" Select [OK] to discard all changes.

Load Optimal Defaults

When you select this option, it will pop-out the following message, "Load optimal defaults?" Select [OK] to load the default values for all the setup configurations.

Chapter 4 Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 2000 / XP / XP Media Center / XP 64-bit / Vista™ / Vista™ 64-bit. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file "ASSETUP.EXE" from the BIN folder in the Support CD to display the menus.

4.2.2 Drivers Menu

The Drivers Menu shows the available devices drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 Contact Information

If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.