

2.1.1 CPU Type Selector : JP9, JP10, JP11, JP12, JP18, JP19.



(a) Intel Pentium CPU.

CPU Type	System Clock					Frequency Ratio		
	MHz	JP9	JP10	JP11	JP12	/	JP18	JP19
75MHz	50	Open	Open	Open	Close	3/2	Open	Open
90MHz	60	Open	Close	Open	Close			
100MHz	66	Open	Open	Close	Close			
120MHz	60	Open	Close	Open	Close	2/1	Close	Open
133MHz	66	Open	Open	Close	Close			
150MHz	60	Open	Close	Open	Close	5/2	Close	Close
166MHz	66	Open	Open	Close	Close			
180MHz	60	Open	Close	Open	Close	3/1	Open	Close
200MHz	66	Open	Open	Close	Close			

(b) Cyrix 6x86/6x86L CPU or IBM 6x86/6x86L CPU.

CPU Type	System Clock					Frequency Ratio		
	MHz	JP9	JP10	JP11	JP12	/	JP18	JP19
P120 +	50	Open	Open	Open	Close	2/1	Close	Open
P133 +	55	Close	Open	Open	Close			
P150 +	60	Open	Close	Open	Close			
P166 +	66	Open	Open	Close	Close			
P200 +	75	Close	Close	Open	Open			

(c) AMD 5k86 CPU.

CPU Type	System Clock					Frequency Ratio		
	MHz		JP10	JP11	JP12	/	JP18	JP19
P75	50	Open	Open	Open	Close	3/2	Open	Open
P90	60	Open	Close	Open	Close			
P100	66	Open	Open	Close	Close			

Note: System Clock 83MHz Jumper Setting:

JP9: Close, JP10: Open, JP11: Close, JP12: Open.