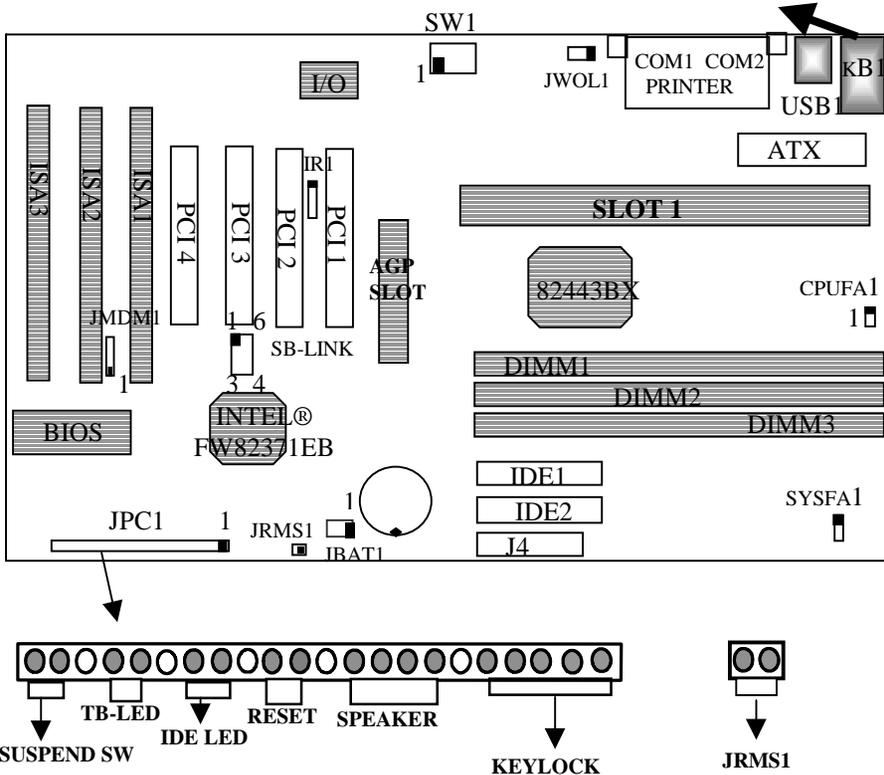

**6ABX2
MAIN BOARD
ATX FORM FACTOR
USER'S MANUAL
(VER : 1.0)**

I-1 LAYOUT REFERENCE

UPPER LAYER: PS2 MOUSE
 LOWER LAYER: KEYBOARD



2-2 JUMPER SETTINGS

1. CPU SPEED SETUP:


A. DIP SWITCH VERSION : SW1

CPU SPEED	CLOCK SPEED	RATIO	SW1
PENTIUM® II 233MHZ	66MHZ	3.5X	
PENTIUM® II 350MHZ	100MHZ		
PENTIUM® II 266MHZ	66MHZ	4X	
PENTIUM® II 400MHZ	100MHZ		
PENTIUM® II 300MHZ	66MHZ	4.5X	
PENTIUM® II 450 MHZ	100MHZ		
PENTIUM® II 333 MHZ	66MHZ	5X	
*PENTIUM® II 500 MHZ	100MHZ		
PENTIUM® II 366 MHZ	66MNZ	5.5X	
*PENTIUM® II 550 MHZ	100MHZ		

*PENTIUM® II 500 MHZ & PENTIUM® II 550 MHZ ARE FOR REFERENCE ONLY AS THEY ARE NOT AVAILABLE WHEN THIS MANUAL IS PRINTED.

B. JUMPERLESS VERSION

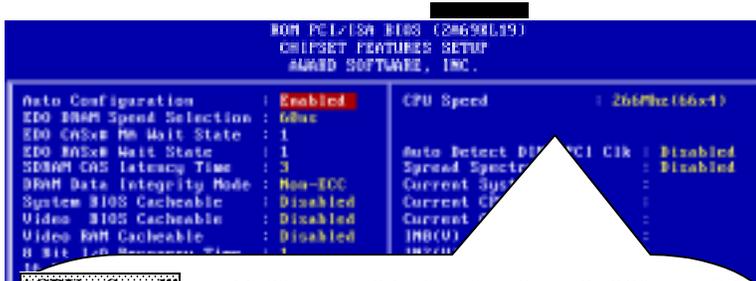PLEASE MODIFY “CPU ” IN “3-4 CHIPSET FEATURES SETUP.” FIRST, GO TO “3-4 CHIPSET FEATURES SETUP” AND SET PROPER “CPU SPEED.” THEN, GO TO “3-1 AWARD BIOS SETUP” AND SAVE THE CHANGE. THE USER DOES NOT HAVE TO SET JUMPERS.



CPU Speed: PRESS “+” OR “-” TO CHOOSE “ CPU SPEED” ACCORDING TO YOUR CPU FREQUENCY. THE SCREEN WILL SHOW THE BELOW CHOICES:

FREQUENCY 66MHZ	FREQUENCY 100MHZ	MANUAL
P-II 200 v"200MHZ(66X3)"	P-II 300 v"300MHZ(100X3) "	
P-II 233 v"233MHZ(66X3.5)"	P-II 350 v"350MHZ(100X3.5)"	
P-II 266 v"266MHZ(66X4)"	P-II 400 v"400MHZ(100X4)"	
P-II 300 v"300MHZ(66X4.5)"	P-II 450 v"450MHZ(100X4.5)"	
P-II 333 v"333MHZ(66X5)"	P-II 500 v"500MHZ(100X5)"	

NOTE: "MANUAL " --- THE USER CAN MODIFY "CPU RATIO" & "CPU FREQUENCY." YET, THIS IS NOT A FORMAL SPEC. WHEN ADJUSTING "CPU RATIO" & "CPU FREQUENCY," PLEASE MAKE SURE THE SYSTEM CAN WORK PROPERLY.

2. JBAT1: RTC - BATTERY SELECTOR

	NORMAL	CLEAR CMOS
RTC	1-2 (NORMAL)	2-3(DEFAULT)

☞ CUSTOMERS NEED TO CLEAR CMOS, THEN RECONFIGURE IT IF FORGET PASSWORD FOR BIOS SETUP.

3. JRMS1: ATX POWER SWITCH

THE SYSTEM POWER IS CONTROLLED BY A MOMENTARY SWITCH (WHEN "POWER SWITCH TYPE" IS SET TO MOMENTARY) CONNECTED TO THIS LEAD. PUSHING THE BUTTON ONCE WILL TURN ON THE SYSTEM AND PUSHING ANOTHER TIME WILL TURN OFF THE SYSTEM. THE SYSTEM POWER LED SHOWS THE STATUS OF THE SYSTEM'S POWER. THIS CONNECTION DOES NOT HAVE A FUNCTION WHEN A STANDARD POWER SUPPLY IS USED.

4. IR1 : IR (INFRARED) CONNECTOR

I.R. CONNECTOR PIN OUT						
PIN 1	PIN 2	PIN 3	PIN 4	PIN 5	PIN 6	PIN 7
RX	GND	TX	+5V	RXH	VCC	GND

NOTE : IR1 USES THE SAME I/O PORT AS COM2. THERE IS NO ANY HARDWARE JUMPER SETTING FOR IRCON/COM2 ON THIS MAIN BOARD BUT CUSTOMERS NEED TO SET PROPER BIOS SETTING FOR "**IRDA1.0**","**ASKIR**" OR "**STANDARD**"(DEFAULT) UNDER "INFRA RED (IR) FUNCTION" OF "INTEGRATED PERIPHERALS."

5. OTHER JUMPER SETTINGS AND CONNECTORS :

- IDE1** : PRIMARY IDE CONNECTOR
- IDE2** : SECONDARY IDE CONNECTOR
- J4** : FLOPPY DISK CONNECTOR
- COM1** : SERIAL PORT 1 CONNECTOR.
- COM2** : SERIAL PORT 2 CONNECTOR.
- KB1** : PS/2 KEYBOARD/MOUSE CONNECTOR.
- USB1** : USB (UNIVERSAL SERIAL BUS) CONNECTOR
- JMDM1** : INTERNAL MODEM RING ON CONNECTOR
- JPC1** : CASE CONNECTOR
- CPUFA1** : CPU FAN CONNECTOR
- SYSFAN** : SYSTEM, (CASE) FAN CONNECTOR
- J5** : SB-LINK CONNECTOR
- JWOL1** : WAKE ON LAN CONNECTOR