
Chapter 2

Hardware Installation

This chapter gives you a step-by-step procedure on how to install your system. Follow each section accordingly.




Caution: *Electrostatic discharge (ESD) can damage your processor, disk drives, expansion boards, and other components. Always observe the following precautions before you install a system component.*

1. *Do not remove a component from its protective packaging until you are ready to install it.*
2. *Wear a wrist ground strap and attach it to a metal part of the system unit before handling a component. If a wrist strap is not available, maintain contact with the system unit throughout any procedure requiring ESD protection.*

Hardware Installation

2.1 Jumper and Connector Locations

The following figure shows the locations of the jumpers and connectors on the system board:

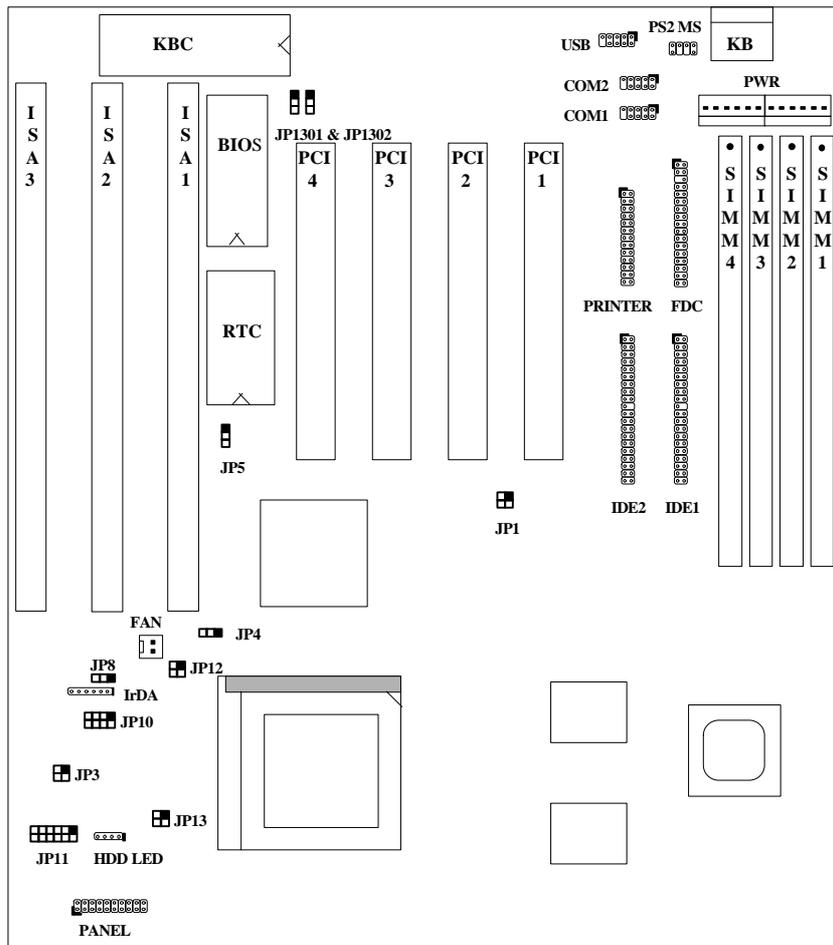

Hardware Installation

Jumpers:

<i>JP11:</i>	<i>CPU core voltage setting Ψ(core)</i>
<i>JP12:</i>	<i>I/O voltage setting Ψ(io)</i>
<i>JP3,JP13:</i>	<i>CPU type (Single/Dual voltage)Ψ(cpuio selection.)</i>
<i>JP10:</i>	<i>CPU frequency ratio</i>
<i>JP1:</i>	<i>CPU external (bus) clock</i>
<i>JP4:</i>	<i>Onboard PS/2 mouse enable/disable</i>
<i>JP5:</i>	<i>Clear CMOS</i>
<i>JP8:</i>	<i>Onboard Super I/O enable/disable</i>
<i>JP1301,1302:</i>	<i>INTEL Flash ROM programming enable/disable</i>

Connectors:


<i>KB (CN2):</i>	<i>AT keyboard connector</i>
<i>PWR (CN3):</i>	<i>AT power connector</i>
<i>PS2 MS (CN4):</i>	<i>PS/2 mouse connector</i>
<i>USB (CN5):</i>	<i>USB connector</i>
<i>COM1 (CN7):</i>	<i>COM1 connector</i>
<i>COM2 (CN6):</i>	<i>COM2 connector</i>
<i>FDC (CN8):</i>	<i>Floppy drive connector</i>
<i>PRINTER (CN9):</i>	<i>Printer connector</i>
<i>IDE1 (CN10):</i>	<i>IDE1 primary channel</i>
<i>IDE2 (CN11):</i>	<i>IDE2 secondary channel</i>
<i>FAN (CN15):</i>	<i>CPU fan connector</i>
<i>IrDA (CN14):</i>	<i>IrDA connector</i>
<i>HDD LED (CN12):</i>	<i>HDD LED connector</i>
<i>PANEL (CN16):</i>	<i>Front panel (Multifunction) connector</i>

Hardware Installation

2.2 Jumpers

Jumpers are made by pin headers and plastic connecting caps for the purpose of customizing your hardware. Doing so requires basic knowledge of computer hardware, be sure you understand the meaning of the jumpers before you change any setting. The onboard jumpers are normally set to their default with optimized settings.

On the mainboard, normally there is a bold line marked beside pin 1 of the jumper, sometimes, there are numbers also. If we connect (short) plastic cap to pin 1 and 2, we will say set it at 1-2, and when we say jumper is open, that means no plastic cap connected to jumper pins.

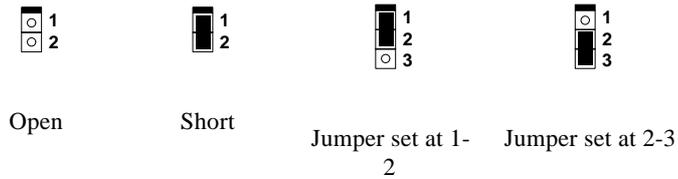


Hardware Installation

2.2.1 Setting the CPU Voltage

JP11	CPU Core Voltage (Vcore)
1-2	3.45V (default for P54C)
3-4	3.52V (Cyrix or AMD K5)
5-6	2.5V
7-8	3.2V (AMD K6-233)
9-10	2.8V (PP/MT P55C)
11-12	2.9V (AMD K6-166/200)

JP11 is used to select CPU core voltage (Vcore), normally it is set to default 3.45V for INTEL Pentium P54C. It must be changed if you have CPU with different core voltage, such as INTEL PP/MT (P55C), AMD K5/K6 and Cyrix 6x86, refer to the CPU specification for more details.

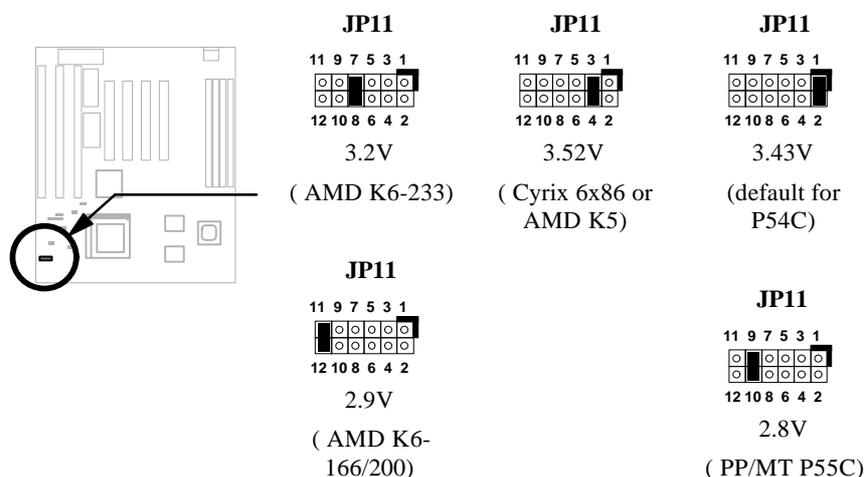


Warning: The heat dissipation of Intel PP/MT-233Hz, AMD K6-200/233MHz exceed the original design of this mainboard. Please make sure that you have installed CPU fan properly if Intel PP/MT-233 or AMD K6-200/233 is being selected to use. It may cause your system unstable if you can not meet the heat dissipation requirement from above CPU type. It is recommended to adopt larger fan on these CPU for better air flow in the system.

Hardware Installation

JP12	I/O Voltage (Vio)
1-2	3.43V (default)
3-4	3.52V

JP12 is reserved for test only, which sets the voltage of onboard chipset and PBSRAM (Vio). When you are using dual voltage CPU, JP12 also provides CPU I/O voltage (Vcpuio). The default is 3.43V.

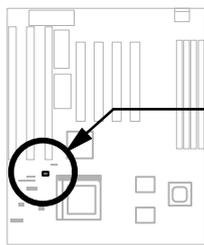

JP12



3.43V (default)


JP12




3.52V

JP3	JP13	CPU Type (Vcpuio)
1-2 & 3-4	Open	Single voltage CPU Vcpuio = Vcore (default)
Open	1-2 & 3-4	Dual voltage CPU Vcpuio = Vio (PP/MT P55C)

Set the jumper **JP3** and **JP13** according to the type of CPU. They are actually the selection of CPU I/O Voltage (Vcpuio). Normally, for single voltage CPU, Vcpuio is equal to Vcore, but for CPU that needs dual voltage such as PP/MT (P55C), Cyrix 6x86L, Vcpuio must be set to Vio, and it is different from Vcore.

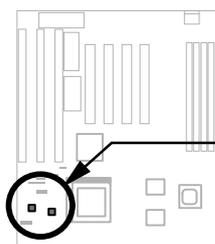


JP3 JP13

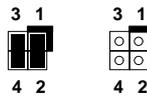

Single voltage
(Vcpuio = Vcore)

JP3 JP13

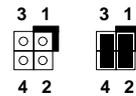

Dual voltage
(Vcpuio = Vio)

Hardware Installation

CPU Type	Vcore	Vio	Vcpuio	JP11	JP12	JP3	JP13
INTEL P54C	3.43V	3.43V	Vcore	1-2	1-2	1-2 & 3-4	Open
INTEL PP/MT	2.8V	3.43V	Vio	9-10	1-2	Open	1-2 & 3-4
AMD K5	3.52V	3.43V	Vcore	3-4	1-2	1-2 & 3-4	Open
AMD K6-166/200	2.9V	3.43V	Vio	11-12	1-2	Open	1-2 & 3-4
AMD K6-233	3.2V	3.43V	Vio	7-8	1-2	Open	1-2 & 3-4
Cyrix 6x86	3.52V	3.43V	Vcore	3-4	1-2	1-2 & 3-4	Open
Cyrix 6x86L	2.8V	3.43V	Vio	9-10	1-2	Open	1-2 & 3-4



Caution: Above table is possible settings of current CPU available on the market. The correct setting may vary because of new CPU product, refer to your CPU specification for more details.


2.2.2 Selecting the CPU Frequency

JP10	CPU Frequency Ratio
1-2 & 3-4	1.5x (3.5x)
3-4 & 5-6	2x
5-6 & 7-8	2.5x (1.75x)
1-2 & 7-8	3x

Intel Pentium, Cyrix 6x86 and AMD K5/K6 CPU are designed to have different Internal (Core) and External (Bus) frequency. The ratio of Core/Bus frequency is selected by **JP10**, which CPU is using to multiply external clock and produce internal frequency.

Hardware Installation


Core frequency = Ratio * External bus clock

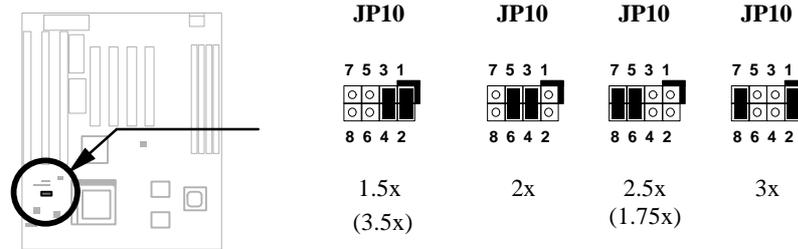

Tip: Intel PP/MT 233MHz is using 1.5x jumper setting for 3.5x frequency ratio, and AMD PR166 is using 2.5x setting for 1.75x frequency ratio..

<u>JP1</u>	<u>CPU External Clock</u>
1-2 & 3-4	50MHz
Open	55MHz
1-2	60MHz
3-4	66MHz

JP1 is the selections of CPU external clock (bus clock), which is actually the clock from clock generator.

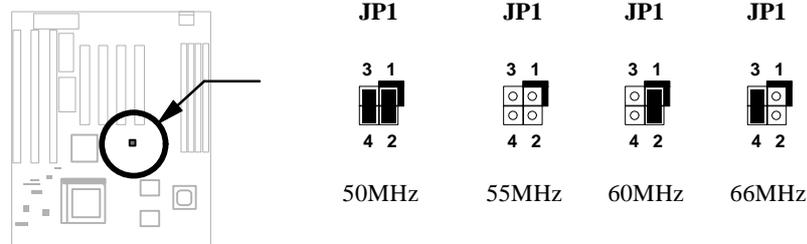

Caution: Following table are possible settings of current CPU available on the market. The correct setting may vary because of new CPU product, refer to your CPU specification for more details.

Hardware Installation

Intel Pentium	CPU Core Frequency	Ratio	External Bus Clock	JP10	JP1
P54C 75	75MHz =	1.5x	50MHz	1-2 & 3-4	1-2 & 3-4
P54C 90	90MHz =	1.5x	60MHz	1-2 & 3-4	1-2
P54C 100	100MHz =	1.5x	66MHz	1-2 & 3-4	3-4
P54C 120	120MHz =	2x	60MHz	3-4 & 5-6	1-2
P54C 133	133MHz =	2x	66MHz	3-4 & 5-6	3-4
P54C 150	150MHz =	2.5x	60MHz	5-6 & 7-8	1-2
P54C 166	166MHz =	2.5x	66MHz	5-6 & 7-8	3-4
P54C 200	200MHz =	3x	66MHz	1-2 & 7-8	3-4

Intel Pentium	CPU Core Frequency	Ratio	External Bus Clock	JP10	JP1
PP/MT 150	150MHz =	2.5x	60MHz	5-6 & 7-8	1-2
PP/MT 166	166MHz =	2.5x	66MHz	5-6 & 7-8	3-4
PP/MT 200	200MHz =	3x	66MHz	1-2 & 7-8	3-4
PP/MT 233	233MHz =	3.5x	66MHz	1-2 & 3-4	3-4

Cyrix 6x86	CPU Core Frequency	Ratio	External Bus Clock	JP10	JP1
P120+	100MHz =	2x	50MHz	3-4 & 5-6	1-2 & 3-4
P133+	110MHz =	2x	55MHz	3-4 & 5-6	Open
P150+	120MHz =	2x	60MHz	3-4 & 5-6	1-2
P166+	133MHz =	2x	66MHz	3-4 & 5-6	3-4

AMD K5	CPU Core Frequency	Ratio	External Bus Clock	JP10	JP1
PR75	75MHz =	1.5x	50MHz	1-2 & 3-4	1-2 & 3-4
PR90	90MHz =	1.5x	60MHz	1-2 & 3-4	1-2
PR100	100MHz =	1.5x	66MHz	1-2 & 3-4	3-4
PR120	90MHz =	1.5x	60MHz	1-2 & 3-4	1-2
PR133	100MHz =	1.5x	66MHz	1-2 & 3-4	3-4
PR166	116MHz =	1.75x	66MHz	5-6 & 7-8	3-4

AMD K6	CPU Core Frequency	Ratio	External Bus Clock	JP10	JP1
PR2-166	166MHz =	2.5x	66MHz	5-6 & 7-8	3-4
PR2-200	200MHz =	3x	66MHz	1-2 & 7-8	3-4
PR2-233	233MHz =	3.5x	66MHz	1-2 & 3-4	3-4

Hardware Installation




Note: Cyrix 6x86 and AMD K5 CPU use P-rating for the reference of CPU benchmark compared with INTEL P54C, their internal core frequency is not exactly equal to P-rating marked on the CPU. For example, Cyrix P166+ is 133MHz but performance is almost equal to P54C 166MHz and AMD PR133 is 100MHz but performance is almost equal to INTEL P54C 133MHz.

2.2.3 Disabling the Onboard Super I/O Controller

JP8	Onboard Super I/O
1-2	Enable (default)
2-3	Disable

The board is default to enable the onboard Super I/O controller. In case you wish to use an external I/O control card, you need to disable the onboard I/O before using the external I/O card. To disable it, set the jumper **JP8** to 2-3.

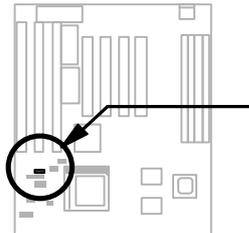

JP8
3 2 1

Enable
(default)

JP8
3 2 1


Disable

Hardware Installation

2.2.4 Disabling the PS/2 Mouse Function

JP4	PS/2 Mouse
Short	Enable (default)
Open	Disable

The PS/2 mouse function is normally enabled and occupies IRQ12. To reassign IRQ12 to another function, disable the PS/2 mouse function by opening jumper **JP4**.

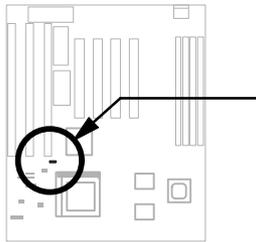

JP4



Enable
(default)

JP4




Disable

2.2.5 Clearing the CMOS

JP5	Clear CMOS
1-2	Normal operation (default)
2-3	Clear CMOS

You need to clear the CMOS if you forget your system password. To clear the CMOS, follow the procedures listed below:

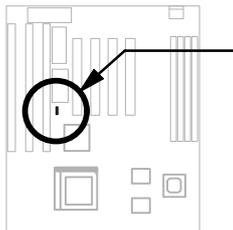

JP5



Normal Operation
(default)

JP5



Clear CMOS

Hardware Installation



Important: Before you proceed, check your onboard CMOS chip. The clearing procedures vary depending on the CMOS chip type. Read the CMOS chip label to determine the chip type.

For Dallas DS12887A:

1. Turn off the system power.
2. Locate **JP5** and short pins 2-3 for a few seconds.
3. Return **JP5** to its normal setting by shorting pins 1-2.
4. Turn on the system power.
5. Press **[DEL]** during bootup to enter the BIOS Setup Utility and specify a new password, if needed.

For Dallas DS12B887, Benchmarq bq3287AMT, or SGS ST M48T86:


1. Turn off the system power.
2. Locate **JP5** and short pins 2-3 for a few seconds.
3. Turn on the system power.
4. Turn off the system power again.
5. Return **JP5** to its normal setting by shorting pins 1-2.
6. Turn on the system power.
7. Press **[DEL]** during bootup to enter the BIOS Setup Utility and specify a new password, if needed.

Hardware Installation


2.2.6 Enabling the INTEL Flash ROM Programming

<u>JP1301</u>	<u>JP1302</u>	<u>Flash ROM Programming</u>
2-3	2-3	Enable (default)

The jumpers **JP1301** and **JP1302** allow you to program the INTEL Flash ROM BIOS. Because BIOS will write back PnP ESCD configuration data, JP1301 and JP1302 must be always set to 2-3, enable programming.

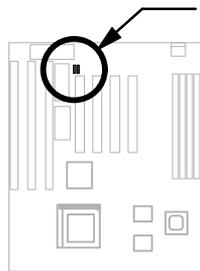

JP1301 and JP1302

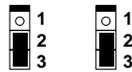

Enable (default)



Note: JP1301 and JP1302 is only used for INTEL flash ROM programming, they are no effect for other type Flash ROM, such as SST or Winbond.



Warning: JP1301 and JP1302 must always be enabled, fail to do so causing inconsistent BIOS code, and may damage the system.

Hardware Installation


2.3 Connectors

2.3.1 Power Cable

A standard baby AT (PS/2) power supply has two cables with six wires on each. Plug in these cables to the onboard power connector in such a way that all the black wires are in the center. The power connector is marked as **PWR (CN3)** on the system board.




Caution: Make sure that the power supply is off before connecting or disconnecting the power cable.

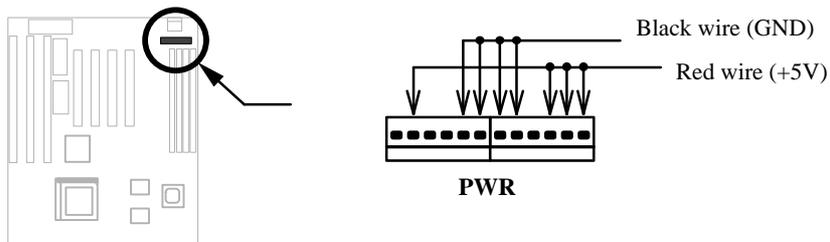

2.3.2 CPU Fan

Plug in the fan cable to the two-pin fan connector onboard. The fan connector is marked **FAN (CN15)** on the system board. Attach the heatsink and fan to the CPU. Check its orientation, make sure the air flow go through the heatsink.


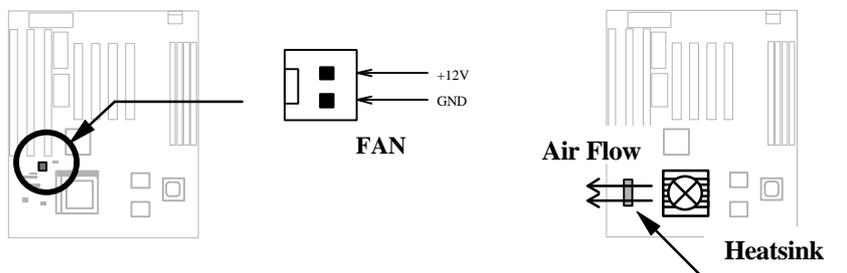


Hardware Installation

2.3.3 PS/2 Mouse



To connect a PS/2 mouse, insert the PS/2 mouse bracket connector to **PS2 MS (CN4)** on the system board. Then plug in the PS/2 mouse cable to the mouse port on the bracket.

Pin	Description
1	MS DATA
2	NC
3	GND
4	+5V
5	MS CLK
6	NC

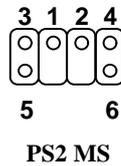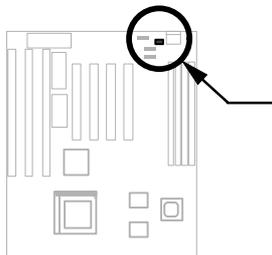

2.3.4 Serial Devices (COM1/COM2)

To support serial devices, insert the serial device connector into the serial port on the bracket. Plug in the 10-pin flat cable to the appropriate onboard connectors. The serial port 1 connector is marked as **COM1 (CN7)** and the serial port 2 connector is marked as **COM2 (CN6)** on the system board.

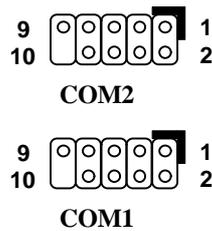
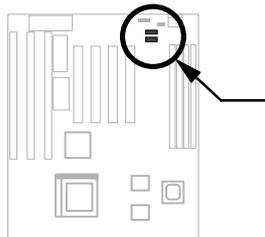


Hardware Installation

2.3.5 USB Device (optional)



You need a USB bracket to have your system to support additional USB device(s). To attach a USB bracket, simply insert the bracket cable to the onboard USB connector marked as **USB (CN5)**.

<u>Pin</u>	<u>Description</u>	<u>Pin</u>	<u>Description</u>
1	V0	2	V1
3	D0-	4	D1-
5	D0+	6	D1+
7	GND	8	GND
9	NC	10	NC

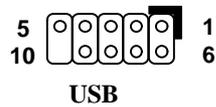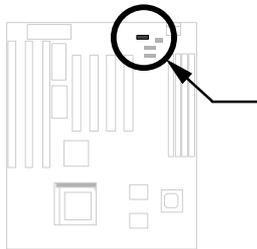

2.3.6 Floppy Drive


Connect the 34-pin floppy drive cable to the floppy drive connector marked as **FDC (CN8)** on the system board.

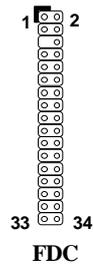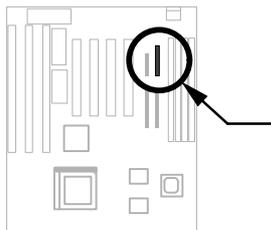

Hardware Installation

2.3.7 Printer

Plug in the 26-pin printer flat cable to the onboard parallel connector marked as **PRINTER (CN9)** on the board.

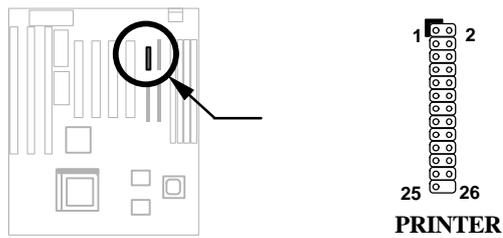


2.3.8 IDE Hard Disk and CD ROM

This mainboard supports two 40 pin IDE connectors marked as **IDE1 (CN10)** and **IDE2 (CN11)**. IDE1 is also known as primary channel and IDE2 as secondary channel, each channel supports two IDE devices that makes total of four devices.

In order to work together, the two devices on each channel must be set differently to master and slave mode, either one can be hard disk or CDROM. The setting as master or slave mode depends on the jumper on your IDE device, please refer to your hard disk and CDROM manual accordingly.

Connect your first IDE hard disk to master mode of the primary channel. If you have second IDE device to install in your system, connect it as slave mode on the same channel, and the third and fourth device can be connected on secondary channel as master and slave mode respectively.

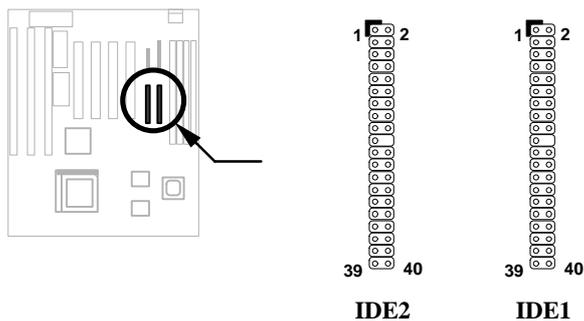


Hardware Installation



Caution: The specification of IDE cable is maximum 46cm (18 inches), make sure your cable does not exceed this length.

Caution: For better signal quality, it is recommended to set far end side device to master mode and follow the suggested sequence to install your new device. Please refer to following figure.

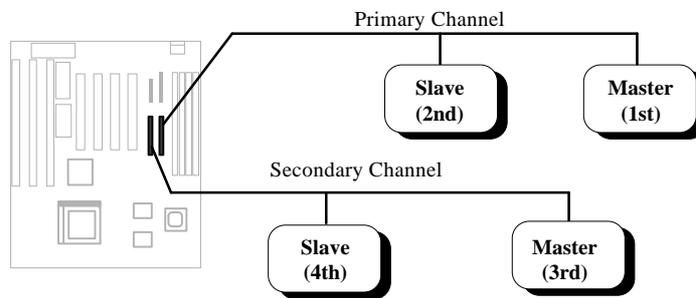


2.3.9 Hard Disk LED

The HDD LED connector is marked as **HDD LED** on the board. This connector is designed for different type of housing, actually only two pins are necessary for the LED. If your housing has four pin connector, simply plug it in. If you have only two pin connector, please connect to pin 1-2 or pin 3-4 according to the polarity.

<u>Pin</u>	<u>Description</u>
1	HDD LED
2	GND
3	GND
4	HDD LED


Hardware Installation

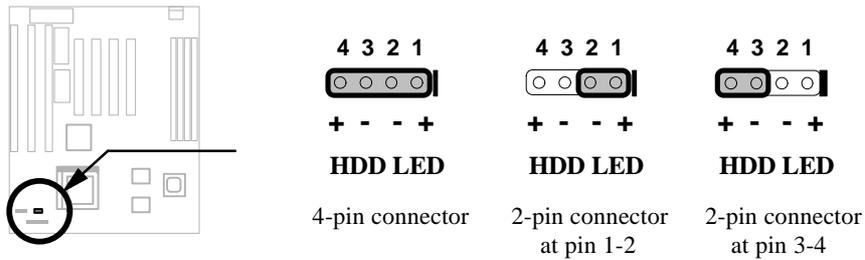


2.3.10 Panel Connector

The Panel (multifunction) connector is a 20-pin connector marked as **PANEL (CN16)** on the board. Attach the power LED, keylock, speaker, reset switch, suspend switch, and green mode LED connectors to the corresponding pins as shown in the figure.

Some housings have a five-pin connector for the keylock and power LED. Since power LED and keylock are aligned together, you can still use this kind of connector.

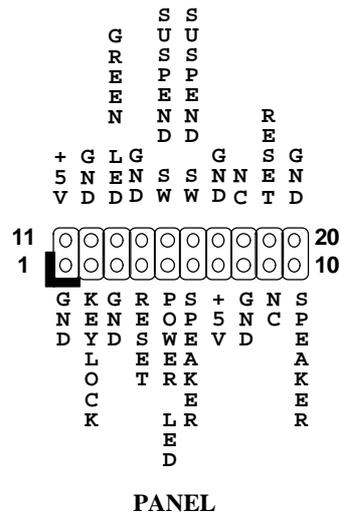

Hardware Installation

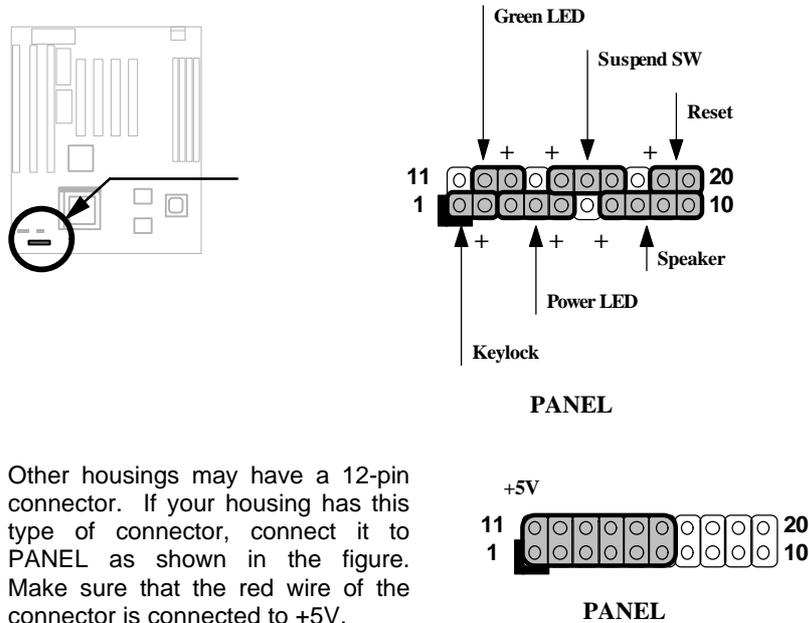

Note: If your housing comes with Turbo switch and Turbo LED connectors, you may use these connectors for Suspend switch and Green mode LED functions, respectively.

Note: Pressing the Suspend switch allows you to manually force the system to suspend mode. However, this is possible only if the Power Management function in the BIOS Setup menu is enabled.


2.3.11 Keyboard

The onboard keyboard connector is a five-pin AT-compatible connector marked as **KB (CN2)**. The view angle of drawing shown here is from back panel of the housing.



Note: The mini DIN PS/2 keyboard connector is optional.

Hardware Installation

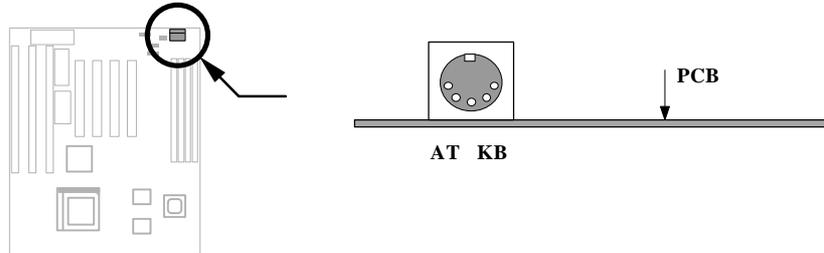

2.3.12 IrDA Connector


Serial port 2 can be configured to support wireless infrared module, with this module and application software such as Laplink, user can transfer files to or from laptops, notebooks, PDA and printers. This mainboard supports IrDA (115Kbps, 1 meter) as well as ASK-IR (19.2Kbps).

Install infrared module onto **IrDA (CN14)** connector and enable infrared function from BIOS setup, make sure to have correct orientation when you plug onto IrDA connector.

<u>Pin</u>	<u>Description</u>
1	+5V
2	IRRX
3	GND
4	IRTX
5	NC
6	+3.3V




Note: Onboard serial port 2 (COM2) will not be available after IrDA connector is enabled.

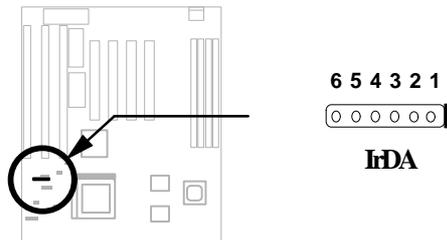

Hardware Installation

2.4 Configuring the System Memory

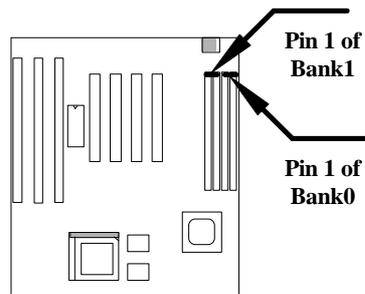

This mainboard has four 72 pin SIMM sockets (Single-in-line Memory Module) that allow you to install system memory from minimum 8MB up to maximum 512MB.

The SIMM supported by this mainboard can be identified by 4 kinds of factors:

- ◆ Size: single side, 1Mx32 (4MB), 4Mx32 (16MB), 16Mx32 (64MB), and double side, 1Mx32x2 (8MB), 4Mx32x2 (32MB), 16Mx32x2 (128MB).
- ◆ Speed: 60ns or 70ns access time
- ◆ Type: FPM (Fast page mode) or EDO (Extended data output)
- ◆ Parity: without parity (32 bit wide) or with parity (36 bit wide).

Because Pentium processor has 64 bit bus width, the four SIMM sockets are arranged in two banks of two sockets each, they are Bank0 and Bank1. Both SIMMs in each bank must be in the same size and type. It is allowed to have different speed and type in different bank, for example, 70ns FPM in one bank and 60ns EDO in another bank, in such case, each bank is independently optimized for maximum performance. The memory timing requires at least 70ns fast page mode DRAM chip, but for optimum performance, 60ns EDO DRAM is recommended.



Warning: The default memory timing setting is 60ns to obtain the optimal performance. Because of the specification limitation, 70ns SIMM is recommended to be used only for CPU external clock 60MHz.



Tip: EDO DRAM is designed to improve the DRAM read performance. Unlike traditional fast page mode, that tristates the memory output data to start the precharge activity, EDO DRAM holds the memory data valid until the next memory access cycle, which is similar to pipeline effect and reduces one clock state.

Hardware Installation

There is no jumper setting required for the memory size or type. It is automatically detected by the system BIOS. You can use any single SIMM combination list below for, and the total memory size is to add them together, the maximum is 512MB.

SIMM1	SIMM2	Subtotal of Bank0
None	None	0MB
4MB	4MB	8MB
8MB	8MB	16MB
16MB	16MB	32MB
32MB	32MB	64MB
64MB	64MB	128MB
128MB	128MB	256MB

SIMM3	SIMM4	Subtotal of Bank1
None	None	0MB
4MB	4MB	8MB
8MB	8MB	16MB
16MB	16MB	32MB
32MB	32MB	64MB
64MB	64MB	128MB
128MB	128MB	256MB

Total Memory Size = Subtotal of Bank0 + Subtotal of Bank1



Caution: Make sure that you install the same SIMM type and size for each bank.

The driving capability of new generation chipset is limited because the lack of memory buffer (to improve performance). This makes DRAM chip count an important factor to be taking into consideration when you install SIMM. Unfortunately, there is no way that BIOS can identified the correct chip count, you need to calculate the chip count by yourself. The simple rule is: By visual inspection, use only SIMM with chip count less than 24 chips.



Warning: Do not install any SIMM that contains more than 24 chips. SIMMs contain more than 24 chips exceed the chipset driving specification. Doing so may result in unstable system behavior.

Hardware Installation



Tip: The SIMM chip count can be calculated by following example:

1. For 32 bit non-parity SIMM using 1M by 4 bit DRAM chip, $32/4=8$ chips.
2. For 36 bit parity SIMM using 1M by 4 bit DRAM chip, $36/4=9$ chips.
3. For 36 bit parity SIMM using 1M by 4 bit and 1M by 1 bit DRAM, the chip count will be 8 data chips ($8=32/4$) plus 4 parity chips ($4=4/1$), total is 12 chips.

Following table list the recommended DRAM combinations:

SIMM Data chip	SIMM Parity chip	Bit size per side	Single/ Double side	Chip count	SIMM size	Recommended
1M by 4	None	1Mx32	x1	8	4MB	Yes
1M by 4	None	1Mx32	x2	16	8MB	Yes
1M by 4	1M by 1	1Mx36	x1	12	4MB	Yes
1M by 4	1M by 4	1Mx36	x1	9	4MB	Yes
1M by 4	1M by 4	1Mx36	x2	18	8MB	Yes
1M by 16	None	1Mx32	x1	2	4MB	Yes
1M by 16	None	1Mx32	x2	4	8MB	Yes
1M by 16	1M by 4	1Mx36	x1	3	4MB	Yes
1M by 16	1M by 4	1Mx36	x2	6	8MB	Yes
4M by 4	None	4Mx32	x1	8	16MB	Yes
4M by 4	None	4Mx32	x2	16	32MB	Yes
4M by 4	4M by 1	4Mx36	x1	12	16MB	Yes
4M by 4	4M by 1	4Mx36	x2	24	32MB	Yes

SIMM Data chip	SIMM Parity chip	Bit size per side	Single/ Double side	Chip count	SIMM size	Recommended
16M by 4	None	16Mx32	x1	8	64MB	Yes, but not tested.
16M by 4	None	16Mx32	x2	16	128MB	Yes, but not tested.
16M by 4	16M by 4	16Mx36	x1	9	64MB	Yes, but not tested.
16M by 4	16M by 4	16Mx36	x2	18	128MB	Yes, but not tested.

Hardware Installation



Warning: 64MB SIMMs using 16M by 4 bit chip (64M bit technology) are not available in the market and are not formally tested by AOpen quality test department yet. However they are supported by design specification of chipset and they will be tested as soon as they are available. Note that 64MB SIMMs using 16M by 1 bit chip (16M bit technology) have chip count exceed 24 and are strongly not recommended.



Tip: 8 bit = 1 byte, 32 bit = 4 byte. The SIMM size is represented by number of data byte (whether with or without parity), for example, the size of single side SIMM using 1M by 4 bit chip is 1Mx32 bit, that is, 1M x 4 byte = 4MB. For double side SIMM, simply multiply it by 2, that is, 8MB.

Following table are possible DRAM combinations that is **NOT** recommended:

SIMM Data chip	SIMM Parity chip	Bit size per side	Single/ Double side	Chip count	SIMM size	Recommended
1M by 1	None	1Mx32	x1	32	4MB	No
1M by 1	1M by 1	1Mx36	x1	36	4MB	No
1M by 4	1M by 1	1Mx36	x2	24	8MB	No
4M by 1	None	4Mx32	x1	32	16MB	No
4M by 1	4M by 1	4Mx36	x1	36	16MB	No
16M by 1	None	16Mx32	x1	32	64MB	No
16M by 1	16M by 1	16Mx36	x1	36	64MB	No