

P2B-L/S/LS (E208) UPDATES

Updates Since Manual Revision 1.03

Since the release of Manual Revision 1.03 of the ASUS P2B-L/P2B-S/P2B-LS motherboards, there has been several updates. Here are some worth noting:

CPU Settings

(refer to page 14 of your manual)

- If you have Product Revision 1.03 or later (check your motherboard for the revision number or ask your dealer) of the motherboard, use the following **CPU Bus Frequency** and **CPU Core:BUS Frequency Multiple** settings:

Set the jumpers by the Internal speed of your processor as follows:

| CPU Model | Freq. | Ratio | (BUS Freq.) | | | (Freq. Ratio) | | | | |
|------------------|--------|-------|-------------|-------|-------|---------------|------|-------|-------|-------|
| | | | BUS F. | FS2 | FS1 | FS0 | CF4 | CF3 | CF2 | CF1 |
| Intel Pentium II | 400MHz | 4.0x | 100MHz | [1-2] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [ON] |
| Intel Pentium II | 350MHz | 3.5x | 100MHz | [1-2] | [1-2] | [1-2] | [ON] | [ON] | [OFF] | [OFF] |
| Intel Pentium II | 333MHz | 5.0x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [OFF] | [ON] |
| Intel Pentium II | 300MHz | 4.5x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [OFF] |
| Intel Pentium II | 266MHz | 4.0x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [ON] |
| Intel Pentium II | 233MHz | 3.5x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [ON] | [OFF] | [OFF] |

NOTES: Overclocking your processor is not recommended. It may result in a slower speed. Voltage Regulator Output Selection (VID) is not needed for the Pentium II processor because it sends a VID signal directly to the onboard power controller.

ADAPTEC EZ-SCSI UTILITY

(refer to page 79 of your manual)

- The ADAPTEC EZ-SCSI UTILITY does not provide drivers for Windows®95 and WindowsNT™. Only drivers for DOS, Windows®3.1x, or Windows for Workgroups3.1x are provided in the support CD disc.

If you want to install Windows®95 or WindowsNT™ on a new computer system, you may not be able to access your SCSI CD-ROM drive initially. (Usually, you install Windows®95 and WindowsNT™ from a disc.) To gain access to your CD-ROM drive, follow the DOS Quick Start instructions on page 79 or use the drivers that came with your SCSI device.

P2B-L/S/LS (E208) UPDATES

Updates Since Manual Revision 1.03

Since the release of Manual Revision 1.03 of the ASUS P2B-L/P2B-S/P2B-LS motherboards, there has been several updates. Here are some worth noting:

CPU Settings

(refer to page 14 of your manual)

- If you have Product Revision 1.03 or later (check your motherboard for the revision number or ask your dealer) of the motherboard, use the following **CPU Bus Frequency** and **CPU Core:BUS Frequency Multiple** settings:

Set the jumpers by the Internal speed of your processor as follows:

| CPU Model | Freq. | Ratio | (BUS Freq.) | | | (Freq. Ratio) | | | | |
|------------------|--------|-------|-------------|-------|-------|---------------|------|-------|-------|-------|
| | | | BUS F. | FS2 | FS1 | FS0 | CF4 | CF3 | CF2 | CF1 |
| Intel Pentium II | 400MHz | 4.0x | 100MHz | [1-2] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [ON] |
| Intel Pentium II | 350MHz | 3.5x | 100MHz | [1-2] | [1-2] | [1-2] | [ON] | [ON] | [OFF] | [OFF] |
| Intel Pentium II | 333MHz | 5.0x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [OFF] | [ON] |
| Intel Pentium II | 300MHz | 4.5x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [OFF] |
| Intel Pentium II | 266MHz | 4.0x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [OFF] | [ON] | [ON] |
| Intel Pentium II | 233MHz | 3.5x | 66MHz | [2-3] | [1-2] | [1-2] | [ON] | [ON] | [OFF] | [OFF] |

NOTES: Overclocking your processor is not recommended. It may result in a slower speed. Voltage Regulator Output Selection (VID) is not needed for the Pentium II processor because it sends a VID signal directly to the onboard power controller.

ADAPTEC EZ-SCSI UTILITY

(refer to page 79 of your manual)

- The ADAPTEC EZ-SCSI UTILITY does not provide drivers for Windows®95 and WindowsNT™. Only drivers for DOS, Windows®3.1x, or Windows for Workgroups3.1x are provided in the support CD disc.

If you want to install Windows®95 or WindowsNT™ on a new computer system, you may not be able to access your SCSI CD-ROM drive initially. (Usually, you install Windows®95 and WindowsNT™ from a disc.) To gain access to your CD-ROM drive, follow the DOS Quick Start instructions on page 79 or use the drivers that came with your SCSI device.