

Brief Software Driver Guide

The Mainboard Software Guide is found on the CD-ROM that is enclosed with your mainboard and is a PDF file which must be viewed with Adobe's freeware called Acrobat® Reader. The Acrobat Reader software is also included on the same CD-ROM. See the Readme.txt file in the CD-ROM's root directory for installation instructions of the Acrobat Reader. The Mainboard software guide discusses the following items:

The following items are discussed in the TXT or PDF files:

- SiS Bus Master IDE drivers for Win9X, WinNT4.0
- SiS AGP VXD Driver
- SiS USB Supplement
- **Sound Driver and Utility Installation**
- AGP VGA Driver for Win9x/NT
- USB Driver Installation
- Updating Your System BIOS
- Installing and Using a Desktop Management Interface (DMI) Utility for DOS



The DMI utility is a DOS utility, operating under Windows or other operating system might cause damage to the BIOS.

Memo