 


FIELD REPLACEABLE UNIT DOCUMENTATION

Portege™


7020CT

BATTERY PACK REMOVAL




1. Turn the computer upside down as shown.
2. Push the **battery lock** to unlock position.
3. Slide the **battery release lever** in the direction of the arrow.
4. Pull the **battery pack** slightly forward and lift it out.

OPTIONAL PCMCIA CARD REMOVAL

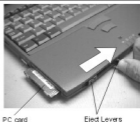

1. Pull out the **eject lever** of the PC card to be removed.
2. Slide the **eject lever** to the right until the PC card is out.
3. Grasp the PC card and remove it.

EXPANSION MEMORY REMOVAL

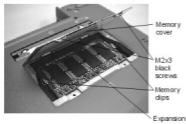

1. Turn the computer upside down.
2. Remove **two M2x3 black screws** and remove the **memory cover**.
3. Push the **memory clips** outward and pull the **expansion memory** out of the connector on a 45 degree angle.

HDD REMOVAL



1. Turn the computer upside down.
2. Remove **one M2x14 black screw** securing the **HDD cover** and lift it out.

TOSHIBA

Tough Enough for Today's World.

Portege™

7020CT

HDD REMOVAL



HDD Plastic handle

3. Grasp the **plastic handle** and pull it towards your left to disconnect the **HDD**.
4. Lift up the **plastic handle** to remove the **HDD**.

CAUTION: Be very careful not to press on the **TOP** or **BOTTOM** of the **HDD**. Pressure can **destroy data** or **damage** the drive.

KEYBOARD REMOVAL



Keyboard cable PJ10

4. Lift the front of the **keyboard** pulling the keyboard forward until the **keyboard cable** is exposed.
5. Disconnect the **keyboard cable** from **PJ10** on the system board and remove the **keyboard**.

KEYBOARD REMOVAL




Keyboard Keyboard holder

1. Turn the computer right side up and open the display.
2. Unlatch the **Keyboard holder** at the five points starting from the front side.
3. Pull up on the front of the **keyboard holder** to release the latches along the back and lift the holder out.

TOP COVER REMOVAL

M2x6 brass screw M2x8 silver screw

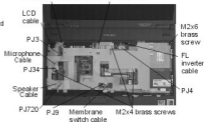

1. Turn the computer right side up and open the cover.
2. Use a tweezor to gently remove the **LCD cable** from **PJ3** and the **FL inverter cable** from **PJ4**.
3. Disconnect the **membrane switch cable** from **PJ9**.
4. Remove one **M2x8 silver screw**.

TOSHIBA

Tough Enough for Today's World.

Portege™

7020CT

TOP COVER REMOVAL




- Turn the computer upside down.
- Remove **two screws** securing the **docking connector cover** and lift the cover out.
- Remove the following thirteen screws securing the bottom cover:
 - **7 M2.5x6 black screws**
 - **4 M2x6 black screws**
 - **2 M2x14 black screws**

RTC BATTERY REMOVAL




- Disconnect the **RTC battery cable**.
- Remove the **tape** securing the **RTC battery cable**.
- Lift out the **RTC battery**.

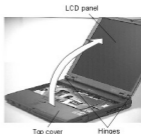

- Turn the computer right side up and open the **LCD panel** holding both **hinges** of the top cover.
- Lift up the front of the **top cover** and tilt the display back until it lies flat.
- Disconnect the **LED cable** from **PJ303** to separate the top cover with display assembly from the bottom cover.

 SYSTEM BOARD REMOVAL



- Remove **one M2x4 brass screw** securing the **LED board** and disconnect the board from **PJ32**.
- Disconnect the **Sound jack board** from **PJ33**.

TOSHIBA

Tough Enough for Today's World.

FIELD REPLACEABLE UNIT DOCUMENTATION

 
Portege™

7020CT

SYSTEM BOARD REMOVAL




2. Remove 9 screws securing the system board.
 - 4 M2x6 brass screws
 - 2 M2x4 brass screws
 - 3 M2x3 brass screws
3. Lift out the **modernjack** from the bottom cover.




4. Lift out the **system board**.
5. Remove **two metal braces** from the system board.
6. Disconnect the **DC IN cable** from PJ802 on the back of the system board.

PC CARD SLOT REMOVAL

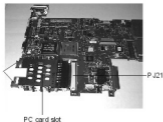

1. Disconnect the **PC card slot** from **P.J21** on the system board.

 MODEM REMOVAL



1. Grasp the **modem board**.
2. Pull the **modem board** and disconnect it from **PJ7** on the system board.
4. Disconnect the **modern jack cable** from **PJ102** on the **modem board**.


TOSHIBA

Tough Enough for Today's World.

Portege™

7020CT

DISPLAY MASK REMOVAL

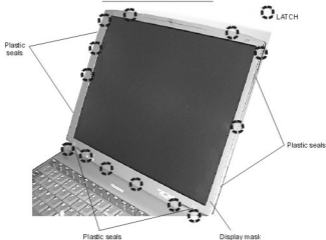

1. Remove **six plastic seals** covering six screws.
2. Remove **two M2.5x5 flat head silver screws** and **four M2x5 flat head silver screws** securing the **display mask**.
3. There are **13 latches** securing the display mask. Carefully insert your fingers between the **display mask** and the LCD panel and pry open the latches starting from the **top two latches**, to the **five latches on the right and left sides**, ending with the **six bottom latches**.


TOSHIBA

Tough Enough for Today's World.

Portege™

7020CT

FL INVERTER AND LCD REMOVAL

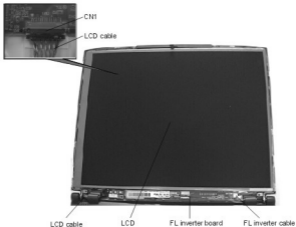

1. Lift up the **FL inverter board** and disconnect the **FL cable** from **CN2** and the **FL inverter cable** from **CN1**.
2. Carefully rotate the **LCD module** from right to left of the LCD cover.
3. Disconnect the **LCD cable** from **CN1** on the **LCD module** and remove the **LCD** from the computer.

TOSHIBA

Tough Enough for Today's World.