Portegeื

7200CT

BATTERY PACK REMOVAL



- 1. Turn the computer upside down as shown.
- Slide the battery lock to unlock position.
 Slide the battery release lever to the right to release.
- the battery.

 
 4. Slide the battery towards you and out of the battery bay.

.....



- 1. Turn the computer upside down.
- Remove two M2x4 black screws securing the memory cover.
- Push the memory clips outward and pull the expansion memory out of the connector on a 45 degree angle.

OPTIONAL PCMCIA CARD REMOVAL



- Slide the eject button to the right to eject the PC card.
 Slide the card out of the slot.
- NOTE: Before removing any PCMCIA device, make sure that it is "STOPPED" in the PC Card manager.

HDD REMOVAL



- Turn the computer upside down.
 Remove one M2x14 black screw securing the
- Remove one MZx14 black screw securing the HDD cover and lift it out.

TOSHIBA Tough Enough for Today's World.

Portege[™]

7200CT

HDD REMOVAL



- Grasp the plastic handle and pull it towards your left to disconnect the HDD assembly.
- Lift out the HDD assembly.

 CAUTION: Be very careful not to press on the TOP or

CAUTION: Be very careful not to press on the TOP or BOTTOM of the HDD. Pressure can destroy data or damage the drive.



Keyboard Keyboard holder

 
1. Turn the computer right side up and open the display.

2. Unlatch the **Keyboard holder** at the top of the keyboard.



HDD bracket M3x4 flat head brass screws
5. Remove four M3x4 flat head brass screws
securing the HDD bracket to the HDD.

KEYBOARD REMOVAL



 Remove two M2x6 brass screws securing the keyboard.

TOSHIBA

Portege[®]

7200CT

KEYBOARD REMOVAL



Keyboard

4. Lift out the keyboard and set it on the display Make sure that you insulate the display before setting the keyboard to avoid scratching the LCD. Disconnect the keyboard cable from PJ588 on the

system board.



Speaker cable Membrane switch cable Turn the computer right side up and open the display. 4. Disconnect the following cables:

Microphone cable from PJ770 Speaker cable from PJ741 FL inverter cable from PJ311

LCD cable from PJ310

Membrane switch cable from PJ570 5. Remove two M2x6 brass screw from the keyboard area.

TOP COVER REMOVAL

M2.5x6 studs M2 x6 black screw M2.5x6 black screws M2.5x6 screws

M2x6 black -SCERW Docking connector cover M2x14 black screws

- 1. Turn the computer upside down. Remove two M2.5x6 stude securing the docking connector cover and lift out
- the cover 2. Remove the following fourteen screws securing the bottom cover:
 - 6 M2.5x6 black screws - 4 M2x6 black screws
 - 2 M2 x14 black screws



- 6. Use the case separator tool to release the latches securing the upper cover
- 7. Set the upper assembly above the lower cover and disconnect the LED cable from P.1992

OSHIBA

Portege

7200CT

SPEAKER REMOVAL



M2x3 flat head silver screws

- 1. Lift the two strips of glass tape covering the speaker
- Remove two M2x3 flat head silver screws securing the speaker brace.
- Lift off the brace and lift the speaker off of the rubber cushion.

RTC BATTERY REMOVAL



Tape RTC battery

- Disconnect the RTC battery cable from PJ610 on the system board.
- Remove the tape securing the RTC battery cable.
 Lift out the RTC battery from the plastic shield.

MEMBRANE SWITCH REMOVAL



M2x3 flat head silver screws

- Remove three M2x3 flat head screws securing the switch cover.
- Lift off the switch cover and remove the membrane switch.

FIR BOARD REMOVAL



M2x4 brass screws

- Lift the strip of glass tape securing the modern jack cable and disconnect the modern jack cable from PJ998 on the FIR board.
- Remove two M2x4 brass screws securing the FIR board and lift it out.
- Turn the board over and disconnect the FIR flat cable from PJ995.

TOSHIBA

Portege[™]

7200CT

SYSTEM BOARD REMOVAL



M2x4 brass screw LED board

the system board

- Panel close sensor
- 1. Disconnect the FIR flat cable from PJ631 on the system
 - 2. Lift the edge of the front LED board to disconnect it from 3. Remove one M2 x4 brass screw securing the panel close

sensor lever arm and remove the lever arm



7. Turn the system board assembly upside down and disconnect the USB board from the system board.

DC-IN iack M2x4 brass screws



M2x6 screws

System board M2x4 brass screws

- 4. Remove five M2x4 and M2x6 brass screws securing
- the system board assembly. 5. Lift out the DC IN jack 6. Remove the power switch holder and lift the system

board out of the bottom cover PC CARD SLOT REMOVAL



B. Pull the PC card slots to disconnect from PJ410 on the system board.

PC card slot

TOSHIBA Tough Enough for Today's World.

Portege™

7200CT

MODEM REMOVAL



 Lift the edge of the modem board to disconnect it from the system board.



- Turn the board over and disconnect the modern jack
 - cable from PJ 102.

 3. Remove one M2x3 flat head brass screw securing the

metal brace

COOLING MODULE

off



Fan cable

PJ430


System board

- Turn the system board assembly right side up.
 Lift the strip of glass tape covering the fan connector and disconnect the fan cable from PJ430 on the
- system board.
 3. Turn the assembly upside down, remove four M2.5x6
 brass screws securing the cooling module, and lift it

TOSHIBA

Portege[®]

7200CT

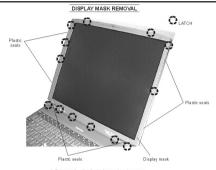

- Remove six plastic seals covering six screws.
 Remove two M2.5x5 flat head silver screws and four M2x5 flat head silver screws securing the display mask.
- 3. There are 13 latches securing the display mask. Carefully insert your fingers between the display mask and the LCD panel and pry open the latches starting from the top two latches, to the five latches on the right and left sides, ending with the six bottom latches.

TOSHIBA

Portege

7200CT

FL INVERTER AND LCD REMOVAL



- Lift out the FL inverter board and disconnect the FL cable from CN2 and the FL inverter cable
- from CN1.

 2. Carefully rotate out the top of the LCD panel enough to access the LCD cable.
- Remove the tape securing the LCD cable to the back of the LCD panel
- Disconnect the LCD cable.
- Remove the LCD panel from the computer.

TOSHIBA