



# Guru Clock



## The 3<sup>rd</sup> Eye On Your PC

- ❑ Easy Installation
- ❑ PC Power On/Off
- ❑ H/W Monitor & Warning
- ❑ Prompt OverClocking
- ❑ Current Time Indicating
- ❑ Room Temperature Indicating (10°C~50°C)
- ❑ MSN Checking
- ❑ E-Mail Checking
- ❑ Large LCD Screen (4x7cm)
- ❑ Guru Linking Cable (1.8m)


### PC Connection:

The **Guru Clock** is a hot-swappable device, no needs to power-off your computer to do the connection. All you have to do is to install the ABIT uGuru Utility first (bundled in the driver-CD) and restart the system before connecting **Guru Clock** to your computer. A  $\mu$ Guru icon appears at the lower right of the status bar represents your system is ready to connect **Guru Clock**.

This device only works together with top-of-the-rank of ABIT's motherboards equipped with uGuru technology. **DO NOT** connect this device with regular USB cable or on any other motherboards.

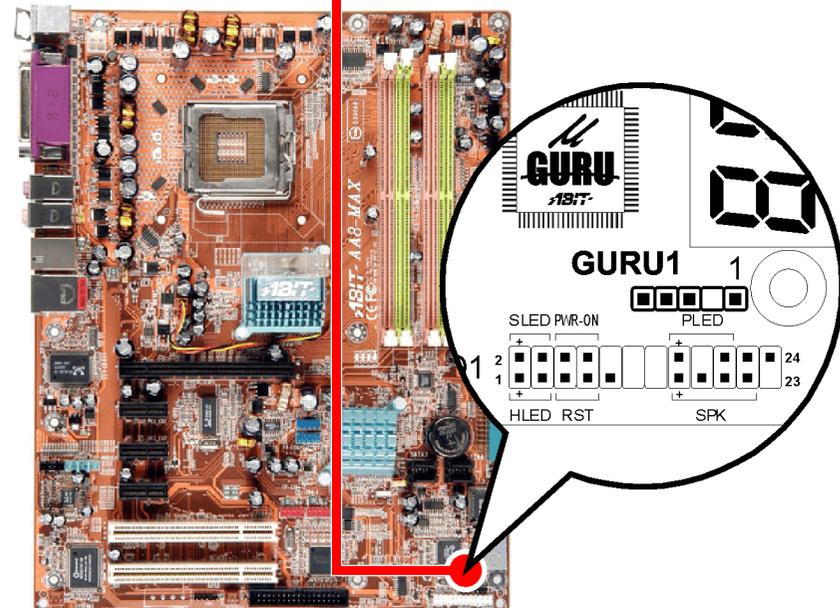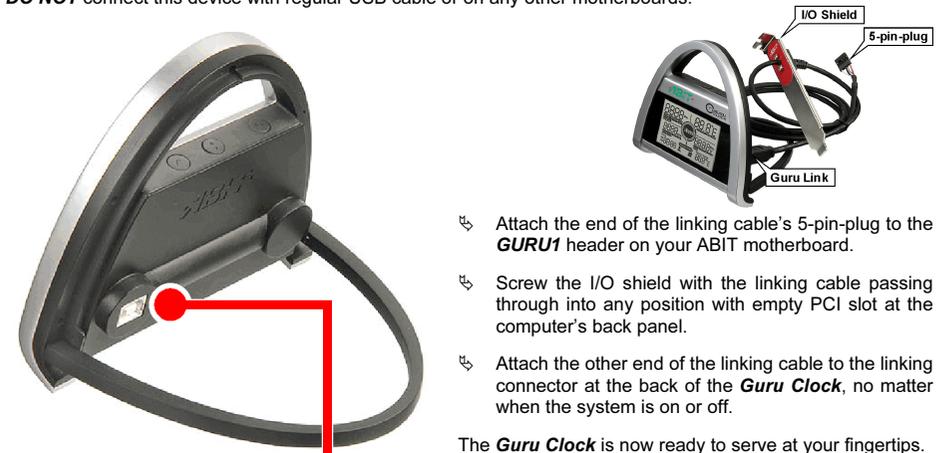

## LCD Screen:

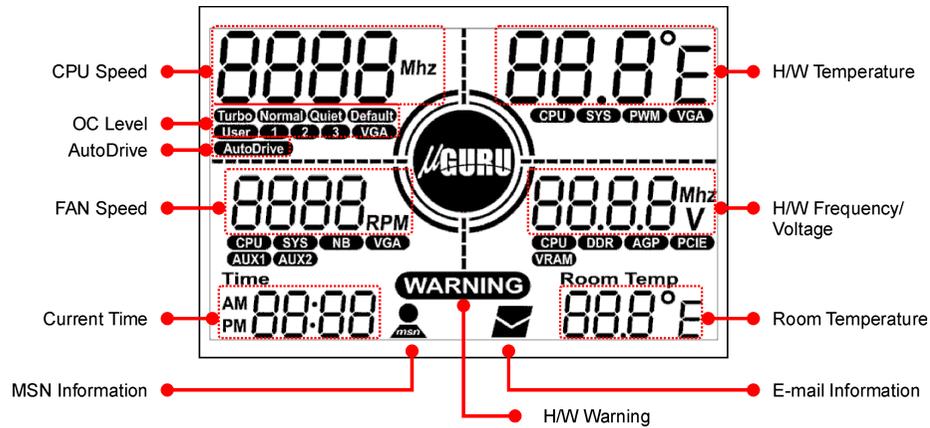

- **[CPU Speed]:** This section displays the reading of CPU speed.
- **[OC Level]:** This section displays the level you choose in the OC Guru Setting.
- **[AutoDrive]:** This section lights up when running AutoDrive OC Guru Setting.
- **[FAN Speed]:** This section displays the reading of fan speed detected at the fan connectors for CPU, SYS, NB, VGA AUX1, or AUX2.
- **[Current Time]:** This section displays your local time, available in 12 or 24-hour format.
- **[MSN Information]:** This icon blinks when the computer is having MSN message.
- **[H/W Warning]:** This icon blinks when an abnormal temperature reading has been detected.

- **[H/W Temperature]:** This section displays the reading of temperature detected at the area near CPU, SYS, PWM, or VGA.

- **[H/W Frequency/Voltage]:** This section displays the reading of frequency or voltage detected at CPU, SYS, PWM, or VGA.

- **[Room Temperature]:** This section displays your room temperature detected by the thermal sensor mounted at the back of the **Guru Clock**.

- **[E-mail Information]:** This icon blinks when the computer is having E-mail message.


**Note: (1)** Except the E-mail and MSN information icon, all the icons on the screen will still displaying your hardware readings even after system power-off as long as the system power supply is connected with AC power source. **(2)** The VGA icon appears only when applying ABIT's VGA card to ABIT's motherboard equipped with uGuru technology.

## Button Operation:

There are three buttons to control the options to be monitored on the **Guru Clock**.

- **[Power On/Off]:** Press this button to power-on your computer, press and hold this button for more than 4 seconds to power-off your computer.
- **[Menu]:** Press the button to select the menu from the options of [OC Mode], [Temperature], [Fan], [Voltage], and [Frequency].
- **[Select]:** Press button to select the options in this menu.


After selected the categories you want to monitor, press **[Menu]** button again to confirm your selection.

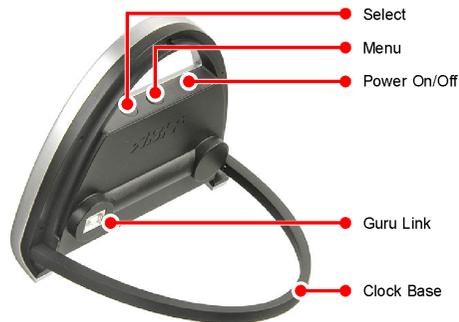

## Setting Menu:

After completed the installation of ABIT uGuru Utility (bundled in the driver-CD) and restart the system, a  $\mu$ Guru icon appears at the lower right of the status bar.

To enter the **Guru Clock** setting menu, power on the system, move your mouse pointer to this  $\mu$ Guru icon, right click your mouse button. The  $\mu$ Guru menu spreads up. Move your mouse pointer to the **Guru Clock** icon, left click your mouse button once again.


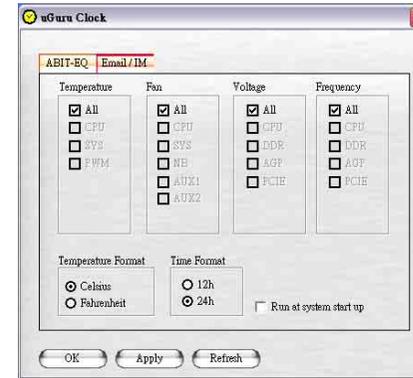


## ABIT-EQ:

- **[Temperature], [Fan], [Voltage], [Frequency]:** Select the options you want **Guru Clock** to monitor from these main categories.
- **[Temperature Format]:** Select the temperature format from Celsius or Fahrenheit.
- **[Time Format]:** Select the 12 or 24-hour time format.
- **[Run at system start up]:** Check this box to enable the system to run the **Guru Clock** setting menu.
- **[OK]:** Confirm and exit this menu.
- **[Apply]:** Confirm and save the new settings modified in the menu of ABIT-EQ to Guru Clock.
- **[Refresh]:** Confirm and save the new settings modified in the menu of Guru Clock to ABIT-EQ.

## Email / IM:

- **[Connect To MSN Messenger]:** Enable/Disable connection to MSN Messenger.
- **[Check Email]:** Enable/Disable Email checking function.
- **[Check every  minutes]:** Type in the time interval you want to check Email.
- **[Add]:** Add in another new POP3 address setting. The [POP3 Setting] screen pops up.
- **[Remove]:** Remove the POP3 address selected in the POP3 address column.
- **[Modify]:** Modify the POP3 address selected in the POP3 address column.

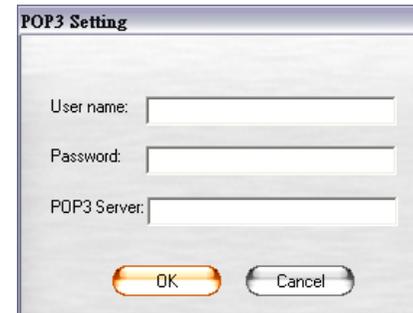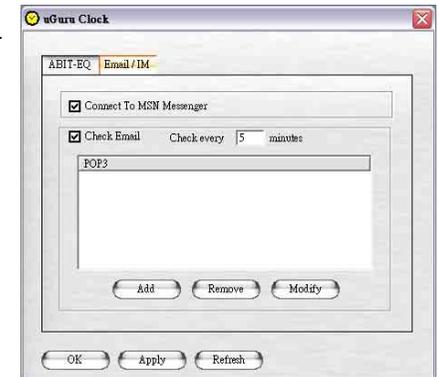

## POP3 Setting:

Here in this menu you can key in your user name, password, and POP3 server information for adding another new E-mail account. Click **[OK]** to confirm and exit this menu. Click **[Cancel]** to exit this menu without saving any information.