

# INDEX

This user's manual describes the jumper setting of B58 Main Board. For detailed technical information, please refer to CDs attached with PC system unit.

<b>Table of Contents</b>	<b>Page</b>
<b>Technical details</b>	
1. Jumpers location diagram for B58 main board	1
2. Memory configuration	2
3. Jumper setting	3 – 5

All other registered and unregistered trademarks are trademarks of their respective holders