



775VM800Pro-DDR2

User Manual

Version 1.0

Published September 2005

Copyright©2005 ASRock INC. All rights reserved.

Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.



This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

ASRock Website: <http://www.asrock.com>

Contents

1. Introduction	5
1.1 Package Contents	5
1.2 Specifications	6
1.3 Motherboard Layout	9
1.4 ASRock I/O Plus™	10
2. Installation	11
2.1 Screw Holes	11
2.2 Pre-installation Precautions	11
2.3 CPU Installation	12
2.4 Installation of CPU Fan and Heatsink	14
2.5 Installation of Memory Modules (DIMM)	15
2.6 Expansion Slots (PCI, AMR, and AGP Slots)	16
2.7 Jumpers Setup	17
2.8 Onboard Headers and Connectors	18
2.9 Serial ATA (SATA) Hard Disks Installation	21
2.10 Hot Plug and Hot Swap Functions for SATA HDDs	21
2.11 Installing Windows 2000 / Windows XP / Windows XP 64-bit With RAID Functions	22
2.12 Installing Windows 98 / ME / 2000 / XP / XP 64-bit Without RAID Functions	23
3. BIOS SETUP UTILITY	24
3.1 Introduction	24
3.1.1 BIOS Menu Bar	24
3.1.2 Navigation Keys	25
3.2 Main Screen	25
3.3 Advanced Screen	25
3.3.1 CPU Configuration	26
3.3.2 Chipset Configuration	28
3.3.3 ACPI Configuration	32
3.3.4 IDE Configuration	33
3.3.5 PCIPnP Configuration	35
3.3.6 Floppy Configuration	35
3.3.7 Super IO Configuration	36
3.3.8 USB Configuration	37
3.4 Hardware Health Event Monitoring Screen	38
3.5 Boot Screen	38
3.5.1 Boot Settings Configuration	39
3.6 Security Screen	40
3.7 Exit Screen	41

4. Software Support.....	42
4.1 Install Operating System	42
4.2 Support CD Information	42
4.2.1 Running Support CD	42
4.2.2 Drivers Menu	42
4.2.3 Utilities Menu	42
4.2.4 "LGA 775 CPU Installation Live Demo" Program....	42
4.2.5 Contact Information	42

1. Introduction

Thank you for purchasing ASRock 775VM800Pro-DDR2 motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance. In this manual, chapter 1 and 2 contain introduction of the motherboard and step-by-step guide to the hardware installation. Chapter 3 and 4 contain the configuration guide to BIOS setup and information of the Support CD.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice. You may find the latest memory and CPU support lists on ASRock website as well. ASRock website <http://www.asrock.com>

1.1 Package Contents

ASRock 775VM800Pro-DDR2 Motherboard
(Micro ATX Form Factor: 9.6-in x 8.5-in, 24.4 cm x 21.6 cm)
ASRock 775VM800Pro-DDR2 Quick Installation Guide
ASRock 775VM800Pro-DDR2 Support CD
(including *LGA 775 CPU Installation Live Demo*)
One 80-conductor Ultra ATA 66/100/133 IDE Ribbon Cable
One Ribbon Cable for a 3.5-in Floppy Drive
One Serial ATA (SATA) Cable
One Serial ATA (SATA) HDD Power Cable(Optional)
One ASRock I/O Plus™ Shield
One COM Port Bracket

1.2 Specifications


Platform	- Micro ATX Form Factor: 9.6-in x 8.5-in, 24.4 cm x 21.6 cm
CPU	- 775-Pin Socket supporting Intel® Dual Core Pentium® XE and Pentium® D / Pentium® 4 / Celeron® D processor (in 775-land LGA package) - FSB 1066/800/533 MHz - Supports EM64T CPU - Supports Hyper-Threading Technology (see CAUTION 1)
Chipset	- Northbridge: VIA® P4M800Pro chipset - Southbridge: VIA® VT8237R Plus
Memory	- 2 x DDRII DIMM slots - Support DDRII533 - Max. capacity: 2GB
Hybrid Booster	- CPU Frequency Stepless Control (see CAUTION 2) - ASRock U-COP (see CAUTION 3) - Boot Failure Guard (B.F.G.)
Expansion Slot	- 3 x PCI slots - 1 x AGP slot for 1.5V 8X/4X AGP card (see CAUTION 4) - 1 x AMR slot
Graphics	- VIA® UniChrome Pro 3D/2D - DirectX 7.0 VGA - Max. VGA shared memory 64MB
Audio	- Cmedia 5.1 channel audio codec
LAN	- VIA® PHY VT6103 - Speed: 10/100Mb Ethernet - Supports Wake-On-LAN
Rear Panel I/O	ASRock I/O Plus™ - 1 x PS/2 Mouse Port - 1 x PS/2 Keyboard Port - 1 x VGA Port - 1 x Parallel Port (ECP/EPP Support) - 6 x Ready-to-Use USB 2.0 Ports - 1 x RJ-45 Port - Audio Jack: Line In / Line Out / Microphone

Connector	<ul style="list-style-type: none"> - 2 x Serial ATA 1.5Gb/s connectors (Supports RAID 0, 1, JBOD and "Hot Plug" functions) - 2 x ATA133 IDE connector (supports 4 x IDE devices) - 1 x Floppy connector - 1 x COM port header - 1 x IR header - CPU/Chassis FAN connector - 20 pin ATX power connector - 4 pin 12V power connector - CD in header - AUX in header - Front panel audio header - 2 x USB 2.0 headers (support 4 USB 2.0 ports; 2 of them are shared with USB4_5) (see CAUTION 5)
BIOS Feature	<ul style="list-style-type: none"> - 4Mb AMI BIOS - AMI Legal BIOS - Supports "Plug and Play" - ACPI 1.1 Compliance Wake Up Events - Supports jumperfree - SMBIOS 2.3.1 Support
Support CD	<ul style="list-style-type: none"> - Drivers, Utilities, AntiVirus Software
Hardware Monitor	<ul style="list-style-type: none"> - CPU Temperature Sensing - Chassis Temperature Sensing - CPU Overheat Shutdown to Protect CPU Life - CPU Fan Tachometer - Chassis Fan Tachometer - Voltage Monitoring: +12V, +5V, +3.3V, Vcore
OS	<ul style="list-style-type: none"> - Microsoft® Windows® 98SE/ME/2000/XP/XP 64-bit compliant
Certifications	<ul style="list-style-type: none"> - FCC, CE, WHQL

CAUTION!


1. About the setting of "Hyper Threading Technology", please check page 27.
2. Although this motherboard offers stepless control, it is not recommended to perform over-clocking. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU.
3. While CPU overheat is detected, the system will automatically shutdown. Before you resume the system, please check if the CPU fan on the motherboard functions properly and unplug the power cord, then plug it back again. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
4. Do NOT use a 3.3V AGP card on the AGP slot of this motherboard!
It may cause permanent damage!
5. Power Management for USB 2.0 works fine under Microsoft® Windows® XP SP1 / 2000 SP4. It may not work properly under Microsoft® Windows® 98 / ME.

1.3 Motherboard Layout

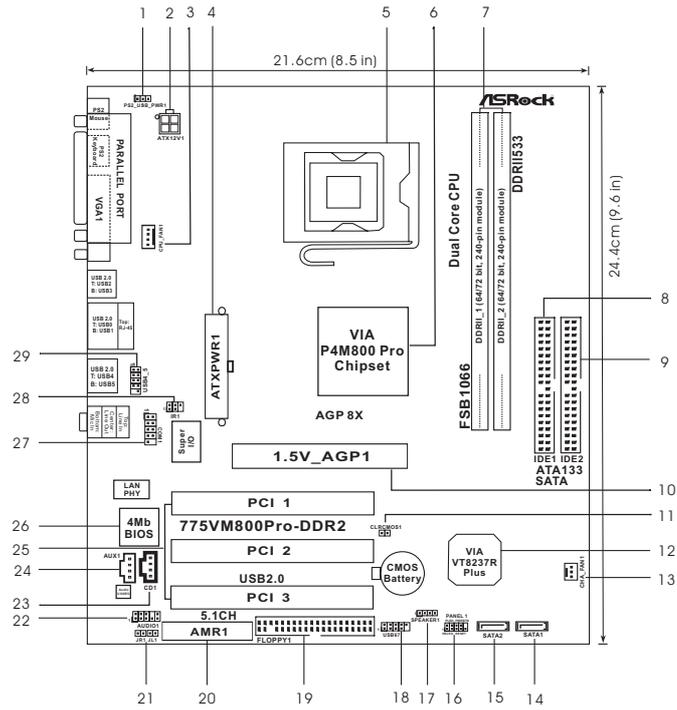

- | | |
|---|---|
| 1 PS2_USB_PWR1 Jumper | 15 Secondary Serial ATA Connector (SATA2) |
| 2 ATX 12V Connector (ATX12V1) | 16 System Panel Header (PANEL1) |
| 3 CPU Fan Connector (CPU_FAN1) | 17 Chassis Speaker Header (SPEAKER 1) |
| 4 ATX Power Connector (ATXPWR1) | 18 USB 2.0 Header (USB67, Blue) |
| 5 775-Pin CPU Socket | 19 Floppy Connector (FLOPPY1) |
| 6 North Bridge Controller | 20 AMR Slot (AMR1) |
| 7 2 x 240-pin DDR2 DIMM Slots
(DDRIL_1, DDRIL_2; Yellow) | 21 JR1 / JL1 Jumpers |
| 8 Primary IDE Connector (IDE1, Blue) | 22 Front Panel Audio Header (AUDIO1) |
| 9 Secondary IDE Connector (IDE2, Black) | 23 Internal Audio Connector: CD1 (Black) |
| 10 AGP Slot (1.5V_AGP1) | 24 Internal Audio Connector: AUX1 (White) |
| 11 Clear CMOS Jumper (CLRCMOS1) | 25 3 x PCI Slots (PCI1-3) |
| 12 South Bridge Controller | 26 Flash Memory |
| 13 Chassis Fan Connector (CHA_FAN1) | 27 Serial Port Connector (COM1) |
| 14 Primary Serial ATA Connector (SATA1) | 28 Infrared Module Header (IR1) |
| | 29 Shared USB 2.0 Header (USB4_5, Blue) |

1.4 ASRock I/O Plus™

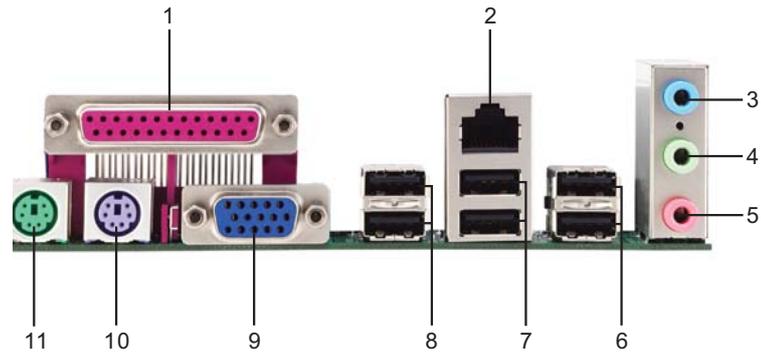

- | | | | |
|---|------------------------------|----|-----------------------------|
| 1 | Parallel Port | 7 | USB 2.0 Ports (USB01) |
| 2 | RJ-45 Port | 8 | USB 2.0 Ports (USB23) |
| 3 | Line In (Light Blue) | 9 | VGA Port |
| 4 | Line Out (Lime) | 10 | PS/2 Keyboard Port (Purple) |
| 5 | Microphone (Pink) | 11 | PS/2 Mouse Port (Green) |
| 6 | Shared USB 2.0 Ports (USB45) | | |

Chapter 2 Installation

775VM800Pro-DDR2 is a Micro ATX form factor (9.6" x 8.5", 24.4 x 21.6 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.


1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.



Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.

2.3 CPU Installation

For the installation of Intel 775-LAND CPU, please follow the steps below.

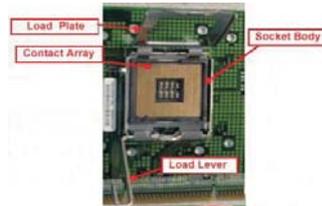

775-Pin Socket Overview



Before you insert the 775-LAND CPU into the socket, please check if the CPU surface is unclean or if there is any bent pin on the socket. Do not force to insert the CPU into the socket if above situation is found. Otherwise, the CPU will be seriously damaged.

Step 1. Open the socket:

Step 1-1. Disengaging the lever by depressing down and out on the hook to clear retention tab.




Step 1-2. Rotate the load lever to fully open position at approximately 135 degrees.




Step 1-3. Rotate the load plate to fully open position at approximately 100 degrees.

Step 2. Insert the 775-LAND CPU:


Step 2-1. Hold the CPU by the edges where are marked with black lines.

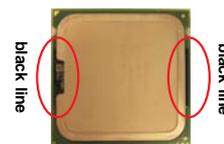

Step 2-2. Orient the CPU with IHS (Integrated Heat Sink) up. Locate Pin1 and the two orientation key notches.

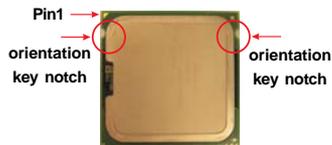

775-LAND CPU

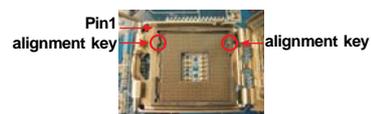

775-Pin Socket



For proper inserting, please ensure to match the two orientation key notches of the CPU with the two alignment keys of the socket.

Step 2-3. Carefully place the CPU into the socket by using a purely vertical motion.

Step 2-4. Verify that the CPU is within the socket and properly mated to the orient keys.



Step 3. Remove PnP Cap (Pick and Place Cap):

Use your left hand index finger and thumb to support the load plate edge, engage PnP cap with right hand thumb and peel the cap from the socket while pressing on center of PnP cap to assist in removal.



1. It is recommended to use the cap tab to handle and avoid kicking off the PnP cap.
2. This cap must be placed if returning the motherboard for after service.

Step 4. Close the socket:

Step 4-1. Rotate the load plate onto the IHS.

Step 4-2. While pressing down lightly on load plate, engage the load lever.

Step 4-3. Secure load lever with load plate tab under retention tab of load lever.



2.4 Installation of CPU Fan and Heatsink

This motherboard is equipped with 775-Pin socket that supports Intel 775-LAND CPU. Please adopt the type of heatsink and cooling fan compliant with Intel 775-LAND CPU to dissipate heat. Before you installed the heatsink, you need to spray thermal interface material between the CPU and the heatsink to improve heat dissipation. Ensure that the CPU and the heatsink are securely fastened and in good contact with each other. Then connect the CPU fan to the CPU_FAN connector (CPU_FAN1, see page 9, No. 3).

For proper installation, please kindly refer to the instruction manuals of your CPU fan and heatsink.

Below is an example to illustrate the installation of the heatsink for 775-LAND CPU.

Step 1. Apply thermal interface material onto center of IHS on the socket surface.



Step 2. Place the heatsink onto the socket. Ensure fan cables are oriented on side closest to the CPU fan connector on the motherboard (CPU_FAN1, see page 9, No. 3).



Step 3. Align fasteners with the motherboard throughholes.



Step 4. Rotate the fastener clockwise, then press down on fastener caps with thumb to install and lock. Repeat with remaining fasteners.



If you press down the fasteners without rotating them clockwise, the heatsink cannot be secured on the motherboard.

Step 5. Connect fan header with the CPU fan connector on the motherboard.

Step 6. Secure excess cable with tie-wrap to ensure cable does not interfere with fan operation or contact other components.

2.5 Installation of Memory Modules (DIMM)

775VM800Pro-DDR2 motherboard provides two 240-pin DDRII (Double Data Rate) DIMM slots.





It is not allowed to install DDR into DDRII slot; otherwise, this motherboard and DIMM may be damaged.



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.

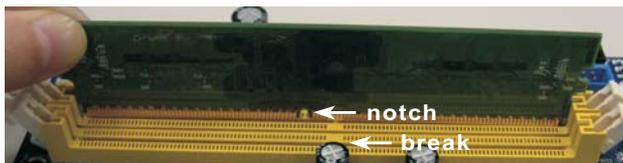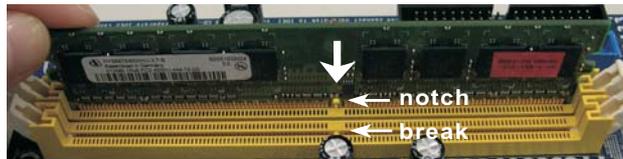

The DIMM only fits in one correct orientation. It will cause permanent damage to the motherboard and the DIMM if you force the DIMM into the slot at incorrect orientation.

- Step 3. Firmly insert the DIMM into the slot until the retaining clips at both ends fully snap back in place and the DIMM is properly seated.

2.6 Expansion Slots (PCI, AMR and AGP Slots)

There are 3 PCI slots, 1 AMR slot, and 1 AGP slot on **775VM800Pro-DDR2** motherboard.

PCI slots: PCI slots are used to install expansion cards that have the 32-bit PCI interface.

AMR slot: The AMR slot is used to insert an ASRock MR card with v.92 Modem functionality.

AGP slot: The AGP slot is used to install a graphics card. The ASRock AGP slot has a special design of clasp that can securely fasten the inserted graphics card.




Please do NOT use a 3.3V AGP card on the AGP slot of this motherboard! It may cause permanent damage! For the voltage information of your AGP card, please check with the AGP card vendors.

Installing an expansion card

- Step 1. Before installing the expansion card, please make sure that the power supply is switched off or the power cord is unplugged. Please read the documentation of the expansion card and make necessary hardware settings for the card before you start the installation.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

2.7 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is "Short". If no jumper cap is placed on pins, the jumper is "Open". The illustration shows a 3-pin jumper whose pin1 and pin2 are "Short" when jumper cap is placed on these 2 pins.

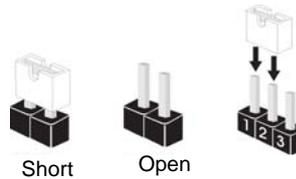

Jumper	Setting	
PS2_USB_PWR1 (see p.9, No. 1)		Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

JR1(see p.9, No. 21)	
JL1(see p.9, No. 21)	

Note: If the jumpers JL1 and JR1 are short, both the front panel and the rear panel audio connectors can work.

Clear CMOS (CLRCMOS1, 2-pin jumper) (see p.9, No. 11)	
---	--

Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord from the power supply. After waiting for 15 seconds, use a jumper cap to short 2 pins on CLRCMOS1 for 5 seconds.

2.8 Onboard Headers and Connectors



Onboard headers and connectors are NOT jumpers. Do NOT place jumper caps over these headers and connectors. Placing jumper caps over the headers and connectors will cause permanent damage of the motherboard!


FDD Connector
(33-pin FLOPPY1)
(see p.9, No. 19)



Note: Make sure the red-striped side of the cable is plugged into Pin1 side of the connector.

Primary IDE Connector (Blue)
(39-pin IDE1, see p.9, No. 8)

Secondary IDE Connector (Black)
(39-pin IDE2, see p.9, No. 9)

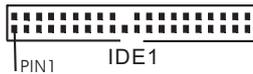

connect the blue end
to the motherboard



connect the black end
to the IDE devices


80-conductor ATA 66/100/133 cable

Note: If you use only one IDE device on this motherboard, please set the IDE device as "Master". Please refer to the instruction of your IDE device vendor for the details. Besides, to optimize compatibility and performance, please connect your hard disk drive to the primary IDE connector (IDE1, blue) and CD-ROM to the secondary IDE connector (IDE2, black).

Serial ATA Connectors

(SATA1: see p.9, No. 14)

(SATA2: see p.9, No. 15)

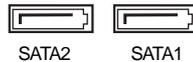

These two Serial ATA (SATA) connectors support SATA data cables for internal storage devices. The current SATA interface allows up to 1.5 Gb/s data transfer rate.

Serial ATA (SATA)
Data Cable




Either end of the SATA data cable can be connected to the SATA hard disk or the SATA connector on the motherboard.

**Serial ATA (SATA)
Power Cable**

(Optional)

connect to the SATA HDD
power connector

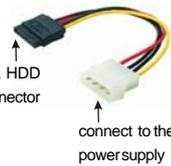


connect to the
powersupply

Please connect the black end of SATA power cable to the power connector on the drive. Then connect the white end of SATA power cable to the power connector of the power supply.

USB 2.0 Header

(9-pin USB67)

(see p.9, No. 18)

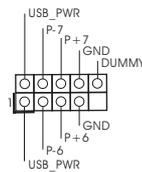


ASRock I/O Plus™ provides you 6 ready-to-use USB 2.0 ports on the rear panel. If the rear USB ports are not sufficient, this USB 2.0 header is available to support 2 extra USB 2.0 ports.

Shared USB 2.0 Header

(9-pin USB4_5)

(see p.9, No. 28)

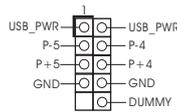


This USB4_5 connector is shared with the USB 2.0 ports 4,5 on ASRock I/O Plus™. When using the front panel USB ports by attaching the front panel USB cable to this connector (USB4_5), the USB ports 4,5 on ASRock I/O Plus™ will not be able to function.

Infrared Module Header

(5-pin IR1)

(see p.9, No. 28)

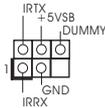


This header supports an optional wireless transmitting and receiving infrared module.

Internal Audio Connectors

(4-pin CD1, 4-pin AUX1)

(CD1: see p.9, No. 23)

(AUX1: see p.9, No. 24)

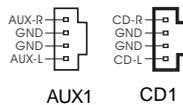


These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.

Front Panel Audio Header

(9-pin AUDIO1)


(see p.9, No. 22)

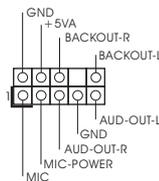

This is an interface for the front panel audio cable that allows convenient connection and control of audio devices.

System Panel Header


(9-pin PANEL1)
(see p.9, No. 16)

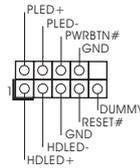

This header accommodates several system front panel functions.

Chassis Speaker Header

(4-pin SPEAKER 1)
(see p.9, No. 17)

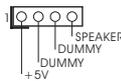

Please connect the chassis speaker to this header.

Chassis Fan Connector

(3-pin CHA_FAN1)
(see p.9, No. 13)



Please connect the chassis fan cable to this connector and match the black wire to the ground pin.

CPU Fan Connector

(4-pin CPU_FAN1)
(see p.9, No. 3)



Please connect the CPU fan cable to this connector and match the black wire to the ground pin.

ATX Power Connector

(20-pin ATXPWR1)
(see p.9, No. 4)



Please connect an ATX power supply to this connector.

ATX 12V Connector

(4-pin ATX12V1)
(see p.9, No. 2)




Please note that it is necessary to connect a power supply with ATX 12V plug to this connector so that it can provides sufficient power. Failing to do so will cause the failure to power up.



Please install the heatsink and the CPU fan before installing ATX 12V connector; otherwise, it may cause permanent damage!

Serial port connector

(9-pin COM1)
(see p.9 item 27)

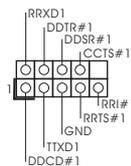

This COM1 connector supports a serial port module.

2.9 Serial ATA (SATA) Hard Disks Installation

This motherboard adopts VIA VT8237R Plus southbridge chipset that supports Serial ATA (SATA) hard disks and RAID functions (RAID 0, 1, JBOD). You may install SATA hard disks on this motherboard for internal storage devices. This section will guide you to install the SATA hard disks.

STEP 1: Install the SATA hard disks into the drive bays of your chassis.

STEP 2: Connect the SATA power cable to the SATA hard disk.

STEP 3: Connect one end of the SATA data cable to the motherboard's SATA connector.

STEP 4: Connect the other end of the SATA data cable to the SATA hard disk.

2.10 Hot Plug and Hot Swap Functions for SATA HDDs

775VM800Pro-DDR2 motherboard supports Hot Plug and Hot Swap functions for SATA Devices.



NOTE

What is Hot Plug Function?

If the SATA HDDs are NOT set for RAID configuration, it is called "Hot Plug" for the action to insert and remove the SATA HDDs while the system is still power-on and in working condition.

However, please note that it cannot perform Hot Plug if the OS has been installed into the SATA HDD.

What is Hot Swap Function?

If SATA HDDs are built as RAID1 then it is called "Hot Swap" for the action to insert and remove the SATA HDDs while the system is still power-on and in working condition.

2.11 Installing Windows 2000 / Windows XP / Windows XP 64-bit With RAID Functions

If you want to install Windows 2000 / Windows XP / Windows XP-64bit OS on your SATA HDDs with RAID functions, please follow the below steps.

STEP 1: Make a SATA Driver Diskette.

- A. Insert the ASRock Support CD into your optical drive to boot your system.
- B. During POST at the beginning of system boot-up, press <F11> key, and then a window for boot devices selection appears. Please select CD-ROM as the boot device.
- C. When you see the message on the screen, "Do you want to generate Serial ATA driver diskette [Y/N]?", press <Y>.
- D. Then you will see these messages,

Please insert a diskette into the floppy drive.

**WARNING! Formatting the floppy diskette will
lose ALL data in it!**

Start to format and copy files [Y/N]?

Please insert a floppy diskette into the floppy drive, and press <Y>.

- E. The system will start to format the floppy diskette and copy SATA drivers into the floppy diskette.

STEP 2: Use "RAID Installation Guide" to set RAID configuration.

Before you start to configure the RAID function, you need to check the installation guide in the Support CD for proper configuration. Please refer to the document in the Support CD, "Guide to SATA Hard Disks Installation and RAID Configuration", which is located in the folder at the following path: .. \ **RAID Installation Guide**

STEP 3: Install Windows 2000 / Windows XP / Windows XP 64-bit OS on your system.

After making a SATA driver diskette and using "RAID Installation Guid" to set RAID configuration, you can start to install Windows 2000 / Windows XP / Windows XP 64-bit on your system.

After the installation of Windows 2000 / Windows XP / Windows XP 64-bit OS, if you want to manage RAID functions, you are allowed to use both "RAID Installation Guide" and "VIA RAID Tool Information" for RAID configuration. Please refer to the document in the Support CD, "Guide to SATA Hard Disks Installation and RAID Configuration", which is located in the folder at the following path: .. \ **RAID Installation Guide** and the document in the support CD, "Guide to VIA RAID Tool", which is located in the folder at the following path: .. \ **VIA RAID Tool Information**



1. Windows 98 / Windows ME does not support RAID functions.
2. If you want to use "VIA RAID Tool Information" in Windows environment, please install SATA drivers from the Support CD again so that "VIA RAID Tool Information" will be installed to your system as well.

2.12 Installing Windows 98 / ME / 2000 / XP / XP 64-bit Without RAID Functions

If you want to install Windows 98 / ME / 2000 / XP / XP 64-bit on your SATA HDDs without RAID functions or you want to install Windows 98 / ME / 2000 / XP / XP 64-bit on your IDE HDDs instead of SATA HDDs, please follow the below steps.



If you want to install Windows 98 / Windows ME on your SATA HDDs without RAID functions, you don't have to set up BIOS. Please install Windows 98 / Windows ME OS on your system directly.

STEP 1: Set Up BIOS. (Only for Windows 2000 / XP / XP 64-bit)

- A. Enter BIOS SETUP UTILITY → Advanced screen → IDE Configuration.
- B. Set the "Onboard SATA Operation Mode" option from [RAID] to [non-RAID].

STEP 2: Install Windows 98 / ME / 2000 / XP / XP 64-bit OS on your system.

After setting up BIOS, you can start to install Windows 98 / ME / 2000 / XP / XP 64-bit on your system.



If you don't want to set up RAID functions, there is no need to make a SATA driver diskette.

3. BIOS SETUP UTILITY

3.1 Introduction

This section explains how to use the BIOS SETUP UTILITY to configure your system. The Flash Memory on the motherboard stores the BIOS SETUP UTILITY. You may run the BIOS SETUP UTILITY when you start up the computer. Please press <F2> during the Power-On-Self-Test (POST) to enter the BIOS SETUP UTILITY, otherwise, POST will continue with its test routines.

If you wish to enter the BIOS SETUP UTILITY after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You may also restart by turning the system off and then back on.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and they may not exactly match what you see on your screen.

3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

- Main** To set up the system time/date information
- Advanced** To set up the advanced BIOS features
- H/W Monitor** To display current hardware status
- Boot** To set up the default system device to locate and load the Operating System
- Security** To set up the security features
- Exit** To exit the current screen or the BIOS SETUP UTILITY

Use <←> key or <→> key to choose among the selections on the menu bar, and then press <Enter> to get into the sub screen.


3.1.2 Navigation Keys

Please check the following table for the function description of each navigation key.

Navigation Key(s)	Function Description
← / →	Moves cursor left or right to select Screens
↑ / ↓	Moves cursor up or down to select items
+ / -	To change option for the selected items
<Enter>	To bring up the selected screen
<F1>	To display the General Help Screen
<F9>	To load optimal default values for all the settings
<F10>	To save changes and exit the BIOS SETUP UTILITY
<ESC>	To jump to the Exit Screen or exit the current screen

3.2 Main Screen

When you enter the BIOS SETUP UTILITY, the Main screen will appear and display the system overview

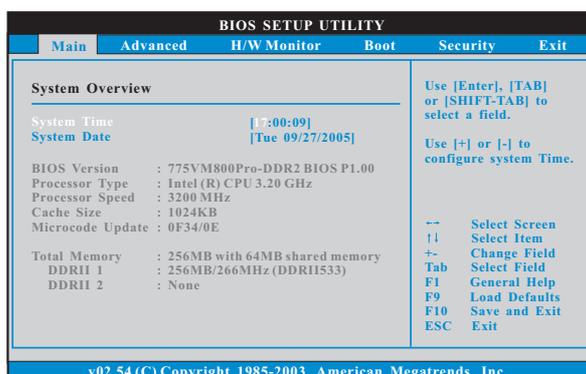

System Time [Hour:Minute:Second]


Use this item to specify the system time.

System Date [Day Month/Date/Year]

Use this item to specify the system date.


3.3 Advanced Screen

In this section, you may set the configurations for the following items: CPU Configuration, Chipset Configuration, ACPI Configuration, IDE Configuration, PCIPnP Configuration, Floppy Configuration, SuperIO Configuration, and USB Configuration.

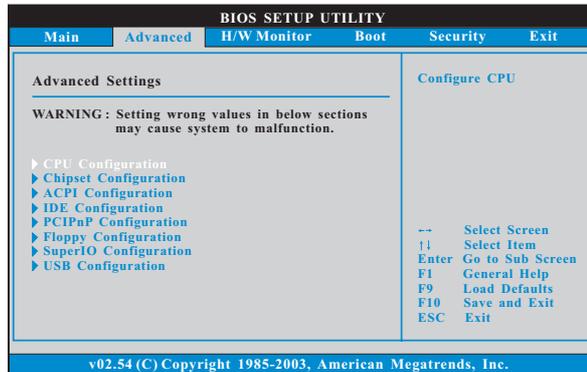

Setting wrong values in this section may cause the system to malfunction.

3.3.1 CPU Configuration

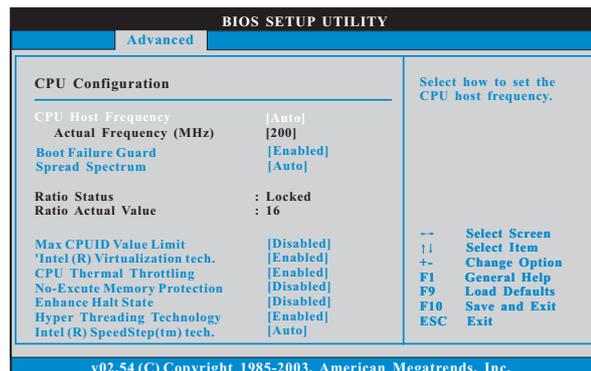

CPU Host Frequency

While entering setup, BIOS auto detects the present CPU host frequency of this motherboard. The actual CPU host frequency will show in the following item.

Boot Failure Guard

Enable or disable the feature of Boot Failure Guard.

Spread Spectrum

Select [Auto] for the spread spectrum feature.

Ratio Status

This is a read-only item, which displays whether the ratio status of this motherboard is "Locked" or "Unlocked". If it shows "Unlocked", you will find an item **Ratio Setting** appears to allow you changing the ratio value of this motherboard. If it shows "Locked", then the item **Ratio Setting** will be hidden.

If you use the ratio value to time the CPU frequency, it will be equal to the core speed of the installed processor.

Ratio Actual Value

This is a read-only item, which displays the ratio actual value of this motherboard.

Max CPUID Value Limit

For Prescott CPU only, some OSes (ex. NT4.0) cannot handle the function with disable. This should be enabled in order to boot legacy OSes that cannot support CPUs with extended CPUID functions.

Intel (R) Virtualization tech.

When this option is set to [Enabled], a VIMM (Virtual Machine Architecture) can utilize the additional hardware capabilities provided by Vanderpool Technology. This option will be hidden if the installed CPU does not support Intel (R) Virtualization Technology.

CPU Thermal Throttling

You may select [Enabled] to enable P4 CPU internal thermal control mechanism to keep the CPU from overheated.

No-Execute Memory Protection

No-Execution (NX) Memory Protection Technology is an enhancement to the IA-32 Intel Architecture. An IA-32 processor with "No Execute (NX) Memory Protection" can prevent data pages from being used by malicious software to execute code. This option will be hidden if the current CPU does not support No-Execute Memory Protection.

Enhance Halt State

All processors support the Halt State (C1). The C1 state is supported through the native processor instructions HLT and MWAIT and requires no hardware support from the chipset. In the C1 power state, the processor maintains the context of the system caches.


Hyper Threading Technology

To enable this feature, it requires a computer system with an Intel Pentium®4 processor that supports Hyper-Threading technology and an operating system that includes optimization for this technology, such as Microsoft® Windows® XP. Set to [Enabled] if using Microsoft® Windows® XP, or Linux kernel version 2.4.18 or higher. This option will be hidden if the installed CPU does not support Hyper-Threading technology.

Intel (R) SpeedStep(tm) tech.

Intel (R) SpeedStep(tm) tech. is Intel's new power saving technology. Processor can switch between multiple frequency and voltage points to enable power savings. If you select [Auto], you need to set the "Power Schemes" as "Portable/Laptop" to enable this function.

3.3.2 Chipset Configuration

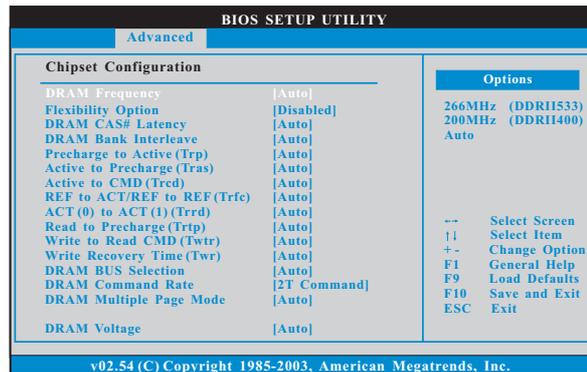

DRAM Frequency

If [Auto] is selected, the motherboard will detect the memory module(s) inserted and assigns appropriate frequency automatically. You may also select other value as operating frequency: [Auto], [200MHz (DDR1400)], [266MHz (DDR1533)].

Flexibility Option

The default value of this option is [Disabled]. It will allow better tolerance for memory compatibility when it is set to [Enabled].

DRAM CAS# Latency

Use this item to adjust the means of memory accessing. Configuration options: [Auto], [3], [4], [5].

DRAM Bank Interleave

Use this option to select DRAM Bank Interleave. Configuration options: [Auto], [Disabled], [2-Way], [4-Way], and [8-Way]. The default value is set to [Auto] to set the timing by dram SPD.

Precharge to Active (Trp)

Use this option to select Precharge to Active (Trp). Configuration options: [Auto], [2T], [3T], [4T], and [5T]. The default value is set to [Auto] to set the timing by dram SPD.

Active to Precharge (Tras)

Use this option to select Active to Precharge (Tras). Configuration options: [Auto], [5T] to [20T]. The default value is set to [Auto] to set the timing by dram SPD.

Active to CMD (Trcd)

Use this option to select Active to CMD (Trcd). Configuration options: [Auto], [2T], [3T], [4T], and [5T]. The default value is set to [Auto] to set the timing by dram SPD.

REF to ACT / REF to REF (Trfc)

Use this option to select REF to ACT / REF to REF (Trfc). Configuration options: [Auto], [8T] to [71T]. The default value is set to [Auto] to set the timing by dram SPD.

ACT(0) to ACT (1) (Trrd)

Use this option to select ACT(0) to ACT (1) (Trrd). Configuration options: [Auto], [2T], [3T], [4T], and [5T]. The default value is set to [Auto] to set the timing by dram SPD.

Read to Precharge (Trtp)

Use this option to select Read to Precharge (Trtp). Configuration options: [Auto], [2T], [3T]. The default value is set to [Auto] to set the timing by dram SPD.

Write to Read CMD (Twtr)

Use this option to select Write to Read CMD (Twtr). Configuration options: [Auto], [2T], [3T]. The default value is set to [Auto] to set the timing by dram SPD.

Write Recovery Time (Twr)

Use this option to select Write Recovery Time (Twr). Configuration options: [Auto], [2T], [3T], [4T] and [5T]. The default value is set to [Auto] to set the timing by dram SPD.

DRAM Bus Selection

The default value is [Auto], which will automatically select the proper access mode for the system. You may select between [Single Channel] and [Dual Channel] if you have properly set the dual channel memory configuration.

DRAM Command Rate

Use this to select among [2T Command] and [1T Command] for DRAM Command Rate. The default value is [2T Command].

DRAM Multiple Page Mode

Use this to select DRAM multiple page mode. Configuration options: [Auto], [Enabled], [Disabled]. The default value is [Auto].

DRAM Voltage

Use this to select among [Normal], [Low] and [High] for DRAM Voltage. The default value is [Auto].

AGP Voltage

Use this to select among [Normal] and [High] for AGP Voltage. The default value is [Auto].

Onboard AGP Share Memory

Use this to select onboard AGP share memory. The default value is [Auto]. When the total memory is equal or above 256MB, the share memory size will be 64MB; otherwise, the share memory size is set to [32MB]. Configuration options: [Auto], [8MB], [16MB], [32MB], [64MB].

Primary Graphics Adapter

This allows you to select [PCI], [AGP] as the primary graphics adapter. The default value is [PCI].

AGP Aperture Size

It refers to a section of the PCI memory address range used for graphics memory. It is recommended to leave this field at the default value unless the installed AGP card's specifications requires other sizes.

AGP Mode

The default value of this feature is set to [Auto]. If you install an 8X-AGP card on this motherboard, you may select [Auto], [8X] or [4X] as the AGP mode. If the installed AGP card is a 4X-AGP card, then you may set the AGP mode as [Auto], [4X], [2X], or [1X].

AGP Fast Write

This allows you to enable or disable the feature of AGP fast write protocol support.

AGP 3.0 Calibration

Use this to set AGP 3.0 calibration. Configuration options: [Auto], [Disabled], [Enabled]. The default value is [Auto].

AGP Straggled Delay

Use this option to select AGP straggled delay. Configuration options: [Auto], [None], [Delay 1ns]. The default value is [Auto].

AGP GADSTB Output Delay

Use this option to select AGP GASSTB output delay. Configuration options: [Auto], [None], [Delay 150 psec], [Delay 300 psec], and [Delay 450 psec]. The default value is [Auto].

V-Link Speed

This feature allows you to speed up the V-Link speed. The default value is [Normal].

PCI Delay Transaction

Enable PCI Delay Transaction feature will free the PCI Bus when the CPU is accessing 8-bit ISA cards. Disable this feature when using ISA cards that are not PCI 2.1 compliant.

IDE Drive Strength

This feature allows you to select IDE drive strength among [Lowest], [Low], [Normal], [Highest]. The default value is [Normal].

IDE Read Prefetch Buffer

This feature allows you to select IDE read prefetch buffer. Configuration options: [Auto], [Disabled], [Enabled]. The default value is [Auto].

OnBoard LAN

This allows you to enable or disable the onboard LAN feature.

OnBoard AC'97 Audio

Select [Auto], [Enabled] or [Disabled] for the onboard AC'97 Audio feature. If you select [Auto], the onboard AC'97 Audio will be disabled when PCI Sound card is plugged.

OnBoard MC'97 Modem

Select [Auto] or [Disabled] for the onboard MC'97 Modem feature.


Thermal Throttling Temperature

This allows you to select the temperature to generate the thermal override event for thermal throttling. Configuration options: [Auto], [Disabled], [50C], [55C], [60C], [65C], [70C], and [75C]. The default value is [Auto].

Thermal Throttling Duty Cycle

This allows you to select the Duty Cycle of the STPCLK# signal when the thermal override event is generated. The percentage means the clock On %. Configuration options: [Auto], [12.50%], [25.00%], [37.50%], [50.00%], [62.50%], [75.00%], and [87.50%]. The default value is [Auto].

3.3.3 ACPI Configuration

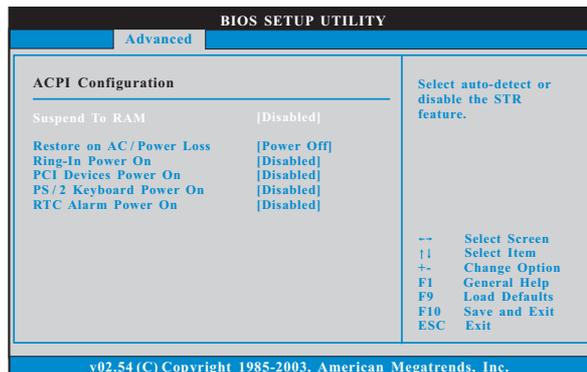

Restore on AC/Power Loss

Use this item to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

Ring-In Power On

Use this item to enable or disable Ring-In signals to turn on the system from the power-soft-off mode.

PCI Devices Power On

Use this item to enable or disable PCI devices to turn on the system from the power-soft-off mode.


PS/2 Keyboard Power On

Use this item to enable or disable PS/2 keyboard to turn on the system from the power-soft-off mode.

RTC Alarm Power On

Use this item to enable or disable RTC (Real Time Clock) to power on the system.

3.3.4 IDE Configuration

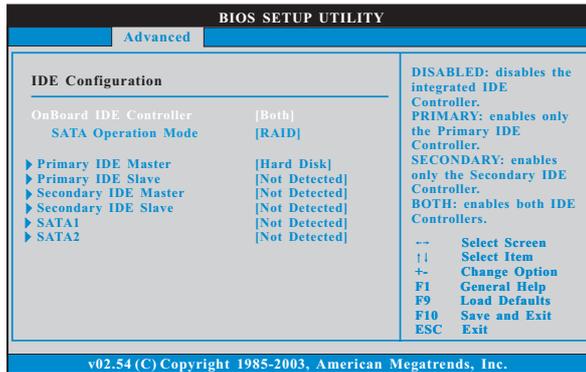

OnBoard IDE Controller


You may enable either the primary IDE channel or the secondary IDE channel. Or you may enable both the primary and the secondary IDE channels by selecting [Both]. Set to [Disabled] will disable the both. Configuration options: [Disabled], [Primary], [Secondary], [Both].

SATA Operation Mode

Use this item to adjust SATA Operation Mode. The default value of this option is [RAID]. If you don't want to operate RAID function on SATA HDDs, please select [non-RAID], but if you want to install Windows 98 / ME on SATA HDDs without RAID functions, please select [RAID].

IDE Device Configuration

You may set the IDE configuration for the device that you specify. We will use the "Primary IDE Master" as the example in the following instruction, which can be applied to the configurations of "Primary IDE Slave", "Secondary IDE Master", and "Secondary IDE Slave" as well.

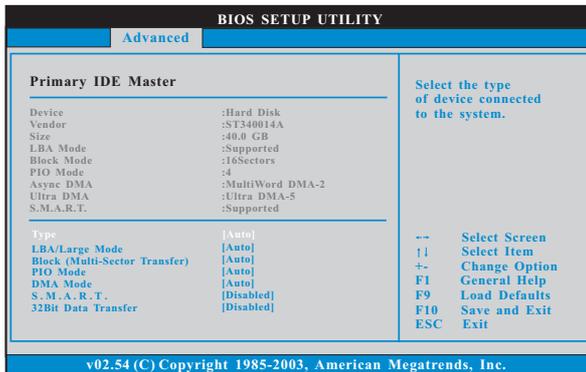

TYPE

Use this item to configure the type of the IDE device that you specify. Configuration options: [Not Installed], [Auto], [CD/DVD], and [ARMD].

[Not Installed]: Select [Not Installed] to disable the use of IDE device.

[Auto]: Select [Auto] to automatically detect the hard disk drive.



After selecting the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format the new IDE hard disk drives. This is necessary so that you can write or read data from the hard disk. Make sure to set the partition of the Primary IDE hard disk drives to active.

[CD/DVD]: This is used for IDE CD/DVD drives.

[ARMD]: This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

LBA/Large Mode

Use this item to select the LBA/Large mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Disabled] to disable the LBA/Large mode.

Block (Multi-Sector Transfer)

The default value of this item is [Auto]. If this feature is enabled, it will enhance hard disk performance by reading or writing more data during each transfer.

PIO Mode

Use this item to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

DMA Mode

DMA capability allows the improved transfer-speed and data-integrity for compatible IDE devices.


S.M.A.R.T.

Use this item to enable or disable the S.M.A.R.T. (Self-Monitoring, Analysis, and Reporting Technology) feature. Configuration options: [Disabled], [Auto], [Enabled].

32-Bit Data Transfer

Use this item to enable 32-bit access to maximize the IDE hard disk data transfer rate.

3.3.5 PCIPnP Configuration

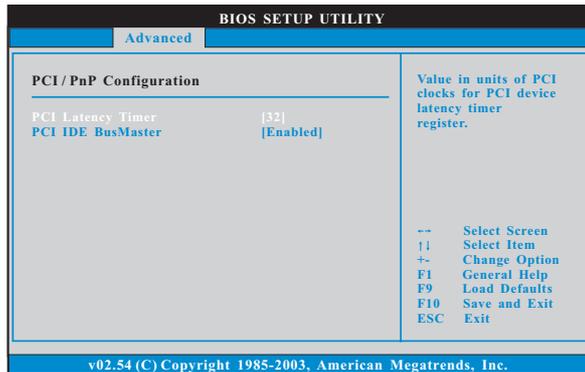

PCI Latency Timer


The default value is 32. It is recommended to keep the default value unless the installed PCI expansion cards' specifications require other settings.

PCI IDE BusMaster


Use this item to enable or disable the PCI IDE BusMaster feature.

3.3.6 Floppy Configuration

In this section, you may configure the type of your floppy drive.

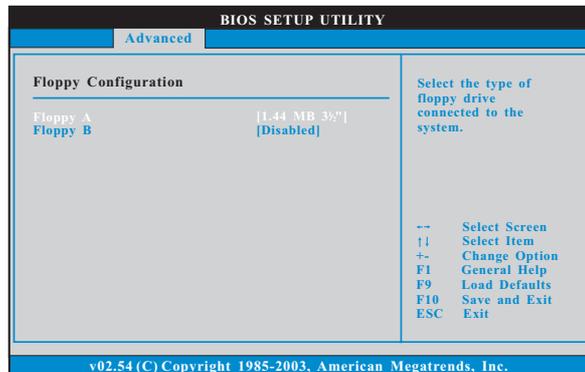

3.3.7 Super IO Configuration

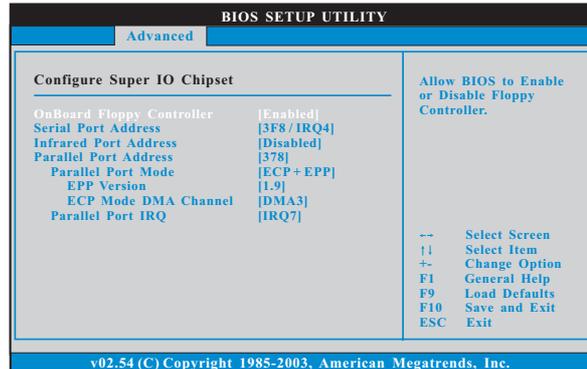

OnBoard Floppy Controller

Use this item to enable or disable floppy drive controller.

Serial Port Address

Use this item to set the address for the onboard serial port or disable it.

Configuration options: [Disabled], [3F8 / IRQ4], [2F8 / IRQ3], [3E8 / IRQ4], [2E8 / IRQ3].

Infrared Port Address

Use this item to set the address for the onboard infrared port or disable it.

Configuration options: [Disabled], [2F8 / IRQ3], and [2E8 / IRQ3].

Parallel Port Address

Use this item to set the address for the onboard parallel port or disable it.

Configuration options: [Disabled], [378], and [278].

Parallel Port Mode

Use this item to set the operation mode of the parallel port. The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version". Configuration options: [Normal], [Bi-Directional], and [ECP+EPP].

EPP Version

Use this item to set the EPP version. Configuration options: [1.9] and [1.7].


ECP Mode DMA Channel

Use this item to set the ECP mode DMA channel. Configuration options: [DMA0], [DMA1], and [DMA3].

Parallel Port IRQ

Use this item to set the IRQ for the parallel port. Configuration options: [IRQ5] and [IRQ7].

3.3.8 USB Configuration

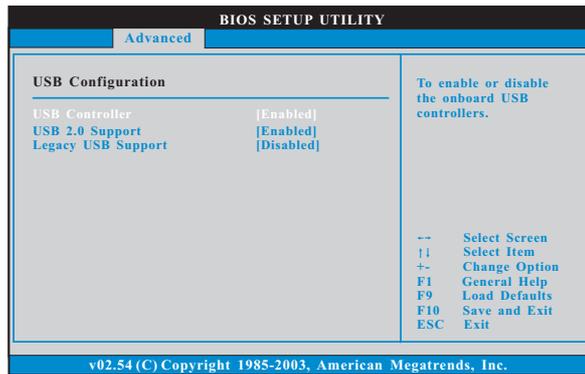

USB Controller

Use this item to enable or disable the use of USB controller.

USB 2.0 Support

Use this item to enable or disable the USB 2.0 support.

Legacy USB Support

Use this item to enable or disable the support to emulate legacy I/O devices such as mouse, keyboard,... etc. Or you may select [Auto] so that the system will start to auto-detect; if there is no USB device connected, "Auto" option will disable the legacy USB support.

3.4 Hardware Health Event Monitoring Screen

In this section, it allows you to monitor the status of the hardware on your system, including the parameters of the CPU temperature, motherboard temperature, CPU fan speed, chassis fan speed, and the critical voltage.


BIOS SETUP UTILITY					
Main	Advanced	H/W Monitor	Boot	Security	Exit
Hardware Health Event Monitoring					
CPU Temperature : 37°C / 98°F					
M/B Temperature : 31°C / 87°F					
CPU Fan Speed : 2463 RPM					
Chassis Fan Speed : N/A					
Vcore : 1.629V					
+ 3.30V : 3.306V					
+ 5.00V : 5.067V					
+ 12.00V : 11.890V					
				--	Select Screen
				↑↓	Select Item
				F1	General Help
				F9	Load Defaults
				F10	Save and Exit
				ESC	Exit
v02.54 (C) Copyright 1985-2003, American Megatrends, Inc.					

3.5 Boot Screen

In this section, it will display the available devices on your system for you to configure the boot settings and the boot priority.

BIOS SETUP UTILITY					
Main	Advanced	H/W Monitor	Boot	Security	Exit
Boot Settings					
Configure Settings during System Boot.					
▶ Boot Settings Configuration					
1st Boot Device [1st Floppy Device]					
2nd Boot Device [HDD: PM - HDS722580VL]					
3rd Boot Device [CD/DVD: 3S - CD - ROM C]					
▶ Hard Disk Drives					
▶ Removable Drives					
▶ CD/DVD Drives					
				--	Select Screen
				↑↓	Select Item
				Enter	Go to Sub Screen
				F1	General Help
				F9	Load Defaults
				F10	Save and Exit
				ESC	Exit
v02.54 (C) Copyright 1985-2003, American Megatrends, Inc.					

3.5.1 Boot Settings Configuration

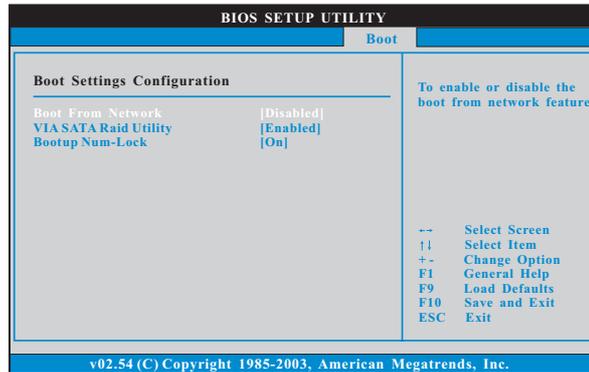

Boot From Network

Use this item to enable or disable the Boot From Network feature.

VIA SATA Raid Utility


Use this to enable or disable VIA VT8237R Plus SATA Raid BIOS Utility during POST.

Boot Up Num-Lock

If this item is set to [On], it will automatically activate the Numeric Lock function after boot-up.


3.6 Security Screen

In this section, you may set or change the supervisor/user password for the system. For the user password, you may also clear it.

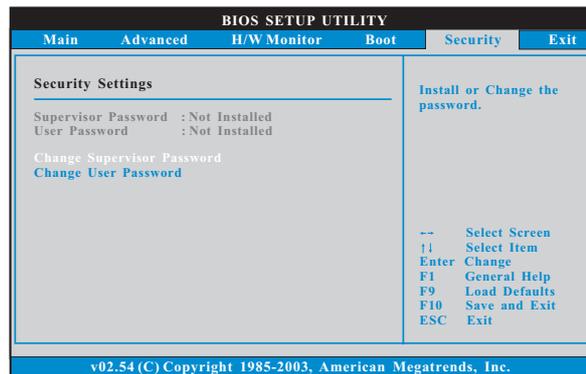

Likewise, you may also specify the boot sequence from the available devices for the hard disk drives, the removable drives, and the CD/DVD drives.

3.7 Exit Screen

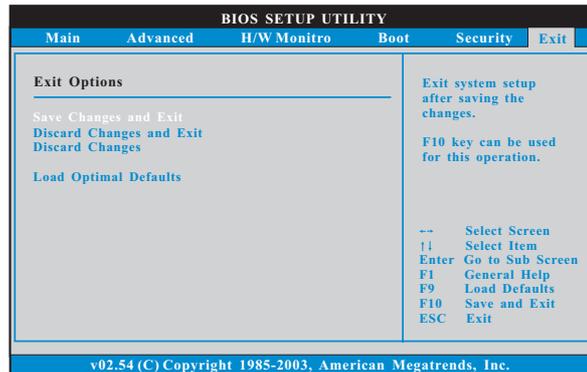

Save Changes and Exit

When you select this option, it will pop-out the following message, "Save configuration changes and exit setup?" Select [OK] to save the changes and exit the BIOS SETUP UTILITY.

Discard Changes and Exit

When you select this option, it will pop-out the following message, "Discard changes and exit setup?" Select [OK] to exit the BIOS SETUP UTILITY without saving any changes.

Discard Changes

When you select this option, it will pop-out the following message, "Discard changes?" Select [OK] to discard all changes.

Load Optimal Defaults

When you select this option, it will pop-out the following message, "Load optimal defaults?" Select [OK] to load the default values for all the setup configurations.

4. Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 98SE/ME/2000/XP/XP 64-bit. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that enhance the motherboard features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file "ASSETUP.EXE" from the BIN folder in the Support CD to display the menus.

4.2.2 Drivers Menu

The Drivers Menu shows the available devices drivers if the system detects installed devices. Please install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 "LGA 775 CPU Installation Live Demo" Program

This motherboard is equipped with Intel LGA 775 socket, which is a new CPU socket interface that Intel has released. Since it has several tiny pins, which are easily to be damaged by improper handling, ASRock sincerely presents you a clear installation guide through this "LGA 775 CPU Installation Live Demo". We hope you may check this live demo program before you start the installation of LGA 775 CPU in order to reduce the risks of CPU and motherboard damages caused by any improper handling. To see this Live Demo, you can run Microsoft® Media Player® to play the file. You may find this Live Demo in the motherboard's Support CD through the following path:

```
..\ MPEGAV \ LGA775INST.DAT
```

4.2.5 Contact Information

If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.