

ERRATUM

Some update information and mistake was found in the user's manual. Please refer to the following for the details.

1. Page 2-1:
There is the COM 2 designed on the mainboard. If you want to have some serial device connected to the COM2, you need to have the COM port cable connected to CN4 (see Page 3-5). The COM port cable is the optional choice for customer because most users do not need such cable. If you need the COM port cable, please contact your dealer for the cable..
2. Page 4-9:
There is the PWRON After PWE-Fail in the BIOS setup. Such function will have the PC system powered on automatically after the power failure. Since most users do not expect to have such feature, so we decided to have this function removed from the mainboard.
3. Page 4-12:
There is the PWRON After PWE-Fail function description included in this manual. Please skip the description because the function is disabled on this mainboard.

DOC NO. UM-810DM-L1

ERRATUM

Some update information and mistake was found in the user's manual. Please refer to the following for the details.

1. Page 2-1:
There is the COM 2 designed on the mainboard. If you want to have some serial device connected to the COM2, you need to have the

COM port cable connected to CN4 (see Page 3-5). The COM port cable is the optional choice for customer because most users do not need such cable. If you need the COM port cable, please contact your dealer for the cable..

2. Page 4-9:
There is the PWRON After PWR-Fail in the BIOS setup. Such function will have the PC system powered on automatically after the power failure. Since most users do not expect to have such feature, so we decided to have this function removed from the mainboard.
3. Page 4-12:
There is the PWRON After PWR-Fail function description included in this manual. Please skip the description because the function is disabled on this mainboard.

DOC NO. UM-810DM-L1

BIOS SETUP RON After PWE-Fail