



The **AZZA** 845S Mainboard Series

Cover

[Click Here](#)

Table Of Contents

[Click Here](#)

Introduction

[Click Here](#)

Hardware Installation

[Click Here](#)

BIOS Management

[Click Here](#)



*Create High Quality
Service and Technology*




845S Mainboard Series User's Manual

SOCKET 478 SDR ATX Mainboard



845S-AV
845S-AD

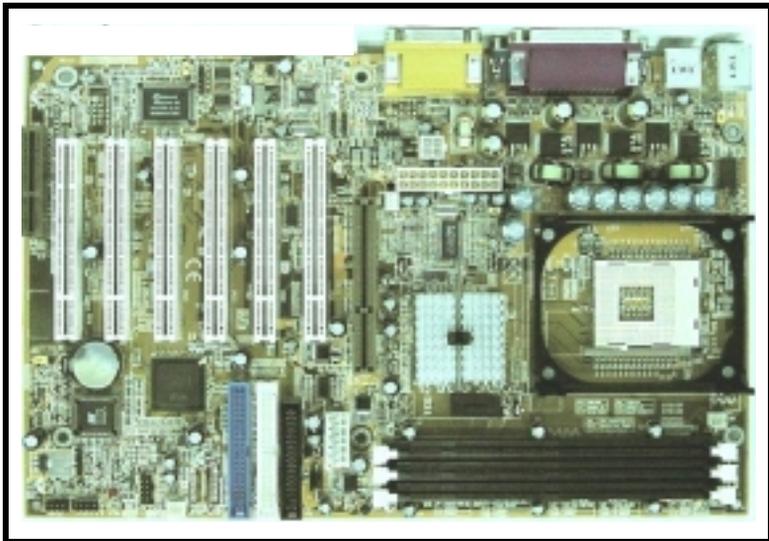

Version 1.0
UM-845S-AVD-E1
Rev 1.1V
Creation Date: 19 October 2001



Copyright Notice



Copyright

This publication contains information that is protected by copyright. No part of it may be reproduced in any form or by any means or used to make any transformation adaptation without prior written permission from the copyright holders. This publication is provided for informational purposes only. The manufacturer makes no representations or warranties with respect to the contents or use of this manual and specifically disclaims any express or implied warranties of merchantability or fitness for any particular purpose. The user will assume the entire risk of the use or the results of the use of this document. The manufacturer reserves the right to revise this publication and make changes to its contents at any time, without prior notice.

2001. All Rights Reserved.

Trademarks

Microsoft®, MS-DOS®, Windows™, Windows® 95 and Windows® 98 are registered trademarks of Microsoft Corporation. P4™ is a registered trademark of Intel corporation. Award is the registered trademark of Award Software, Inc. Other trademarks and registered trademarks of products appearing in this publication are the properties of their respective holders.

Package Checklist

This package contains the following items:

- Mainboard
- Users manual
- One IDE cable
- One 34-pin floppy disk drive cable
- One Driver Utility CD

If any of these items are damaged or missing, please contact your dealer or sales representative for assistance.

Technical Support

If you require additional information or assistance during installation please contact your dealer. Your dealer will be able to provide the latest information.



Table of Contents



Chapter 1:- Introduction *Page 5*

1.1. Mainboard Layout	5
1.2. Overview	6
1.2.1. Mainboard Series	6
1.2.2. Mainboard Dimensions	6
1.2.3. Environmental Limitations.....	6
1.3. Features and Specifications	6
1.4. System Health Monitor Functions	9
1.4.1. Hardware Monitoring System Utility.....	9
1.4.2. Installation	10
1.5. System Intelligence	10

Chapter 2:- Hardware Installation *Page 11*

2.1. Installation Checklist	11
2.2. Installation Steps.....	12
2.3. Expansion Cards, Connectors and Jumpers.....	13
2.4. CPU, Memory and Expansion Slots.....	14
2.4.1. Installation of the CPU.....	14
2.4.2. Memory Modules.....	14
2.4.3. PCI Slots	15
2.4.4. AGP (Accelerated Graphics Port) Slot.....	16
2.4.5. CNR (Communications Network Riser) Slot	16
2.5. Internal Connectors	16
2.5.1. Floppy Disk Drive (FDD)	16
2.5.2. Primary and Secondary IDE Connectors.....	17
2.5.3. CPU and Chassis Fan Connectors	17
2.5.4. ATX Power Supply Connectors	17
2.5.5. WOL (Wake-On-LAN) Connector	18
2.5.6. CD Audio In/AUX-In/Video-In Connectors	19
2.5.7. USB Connectors	19
2.5.8. Smart Card Reader (SCR) Connector	20
2.5.9. Memory Stick/SD Connector	20
2.6. System Panel Buttons and LED Connectors	20
2.6.1. PW: Power On/Off and External Suspend Switch Connector.....	21
2.6.2. Standby LED Connector	21
2.6.3. IDE HDD LED Connector	21
2.6.4. Reset Button Connector.....	21



Table of Contents




2.7. Speaker and Power LED Connector	22
2.7.1. Speaker Connector	22
2.7.2. Front Panel Power LED Connector	22
2.8. External Connectors	22
2.8.1. PS/2 Keyboard Connector	22
2.8.2. PS/2 Mouse Connector	22
2.8.3. COM 1 and COM 2 Connectors	23
2.8.4. Parallel Port Connector	23
2.8.5. USB 1 and USB 2 Ports	23
2.8.6. Audio Game Port Connector	23
2.9. Jumper Settings	23
2.9.1. JP 1: Keyboard/Mouse Power On	24
2.9.2. JP 2: CPU FSB Clock Speed Selection	24
2.9.3. JP 3: STR Function	24
2.9.4. JP5: Voice Alarm Language Selection	25
2.9.5. JP6: Clear Password	25
2.9.6. JP7: USB3/4 Wake Up From STR Mode.....	25
2.9.7. JP8: Memory Stick Reader Selection	25
2.9.8. JP11: Clear CMOS	25

Chapter 3:- Managing The PC BIOS *Page 26*

3.1. AWARD BIOS CMOS Setup Utility	26
3.2. Main Menu	26
3.3. Standard CMOS Setup	27
3.4. Advanced BIOS Features	29
3.5. Advanced Chipset Features	32
3.6. Integrated Peripherals	34
3.7. Power Management Setup	39
3.8. PNP/PCI Configuration	41
3.9. PC Health Status	42
3.10. Frequency/Voltage Control	43
3.11. Load Optimized Defaults	44
3.12. Set Supervisor Password	45
3.13. Set User Password	45
3.14. SAVE & EXIT SETUP/EXIT WITHOUT SAVING	47


Chapter 1 - Introduction

1.1. MAINBOARD LAYOUT

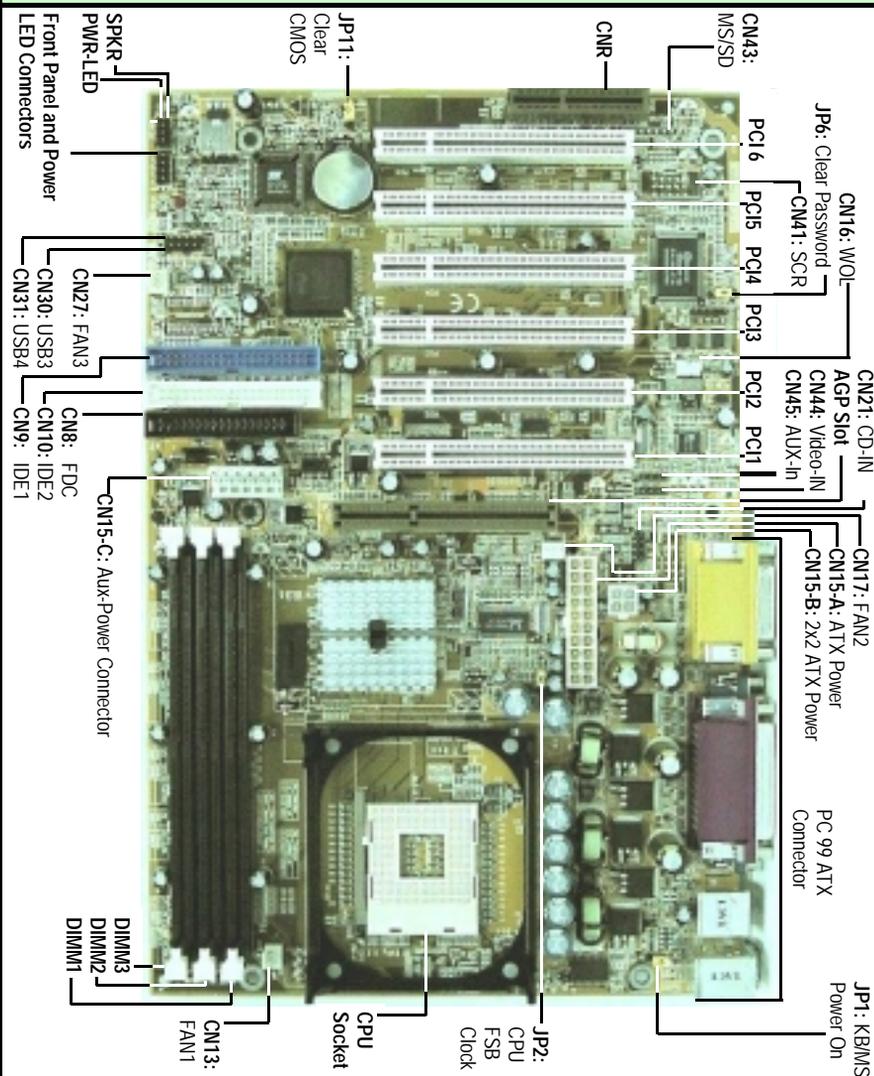



Introduction

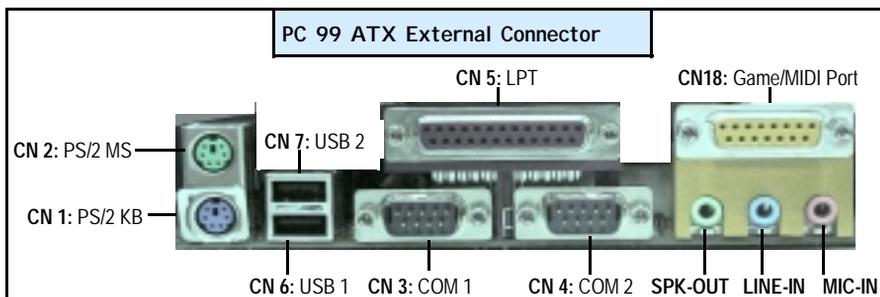

1.2. Overview

1.2.1. Mainboard Series

The 845S mainboard series use a Pentium 4 CPU with an Intel 845 chipset. There are two models to choose from. A deluxe model, the **845S-AD**, and a value model, the **845S-AV**.

1.2.2. Mainboard Dimensions

Width & Length: 305 mm x 200 mm
Thickness 1.57 mm

1.2.3. Environmental Limitations

Operating Temperature: 10°C to 40°C . (50°Fto 104°F)
Required Airflow: 50 linear feet per minute across CPU.
Storage Temperature: - 40°C to 70°C. (- 40°F to 158°F)
Humidity: 0 to 90% non-condensing.
Altitude: 0 to 10,000 feet

1.3. Features and Specifications

Processor

Supports Intel® Socket 478 Pentium 4.

Chipset

Northbridge: RG82845
Southbridge: FW82801BA

I/O Chipset

845S-AD: Winbond W83637HF-AW
845S-AV: Winbond W83627HF-AW



Introduction



CPU Switching Voltage Regulator

Equipped with a switching voltage regulator that automatically detects +1.10V to +1.85V DC power supply.

System Memory

These mainboards each have three 168-pin DIMM modules onboard. These modules are able to support 3.3V PC-133 SDR SDRAM modules. A maximum memory of 3GB is supported.

Expansion Slots

These mainboards are equipped with six dedicated PCI slots, one CNR slot and one 4x AGP slot. PCI 6 and the CNR slot are shared slots.

Onboard Audio Features

Supports Microsoft DirectSound/ DirectSound 3D and AC97 Full Duplex.

Word Size

- Data Path: 8-bit, 16-bit, 32-bit, 64-bit
- Address Path: 32-bit

Front Side Bus Frequency (FSB)

For a P4 Socket 478 CPU a 400 MHz FSB (100 MHz QDR) is supported.

BIOS

- 2Mb Flash ROM
- Award BIOS, Windows 95/98 Plug and Play (PnP) compatible.
- Supports SCSI sequential boot-up.
- Flash EPROM for easy BIOS upgrades.
- Supports DMI 2.0 function

Desktop Management Interface (DMI)

The mainboard comes with DMI 2.0 built into the BIOS. The DMI utility in the BIOS will automatically record different information about your system configuration and store this information in the DMI pool, which is a part of the system board's Plug and Play BIOS. DMI, along with the appropriately networked software, is designed for easy inventory, maintenance and the simplified troubleshooting of computer systems.

WOL (Wake-On-LAN) Port

One WOL connector supports Wake-On-LAN functionality.



Introduction



USB Ports

The mainboard is equipped with **Four** Version 1.1 USB ports. USB allows data exchange between your computer and a wide range of simultaneously accessible external Plug and Play peripherals. USB 1 and USB 2 are external ports. They can be found on the PC 99 ATX connector. USB 3 and USB 4 are **non-standard** internal connectors that can be used to connect other USB devices.



Optional cables for USB 3 and USB 4 must be purchased separately. These cables should have a connector on either end. One of these connectors should be a standard USB connector. The other connector should be compatible with the USB 3/4 connectors on your mainboard.

Connectors

- Two IDE connectors.
- One floppy drive interface supports up to two 2.88MB floppy drives.
- One 20-pin ATX power supply connector.
- One 2x2 ATX 12V power supply connector.
- One 1x6 ATX Auxiliary power supply connector.
- CPU and chassis fan connectors.
- One CD audio-in connector.
- One Aux-IN Connector
- One Video-IN Connector
- One Smart Card Reader (SCR) for use with a Smart Card Reader Kit.
(Only for 845S-AD)

ATX Double Deck Ports (PC 99 color-coded connectors)

- Two USB ports.
- Two external DB-9 serial port connectors: **COM 1** and **COM 2** (UART).
- One SPP/ECP/EPP DB-25 parallel port.
- One mini-DIN-6 PS/2 mouse port.
- One mini-DIN-6 PS/2 keyboard port.
- One game/MIDI port.
- Three audio jacks: speak-out, line-in and mic-in.

PCI Bus Master IDE Controller


- Two PCI IDE interfaces support up to four IDE devices.
- Both models support ATA/33, ATA/66 and ATA100 hard drives.
- PIO Mode 3 and Mode 4 Enhanced IDE (data transfer rate up to 16.6MB/sec.).
- Bus mastering reduces CPU utilization during disk transfer.
- Supports ATAPI CD-ROM, LS-120 and ZIP.



Special Features

Utility Panel: Front USB

The Front Utility Panel is a unique design concept that brings USB ports to the front of your system. USB 3 and USB 4 can be connected to these ports. The Front Utility Panel is shown below.

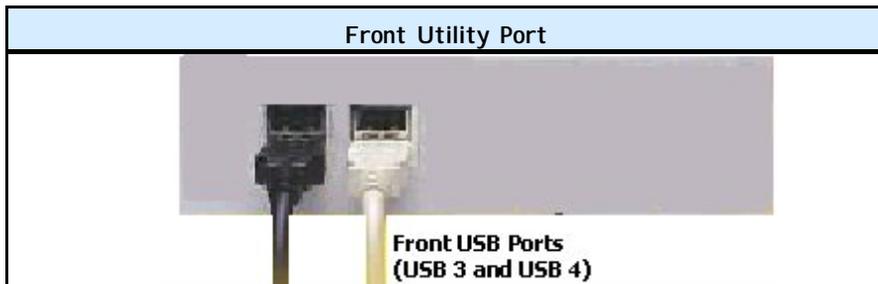

Special Features for the 845S-AD Model

ALARM

The **ALARM** is an intelligent voice debugging device. When you boot your system it examines the status of your system to determine if the system is operating correctly. If a device is incorrectly installed, not installed or damaged a voice announcement will be made. Devices which are supported by this alarm are: CPU, Memory, Video Card, FDD, HDD, Keyboard and Battery.

1.4. System Health Monitor Functions

The mainboard is capable of monitoring the following health conditions of your system:

1. Processor temperature. It has an overheat alarm.
2. VCORE/3.3V/5V/12V/-12V voltages and failure alarm.
3. Processor and chassis fan speeds. It has a failure alarm for these fans.
4. Read back capability that displays temperature, voltage and fan speed.

1.4.1. Hardware Monitoring System Utility

The mainboard comes with the Hardware Monitoring System utility contained on the CD. It is capable of monitoring the system's hardware conditions such as the temperature of the processor, voltage, and the speed of both the CPU and chassis fans. You are allowed to manually set a range to the items being monitored. If the values are over or under the set range a warning message will automatically pop up. We recommend that you use the Default Settings, which are the ideal settings that will maintain the system in a good working condition.



Only use this utility in Windows ® 95 or Windows ® 98 operating systems.



1.4.2. Installation

Click the Hardware Monitoring button, choose the chipset, model number and the OS that is installed. Please refer to the CD "Readme" file for further installation instructions.

1.5. System Intelligence

Dual Function Power Button

Depending on the setting in the Soft-Off By Power-Button field of the Power Management Setup, this switch allows the system to enter the Soft-Off or Suspend mode.

RTC Timer to Power-on the System

The RTC installed on the system board allows your system to automatically power-on at a set date and time.

Wake-On-LAN Ready

The Wake-On-LAN function allows the network to remotely wake up a Soft Power Down (Soft-Off) PC. Your LAN card must support the remote wakeup function. The 5V SB power source of your power supply must be at least 720mA.

ACPI Ready

The mainboard is designed to meet the ACPI (Advanced Configuration and Power Interface) specification. ACPI has energy saving features that support OS Direct Power Management (OSPM) for round the clock PC operation.

Chapter 2 - Hardware Installation

2.1. Installation Checklist

The following is a checklist of all the expansion slots, jumpers and connectors that should be configured on your mainboard before you can run your pc.

Installation Checklist		
Expansion Slots and Sockets		
CPU Slot	Socket 478 CPU Slot which supports Pentium 4	
DIMM Slots	Three 168 pin slots that support up to 3GB of SDRAM.	
PCI Slots	Six 32 bit PCI Slots.	
CNR Slot	One Communications Network Riser Slot	
AGP Slot	One Accelerated Graphics Port Slot	
Internal Connectors		
CN8	Floppy Disk Drive	FDC
CN9	Primary IDE	IDE1
CN10	Secondary IDE	IDE2
CN13	CPU Fan	CPU Fan
CN15-A	ATX Power Supply	ATX
CN15-B	ATX 12V Power Supply	ATX12V
CN15-C	Auxiliary ATX 12V Power Supply	Aux.
CN16	Wake On Lan	WOL
CN17	Chassis Fan 1	FAN2
CN21	CD Audio In	CD-In
CN27	Chassis Fan 2	FAN3
CN30	Universal Serial Bus 3	USB3
CN31	Universal Serial Bus 4	USB4
CN41	Smart Card Reader	SCR (only for 845S-AD)
CN43	Memory Stick SD	MS/SD (only for 845S-AD)
CN44	Video In	Video-IN
CN45	Auxiliary In	Aux-IN
External Connectors		
CN1	PS/2 Keyboard Connector	PS/2 KB
CN2	PS/2 Mouse Connector	PS/2 MS
CN3	Serial Port 1	COM1
CN4	Serial Port 2	COM2
CN5	Parallel Port	LPT
CN6	Universal Serial Port 1	USB1
CN7	Universal Serial Port 2	USB2
CN18	Game/Audio Port	Audio/Game



Installation Checklist (Continued)

System Panel Buttons and LED Connectors

PW	Power On/Off and Suspend Switch Connector.
S3L	STR LED Connector (only for 845S-AD)
HL	HDD LED Connector
RS	Reset Button Connector

Speaker and Power LED Connector

PWR-LED	Power LED
SPK	Speaker Connector

Jumpers

JP1	KB/MS PWR-ON
JP2	CPU FSB Clock Selection
JP3	S3 (STR) Function (only for 845S-AD)
JP5	Voice Warning Language Selection (English/Chinese) (only for 845S-AD)
JP6	Clear Password
JP7	USB 3/4 Wake Up From STR (only for 845S-AD)
JP8	Memory Stick Reader Selection (only for 845S-AD)
JP11	Clear CMOS

Only use an ATX12V Power Supply.


2.2. Installation Steps

You need to complete the following installation steps before you can use your PC.

- **Check and Set the Mainboard Settings.**
- **Install the Central Processing Unit (CPU).**
- **Install the Memory Modules.**
- **Install the Expansion Cards.**
- **Connect the Ribbon Cables, Panel Wires and the Power Supply.**
- **Setup the system BIOS**

Before you start installing your mainboard we strongly recommend that you use a grounded anti-static mat. We further recommend that you attach an anti-static wristband, which is grounded at the same location as the mat, to your wrist.

2.3. Expansion Cards, Connectors and Jumpers

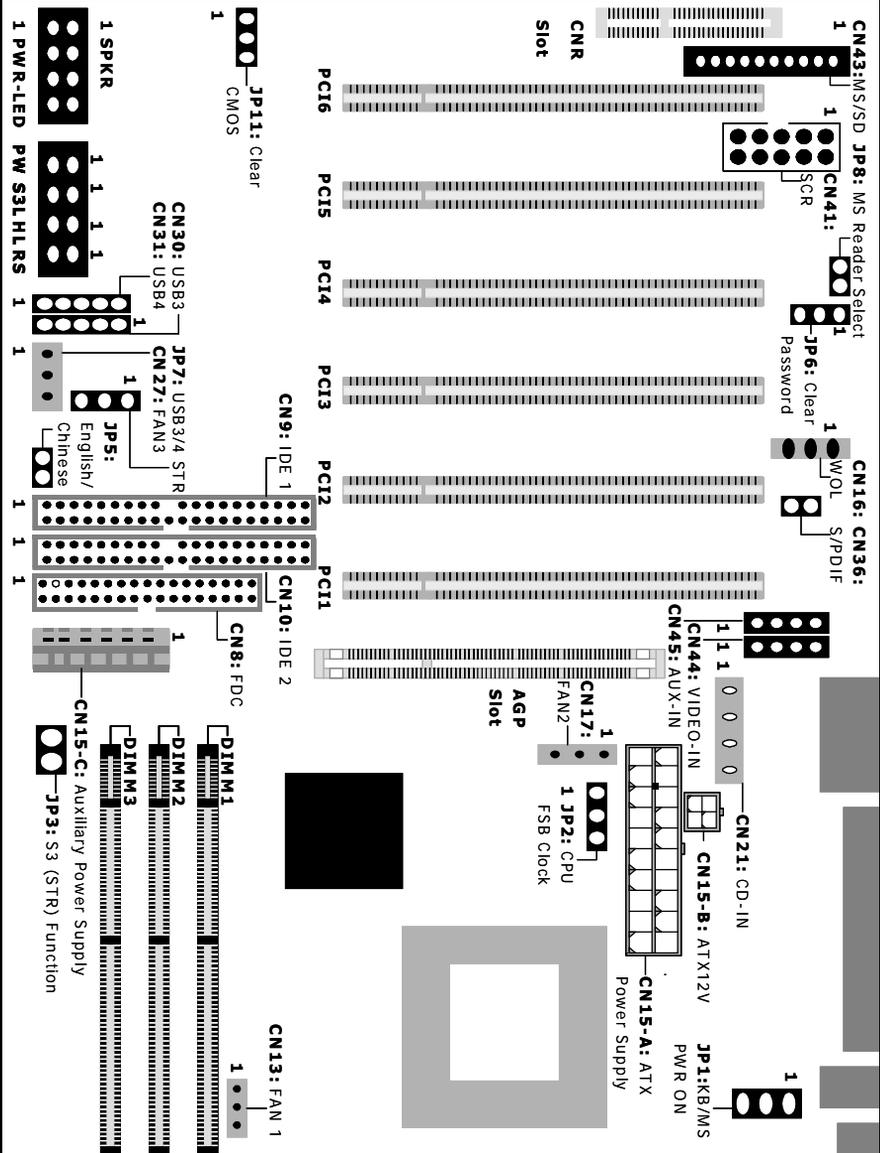



2.4. CPU, Memory and Expansion Slots

2.4.1. Installation of the CPU

To install your processor, please complete the following set of instructions

1. Locate a small dot marked on the top of the CPU. This mark indicates Pin 1 of the CPU.
2. Locate Pin 1 for the Socket on the mainboard.
3. There is a lever on the side of the socket. First push this lever sideways and then lift it to a 90-degree angle.
4. Insert the CPU into the Socket. Please make sure that Pin 1 for the CPU is inserted into Pin 1 of the Socket.
5. When the CPU is installed correctly push the lever back into place.
6. **Install a proper heat sink with cooling fan** for proper heat dissipation. Failing to install a heat sink with cooling fan may cause overheating which will burnout your CPU and damage your mainboard. The heat sink with cooling fan should be installed on the retention mechanism that is provided. This retention mechanism is designed to hold the bigger Heat Sink that is required for the Pentium 4 CPU.

Heat Sink and Retention Mechanism


You must use an Intel approved Heat Sink. This CPU operates at a very high frequency and therefore heats up very quickly. (A normal heat sink will not be adequate to cool the CPU and the CPU will burn-out.) These heat sinks are very heavy. A retention mechanism for the Heat Sink has been provided with the mainboard.

2.4.2. Memory Modules

These mainboards all have three 168-pin SDR SDRAM slots. The SDR SDRAM slots are located on the right hand side of the board. To install the DIMM's into these slots, make sure the white lever at each side of the slot has been pulled down to an angle of approximately 45°. Make sure that the DIMM is in the correct orientation. Place the DIMM on the slot and push down firmly. The white levers will come back up and lock the module in place.

These mainboards support 133MHz SDR SDRAM. SDR SDRAM memory devices with densities of 64Mb, 128Mb, 256Mb and 512Mb technology x8 or x16 are supported by the Intel 845 chipset memory interface. Three double sided DIMMs with unbuffered PC133 can be supported. A maximum memory bandwidth of 1GB/s is possible with PC133.

Top View of a 168-pin DIMM Slot

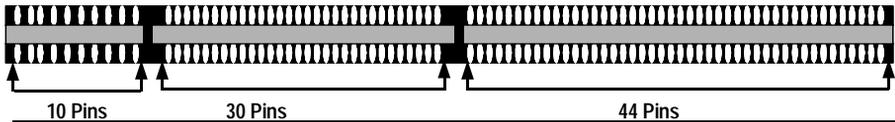

Important: The DIMM's can only be fitted into the slots in one orientation. Make sure that the DIMM's are in the correct orientation and the pins are correctly aligned before you insert them.

NOTE: "Out Of Memory" Error Message

If you have installed more than 512 MB of RAM and are running Microsoft Windows Millennium Edition, Windows 98 Second Edition, Windows 98 or Windows 95 you may experience memory problems. Two symptoms of these problems are being unable to run an MS-DOS session while you are running Windows or the computer may stop responding while Windows is starting.

There are three possible solutions to this problem:

- 1) Reduce the amount of memory Vcache uses to 512 MB or less by altering the MaxFileCache setting in the System.ini file.
- 2) Use the System Configuration Utility to reduce the amount of memory Windows uses to 512 MB or less.
- 3) Reduce the memory installed on your computer to 512 MB or less.


This problem can also occur if you are using an Advanced Graphic Port (AGP) video adapter.

2.4.3. PCI Slots

These boards come with six PCI slots. They are located on the left hand side of the board. Both PCI and PCI expansion cards may require IRQ's. This mainboard complies with Plug and Play (PnP) specifications. Whenever a PnP compliant card is added the system will automatically be configured and the IRQ's will be assigned automatically.

When you are inserting your PCI card make sure that the pins are correctly aligned. When the pins are properly aligned with the hole's in the slot, push down gently.

Top View of a PCI Slot

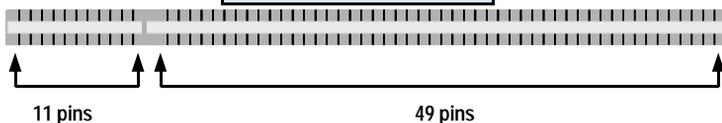


2.5.2. Primary and Secondary IDE connectors

Connector: CN 9 (primary)/ CN 10 (secondary)

Type: 40 pin blocks

The 845S mainboards all have two IDE connectors: a primary and secondary. Each IDE connector can support two IDE drives. These mainboards can therefore support up to four IDE devices each. If you install two hard drives, you need to configure the second drive to **slave** mode in the BIOS setup. Please refer to your hard drive manual for the appropriate jumper settings.

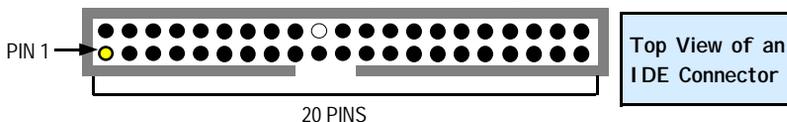


2.5.3. CPU Fan and Chassis Fan Connectors

Connector: CN 13 (CPU Fan 1)/CN 17 (Chassis Fan 1)/CN 27 (Chassis Fan 2)

Type: 3 pin

The cooling fans must be connected to their respective power connectors.

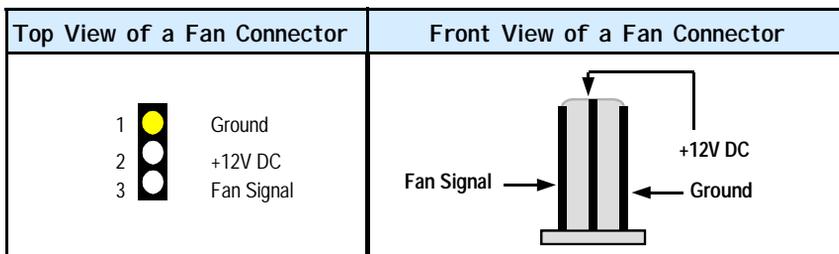

2.5.4. ATX Power Supply Connectors (CN15-C optional)

Connector: CN 15-A/ CN15-B/ CN15-C

Type: 20 pin block/2x2 12V/1x6 Auxiliary

The mainboards in this series all come with three onboard power supply connectors labeled from CN15-A to CN15-C. CN15-A and the CN15-B are regular ATX power supply connectors that have been used on all recent motherboards. The CN15-C power connector is for a +3.3V and +5V power supply. These increased power supplies are necessary to provide extra power for the slot. The ATX 12V power supplies are all downward compatible with standard ATX power supplies.

ATX Power Supply Connector	ATX12V Power Supply Connector
<p> +12VDC +5VSB PWR_OK COM +5VDC COM +5VDC COM +5VDC COM +3.3VDC +3.3VDC </p> <p> +5VDC +5VDC -5VDC COM COM COM PS_ON# COM -12VDC +3.3VDC </p> <p>Pin 1 Pin 11</p>	<p> COM COM +12VDC +12VDC </p> <p>Pin 1 Pin 3</p>
Auxiliary Power Supply Connector	
<p> +5VDC +3.3VDC +3.3VDC COM COM COM </p> <p> Pin 6 Pin 5 Pin 4 Pin 3 Pin 2 Pin 1 </p>	

2.5.5. WOL (Wake On LAN) Connector

Connector: CN 16 (WOL)

Type: 3 pin

The WOL connector must be connected to a LAN card that has Wake-On-LAN (WOL) output. This connector powers up the system when a wakeup packet or signal is received through the LAN card.


In order to use the WOL LAN card to trigger the power on the PC system, the switching power supply must have the ability to provide a driving current of at least 720 mA and be connected to a "5V standby" voltage.

Top View of a WOL Connector	Front View of a WOL Connector
<p> 1 5V_SB 2 Ground 3 WOL/WOM </p>	<p> Ground 5V_SB WOL/WOM </p>

2.5.6. CD-IN/VIDEO-IN/AUX-IN Connector

Connector: CN 21 (CD-IN)/ CN 44 (VIDEO-IN) / CN 45 (AUX-IN)
Type: 4 pin un-housed


This mainboard has one CD-IN connector, AUX-IN connector and VIDEO-IN connector. The CD-IN connector is used to connect the CD ROM audio out. allows you to receive audio input from the CD ROM. The **AUX-IN** connector allows you to receive signals from other audio devices like a radio or tape. The **VIDEO-IN** connector allows you to receive signals from devices like TV tuners, Video machines and Video cameras.

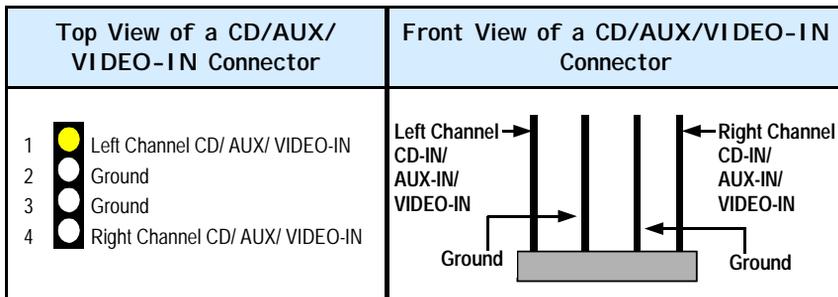

2.5.7. USB Connectors: USB3 and USB4

Connector: CN 30 (USB3)/ CN 31 (USB4)
Type: 5 pin

This mainboard comes with 2 extra onboard USB ports. Ribbon cable for these four connectors are optional. These connectors allow you to connect 2 extra USB devices to the mainboard. It should be noted that these USB connectors are non-standard and the cable you purchase should therefore have, on one side, a connector which is compatible with the on-board USB connector and on the other side a standard USB connector.

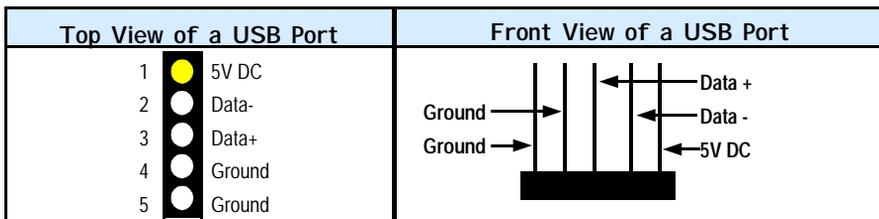



Hardware Installation




2.5.8. SCR Connector (Only available on the 845S-AD)

Connector: CN 41
Type: 10 pin

This connector is for an optional Smart Card Reader that must be purchased separately. The Smart Card Reader interface cable must be compatible with the on-board SCR connector.


Top View of the Smart Card Reader Connector

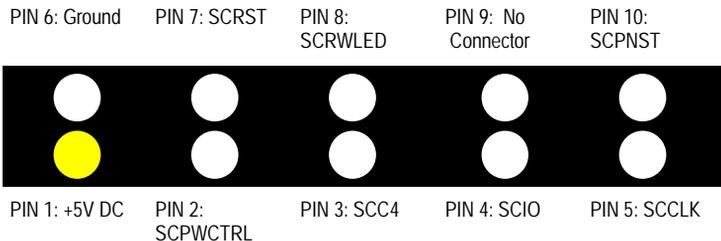

2.5.9. Memory Stick/SD Connector (only for 845S-AD)

Connector: CN 43
Type: 10 pin

This connector is for an optional memory stick reader which must be purchased separately. The Stick Reader Interface Cable should be compatible with the onboard MS/SD connector.

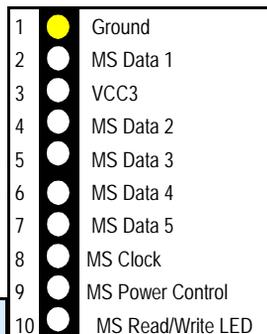

Top View Memory Stick/SD Connector

2.6. System Panel Buttons and LED Connectors

PIN 1

The following System Panel Buttons and LED Connectors can be found at the front of the mainboard on the left hand side.

PW = Power On/Off and Suspend Switch Connector

S3L = STR LED Connector

HL = HDD LED Connector

RS = Reset Button Connector

PW: +5V DC Pull Up

S3L:

HL: +5V DC Pull Up

RS: Reset Control

Top View of the System Panel and LED Connectors



2.6.1 PW: Power On / Off and External Suspend Switch Connector

The Power On/Off connector has two functions. It can be the Power Switch or Suspend Switch of your PC system. You can either choose "**Delay 4 Sec or Instant OFF**" (Please refer to the Award BIOS setup instructions in Chapter 3).

Option 1: If you choose "**Delay 4 Sec.**" In the BIOS CMOS Setup, the function of "PW" will be:

- A. When the system power is "OFF", press this switch, the system will power on.
- B. When system power is "ON", you can select two different modes: -

Mode 1: Press and hold the Power ON button for less than 4 seconds and then release it. The system will be turned into Suspend mode (turned into the GREEN mode) When the system is in the Suspend mode:-

- Press the Power on button (less than 4 seconds), the system will return to Full-ON mode.
- Press and hold the Power On Button for more than 4 seconds, the system will be powered off.

Mode 2: Press and hold the Power ON button for more than 4 seconds and the system will be completely powered off.

Option 2: If you choose "**Instant OFF.**" In the BIOS CMOS Setup, the power switch will operate like a normal ON / OFF Power button.

2.6.2. S3 LED Connector (Only available on the 845S-AD)

Power on suspend / Suspend to RAM LED Connector (S1 / S3 State). This LED will be used to indicate the status of Power on suspend (S1) or suspend to RAM (S3) state depend on ACPI setting.

2.6.3. IDE HDD LED Connector

Any read and write activity by the HDD will turn this LED on.

2.6.4. Reset Button Connector

If you connect this connector, you will be able to reset you computer by pressing the reset button at the front of the chassis.

2.7. Speaker and Power LED Connectors

2.7.1. Speaker Connector


Connect your chassis speaker to this four pin connector. It allows you to hear systems beeps and warnings sound.

PIN 1 →


PIN 1 →

2.7.2. Front Panel Power LED

The chassis Power LED connector can be connected to the four pin connector. When you turn your system on, this LED will also be turned on.

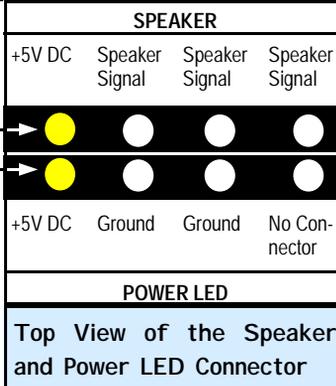

2.8. External Connectors

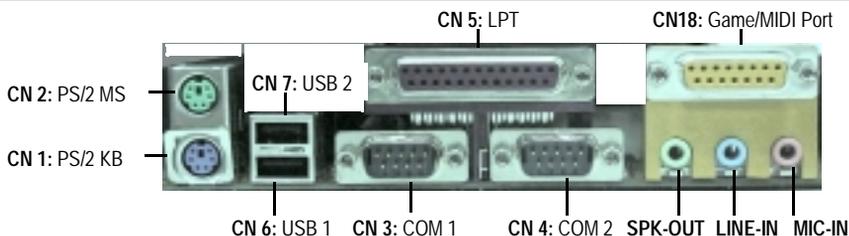

2.8.1. PS/2 Keyboard connector.

Connector: CN 1
Type: 6 pin female

This connector only supports a PS/2 keyboard plug. If you have a standard AT size (large DIN) keyboard plug, you need to use a mini DIN adapter.

2.8.2. PS/2 Mouse connector.

Connector: CN 2
Type: 6 pin female.

This connector only supports a PS/2 mouse plug. If a PS/2 mouse is detected then IRQ 12 will be directed to **CN 2**.



2.8.3. Serial Port 1 (COM 1) and Serial Port 2 (COM 2)

Connector: CN 3 (COM 1)/ CN 4 (COM 2)
Type: 9 pin male/9 pin male

One serial port is available for a mouse and other serial devices. (I/O addresses used are 3F8H/2F8H/3E8H/2E8H and IRQ3/IRQ4, selected by CMOS setup.)

2.8.4. Parallel Port Connector

Connector: CN 5
Type: 25 pin female.

This parallel port is used by printers which support the SPP, EPP and ECP modes IRQ7 or IRQ5 can be selected. The ECP mode will use either DMA 3 or DMA 1 (which can be selected by the BIOS setup program).

2.8.5. Universal Serial Bus (USB) Port 1 & 2

Connector: CN 6 (USB 1)/ CN 7 (USB 2)
Type: 4 pin female

Two USB ports are available for connecting USB devices. The mainboard is also equipped with an expansion connector that supports two additional USB external connectors. (The USB cable is not included with the mainboard).

2.8.6. Audio/Game Port Connector




Connector: CN 18
Type: 15 pin female

The Game/MIDI port connector is a dual purpose connector. It can either be used to connect a joystick to the computer for game participation, or it can be used to attach an external MIDI device. All these motherboards have 3D audio interfaces onboard.

2.9. Jumper Settings

Jumpers are built on the mainboard to allow the user flexibility to configure the mainboard settings to meet their specific requirements. These mainboards have both two pin and three pin jumpers.

If a two pin jumper has a jumper cap on it we say that it is short. If there is no Jumper cap we say it is open. On a three pin jumper if a jumper cap is inserted on pins 1 and 2 we say **PIN 1** and **PIN 2** are **SHORT**. When the jumper cap is inserted on pin 2 and 3, we say **PIN 2** and **PIN 3** are **SHORT** (see the diagrams below).

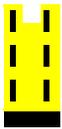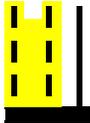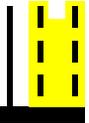Two Pin Jumpers		Three Pin Jumpers		
		PIN: 1 2 3		PIN: 1 2 3
				
Open	Short	SHORT	PIN 1/PIN 2	PIN2/PIN 3

2.9.1. JP1: Keyboard/Mouse Power On

Type: 3 pin
Default: Pin 1 and Pin 2 Short

This jumper allows you to Power On your system using your mouse or keyboard. If you short Pin 1 and Pin 2 then the **“Keyboard/Mouse Power On”** function will be disabled. If Pin 2 and Pin 3 are short then the **“Keyboard/Mouse Power On”** function will be enabled. If you choose to enable this option then you need to enable the **POWER ON** field in the **Integrated Peripherals** Menu (Section 3.6, pg 34) of the BIOS setup.

2.9.2. JP2: CPU FSB Clock Selection

Type: 3 pin
Default: Pin 1 and Pin 2 short

This jumper allows you to select the CPU FSB Clock speed. If Pin 1 and Pin 2 are left in the default settings (pin 1 and pin 2 short) then the mainboard will automatically detect the FSB Clock speed. If Pin 2 and Pin 3 are short then the FSB will be forced to be 400 MHz. If all the pins are left open then the FSB will be forced to be 533MHz.

2.9.3. JP3: S3 (STR) Function (Only on the 845S-AD)

Type: 2 pin
Default: Open

When the system is in suspend mode the Suspend to RAM allows the system/application state to be saved in the RAM. When this mode is activated very little power is used by the system. It is almost as if the system has been turned off completely. When a user reactivates the system it will rapidly “wake up” to the previous state and the long boot phase can be avoided. To enable this option **JP3** must be short.



2.9.4. JP5: Voice Alarm Language Selection (Only on the 845S-AD)

Type: 2 pin
Default: Open

This motherboard has the ability to give voice warning messages during hardware debugging. If you leave it open (the default setting) you will receive English messages. If you short the jumper you will receive Chinese messages.

2.9.5. JP6: Clear Password

Type: 3 pin
Default: 1 and 2 short

If you forget your keyboard power-on password you can use JP6 to clear it from the I/O chip (where it is stored). To do this you must:

- a) Turn off your PC
- b) Short Pin 2 and Pin 3 on JP6 for 3-5 seconds.
- c) Put the Jumper back on 1 and 2
- d) Power on the PC and run the BIOS setup program.

2.9.6. JP7: USB3/4 Wake Up From STR Mode (Only on the 845S-AD)

Type: 3 pin
Default: 1 and 2 short

When the system goes into STR mode and if Pin 2 and Pin 3 are short the USB devices attached to USB 3 and USB 4 will be able to wake up the system when any activity is detected.

2.9.7. JP8: Memory Stick Reader Selection (Only on the 845S-AD)

Type: 2 pin
Default: Open

If CN43 is connected to a Memory Stick module then **JP8** should be left open. If CN43 is connected to an SD memory module then **JP8** should be short.

2.9.8. JP11: Clear CMOS

Type: 3 pin
Default: Pin 1 and Pin 2 short

If you have made an improper setting in the BIOS setup and your computer is not functioning, or if you have forgotten your password, you can use this jumper, JP11, to clear the CMOS and to reconfigure your system.

To clear the CMOS, please follow these instructions:

1. Turn the system power "OFF" and unplug your computer.
2. Insert the jumper cap on Pin 2 and Pin 3 for 3 ~ 5 seconds.
3. Pull out the jumper cap and replace it on Pin 1 and Pin 2.
4. Turn your PC on and run the BIOS setup program.



Chapter 3 - Managing the PC BIOS

3.1. Award BIOS CMOS Setup Utility

Once you have installed the mainboard you still need to setup the BIOS before you can run your PC. The EEPROM on the mainboard stores the AWARD BIOS CMOS Setup Utility, which allows you to configure your system. When you want to configure or make any changes to the configuration of your system BIOS you must run the BIOS CMOS Setup Utility.

GETTING STARTED

Every time you start your computer, the system provides you with an opportunity to run the BIOS CMOS Setup Utility. As soon as you turn on your system, press the <Delete> button to activate the BIOS CMOS Setup Utility.

If your computer finishes the POST (Power-On-Self-Test) the BIOS CMOS Setup Utility will **not be** activated. If your computer completes the POST you need to restart the system to activate the BIOS CMOS Setup Utility. To restart the system, you can either turn the power off, press the reset button on your chassis or press the <Ctrl> + <Alt> + <Delete> button. In all three cases the system will restart and, to activate the BIOS CMOS Setup Utility, you must immediately press the <Delete> button.

3.2. Main Menu

Once you have called up the BIOS CMOS Setup Utility, the following screen will appear:

CMOS Setup Utility – Copyright (C) 1984 - 2001 Award Software	
<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PNP/PCI Configuration ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency/Voltage Control Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
Esc : Quit F9 : Menu in BIOS ← ↑ ↓ → : Select Item	
Time, Date, Hard Disk Type ...	



Note! BIOS software is continuously updated therefore the BIOS menus and the descriptions that are given in this manual are for reference purposes only.

Navigation Keys

You will notice a legend bar at the bottom of the main menu. The keys in this legend bar show you how to navigate through the setup menus. The table below lists the control keys with their corresponding functions: -

Control Key	Function
Up Arrow	Moves to the previous item.
Down Arrow	Moves to the next item.
Left Arrow	Moves to the item on the left.
Right Arrow	Moves to the item on the right.
Enter	Selects the desired item.
F1	Displays the help screen for the selected feature.
Esc key	Exits to the previous screen.
PgUp(-)/PgDn(+)	Modifies or changes the content of the highlighted item.
F5	Restores the previous CMOS values to the current page setup. This will not restore the previous values for any other pages.
F7	Loads the SETUP default values from BIOS default table, (only the current page setup will be loaded).
F10	Saves changes to the CMOS and exits the setup.

3.3. Standard CMOS Setup (Menu on page 28)



Date (mm : dd : yy)

Sets your system to the date that you specify (usually the current date). The format is month, day, and year. Press the right or left arrow key to move to the desired field (month, date, year). Press the PgUp or PgDn key to increment the setting, or type the desired value into the field.

Time (hh : mm : ss)

Sets your system to the time you specify (usually the current time). The format is hour, minute, second. The time format is based on the 24-hour military-time clock. For example, 1 p.m. is 13:00:00. Press the right or left arrow key to move to the desired field. Press the PgUp or PgDn key to increment the setting, or type the desired value into the field.



Managing the PC BIOS



CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software Standard CMOS Features		
Date (mm : dd : yy) Time (hh : mm : ss)	Thu, Oct 4, 2001 13 : 3 : 40	Item Help
▶ IDE Primary Master ▶ IDE Primary Slave ▶ IDE Secondary Master ▶ IDE Secondary Slave	[QUANTUM FIREBALL PKA] [Pioneer DID-ROM ATAPI] [None] [None]	Menu Level ▶ Change the day, month, year and cen- tury
Drive A Drive B Floppy 3 mode support	[1.44M 3.5in] [None] [Disabled]	
Video Halt On	[EGA/VGA] [All Errors]	
Base Memory Extended Memory Total Memory	640K 65472K 1024K	

IDE Primary / Secondary, Master / Slave

This mainboard supports four IDE Hard Drives. These fields allow you to set your Hard Drive parameters. Move the selection bar to the IDE Hard Drive you want to configure. Press the "ENTER" key. If you select "AUTO" the system BIOS will detect the HDD type automatically.

Drive A / B

The 845S mainboard series can support up to two floppy disk drives. These two selection fields allow you to select the floppy drives that are installed on your computer. Select the correct specifications for the diskette drive(s) installed on your computer.

Diskette Drive	Type of Disk Drive	Capacity
None	No diskette drive installed	
360K 5.25 in	5-1/4 inch PC-type standard drive	360 KB
1.2M 5.25 in	5-1/4 inch AT-type high-density drive	1.2 MB
720K 3.5 in	3-1/2 inch single-sided drive	720 KB
1.44M 3.5 in	3-1/2 inch double-sided drive	1.44 MB
2.88M 3.5 in	3-1/2 inch double-sided drive	2.88 MB

Floppy 3 Mode Support

If you have installed a 3.5 inch high capacity floppy disk drive you need to enable this option. If you have not installed one of these drives use the default setting.



Managing the PC BIOS



Video

This field selects the type of primary video subsystem that is on your computer. The BIOS CMOS Setup Utility will automatically detect the correct video type.

Monitors	
EGA/VGA	Enhanced Graphics Adapter/Video Graphics Array. For EGA, VGA , SEGA, SVGA or PGA monitor adapters
CGA 40	Color Graphics Adapter power up in 40 column mode
CGA 80	Color Graphics Adapter power up in 80 column mode
MONO	Monochrome adapter includes high resolution monochrome adapters

Halt On

This field allows you to decide which errors, detected during the Power On Self Test (POST), will halt the system.

Base Memory / Extended Memory / Total Memory

This field displays the amount of memory detected by the system during boot up. This is a display only field. You cannot make any changes to this field.

Base Memory: Indicates the memory installed below the conventional 1MB space.

Extended Memory: Indicates the memory installed above the 1MB space.

Total Memory: Indicates the total memory installed in the PC system.

3.4. Advanced BIOS Settings (Menu on page 30)



Virus Warning

When you enable the virus warning you will receive a warning message whenever a program (specifically, a virus) attempts to write to the boot sector or the partition table of the hard disk drive. If you receive such a message you should immediately run an anti-virus program. Keep in mind that this feature **only** protects the boot sector and not the entire hard drive.

NOTE! Many disk diagnostic programs that access the boot sector table can trigger the virus-warning message. If you plan to run such a program, we recommend that you first disable the virus warning.



Managing the PC BIOS



CMOS Setup Utility - Copyright (C) 1984 – 2001 Award Software.
Advanced BIOS Features

Virus Warning	[Disabled]	
CPU L1 & L2 Cache	[Enabled]	
Quick Power On Self Test	[Enabled]	Menu Level ▶
First Boot Device	[Floppy]	
Second Boot Device	[HDD-0]	
Third Boot Device	[LS120]	
Boot Other Device	[Enabled]	Allows you to choose the VIRUS warning feature for IDE Hard disk boot sector protection. If this function is enabled and someone attempts to
Swap Floppy Drive	[Disabled]	write data into this area, BIOS will show a warning message on screen and alarm beep.
Boot Up Floppy Seek	[Enabled]	
Boot Up NumLock Status	[On]	
Gate A Option	[Fast]	
Typematic Rate Setting	[Disabled]	
X Typematic Rate (Chars/Sec)	6	
X Typematic Delay (Msec)	250	
Security Option	[Setup]	
OS Select For DRAM > 64 MB	[Non-OS2]	
HDD S.M.A.R.T. Capability	[Disabled]	
Report No FDD For WIN 95	[No]	

CPU L1 & L2 Cache

This BIOS setting can be used to enable or disable the CPU's L1 (primary) and L2 (secondary) cache.

Quick Power On Self Test

If enabled the amount of time required to run the power-on self-test (POST) will decrease. A quick POST skips certain steps. We recommend that you disable quick POST. It is better to find a problem during POST than to lose data during your work.

First / Second / Third Boot Device

These fields allow you to decide the boot sequence of your bootable devices such as Floppy Drive, Hard Drive, CD ROM...etc

Boot Other Device

When this field is enabled you will be able Boot your computer from a another device, not your HDD or FDD.

Swap Floppy Drive

This field is effective only in systems with two floppy drives. When Enabled is selected physical drive B is assigned to logical drive A, and physical drive A is assigned to logical drive B.



Boot Up Floppy Seek

When enabled, the BIOS tests (seeks) floppy drives to determine whether they have 40 or 80 tracks. Only 360-KB floppy drives have 40 tracks; drives with 720 KB, 1.2 MB, and 1.44 MB capacity all have 80 tracks. Very few modern PCs have 40-track floppy drives so we therefore recommend that you set this field to Disabled to save time.

Boot Up NumLock Status

This controls the state of the NumLock key when the system boots. This field is toggled between On or Off. When it is on the numeric keypad generates numbers instead of controlling the cursor operations. When it is off the numeric keypad controls cursor operations and does not generate numbers.

Gate A20 Option

Gate A20 is a signal that gives the system access to addresses higher than A19. If you select Fast the chipset will control this signal. If you select normal a pin in the keyboard controller will control the signal.

Typematic Rate Setting

The keyboard controller determines the rate at which the keystrokes from the keyboard are repeated. If you enable this option then the typematic rate and the typematic delay can be selected.

Typematic Rate

This is the rate a character will repeat itself on the screen when you hold down a key.

Typematic Delay

This is the delay time (Msec) before the repetition of characters starts.

Security Option

This field allows you to select the "Setup" or "System" security option. It works concurrently with the "Set Supervisor Password" in the main menu.

When the "Setup" option is selected, you will be prompted to enter your "Password" before you can start the BIOS CMOS Setup Utility. When you select "System" option, you will be prompted to enter your password in order to load the Operating System.



Managing the PC BIOS



TIP: Forgot your password then clear the RTC RAM

If you happen to forget your password you can use Jumper 11 (JP11) to clear the password by erasing the CMOS Real Time Clock (RTC) Ram. For further details on how to do this please see section 2.9.8 on page 25.

OS Select For DRAM > 64MB

Only select OS2 if you are running an OS/2 operating system with a RAM greater than 64 Mb. Otherwise, for all other operating systems, use the default setting "Non-OS2"

HDD S.M.A.R.T Capability

You may "enable" this option if your Hard Drive supports the S.M.A.R.T. technology (Self Monitoring Analysis Reporting Technology) feature. S.M.A.R.T. will monitor and report your Hard Drive health status. Ask your Hard Drive Vendor for further information.

Note! Using this feature may decrease system performance.

Report No FDD For WIN 95

If you are not using a floppy disk this option allows you to release IRQ6. To do this set this option to Yes. You should then also disable the Onboard FDC Controller in the Integrated Peripherals Screen.

3.5. Advanced Chipset Features

CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software
Advanced Chipset Features

		Item Help
DRAM Timing Selectable	[By SPD]	Menu Level ▶
CAS Latency Time	[3]	
Active to Precharge Delay	[6]	
DRAM RAS# to CAS# Delay	[3]	
DRAM RAS# Precharge	[3]	
DRAM Data Integrity Mode	[Non-ECC]	
Memory Frequency For	[Auto]	
DRAM Read Thermal Mgmt	[Disabled]	
System BIOS Cacheable	[Enabled]	
Video BIOS Cacheable	[Disabled]	
Video RAM Cacheable	[Disabled]	
AGP Aperture Size (MB)	[64]	
Delay Prior to Thermal	[16 Min]	



DRAM Timing Selectable

This field determines the DRAM read/write timing. The performance parameters of the memory chips (DRAM) you have installed will determine the value in this field. Do not change the value from the factory setting unless you install new memory that has a different performance rating than the original DRAMs.

CAS Latency Time

The time delay (in clock cycles, CLKS) that passes before the SDRAM starts to carry out a read command after it has been received. The number of CLKS that occur before the first part of a burst transfer is completed is also determined by this field.

DRAM RAS# to CAS# Delay

When the DRAM is refreshed, both rows and columns are addressed separately. This setup allows you to determine the timing of the transition from Row Address Strobe (RAS) to Column Address Strobe (CAS).

DRAM RAS# Precharge Time

If the DRAM is not continually refreshed its data will be lost. DRAM is normally refreshed as a result of a single request. This field lets you select the number of CLKS allocate for the RAS to accumulate its charge before the DRAM is refreshed. If there is not sufficient time then the refresh may be incomplete and some of the data can be lost.

DRAM Data Integrity Mode

Error Checking and Correction (ECC) should only be used in conjunction with a special 72-bit ECC RAM. If you are using ECC RAM you should select **ECC**. This feature will enable the system to detect and correct single-bit errors and detect (not correct) double-bit errors. If you do not have ECC RAM then select **Non-ECC** (the default mode).

Memory Frequency For

This field allows you to manually select the frequency of the memory modules you are using. This mainboard supports both PC100 and PC133 SDR modules. If you do not know what the frequency of your memory modules is then select auto and the system will automatically decide.



System BIOS \ Video BIOS \ Video RAM Cacheable

These fields enable (disable) the caching of the **System BIOS**, the **Video BIOS** and the **Video RAM**. The **System BIOS** is cached at F0000h-FFFFFh, the **Video BIOS** is cached at C0000h-C7FFFh, and the **Video RAM** is cached at A0000h-AFFFFh. All three are cached via the L2 cache. If these options are enabled, access to the system BIOS may speed up **BUT** if any other program tries to write to the memory locations specified above then the system will crash. We recommend that you disable these options. **Note** The System/Video BIOS can only be cached when the System BIOS/Video BIOS has been shadowed.

AGP Aperture Size

This field selects the size of the Accelerated Graphics Port (AGP) aperture. The aperture is a portion of the PCI memory address range dedicated for graphics memory address space. Host cycles that hit the aperture range are forwarded to the AGP without any translation. The default is 64MB. You may increase this memory when you need to have faster access for 3D graphics applications (e.g. games).

3.6. Integrated Peripherals (Menu on page 35)



On-Chip Primary PCI IDE/On-Chip Secondary PCI IDE

These two options (option 1 and option 6) allows you to enable or disable the on-board IDE Interface.

Primary/Secondary, Master/Slave PIO

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

Primary/Secondary, Master/Slave UDMA

Ultra DMA/66 implementation is possible only if your IDE hard drive supports it and the operating environment includes a DMA driver (Windows 98 OSR2 or a third-party IDE bus master driver). If your hard drive and your system software both support Ultra DMA/66, select Auto to enable BIOS support.

USB Controller

This field allows you to enable or disable the onboard USB Controller.



Managing the PC BIOS



CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software
Integrated Peripherals

On-Chip Primary PCI IDE	[Enabled]	Item Help
IDE Primary Master PIO	[Auto]	Menu Level ▾
IDE Primary Slave PIO	[Auto]	
IDE Primary Master UDMA	[Auto]	
IDE Primary Slave UDMA	[Auto]	
On-Chip Secondary PCI IDE	[Enabled]	
IDE Secondary Master PIO	[Auto]	
IDE Secondary Slave PIO	[Auto]	
IDE Secondary Master UDMA	[Auto]	
IDE Secondary Slave UDMA	[Auto]	
USB Controller	[Enabled]	
USB Keyboard Support	[Disabled]	
AC97 Audio	[Auto]	
Init Display First	[AGP]	
IDE HDD Block Mode	[Enabled]	
POWER ON Function	[BUTTON ONLY]	
KB Power ON Password	[ENTER]	
Hot Key Power ON	[Ctrl-F1]	
Onboard FDC Controller	[Enabled]	
Onboard Serial Port 1	[3F8/IRQ4]	
Onboard Serial Port 2	[2F8/IRQ3]	
UART Mode Select	[Normal]	
RxD, TxD Active	[Hi,Lo]	
IRA Transmission Delay	[Enabled]	
UR2 Duplex Mode	[Half]	
Use IR Pins	RxD2, TxD2	
Onboard Parallel Port	[378/IRQ7]	
Parallel Port Mode	[SPP]	
EPP Mode Select	[EPP1.7]	
ECP Mode Use DMA	[3]	
PWRON After PWR Fail	[Off]	
Game Port Address	[201]	
Midi Port Address	[330]	
Midi Port IRQ	[10]	

USB Keyboard Support

If you are using an older (legacy) operating system (such as MS-DOS) and you're installing a USB keyboard you must **enable** this Field. For PnP O/S like Windows 98, Windows 2000, Windows ME etc you should retain the default setting.



AC97 Audio

If you want to enable the on-chip audio capabilities of your system you need use the default setting "Auto". If you install an add on sound card you must disable this field.

Init Display First

When both an AGP and PCI VGA card are installed on a mainboard, this field can be used to determine the display loading priority during System Startup.

IDE HDD Block Mode

Block Mode is also called Block Transfer, Multiple Commands, or Multiple Sector Read/Write. If your IDE hard drive supports Block Mode (most new drives do) then this field should be enabled. If this field is enabled then the optimal number of block read/writes per sector the drive can support will be determined automatically.

POWER ON Function

The POWER ON Function allows you to select different ways to power on your PC System.

KB Power ON Password

When you select KB Power ON Password to power ON the PC system in the previous field, you may enter your personal password into this field. When you are finished , you may use the password to power on your PC system. If you forget your password refer to **section 2.9.5**.

Hot Key Power On

When you select Hot Key Power On to Power ON the PC System in the previous selection field, you may select a set of "Hot Key" in this field . When finished you may use the hot key combination to power on your PC System.

Onboard FDC Controller

Select Enabled if your system has a floppy disk controller (FDC) installed on the system board and you want to use it. If you install an add-in FDC or the system has no floppy drive, select Disabled in this field.



Onboard Serial Port 1/Port 2

These two selection fields allow you to select the I/O address and corresponding interrupts for the first and second serial ports.

UART Mode Select

Your system may offer a variety of infrared modes on the second serial port. The options are Standard, HPSIR or ASKIR.

RxD, TxD Active

This field allows you to set the IR reception/transmission polarity as high or low. To determine which polarity is appropriate you must refer to the documentation for your IR peripheral.

This field is usually found under the Onboard Serial Port 2 option. If you disable the Onboard Serial Port 2 option then you will probably not be able to configure this field.

IR Transmission Delay

This field allows you to "Enable" or "Disable" the IR Transmission Delay.

UR2 Duplex Mode

This Field allows you to select the IR half or full duplex function.

Use IR Pins

To determine the correct settings for the TxD and RxD signals of your IR peripheral component, you need to consult the components manual.

Onboard Parallel Port

This item allows you to determine the I/O address and the IRQ for the onboard parallel port. The default settings are adequate and should not give you any problems. If they do you can try to change them.

Parallel Port Mode

This field allows you to select an operating mode for the onboard parallel (printer) port. Select Normal, Compatible, or SPP unless you are certain your hardware and software both support one of the other available modes.



EPP Mode Select

This field allows you to choose the EPP version you want to use. We recommend that you use EPP 1.9 for the best performance but if you do you may have some connection problems so try setting it to EPP 1.7.

ECP Mode Use DMA

This item allows you to select a DMA channel for the parallel port for use during ECP.

PWRON After PWR Fail

See the following table for all the options.

Off:	When the power returns after an AC power failure the system's power is off. You must press the Power button to power-on the system
On:	When the power returns after an AC power failure, the system will automatically power-on.
Former - Sts:	When power returns after an AC power failure, the system will return to the state where you left off before the power failure occurred. If the system's power is off when the AC power failure occurred, it will remain off when the power returns. If the system's power is on when the AC power failure occurred, the system will power-on when the power returns.

Game Port Address

This field allows you to select the I/O address for the onboard game port. The default is 201.

Midi Port Address

This field allows you to select the I/O address for the onboard MIDI port. The default is 330.

MIDI Port IRQ

This field allows you to select the IRQ for the onboard MIDI port. The default is 10.



Managing the PC BIOS



3.7. Power Management Setup

CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software
Power Management Setup

ACPI Function	[Enabled]	Item Help
ACPI Suspend Type	[S1(POS)]	Menu Level ▾
Power Management	[User Define]	
Video Off Method	[Blank Screen]	
Video Off In Suspend	[Yes]	
Suspend Type	[Stop Grant]	
Suspend Mode	[Disabled]	
HDD Power Down	[Disabled]	
Soft-Off by PWR-BTTN	[Instant-Off]	
CPU THRM-Throttling	[50.0%]	
Wake On LAN	[Disabled]	
Resume by Alarm	[Disabled]	
x Date (of Month) Alarm	0	
x Time (hh:mm:ss) Alarm	0 : 0 : 0	
** Reload Global Timer		
Events**	[Disabled]	
Primary IDE 0	[Disabled]	
Primary IDE 1	[Disabled]	
Secondary IDE 0	[Disabled]	
Secondary IDE 1	[Disabled]	
FDD, COM, LPT Port	[Disabled]	
PCI PIRQ[A-D]#		

ACPI function

This item allows you to enable/disable the Advanced Configuration and Power Management (ACPI).

ACPI Suspend Type

This field allows you to select the mode of the suspended state. You have two op-

Power Management

This category allows you to select the degree of power saving. The choices are shown in the menu on the following page.



Managing the PC BIOS



Power Management	
Min. Saving	Minimum power management. Suspend Mode = 1 hr.
Max. Saving	Maximum power management. Suspend Mode = 1 min.
User Defined	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

Video Off Method

This field determines how a monitor is made blank. See the following table.

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS Support	Select this option if your monitor supports the Display Power Management Signaling (DPMS) standard of the Video Electronics Standards to select video power management values.

Video Off In Suspend

This field has two options: **Yes** or **No**. These options allows you to determine the way in which the monitor is switched off.

Suspend Type

This field allows you to select the status of the CPU when the system goes into the suspend mode. If you select by Stop Grant the CPU stops running completely, by "PWRON Suspend" keeps the CPU.

Suspend Mode

When enabled, after the set time of system inactivity, all devices except the CPU will be shut off.

HDD Power Down

If this field is enabled, after a set time of system inactivity, the hard disk will be powered down while all the other devices remain active.

Soft-Off by PWRBTN

Pressing the power button for more than 4 seconds forces the system to enter the Soft-Off state when the system has "hung".



Managing the PC BIOS



CPU THRM-Throttling

This field allows you to select the CPU Throttle rate. When the CPU temperature is too high, the onboard hardware monitoring will tell the CPU to reduce it's processing speed to the throttling speed to protect the CPU . This function will not work when the **CPU Warning Temperature** is Disabled.

Wake On LAN

An input signal from the LAN will wake up the system from a soft off state.

Resume By Alarm

This field allows you to wake up the system at a predetermined date in the future. If you select Enabled then you need to enter the date and the time at which you want the system to "wake up."

Reload Global Timer Events

When Enabled, an event occurring on each device listed below will restart the global time for the standby mode.

Primary IDE 0

Primary IDE 1

Secondary IDE 0

Secondary IDE 1

FDD, COM, LPT Port

PCI PIRQ[A-D]

3.8. PNP/PCI Configuration

CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software
PNP/PCI Configurations

Reset Configuration Data	[Disabled]	Item Help
Resources Controlled By x IRQ Resources	[Auto(ESCD)] [Press Enter]	Menu Level >
PCI/VGA Palette Snoop	[Disabled]	Default is Disabled. select Enabled to Reset Extended System Configuration Data (ESCD)when you exit Setup if you have installed a new add-on and the system has caused such a serious con- flict that the OS cannot boot



Managing the PC BIOS



Reset Configuration Data

Normally, you leave this field Disabled. If you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot then select Enabled. Selecting Enabled will reset the Extended System Configuration Data (ESCD).

Resources controlled By

Award Plug and Play BIOS has the capacity to automatically configure all of the boot and Plug and Play compatible devices. However, this capability means absolutely nothing unless you are using a Plug and Play operating system such as Windows 98.

IRQ Resources

When resources are controlled manually, assign each system interrupt a type, depending on the type of device using the interrupt

PCI/VGA Palette Snoop

Some display cards are non-standard VGA card (such as graphics accelerator or MPEG Card) which may not display color properly on your screen. "Enable" the setting in this field may correct this problem. Leave it "Disabled" as the default

3.9. PC Health Status

CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software PC Health Status		
CPU Warning Temperature	[Disabled]	Item Help
Current CPU Temperature	22°C/71°F	Menu Level >
Current FAN1 Speed	4821 RPM	
Current FAN2 Speed	0 RPM	
Current FAN3 Speed	0 RPM	
VccCore (V)	1.74 V	
2.5(V)	2.51 V	
3.3(V)	3.10 V	
+ 5 V	4.75 V	
+ 12 V	12.09 V	
- 12 V	-12.11 V	
VBAT (V)	3.23 V	
5VSB (V)	5.26 V	
Shutdown Temperature	[Disabled]	

The PC Health Status menu allows you to monitor the health status of your PC system. You can select a field of interest and monitor its status.



Managing the PC BIOS



The PC Health Status menu allows you to monitor the health status of your PC system .You can select a field of interest and monitor it's status .

CPU Warning Temperature

This field allows you to select an operating temperature range for your CPU. If the CPU temperature moves out of this range, any warning mechanism you have programmed into your system will be activated.

Current CPU Temp.

This field shows the current temperature for CPU.

Current FAN1/FAN2/FAN3 Speed

This field shows you the speeds of the three cooling fans on the mainboard.

Vcore

This field and the files below show you the current system voltage

Shutdown Temperature

When the system reaches a certain maximum temperature the system will automatically shutdown.

3.10. Frequency/Voltage Control

CMOS Setup Utility - Copyright (C) 1984 - 2001 Award Software
Frequency/Voltage Control

CPU Clock Ration	[10 x]	Item Help
Auto Detect PCI Clk	[Enabled]	Menu Level >
Spread Spectrum	[Disabled]	
CPU Host/3V66/PCI Clock	[Default]	

CPU Clock Ratio

This field allows you to select the CPU clock ratio. Most CPU clock ratios are fixed inside the CPU by the manufacturers that prohibit you to make any changes. In this case, the setting in this field will make no change to the CPU clock ratio since it locks and is automatically determined.



Auto Detect PCI Clk

When "Enabled" is selected, the mainboard will detect the presence of devices on PCI slots. When there is no device present on some of the PCI connectors, the clock on the related PCI slot will be disabled to reduce the Electro-Magnetic Interference (EMI).

Spread Spectrum

When Spread Spectrum is enabled, the EMI radiation on this mainboard will be reduced.

3.11. Load Optimized Defaults

CMOS Setup Utility – Copyright (C) 1984 - 2001 Award Software	
<ul style="list-style-type: none"> ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PNP/PCI Configuration ▶ PC Health Status 	<ul style="list-style-type: none"> ▶ Frequency/Voltage Control <li style="background-color: #800000; color: white; padding: 2px;">Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
← ↑ ↓ → : Select Item	
ESC : Quit	
F10 : Save & Exit Setup	
Load Optimized Defaults	

There is CMOS memory on the mainboard that can be used to store the system settings. If you don't know how to use the Award BIOS CMOS Setup Utility to select the settings, you may use this field to load the optimized defaults which are defined in the system BIOS. **Our engineer recommends the Optimized Defaults.** If this option is selected it will give a series of parameters that will ensure the reliability and performance of your PC.

If you lose your CMOS data or you don't know how to complete the setup procedure, you may use this option to load the Optimized default values from the BIOS default table.

If the CMOS data is corrupted, or if you selected some CMOS settings and find that the PC system becomes very unstable, you should try to load the optimized default values first and then re-configure the BIOS.



3.12. Set Supervisor Password

CMOS Setup Utility – Copyright (C) 1984 - 2001 Award Software	
<ul style="list-style-type: none"> ▶ ▶ Standard CMOS Features ▶ Advanced BIOS Features ▶ Advanced Chipset Features ▶ Integrated Peripherals ▶ Power Management Setup ▶ PNP/PCI Configuration ▶ PC Health Status 	<p style="text-align: center;">4</p> <ul style="list-style-type: none"> ▶ Frequency/Voltage Control Load Optimized Defaults Set Supervisor Password Set User Password Save & Exit Setup Exit Without Saving
ESC : Quit F10 : Save & Exit Setup	← ↑ ↓ → : Select Item
Load Optimized Defaults	

The "SUPERVISOR PASSWORD" is for you to control unauthorized access to your BIOS CMOS Setup or Booting into the your PC system. The Supervisor Password option is used together with the Security Option in section 3.4.

When "Setup" is selected in the Security Option:

If you want to change any BIOS setting, you will have to key-in the Supervisor Password so that you can start the BIOS CMOS Setup Utility and change the system setting.

When "System" is selected in Security Option:

Whenever you turn on the PC, it will request the user to enter the Password in order to boot up your system. Without the correct password, the PC system will


3.13. Set User Password



The User Password can be used to check the user's authority. However, this password entry is different from the "SUPERVISOR PASSWORD". The User Password has a different function to the "Supervisor Password" and the "Security Option" setup in Section 3.4.:



Managing the PC BIOS

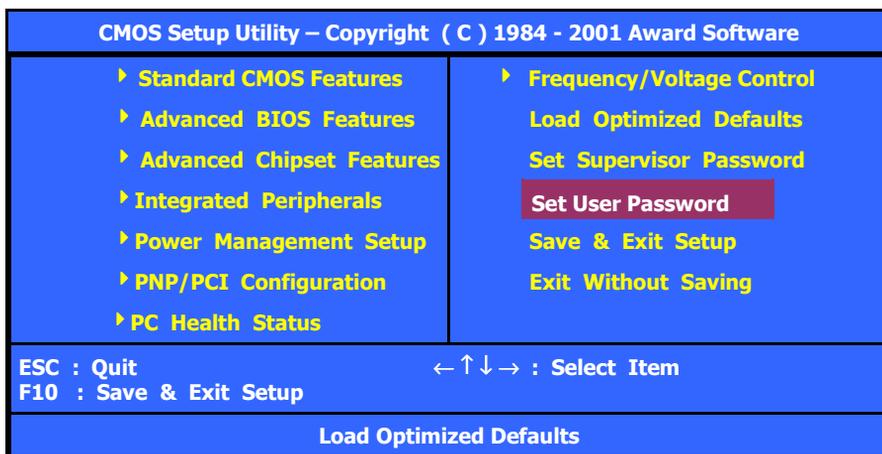

A. When there is the password stored in the "SUPERVISOR PASSWORD"

1. When "Setup" is selected in the Security Option:

When you use the "User Password" to log into the BIOS setup program, you can only view the BIOS settings, but you cannot change any settings. The only setting you can change is the "User Password" and you can also select "SAVE & EXIT SETUP" and "EXIT WITHOUT SAVING" from the main menu. (If you use the Supervisor Password to log into the PC system, you will have the complete rights to all the BIOS settings.

2. When "System" is selected in Security Option:

When you turn on the PC system, it will request that you enter the Password. Without the correct password, the PC system will stop and the operating system won't be loaded.

B. When there is no password stored in the "SUPERVISOR PASSWORD"

1. When "Setup" is selected in Security Option:


Users can use the "User Password" to log into the BIOS setup program, and they can change any of the BIOS settings.

2. When "System" is selected in Security Option:

When you turn on your PC, you will be requested to enter the Password. Without the correct password, the PC system will stop and the operation system will not be



3.14. Save & Exit Setup / Exit Without Saving

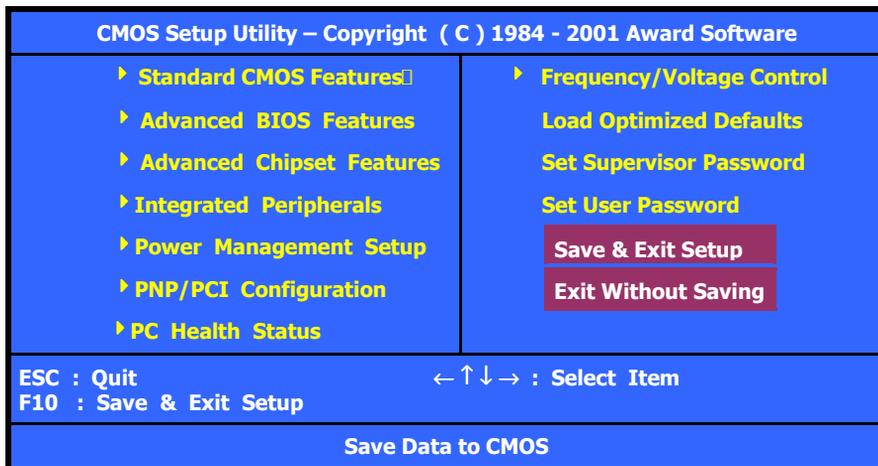

Save & Exit Setup

This option will save all the setup values to CMOS RAM and exit the SETUP utility. Move the selection bar to “SAVE & EXIT SETUP” and press the “Enter” key, then type “Y” and press the “Enter” key again. The values you have entered will be saved and all the information stored in the CMOS memory.

Exit Without Saving

This option will exits the setup utility without saving any of the values you changed in the CMOS RAM. If you do not want to save any of the changes, or settings you selected in the BIOS SETUP utility, move the selection bar to the “EXIT



Managing the PC BIOS



This page has intentionally been left blank

This page has intentionally been left blank