P2XLX CPU FREQUENCY SETTING:

CPU CORE	JP2	JP2	JP2	JP2	CPU
RATIO	1-2	3-4	5-6	7-8	FREQUENCY
2X	ON	ON	ON	ON	133MHZ
2.5X	OFF	ON	ON	ON	166MHZ
3X	ON	OFF	ON	ON	200MHZ
3.5X	OFF	OFF	ON	ON	233MHZ
4X	ON	ON	OFF	ON	266MHZ
4.5X	OFF	ON	OFF	ON	300MHZ
5X	ON	OFF	OFF	ON	333MHZ
5.5X	OFF	OFF	OFF	ON	366MHZ
6X	ON	ON	ON	OFF	400MHZ
6.5X	OFF	ON	ON	OFF	433MHZ
7X	ON	OFF	ON	OFF	466MHZ
7.5X	OFF	OFF	ON	OFF	500MHZ
8X	ON	ON	OFF	OFF	533MHZ
1.5X	OFF	ON	OFF	OFF	100MHZ
2X	OFF	OFF	OFF	OFF	133MHZ