 


Quick Jumper Setting Reference


JP1: Keyboard Power On Enable/Disable Jumper

Function	Jumper Cap
5V standby (enable keyboard power on)	Short Pins 1-2
Vcc (disable keyboard power on)	Short pins 2-3



JP3: Clear CMOS Memory

Function	Jumper Cap
Clear CMOS	Short Pins 2-3
Normal Operation	Short pins 1-2

 

PANEL1: Connectors for Case Switches and LEDs

Function	Pins
Power LED	+1, +2, 3
Sleep Switch	4, 5
Green LED	+7, +8, 9
Key Lock	10, 11
Reset Switch	12, 13
Speaker	+15, 16, 17, 18
Hard Disk LED	+20, 21
Power Switch	+22, 23

