
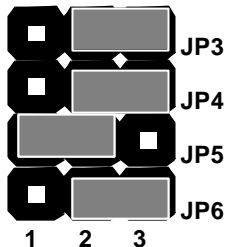




P6VXM2T

Setting Jumpers

Jumper Settings

| Jumper | Type | Description | Setting (default) |
|---------|--------|-----------------------|--|
| JP1 | 3-pin | Clear CMOS | 1-2: Normal 2-3: <i>Clear CMOS</i>  |
| JP3~JP6 | 12-pin | CPU Clock Ratio | Refer to next page  |
| JP9 | 2-pin | BIOS flash protection | Short: Enable <i>Open: Disable</i>  |
| JP10 | 3-pin | AC power resume | 1-2: Enable 2-3: <i>Disable</i>  |

Jumper 1 – Enables you to clear the BIOS. Follow these instructions:

1. Turn the system off.
2. Short pins 1 and 2 on jumper 1.
3. Return the jumper to the normal setting.
4. Turn the system on. The BIOS is returned to the default settings.

Jumper 3 ~ Jumper 6 – Use these 3 x 4 pin jumpers to manually set the CPU clock ratio. Refer to the following table to set the CPU clock ratio for your processor by shorting the pins indicated.

| Fraction | Short pins | | | |
|----------|------------|-----|-----|-----|
| | JP3 | JP4 | JP5 | JP6 |
| 3.0/8.5 | 2-3 | 2-3 | 1-2 | 2-3 |
| 3.5/9.0 | 2-3 | 2-3 | 1-2 | 1-2 |
| 4.0 | 2-3 | 1-2 | 2-3 | 2-3 |
| 4.5/11.5 | 2-3 | 1-2 | 2-3 | 1-2 |
| 5.0/12 | 2-3 | 1-2 | 1-2 | 2-3 |
| 5.5/13 | 2-3 | 1-2 | 1-2 | 1-2 |
| 6.0/14.0 | 1-2 | 2-3 | 2-3 | 2-3 |
| 6.5/15.0 | 1-2 | 2-3 | 2-3 | 1-2 |
| 7.0/16.0 | 1-2 | 2-3 | 1-2 | 2-3 |
| 7.5 | 1-2 | 2-3 | 1-2 | 1-2 |
| 8.0 | 1-2 | 1-2 | 2-3 | 2-3 |
| 9.0 | 2-3 | 2-3 | 1-2 | 1-2 |
| 9.5 | 2-3 | 2-3 | 2-3 | 1-2 |
| 10.0 | 1-2 | 1-2 | 2-3 | 1-2 |
| 10.5 | 2-3 | 1-2 | 2-3 | 2-3 |
| 11.0 | 1-2 | 1-2 | 1-2 | 2-3 |

Jumper 9 – Use this jumper to enable or disable the BIOS flash protection on the mainboard. You should disable this jumper when you want to flash the BIOS.

Jumper 10 – Use this jumper to set the power state after an unexpected shutdown due to AC power interruption.