

# **MP-6VIP-B**

## **Motherboard**

### **User's Manual**

**Product Name:** MP-6VIP-B  
**Manual Revision:** English, 1.00  
**Release Date:** January, 2000

---

## **Federal Communications Commission Statement**

This device complies with FCC Rules Part 15. Operation is subject to the following two conditions:

- ♦ This device may not cause harmful interference
- ♦ This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy. If this equipment is not installed and used in accordance with the manufacturer's instructions, it may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ♦ Reorient or relocate the receiving antenna.
- ♦ Increase the separation between the equipment and receiver.
- ♦ Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- ♦ Consult the dealer or an experienced radio/TV technician for help.

The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations. Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

## **Canadian Department of Communications Statement**

This digital apparatus does not exceed the Class B limits for audio noise emissions from digital apparatuses set out in the Radio Interference Regulations of the Canadian Department of Communications.

## **Manufacturer's Disclaimer Statement**

The information in this document is subject to change without notice and does not represent a commitment on the part of the vendor. No warranty or representation, either expressed or implied, is made with respect to the quality, accuracy or fitness for any particular purpose of this document. The manufacturer reserves the right to make changes to the content of this document and/or the products associated with it at any time without obligation to notify any person or organization of such changes. In no event will the manufacturer be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages. This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressed written consent of its authors. Product names appearing in this document are mentioned for identification purposes only. All **trademarks**, product names or brand names appearing in this document are registered property of their respective owners.

Copyright © Magic-Pro Computer Co., LTD.

All rights reserved

Author : Raymond

Printed in Taiwan

January 2000

**100%** POST-CONSUMER  
RECYCLED PAPER 

---

# CONTENT

<b>MOTHERBOARD DIAGRAM .....</b>	<b>5</b>
<b>JP3 / JP4: Bus Clock Select .....</b>	<b>9</b>
<b>STANDARD CMOS SETUP .....</b>	<b>12</b>
<b>BIOS FEATURES SETUP .....</b>	<b>14</b>
<b>CHIPSET FEATURES SETUP .....</b>	<b>18</b>
<b>POWER MANAGEMENT SETUP .....</b>	<b>21</b>
<b>PnP/PCI CONFIGURATION SETUP .....</b>	<b>25</b>
<b>LOAD SETUP DEFAULTS .....</b>	<b>28</b>
<b>CPU SPEED SETTING .....</b>	<b>29</b>
<b>INTEGRATED PERIPHERALS .....</b>	<b>31</b>
<b>SUPERVISOR/USER PASSWORD .....</b>	<b>35</b>
<b>IDE HDD AUTO DETECTION .....</b>	<b>36</b>
<b>SAVE &amp; EXIT SETUP .....</b>	<b>36</b>
<b>EXIT WITHOUT SAVING .....</b>	<b>36</b>
<b>Appendix A</b>	
<b>FLASH MEMORY UPDATE INSTALLATION .....</b>	<b>37</b>
<b>Appendix B</b>	
<b>DRIVER INSTALLATION .....</b>	<b>38</b>

---

**Appendix C**

**THE USAGE OF RT2 ..... 40**

---

## VIA APOLLO PRO133 SOCKET-370

---

### F E A T U R E

#### ■ PROCESSOR

- Supports Intel PPGA Celeron 370 CPUs 300 ~ 533MHz or higher.
- Supports Intel FC-PGA Pentium III (Coppermine) CPUs 500E ~ 550E MHz or higher.
- Supports Cyrix Joshua CPUs.
- Supports 66/ 75\*/ 83\*/ 100/ 103\*/ 105\*/ 124\*/ 133/ 140\*/ 150\*MHz system bus speeds.
- Clock multipliers up to 8x.

#### ■ CHIPSET

- VIA APOLLO PRO133 VT82C693A chipset (FSB supports 133MHz).

#### ■ SYSTEM MEMORY

- 3x 3.3V DIMM sockets.
- 8MB to 768MB DRAM size.

#### ■ SLOT

- 1x AGP slot supports 1x / 2x mode bus; 4x PCI Bus Master slots; 2x ISA slots.

#### ■ ONBOARD I/O

- 2x Ultra ATA33/66 Bus Master IDE ports.
- 2x USB ports.
- 1x PS/2 mouse connector and 1x PS/2 keyboard connector.
- 1x 2.88MB Floppy port, 2x High Speed 16550A UART ports and 1x IrDA TX / RX Header.

#### ■ POWER

- AT / ATX power supply connector.
- Power-On by LAN(WOL), RTC Alarm, Modem Ring.


#### ■ BIOS

- 2MB FLASH BIOS.
- Licensed AWARD BIOS, supports SCSI / ZIP / LS-120 / CD-ROM boot and ACPI Power Management.

#### ■ FORM FACTOR / PCB

- AT, 4 layers PCB, 22.0cm x 24.0cm size.

# MOTHERBOARD DIAGRAM

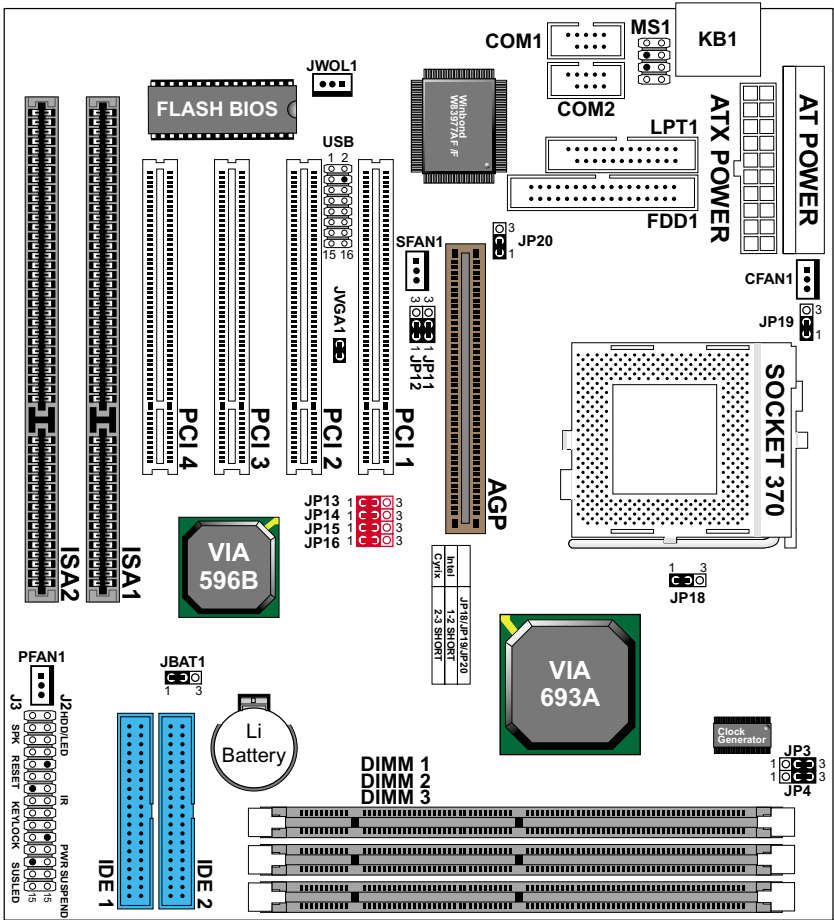










 











 























 


**Default setting: Intel Celeron 300A/66MHz.**

**NOTE:** For 100/133MHz CPU environment, the SDRAM sepc must comply with PC-100/PC-133 spec.

# C P U C L O C K S E T T I N G

## CPU Type Configuration












 



 















 










 



 
 








CPU MODEL	BUS RATIO	BUS CLOCK
<b>Celeron 300/66</b> (66MHz * 4.5x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 333/66</b> (66MHz * 5.0x) <b>Pentium III 500E/100#</b> (100MHz * 5.0x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 366/66</b> (66MHz * 5.5x) <b>Pentium III 550E/100#</b> (100MHz * 5.5x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 400/66</b> (66MHz * 6.0x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 433/66</b> (66MHz * 6.5x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 466/66</b> (66MHz * 7.0x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 500/66</b> (66MHz * 7.5x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3
<b>Celeron 533/66</b> (66MHz * 8.0x)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	JP3  3 JP4  3

**NOTE 1:** Use jumper(hardware) settings > set JP13/JP14  
JP15/JP16 manually.

**NOTE 2:** Use jumperless settings > JP13/JP14/JP15/JP16  
must set to DEFAULT, that means all JP13/JP14/  
JP15/JP16 are 1 & 2 short.


**NOTE 3:** (#) Pentium III Coppermin FC-PGA CPUs.

## Bus Ratio Select

BUS RATIO	JP13~JP16	BUS RATIO	JP13~JP16
2.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	2.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
3.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	3.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
4.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	4.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
5.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	5.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
6.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	6.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
7.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	7.5x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3
8.0x	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3	By BIOS (jumperless setting) (DEFAULT)	JP13 1  3 JP14 1  3 JP15 1  3 JP16 1  3



## J U M P E R   S E T T I N G

 
 
 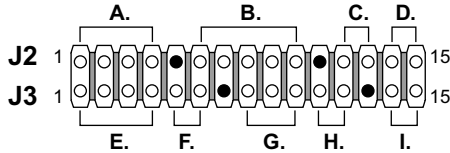


- |  |  |
|--|--|
| <p>A. : HDD LED<br/>         C. : POWER SWITCH<br/>         E. : SPEAKER<br/>         G. : POWER LED<br/>         I. : SUSPEND LED</p> | <p>B. : INFRARED (IR)<br/>         D. : SUSPEND CONNECTOR<br/>         F. : RESET SWITCH<br/>         H. : KEYLOCK</p> |
|--|--|



### #FAN1: Onboard FAN (12V) Connector

#FAN1	FUNCTION
CFAN1	CPU FAN
SFAN1	CHASSIS FAN
PFAN1	POWER FAN





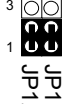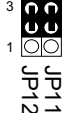

### JP3 / JP4: Bus Clock Select

Bus Clock	JP3 / JP4
100MHz	 JP3 JP4
133MHz	 JP3 JP4
Auto Select 66/100/133MHz (default)	 JP3 JP4

**JP11 / JP12: USB Port Select**

 

USB Port	JP11 / JP12
Redirect USB port1 to USB connector (default)	 JP11 JP12
Redirect USB port1 to AGP port	 JP11 JP12

**JP18 / JP19 / JP20: Intel / Cyrix CPU Select**

CPU TYPE	JP18	JP19	JP20
Intel CPU (Default)			
Cyrix Joshua CPU			

**JVGA1: VGA Card**



This jumper is set for the PCI VGA card only. Open this jumper when the system is not able to boot up. If you use AGP card, it is important to set default with JVGA1.

	JVGA1
For PCI VGA card	
Normal (default)	

---

**JBAT1: Clear CMOS data**

Clear the CMOS memory by shorting this jumper 2 & 3 momentarily, and then remove the cap back to 1 & 2 to retain original CMOS setting.

CMOS Status	JBAT1
Clear CMOS Data	 1      3
Retain Data (default)	 1      3

**KB1: Keyboard Connector****MS1: PS/2 mouse Connector****USB: USB Connector****JWOL1: Wake On LAN (WOL) Connector**

This jumper is designed to use LAN to boot up the system. Connect the wake on signal from LAN card to this connector.

\*\*\*For support WOL, the ATX power supply has to have at least 5V/720mA standby current.\*\*\*

**NOTE:** "VIA Patch Code", "VIA AGP VxD Driver" & "VIA PCI IRQ Routing Miniport" installation, please refer to Appendix B.

This VIA82C693A chipset Apollo Pro-Plus comes with the AWARD BIOS from AWARD Software Inc. Enter the AWARD BIOS program Main Menu by:

1. Turn on or reboot the system. After a series of diagnostic checks, the following message will appear:

PRESS <DEL> TO ENTER SETUP

2. Press the <DEL> key and the main program screen will appear as follows:
3. Using the arrows on your keyboard, select an option, and press <Enter>. Modify the system parameter to reflect the options installed in your system.
4. You may return to the Main Menu anytime by pressing <ESC>.
5. In the Main Menu, "SAVE AND EXIT SETUP" saves your changes and reboots the system, and "EXIT WITHOUT SAVING" ignores your changes and exits the program.

ROM PCI / ISA BIOS (2A6LJSN9)  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	CPU SPEED SETTING
BIOS FEATURES SETUP	INTEGRATED PERIPHERALS
CHIPSET FEATURES SETUP	SUPERVISOR PASSWORD
POWER MANAGEMENT SETUP	USER PASSWORD
PNP/PCI CONFIGURATION	IDE HDD AUTO DETECTION
LOAD SETUP DEFAULTS	SAVE & EXIT SETUP
	EXIT WITHOUT SAVING
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color

## STANDARD CMOS SETUP

Standard CMOS Setup allows you to record some basic system hardware configuration and set the system clock and error handling. You only need to modify the configuration values of this option when you change your system hardware configuration or the configuration stored in the CMOS memory gets lost or damaged.

Run the Standard CMOS Setup as follows:

1. Choose "STANDARD CMOS SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A69KSNH)  
STANDARD CMOS SETUP  
AWARD SOFTWARE, INC.

Date (mm:dd:yy) : Tue, Oct 19 1999	
Time (hh:mm:ss) : 15 : 6 : 26	
HARD DISK	TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE
<hr/>	
Primary Master	: Auto 0M 0 0 0 0 0 AUTO
Primary Slave	: Auto 0M 0 0 0 0 0 AUTO
Secondary Master	: Auto 0M 0 0 0 0 0 AUTO
Secondary Slave	: Auto 0M 0 0 0 0 0 AUTO
Drive A	: 1.44, 3.5 in.
Drive B	: None
Video	: EGA/VGA
Halt On	: All Errors
Base Memory : 640K Extended Memory : 64512K Other Memory : 384K <hr/> Total Memory : 65536K	
Esc : Quit	↑ ↓ → ← : Select Item
F1 : Help	(Shift) F2 : Change Color
	PU/PD/+/- : Modify

---

<b>Date (mm:dd:yy)</b> <b>Time (hh:mm:ss)</b>	Set the current date and time.
<b>Primary (Secondary)</b> <b>Master / Slave</b>	This field records the specification for all non-SCSI Hard Disk Drives installed in your system. Refer to the respective documentation on how to install the drives.
<b>Drive A / B</b>	Set the field to the type(s) of Floppy Disk drive(s) installed in your system. The choice: 360KB, 5.25in. 1.2MB, 5.25in. 720KB, 3.5in. 1.44MB, 3.5in. 2.88MB, 3.5in.
<b>Video</b>	Set the field to the type of video display card installed in your system. The choice: Monochrome, Color 40x25, EGA / VGA, (default) Color 80x25
<b>Halt On</b>	Set this warning feature for the type of errors that will cause the system to halt. The choice: All Errors, (defaults) No Errors, All But Keyboard, All But Diskette, All But Disk / Key

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## BIOS FEATURES SETUP

BIOS Features Setup allows you to improve your system performance or set up system features according to your preference.

Run the BIOS Features Setup as follows:

1. Choose "BIOS FEATURES SETUP" from the Main Menu and a screen with a list of options will appear.

ROM PCI/ISA BIOS (2A6LJSN9)  
BIOS FEATURES SETUP  
AWARD SOFTWARE, INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
CPU L2 Cache ECC Checking	: Enabled	D0000-D3FFF Shadow	: Disabled
		D4000-D7FFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	D8000-DBFFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI	DC000-DFFFF Shadow	: Disabled
Swap Floppy Drive	: Disabled		
Boot Up Floppy Seek	: Disabled		
Boot Up NumLock Status	: On		
IDE HDD Block Mode	: Enabled		
Gate A20 Option	: Fast		
Memory Parity/ECC Check	: Disabled		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250	ESC : Quit	↑ ↓ → ← : Select Item
Security Option	: Setup	F1 : Help	PU/PD/+/- : Modify
PCI/VGA Palette Snoop	: Disabled	F5 : Old Value	(Shift)F2 : Color
OS Select For DRAM > 64MB	: Non-OS2	F7 : Load Setup Defaults	

2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys. An explanation of the <F>keys follows:

<F1>: "Help" gives options available for each item.

<Shift> + <F2>: Change BIOS screen color.

<F5>: Get the previous values. These values are the values with the user started in the current session.

<F6>: Load all options with the BIOS default values.

<F7>: Load all options with the Setup default values.

---

<b>Virus Warning</b>	<p>Enabled: Activates automatically when the system boots up causing a warning message to appear if there is anything attempting to access the boot sector or Hard Disk partition table.</p> <p>Disabled: No warning message will appear when there is something attempting to access the boot sector or Hard Disk partition table.</p> <div style="border: 1px solid black; padding: 5px; margin-top: 10px;"><p><i>Note: Many diagnostic (or boot manager) programs which attempt to access the boot sector table can cause the above warning message. If you will be running such a program, we recommend that you disable the virus protection first.</i></p></div>
<b>CPU Internal Cache</b>	<p>Choose Enabled (default) or Disabled. This option allows user to enable or disable the CPU internal cache.</p>
<b>External Cache</b>	<p>Choose Enabled (default) or Disabled. This option allows user to enable or disable the external cache memory.</p>
<b>CPU L2 Cache ECC Checking</b>	<p>Choose Enabled (default) or Disabled.</p>
<b>Quick Power On Self Test</b>	<p>Choose Enabled (default) or Disabled. This option allows user to speed up the Power-On-Self-Test routine.</p>
<b>Boot Sequence</b>	<p>Default is "A , C, SCSI". This option determines which drive to boot at first for an operating system.</p>
<b>Swap Floppy Drive</b>	<p>This option swaps floppy driver assignments when it's enabled. The choice: Enabled, Disabled (default).</p>
<b>Boot Up Floppy Seek</b>	<p>Enabled (default): During POST, BIOS checks the track number for Floppy Disk drive to see whether it's 40 or 80 tracks.</p> <p>Disabled: During POST, BIOS will not check the track number for Floppy Disk drive.</p>



<b>Boot Up NumLock Status</b>	On (default): Activate the NumLock function at boot up. Off: Close the NumLock function at boot up.
<b>IDE HDD Block Mode</b>	Choose Enabled (default) or Disabled. If your Hard Disk size is larger than 540MB, choose Enabled, and if you are using the IDE HDD Auto Detection option, the BIOS will choose this option automatically.  <div style="border: 1px solid black; padding: 5px;"><b>Note: Some older model Hard Disk drives do not provide this function.</b></div>
<b>Gate A20 Option</b>	Choose Normal or Fast (default): This option allows the RAM to access the memory above 1MB by using the fast gate A20 line.
<b>Memory Parity / ECC Check</b>	Choose Enabled or Disabled.
<b>Typematic Rate Setting</b>	Choose Enabled or Disabled (default): Enable this option to adjust the deystroke repeat rate.
<b>Typematic Rate (Char / Sec)</b>	Range between 6 (default) and 30 characters per second. This option controls the speed of repeating keystrokes.
<b>Typematic Delay (Msec)</b>	Choose 250 (default), 500, 750 and 1000. This option sets the time interval for displaying the first and the second characters.
<b>Security Option</b>	Choose System or Setup (default). This option prevents unauthorized system boot up or use of BIOS Setup.
<b>PCI / VGA Palette</b>	Choose Enabled or Disabled (default). It determines whether or not the MPEG ISA cards can work with PCI / AGP.
<b>OS Select for DRAM &gt; 64MB</b>	Non-OS2 (default): For Non-OS/2 operating system. OS: For OS/2 operating system.

**Video BIOS Shadow**

---

Enabled (default): Map the VGA BIOS to system RAM.  
Disabled: Don't map the VGA BIOS to system RAM.

**C8000-CBFFF to DC000-  
DFFFF Shadow**

---

These options are used to shadow other expansion card ROMs.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## CHIPSET FEATURES SETUP

Chipset Features Setup changes the values of the chipset registers. These registers control the system options.

Run the Chipset Features Setup as follows:

1. Choose "CHIPSET FEATURES SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)  
 CHIPSET FEATURES SETUP  
 AWARD SOFTWARE, INC.

Bank 0/1 DRAM Timing : SDRAM 10ns Bank 2/3 DRAM Timing : SDRAM 10ns Bank 4/5 DRAM Timing : SDRAM 10ns SDRAM Cycle Length : 3 DRAM Clock : Host CLK Memory Hole : Disabled Read Around Write : Enabled Concurrent PCI/Host : Disabled System BIOS Cacheable : Disabled Video RAM Cacheable : Disabled AGP Aperture Size : 64M AGP-2X Mode : Disabled OnChip USB : Enabled USB Keyboard Support : Disabled	ESC : Quit            ↑ ↓ → ← : Select Item F1 : Help            PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults
---	--

---

<b>Bank 0/1 2/3 4/5 DRAM Timing</b>	<p>This item allows you to select the value in this field, depending on whether the board has paged DRAMs or EDO (extended data output) DRAMs.</p> <p>The choice: EDO 50ns, EDO 60ns, Slow, Medium, Fast, Turbo</p>
<b>SDRAM Cycle Length</b>	<p>You can select CAS latency time in HCLKs of 2/2 or 3/3. The system board designer should have set the values in this field, depending on the DRAM installed. Do not change the values in this field unless you change specifications of the installed DRAM or the installed CPU.</p>
<b>DRAM CLOCK</b>	<p>The setting of this item must depend on the spec of PC100/PC133. For example, if user chooses HCLK + 33M, that means not only the motherboard but also the SDRAM needs to comply with PC-133 spec.</p> <p>Choice: Host CLK(default), HCLK-33M or HCLK+33M.</p>
<b>Memory Hole</b>	<p>Choose Enabled or Disabled (default). In order to improve performance, certain space in memory can be reserved for ISA cards. This memory must be mapped into the memory's space below 16MB.</p>
<b>Read Around Write</b>	<p>DRAM optimization feature: If a memory read is addressed to a location whose latest write is being held in a buffer before being written to memory, the read is satisfied through the buffer contents, and the read is not sent to the DRAM.</p> <p>The choice: Enabled, Disabled</p>
<b>Concurrent PCI / Host</b>	<p>When disabled, CPU bus will be occupied during the entire PCI operation period.</p> <p>The choice: Enabled, Disabled</p>
<b>System BIOS Cacheable</b>	<p>Choose Enabled or Disabled (default). When Enabled, the access to the system BIOS ROM addressed at F0000H-FFFFFH is cached.</p>

**Video RAM Cacheable** Choose Enabled or Disabled (default). When enabled, the access to the VGA RAM addressed is cached.

**AGP Aperture Size (MB)** Choose 4, 8, 16, 32, 64 (default), 128 or 256MB. Memory map and graphics data structures can reside in a Graphics Aperture. This area is like a linear buffer. BIOS will automatically report the starting address of this buffer to the O.S.

**AGP-2X Mode** This item allows user to enable / disable the AGP-2x (133MHz clock) mode.

**OnChip USB** This should be enabled if your system has a USB installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.  
The choice:  
Enabled, Disabled

**USB Keyboard Support** Enabled: Enables function when the USB keyboard is being used.  
Disabled (default): When the AT keyboard is being used.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## POWER MANAGEMENT SETUP

Power Management Setup changes the system power savings function.

Run the Power Management Setup as follows:

1. Choose "POWER MANAGEMENT SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)  
POWER MANAGEMENT SETUP  
AWARD SOFTWARE, INC.

<p>ACPI function : Disabled</p> <p>Power Management : User Define</p> <p>PM Control by APM : Yes</p> <p>Video Off After : Suspend</p> <p>Video Off Method : V/H SYNC+Blank</p> <p>MODEM Use IRQ : 3</p> <p>Soft-Off by PWRBTN : Instant-Off</p> <p>HDD Power Down : Disabled</p> <p>Doze Mode : Disabled</p> <p>Suspend Mode : Disabled</p> <p style="text-align: center;">** PM Events **</p> <p>VGA : OFF</p> <p>LPT &amp; COM : LPT/COM</p> <p>HDD &amp; FDD : ON</p> <p>DMA Master : OFF</p> <p>Modem Ring Resume : Disabled</p> <p>Wake Up On LAN : Disabled</p> <p>RTC Alarm Resume : Disabled</p>	<p>Primary INTR : ON</p> <p>IRQ3 (COM 2) : Primary</p> <p>IRQ4 (COM 1) : Primary</p> <p>IRQ5 (LPT 2) : Primary</p> <p>IRQ6 (Floppy Disk) : Primary</p> <p>IRQ7 (LTP 1) : Primary</p> <p>IRQ8 (RTC Alarm) : Disabled</p> <p>IRQ9 (IRQ2 Redir) : Secondary</p> <p>IRQ10 (Reserved) : Secondary</p> <p>IRQ11 (Reserved) : Secondary</p> <p>IRQ12 (PS/2 Mouse) : Primary</p> <p>IRQ13 (Coprprocessor) : Primary</p> <p>IRQ14 (Hard Disk) : Primary</p> <p>IRQ15 (Reserved) : Disabled</p> <hr/> <p>ESC : Quit      ↑ ↓ → ← : Select Item</p> <p>F1 : Help      PU/PD/+/- : Modify</p> <p>F5 : Old Value (Shift)F2 : Color</p> <p>F7 : Load Setup Defaults</p>
--	---

<b>ACPI Function</b>	Enabled: Turn on ACPI function. Disabled (default): Turn off ACPI function.
<b>Power Management</b>	Choose Max. Saving, User Define (default), Disabled, or Min. Saving.
<b>PM Control By APM</b>	Choose Yes (default) or No. You need to choose Yes when the operating system has the APM functions, otherwise choose No.
<b>Video Off After</b>	Choose NA, Suspend, Standby (default) or Doze.
<b>Video Off Method</b>	Choose Blank, DPMS or V/H Sync+Blank (default). You can choose either DPMS or V/H Sync+Blank when the monitor has the Green function. You need to choose Blank when the monitor has neither the Green function.
<b>Modem Use IRQ</b>	Assign the IRQ number to the modem which is being used so that the ring signal can wake up the system. The default setting is 3 (COM2).
<b>Soft-Off By PWR-BTTN</b>	Instant-Off (default): Turn off the system power at once after pushing the power button. Delay 4 Sec: Turn off the system power 4 seconds after pushing the power button (to meet PC97/98 spec)
<b>HDD Power Down</b>	Time is adjustable from 1 to 15 minutes. When the set time has elapsed, the BIOS sends a command to the HDD to power down which turns off the motor.
<b>Doze Mode</b>	This mode sets the CPU speed down to 33MHz.
<b>Suspend Mode</b>	The option allows you to choose the mode for the different timer. The Suspend mode turns off the CPU and saves the energy of the system.

---

<b>VGA</b>	When On of VGA, any activity from one of the listed system peripheral devices or IRQs wakes up the system. Choice: On(default), Off.
<b>LPT &amp; COM</b>	When On of LPT&COM, any activity from one of the listed system peripheral devices or IRQs wakes up the system. Choice: LPT/COM(default), NONE, LPT or COM.
<b>HDD &amp; FDD</b>	When On of HDD&FDD, any activity from one of the listed system peripheral devices wakes up the system. Choice: On(default), Off.
<b>DMA / master</b>	When On, any activity from one of the listed system peripheral devices wakes up the system. Choice: On, Off(default).
<b>Modem Ring Resume</b>	An input signal on the serial Ring Indicator (RI) Line (in other words, an incoming call on the modem) awakens the system from a soft off state.
<b>Wake On LAN</b>	Enabled: Wake on the system from the LAN card (LAN card must support wake on LAN function and the power supply must provide at least 5V/7750mA standby current) Disabled(default): Disable Wake On LAN function.
<b>RTC Alarm Resume</b>	When Enabled, you can set the date and time at the which the RTC(Real Time Clock) alarm awakens the system from suspend mode. Choice: Disabled(default), Enabled.
<b>Primary INTR</b>	When set to On, any event occurring at will awaken a system which has been powered down. On(default): The system can not enter the power saving mode when I/O ports or IRQ# is activated. Off: The system still can enter the power saving mode when I/O ports or IRQ# is activated.



The following is a list of IRQ's(Interrupt ReQuests), which can be exempted much as the COM ports and LPT ports above can. When an I/O device wants to gain the attention of the operating system, it signals this by causing an IRQ to occur. When the operating system is ready to respond to the request, it interrupts itself and performs the service. When set On, activity will neither prevent the system from going into a power management mode nor awaken it.

- IRQ3 (COM2)**
- IRQ4 (COM1)**
- IRQ5 (LPT2)**
- IRQ6 (Floppy Disk)**
- IRQ7 (LPT1)**
- IRQ8 (RTC Alarm)**

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## PnP/PCI CONFIGURATION SETUP

PnP/PCI Configuration Setup defines PCI bus slots.

Run the PnP/PCI Configuration Setup as follows:

1. Choose "PnP/PCI CONFIGURATION SETUP" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LJSN9)  
PNP/PCI CONFIGURATION  
AWARD SOFTWARE, INC.

PNP OS Installed : No Resources Controlled By : Auto Reset Configuration Data : Disabled	CPU to PCI Write Buffer : Enabled PCI Dynamic Bursting : Enabled PCI Master 0 WS Write : Enabled PCI Delay Transaction : Enabled PCI#2 Access #1 Retry : Disabled AGP Master 1 WS Write : Disabled AGP Master 1 WS Read : Disabled  IRQ-x assigned to : PCI/ISA PnP DMA-x assigned to : PCI/ISA PnP Assign IRQ For USB : Enabled Assign IRQ For VGA : Enabled
ESC : Quit      ↑ ↓ → ← : Select Item F1 : Help      PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults	

**PNP OS Installed**

Yes: OS supportsss Plug and Play function.  
No (default): OS doesn't support Plug and Play function.

**Note: BIOS will automatically diable all PnP resources except the boot device card when you select Yes on Non-PnP O.S.**

**Resources Controlled  
By**

Choose Manual (default) or Auto. The BIOS checks the IRQ/DMA channel number on the ISA and PCI card manually if you choose Manual. And the IRQ/DMA channel number will be checked automatically if you choose Auto.

**Reset Configuration  
Data**

Choose Enabled or Disabled (default). Disable retains Enabled PnP configuration data in BIOS and resets the PnP configuration data in the BIOS.

**CPU to PCI Write Buffer**

Choose Enabled(default) or Disabled.

**PCI Dynamic Bursting**

Choose Enabled(default) or Disabled .

**PCI Master 0 WS Write**

Choose Enabled(default) or Disabled .

**PCI Delay Transaction**

Choose Enabled(default) or Disabled .

**PCI #2 Access #1 Retry**

Choose Enabled or Disabled(default).

**AGP Master 1 WS Write**

Choose Enabled(default) or Disabled.

**AGP Master 1 WS Read**

Choose Enabled or Disabled(default).

<b>IRQ-x assigned to DMA-x assigned to</b>	Legacy ISA: Manually assigns IRQ/DMA to device. PCI/ISA PnP: BIOS assigns IRQ/DMA to device automatically.
<b>Assign IRQ for USB</b>	Enabled (default): Add one IRQ to USB controller. Disabled: Remove IRQ from USB controller. The system will have extra IRQ for other devices but the USB controller will still not be disabled (only IRQ was removed)
<b>Assign IRQ for VGA</b>	Enabled (default): Add one IRQ to VGA controller. Disabled: Remove IRQ from VGA controller. The system will have extra IRQ for other devices but the VGA controller will still not be disabled (only IRQ will be removed)

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## **LOAD SETUP DEFAULTS**

Load Setup Defaults option loads the default system values to the system configuration fields. If the CMOS is corrupted the defaults are loaded automatically.

Choose this option and the following message will appear:

“Load Setup Defaults (Y/N)? N”

To use the Setup Defaults, change the prompt to “Y” and press <Enter>.

## CPU SPEED SETTING

CPU Speed Setting option allows user to adjust CPU's settings and retain some informations inside computer when it is working.

Run the Integrated Peripherals as follows:

1. Choose "CPU SPEED SETTING" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LGSNI)  
CPU SPEED SETUP  
AWARD SOFTWARE, INC.

CPU RATIO : X3 Auto Detect DIMM/PCI Clk : Disabled Spread Spectrum : Disabled CPU Host Clock(CPU/PCI) : Default CPU Warning Temperature : Current System Temp. : Current CPU1 Temperature : Current CPU2 Temperature : Current CPUFAN1 Speed : Current CPUFAN2 Speed : Currnet CPUFAN3 Speed : IN0(V) : IN1(V) : IN2(V) : + 5 V : + 12 V : - 12 V : - 5 V :	ESC : Quit      ↑ ↓ → ← : Select Item F1 : Help      PU/PD/+/- : Modify F5 : Old Value (Shift)F2 : Color F7 : Load Setup Defaults
---	--

<b>CPU Ratio</b>	Select the CPU Ratio. The choice: 3.0x (default), 3.5x, 4.0x, 4.5x, 5.0x, 5.5x, 6.0x, 6.5x, 7.0x, 7.5x, 8.0x.
<b>Auto Detect DIMM/PCI clk</b>	Choose Disabled (default) or Enabled. The clock generator will turn off the DIMM clock if this slot is empty.
<b>Spread Spectrum</b>	Choose Disabled (default) or Enabled. This function is designed to EMI test only.
<b>CPU Host Clock (CPU/ PCI)</b>	Select the CPU Host Clock. The choice: default, 66/33MHz, 75/37MHz, 83/41MHz, 124/31MHz, 133/33MHz, 140/35MHz, 150/37MHz.
<b>Current System Temp.</b>	Shows the temperature of the system.
<b>Current CPU1/2 Temperature</b>	Shows temperature of the CPU.
<b>Current CPUFAN1/2/3 Speed</b>	Shows current speed of the FAN. The fan must provide rotary pulse. (Normally these types of fan have a three-wire connector.)
<b>Voltage</b>	Shows power supply actual voltage value.

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## INTEGRATED PERIPHERALS

Integrated Peripherals option changes the values of the chipset registers. These registers control system options in the computer.

Run the Integrated Peripherals as follows:

1. Choose "INTEGRATED PERIPHERALS" from the Main Menu and a screen with a list of options will appear.
2. Use one of the arrow keys to move between options and modify the selected options by using PgUp/PgDn/+/- keys.

ROM PCI/ISA BIOS (2A6LGSNI)  
INTEGRATED PERIPHERALS  
AWARD SOFTWARE, INC.

<p>OnChip IDE Channel0 : Enabled                      OnChip IDE Channel1 : Enabled                      IDE Prefetch Mode : Enabled                      Primary Master PIO : Auto                      Primary Slave PIO : Auto                      Secondary Master PIO : Auto                      Secondary Slave PIO : Auto                      Primary Master UDMA : Auto                      Primary Slave UDMA : Auto                      Secondary Master UDMA : Auto                      Secondary Slave UDMA : Auto                      Init Display First : PCI Slot                      KBC input clock : 8MHz                      Onboard FDC Controller : Enabled                      Onboard Serial Port 1 : 3F8/IRQ4                      Onboard Serial Port 2 : 2F8/IRQ3                      UART Mode Select : Standard                      UART2 Duplex Mode : Half                      RxD, TxD Active : Lo, Lo                      IR Transmission Delay : Disabled</p>	<p>Onboard Parallel Port : 378/IRQ7                      Parallel Port Mode : ECP/EPP                      ECP Use DMA : 3                      EPP Mode Select : EPP1.7</p>
<p>ESC : Quit            ↑ ↓ → ← : Select Item                      F1 : Help            PU/PD/+/- : Modify                      F5 : Old Value      (Shift)F2 : Color                      F7 : Load Setup Defaults</p>	



<p><b>OnChip IDE Channel</b> 0 / 1</p>	<p>The chipset contains a PCI IDE interface with support from two IDE channels. Select Enabled to activate the first and/or the second IDE interface. Select Disabled to deactivate an interface, if you install a primary and/or second add-on IDE interface. The choice: Enabled(default), Disabled.</p>
<p><b>IDE Prefetch Mode</b></p>	<p>Choose Enable(default), Disabled.</p>
<p><b>Primary Master/Slave PIO</b> <b>Secondary Master/Slave PIO</b></p>	<p>Choose Auto (default) or Mode 0~4. The BIOS will detect the HDD mode type automatically when you choose Auto. You need to set to a lower mode than Auto when your hard disk becomes unstable.</p>
<p><b>Primary Master/Slave UDMA</b> <b>Secondary Master/Slave UDMA</b></p>	<p>Enabled (default): Turn on the onboard IDE function. Disabled: Turn off the onboard IDE function.</p>
<p><b>Init Display First</b></p>	<p>This option allows you to decide to activate PCI Slot or AGP first. Choose PCI Slot(default), AGP.</p>
<p><b>KBC input clock</b></p>	<p>Choose 6MHz, 8MHz(default), 12MHz or 16MHz. There might be a compatible problem when it is above 8MHz.</p>
<p><b>Onboard FDC Controller</b></p>	<p>Choose Enabled (default) or Disabled. Choose Disabled when you use an ISA card with FDD function, or choose Enabled to use the onboard FDD connector.</p>
<p><b>Onboard Serial Port1</b></p>	<p>Choose Auto (default), 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3 or Disabled. Don't set port 1 &amp; 2 to the same value, except when setting at Disabled.</p>
<p><b>Onboard Serial Port2</b></p>	<p>Choose Auto (default), 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3 or Disabled.</p>

---

**UART Mode Select** Choose Standard (default), HPSIR or ASKIR.

---

**UART2 Duplex Mode** Choose Half (default) or Full.

---

**RxD, TxD Active** Choose Lo,Lo (default) / Lo,Hi / Hi,Hi / Hi,Lo.

**Note: The above 2 options won't work unless UART2 Mode HPSIR/ASKIR is selected.**

---

**IR Transmission Delay** Enabled: Enable delay when transferring data.  
Disabled (default): Disable delay when transferring data.

---

**Onboard Paralle Port** Choose the printer I/O address: 378H/IRQ7 (default), 3BCH/IRQ7, 278H/IRQ5 or Disabled.

---

**Parallel Port Mode** Choose Normal (default), ECP/EPP, SPP mode. The mode depends on the external device connected to this port.

---

**ECP Mode Use DMA** Choose DMA3 (default) or DMA1. Most sound cards use DMA1. Check with your sound card configuration to make sure that there is no conflict with this function.

**Note: This option will not be displayed unless the EPP/ECP is selected.**

**Parallel Port EPP Type**

Choose EPP1.7 (default) or EPP1.9. EPP1.9 supports hardware handshake. This setting is dependent upon your EPP device.

***Note: The above 2 options will not be displayed unless the EPP/ECP is selected.***

3. Press <ESC> and follow the screen instructions to save or disregard your setting.

## SUPERVISOR/USER PASSWORD

These two options allow you to set your system passwords. Normally, the supervisor has a higher ability to change the CMOS setup option than the user. The way to set up the passwords for both supervisor and user are as follows:

1. Choose "CHANGE PASSWORD" from the Main Menu and press <Enter>. The following message appears:

"Enter Password:"

2. The first time you run this option, enter your own password up to 8 characters and press <Enter>. The screen doesn't display the entered characters.
3. After you entered the password, the following message appears prompting you to confirm the password:

"Confirm Password:"

4. Enter the same password "exactly" as you just typed again to confirm the password and press <Enter>.
5. Move the cursor to Save & Exit Setup to save the password.
6. If you need to delete the password you entered before, choose the Supervisor Password and press <Enter>. It will delete the password that you had before.
7. Move the cursor to Save & Exit Setup to save the option you did, otherwise the old password will still be there the next time you turn your machine on.
8. Press <ESC> to exit to the Main Menu.

**Note:** *If you forget or lose the password, the only way to access the system is to clear the CMOS RAM by setting JBAT1. All setup information will be lost and back to default setting. You need to run the BIOS setup program and re-define all settings again.*

## IDE HDD AUTO DETECTION

IDE HDD Auto Detection detects the parameters of an IDE Hard Disk drive and automatically enters them to the Standard CMOS Setup screen.

The screen will ask you to select a specific Hard Disk for Primary Master after you selected this option. If you accept a Hard Disk detected by the BIOS, you can enter “Y” to confirm and then press <Enter> to check next Hard Disk. This function allows you to check four Hard Disks and you may press the <ESC> after the <Enter> to skip this function and go back to the Main Menu.

## SAVE & EXIT SETUP

Save & Exit Setup allows you to save all modifications you have specified into the CMOS memory. Highlight this option on the Main Menu and the following message appears:

SAVE to CMOS and EXIT (Y/N)? Y

Press <Enter> key to save the configuration changes.

## EXIT WITHOUT SAVING

Exit Without Saving allows you to exit the Setup utility without saving the modifications that you have specified. Highlight this option on the Main Menu and following message appears:

Quit Without Saving (Y/N)? N

You may change the prompt to “Y” and press the <Enter> key to leave this option.

## **APPENDIX A**

### **FLASH MEMORY UPDATE INSTALLATION**

1. Download BIOS files and flash utility from your board vendor. They are: awdfash.exe and .bin file.
2. Copy them to bootable diskette and boot from diskette.
3. The diskette cannot include memory manager e.g. emm386.exe, qemm and himem.sys, otherwise there will appear an error message "insufficient memory".
4. Type "awdfash filename(XXXX.bin)".
5. Next screen will ask you save current bios to file or not? Depend on your diskette capacity, choose Y or N for this option.
6. Then screen ask you programming the flash memory now? type Y for this option.
7. Programming finish, utility will ask you reboot system.
8. Reset system and press DEL key enter bios setup screen.
9. Select LOAD SETUP DEFAULTS, press ENTER, press Y, press F10, press Y
10. Finish update procedure.

## APPENDIX B DRIVER INSTALLATION


If you are using **Windows 98 SE**, you do not need to install the **4-in-1 driver** as the **IRQ Routing Driver** and the **ACPI Registry** are already incorporated into the operating system. Users with **Windows 98 SE** may update the **IDE Busmaster** and **AGP drivers** by installing them individually.

### Installation :

1. Put the CD into your CD-ROM.
2. There appears a welcome window.  
(If doesn't, it means that your CD-ROM auto-run function does not enable, but you still can browser the CD via Windows Explorer and change the directory to where your CD-ROM directory is. Then run the **autorun.exe**)
3. Select "**MP-6VIP-B**".
4. Select "**VIA Service Pack 4**".
5. Select "**Installation**".
6. Then the program will automatically setup all drivers your system needs.
7. Finally, the system will re-boot.

## APPENDIX C THE USAGE OF RT2

### ■ Thermal Sensor Connector

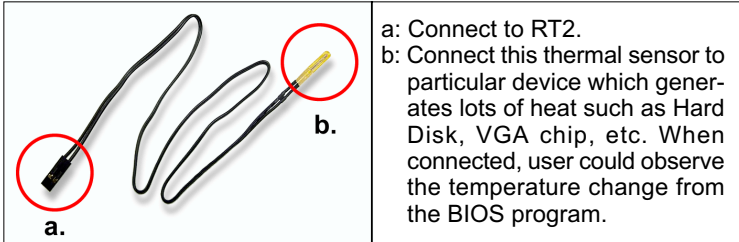

### ■ VIA Hardware Monitor Setup

1. Make sure that the CD is in the CD-ROM.
2. There will appear a welcome window, please use the mouse to choose "**MP-6VIP-B**" item.  
(If not, that means user's CD-ROM autorun function is disabled, but user could still install the program via Windows Explorer.)
3. Choose "**Super-Cops III**" item, then choose "**Installation Hardware Monitor**" item.
4. The setup program will install Hardware Monitor software automatically.