

MAINBOARD

Installation Guide

Rev: 1.00H

Date: August - 99

- * All other product names are trademarks or copyrights of their respective owners.
- * Specifications and information contained in this manual are subject to change without notice.

Table of Contents

INTRODUCTION	3
Product Description	3
Features & Specifications	4
Package Checklist.....	5
Board Level Feature.....	6
Comprehensive Mainboard View	8
INSTALLATION	9
Installing the CPU	9
Setting the Jumpers	10
Connections.....	14
Installing an AMR Card	24
Installing an AGP Card	25
Installing the Memory Modules (DIMM).....	26
Installing the Support Drivers and Utilities.....	27
SOFTWARE SUPPORT	29
Mainboard BIOS	29
Flash BIOS Programming Utility.....	30
Symbios SCSI Configuration Utility	31
DMI Utility.....	31

INTRODUCTION

Product Description

Designed as a flexible, high-performance and cost-effective solution for System Integrators and End Users alike, this mainboard provides the power and expandability to meet the requirements of the most advanced operating systems and software applications.

This mainboard is a high performance Pentium ®-based (FSB 100MHz) system board that utilizes the VIA Apollo MVP3 AGPset on ATX Platform. By incorporating such advanced features as AMR, AC97 audio, Super I/O, Ultra DMA/66 Bus Mastering IDE, Universal Serial Bus (USB) and Hardware Monitoring onto the mainboard, optimum system performance is assured and system design and implementation is simplified.

Fully “Plug & Play” compatible via an Award BIOS, this mainboard facilitates easy system configuration and peripheral setup. Also, the Award BIOS supports ACPI Readiness and is compatible with the PC’98 specification. This mainboard is the ideal foundation for high-end computer systems.

INTRODUCTION

Features & Specifications

Processor	ZIF socket 7 support AMD® K6 / K6-2 / K6-III up to 450 MHz, Cyrix® MIII up to PR466, INTEL® Pentium MMX up to 233 MHz
Chipset	VIA ® Apollo MVP3 AGPset
BIOS	Award ® BIOS, support DMI, Plug-and-Play, ACPI, Boot from CD-ROM, LS-120 120MB F.D.D., ZIP Devices Support Symbios® SCSI BIOS Anti-virus BIOS for prevention against boot-virus
System Memory	3×168-pin DIMM Sockets up to 384 MB SDRAM Memory Capacity Support 8/16/32/64/128 MB Memory Module ECC Supported
On-board I/O Features	1×Floppy Port (up to 2.88 MB) 2×USB ports 1×Parallel Port (EPP, ECP Port) 1×IrDA TX/RX Header 2×Serial Port (16550 Fast UART Compatible) 1×MIDI/game port 1×Audio Jacks: Line Out, Line In, and Mic. In
Advanced Features	1. AC97 Audio on board 2. Wake-up on LAN 3. Modem Ring-in Remote Power on 4. Hardware Monitoring (Fan, Temperature, Voltage) 5. Xstore Pro IDE Bus Master Software Driver (*) 6. Anti-Virus PC-Cillin Software (*) 7. Supports AMR for MC97 Modem upgrade
PCI Bus Master IDE	2×UltraDMA/66PCI Bus Master IDE Ports support up to 66MB/Sec
Power Connector	3V, 5V and 12V 20-pin ATX 20-pin Power Connector
Expansion Slots	1 AMR Slot, 1 AGP Slot, 5×32-bit PCI Slots, 1×16-bit ISA Slot
Switching VR	Switching Voltage Regulator to support 1.3V to 3.5V
Form Factor	ATX Size (7.8" x 12" or 197mm x 305mm)

Remark:

The **XStore Pro IDE Driver** enhances memory management by working with the Windows 95/98 operating system, resulting in higher system performance by implementing "read-ahead caching after seeking". This is especially effective with the large block sizes of modern hard disks.

PC-cillin anti-virus software provides a powerful defense against viruses to protect data integration.


Package Checklist

Your mainboard package should include the items listed below. Damaged or missing items should be reported to your vendor.

- The mainboard
- Floppy disk ribbon cable
- IDE ribbon cable
- This Installation Guide
- BIOS, Driver & Utility Guide
- CD-ROM containing the following support software:
(The latest drivers can always be found at their respective web sites.)
 - VIA® PCI Bridge driver,
 - VIA VxD driver,
 - VIA PCI Mini-port driver
<http://www.via.com.tw/drivers>
 - Support software for updating the FLASH BIOS
 - HighPoint® XStore Pro IDE Bus Master
<http://www.highpoint-tech.com>
 - Trend ® PC-cillin Anti-Virus software
<http://www.antivirus.com>

INTRODUCTION

Board Level Feature

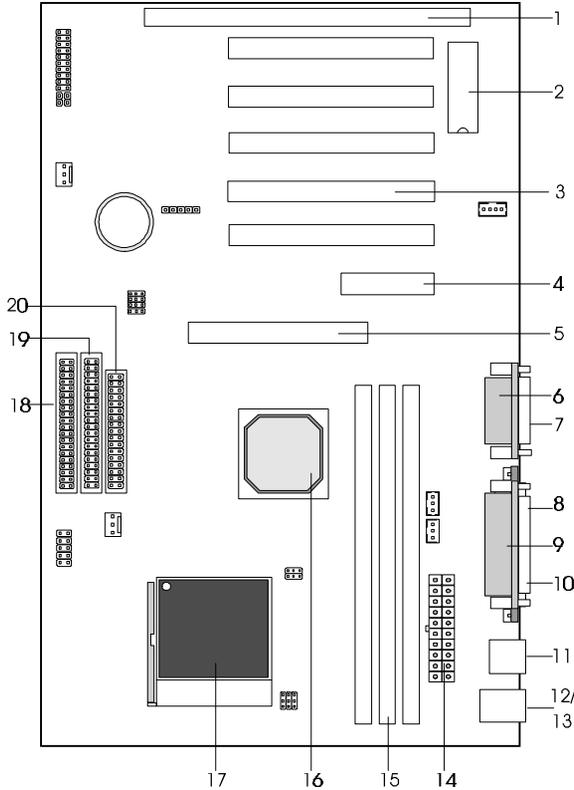


- | | |
|--------------------|--------------------------------------|
| 1. ISA slot | 11. USB connectors |
| 2. Mainboard BIOS | 12. PS/2 mouse connector (top) |
| 3. PCI slots | 13. PS/2 keyboard connector (bottom) |
| 4. AMR Slot | 14. Power connector |
| 5. AGP Slot | 15. DIMM sockets |
| 6. MIDI/Game port | 16. VIA® Apollo MVP3 AGPset |
| 7. Audio port | 17. CPU socket (Socket 7) |
| 8. COM2 connector | 18. Secondary IDE connector |
| 9. Printer port | 19. Primary IDE connector |
| 10. COM1 connector | 20. Floppy connector |

* Board Size: ATX 305 mm x 197 mm (12" x 7.8")

1. **ISA Slot:** (1) 16-bit ISA slot.
2. **Mainboard BIOS:** Award BIOS supporting ACPI, “Plug and Play”, DMI, on screen setup for Enhanced IDE and Multi-I/O. The BIOS is FLASH Upgradeable via the AWDFLASH Utility.
3. **PCI Slots:** (5) 32-bit PCI slots are provided.
4. **AMR Slot:** The Audio Modem Riser is a new standard interface for cost-effective AMR AC97/MC97 audio/modem cards.
5. **AGP Slot:** Accelerated Graphics Port for high performance graphics capabilities, especially 3D.
6. **MIDI/Game Port:** 15-pin female MIDI/Joystick connector.
7. **Audio Port:** Three 1/8” female jacks for Line Out, Line In and MIC.
8. **COM2 Connector:** High-speed UART compatible serial port. COM2 can be directed to the Infrared Module for wireless connection capability.
9. **Printer Port:** EPP and ECP compatible 25-pin D-Sub parallel port.
10. **COM1 Connector:** High-speed UART compatible serial port.
11. **USB Connectors:** These connectors permit the connection of two USB peripheral devices directly to the port without an external hub.
12. **PS/2 Mouse Connector:** Supports PS/2 style mice.
13. **PS/2 Keyboard Connector:** Supports PS/2 style keyboards.
14. **Power Connector:** 20-Pin ATX Power Connector.
15. **DIMM Sockets:** (3) 168-pin DIMM sockets are provided to support a maximum RAM memory capacity of 384 MB. DIMM types of 3.3 Volt true SDRAM is supported and automatically detected by the BIOS.
16. **VIA® Apollo MVP3 AGPset:** Supports Socket 7 CPUs, UltraDMA/66 and AGP 2x.
17. **CPU Socket:** ZIF Socket 7 for AMD® K6/K6-2/K6-III up to 450 MHz, Cyrix® MII up to PR466 and Intel® Pentium MMX up to 233 MHz.
18. **Secondary IDE Connector:** Connector for second IDE channel.
19. **Primary IDE Connector:** Connector for first IDE channel. The on-board PCI Bus Mastering IDE controller features support UltraDMA/66 for faster data transfer rates. (2) Connectors are provided for support of up to (4) IDE devices on two channels. ATAPI Tape Drives and CD-ROMs are also supported.
20. **Floppy Connector:** Built-in floppy controller supports (2) 5.25" or 3.5" (1.44MB or 2.88MB) floppy drives.

INTRODUCTION

Comprehensive Mainboard View

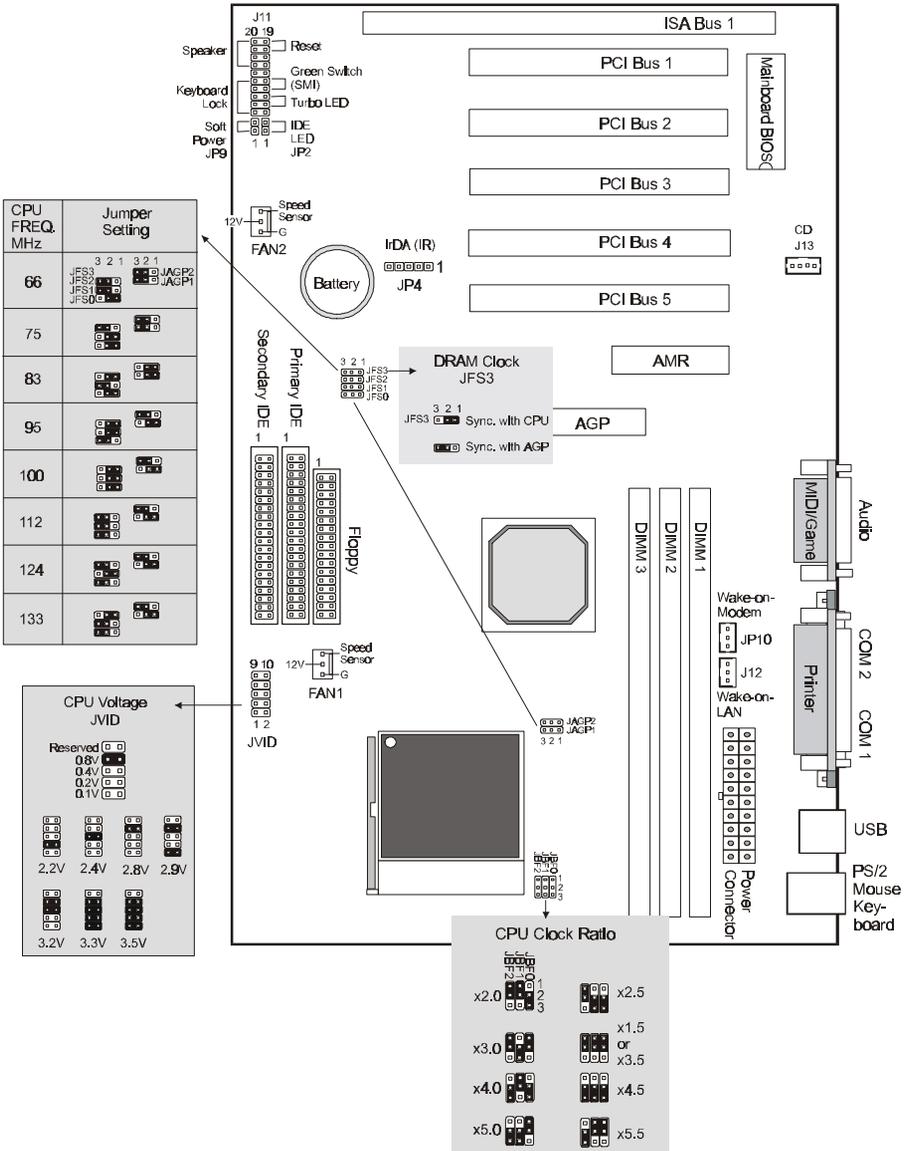

INSTALLATION

Static Precautions


Static electricity can be a serious danger to the electronic components on this mainboard. To avoid damage caused by electrostatic discharge, observe the following precautions:

- ✓ Don't remove the mainboard from its anti-static packaging until you are ready to install it into a computer case. Also, handle add-in cards and modules by the edges or mounting bracket.
- ✓ Before you handle the mainboard in any way, touch a grounded, anti-static surface, such as an unpainted portion of the system chassis, for a few seconds to discharge any built-up static electricity.

Installing the CPU

✓ **WARNING:** Use of a CPU Cooling Fan is required to prevent CPU from overheating. The Fan should be installed first before inserting the CPU into its socket.


1. Locate the ZIF (Zero Insertion Force) Socket 7.
2. First open the socket by pulling the lever sideways, then upwards. Notice how the lever locks in place when pressed all the way down.
3. The CPU must be inserted with the correct orientation. One corner of the CPU has a "Notch" and looks different than the other three. This corner is also missing a pin unlike the other three and is marked with a white dot on top of the CPU. Align this corner towards the end of the lever as shown in the figure here. Insert the CPU, press it down, and close the lever until it locks into place.

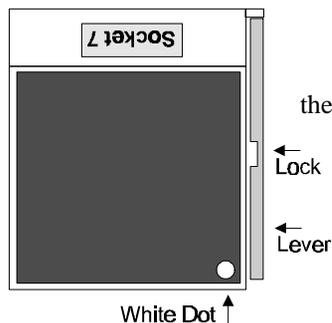

INSTALLATION


Setting the Jumpers

Jumpers are used on this mainboard to select various settings and features. A 2-pin jumper has two settings: Open and Short (or Closed). The jumper is closed by placing the Jumper Cap across the two pins, thereby connecting them. 3-pin jumpers can be set to pins 1-2 or 2-3 connected. Pin-1 is labeled on the circuit board.

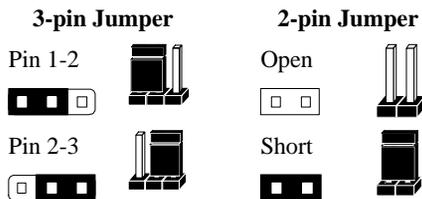

CPU Voltage Selection Jumper (JVID)

Locate Jumper JVID on the mainboard. Set this jumper in accordance with your specific CPU type.

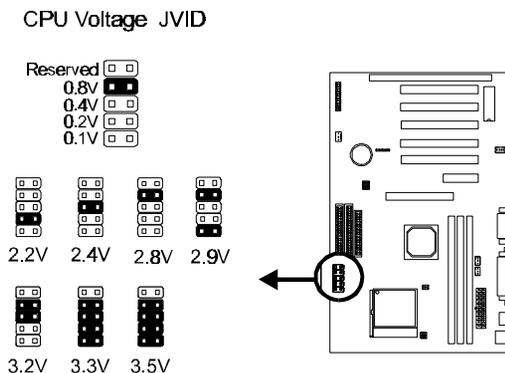

- If you are uncertain about the speed or voltage requirements of your particular CPU, you should obtain Technical Documentation from the manufacturer. Such information is available via the Intel, Cyrix and AMD WWW sites.

CPU Clock Selection Jumper (JBF0-2, JFS0-2 and JAGP1-2)

Find the Jumper Blocks labeled JBF0-2, JFS0-2 and JAGP1-2. Set the jumpers according to your particular CPU type (a list of currently available CPU settings is provided on the following pages).

DRAM Clock Selection Jumper (JFS3)

If the speed of the SDRAM is slower than the speed of the CPU, it is recommended to set this jumper to the “*Synchronized with AGP*” setting to ensure stability. For example, if you are using non-PC100 SDRAM with a CPU of 100MHz clocked system bus, you should set this jumper to “Synchronized with AGP”.

CPU FREQ. MHz	Jumper Setting																																								
66	<table border="0"> <tr> <td></td> <td>3</td> <td>2</td> <td>1</td> <td>3</td> <td>2</td> <td>1</td> <td></td> </tr> <tr> <td>JFS3</td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td>JAGP2</td> </tr> <tr> <td>JFS2</td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td>JAGP1</td> </tr> <tr> <td>JFS1</td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td></td> <td></td> <td></td> <td></td> </tr> <tr> <td>JFS0</td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td><input type="checkbox"/></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>		3	2	1	3	2	1		JFS3	<input type="checkbox"/>	JAGP2	JFS2	<input type="checkbox"/>	JAGP1	JFS1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>					JFS0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>														
	3	2	1	3	2	1																																			
JFS3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	JAGP2																																		
JFS2	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	JAGP1																																		
JFS1	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																						
JFS0	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																						
75	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
83	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
95	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
100	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
112	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
124	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		
133	<table border="0"> <tr> <td><input type="checkbox"/></td> </tr> </table>	<input type="checkbox"/>																																							
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>																																		

DRAM Clock
JFS3

	3	2	1	
JFS3	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Sync. with CPU
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	Sync. with AGP

CPU Clock Ratio

2.0	<input type="checkbox"/>	2.5						
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>							
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>				

INSTALLATION

Jumper setting for CPU:

<u>CPU Model</u>	<u>CPU Clock</u>	<u>Bus Clock (JFS0-3)</u>	<u>Ratio (JBF0-2)</u>
AMD-K6-III-450MHz	450MHz	100MHz	×4.5
AMD-K6-III-400MHz	400MHz	100MHz	×4.0
AMD-K6-2-500MHz	500MHz	100MHz	×5.0
AMD-K6-2-450MHz	450MHz	100MHz	×4.5
AMD-K6-2-400MHz	400MHz	100MHz	×4.0
AMD-K6-2-350MHz	350MHz	100MHz	×3.5
AMD-K6-2-300MHz	300MHz	100MHz	×3.0
AMD-K6-2-266MHz	250MHz	100MHz	×2.5
AMD-K6-2-380MHz	380MHz	95MHz	×4.0
AMD-K6-2-333MHz	333MHz	95MHz	×3.5
AMD-K6-300MHz	300MHz	66MHz	×4.5
AMD-K6-266MHz	266MHz	66MHz	×4.0
AMD-K6-233MHz	233MHz	66MHz	×3.5
AMD-K6-200MHz	200MHz	66MHz	×3.0
AMD-K6-166MHz	166MHz	66MHz	×2.5
AMD-K5-PR200		66MHz	×3.0
AMD-K5-PR166		66MHz	×2.5
AMD-K5-PR133		66MHz	×1.5
Intel Pentium MMX-233	233MHz	66MHz	×3.5
Intel Pentium MMX-200	200MHz	66MHz	×3.0
Intel Pentium MMX-166	166MHz	66MHz	×2.5
Intel Pentium -200	200MHz	66MHz	×3.0
Intel Pentium -166	166MHz	66MHz	×2.5
Intel Pentium -133	133MHz	66MHz	×2.0
Cyrix MII PR366		100MHz	×2.5
Cyrix MII PR333		83MHz	×3.0
Cyrix MII PR300		66MHz	×3.5
Cyrix MII PR266		83MHz	×2.5
Cyrix 6×86MX PR233 (M2)		75MHz	×2.5
Cyrix 6×86MX PR200 (M2)		75MHz	×2.0
Cyrix 6×86MX PR200 (M2)		100MHz	×5.0
Cyrix 6×86MX PR166 (M2)		66MHz	×2.0
Cyrix 6×86 P200+		75MHz	×2.0
Cyrix 6×86 P166+		66MHz	×2.0

INSTALLATION

IDT WinChip 2-300		100MHz	×2.5
IDT WinChip 2-266		100MHz	×5.0
IDT WinChip 2-233	233MHz	66MHz	×3.5
IDT C6-225	225MHz	75MHz	×3.0
IDT C6-200	200MHz	66MHz	×3.0
IDT C6-150	150MHz	75MHz	×2.0
RISE MP6 (PR266)		100MHz	×2.0
RISE MP6 (PR233)		95MHz	×2.0
RISE MP6 (PR166)		83MHz	×2.0


- The Internal (Core) frequency corresponds to the number marked on the CPU. The External Frequency when multiplied with the Ratio gives the CPU's internal frequency.
- This table lists the current CPU available. New settings may be available for new CPU products. Refer to your CPU specifications for more information.

INSTALLATION

Connections


Cooling Fan Power Connector

These connectors are small 3-pin Header Connectors that provide 12-Volt power for CPU and chassis cooling fans. Plug in the fan cable to the connector. Pin-2 corresponds to the RED power lead as shown:

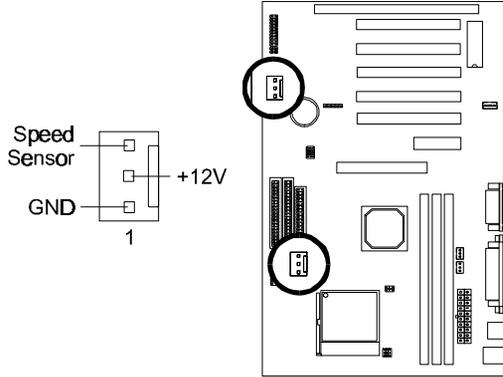


Power Supply Connector

This mainboard features an ATX-style Power Supply Connector. This connector is keyed to prevent connection in the wrong direction. Line up the locking mechanism on the connector from the Power Supply with the tab on the mainboard connector. Press down until the two connectors are locked.

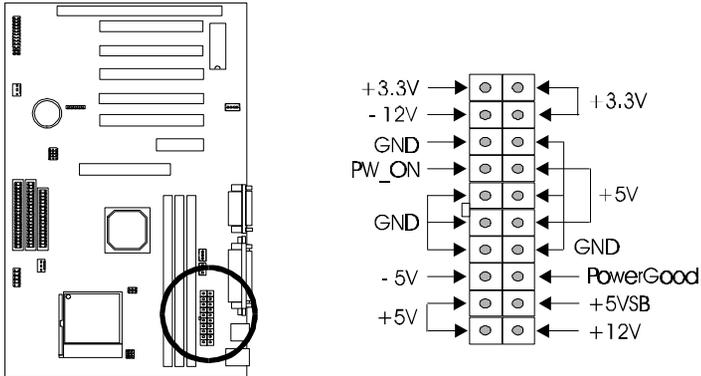

System Function Connector Block (J11)

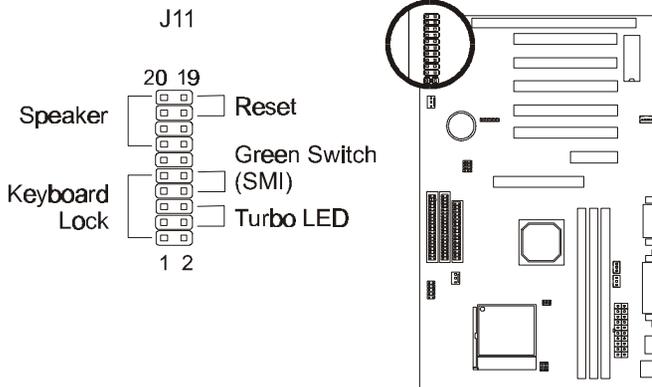

Pins [3 & 5] Turbo LED lead – The Turbo function is not supported by this mainboard. Therefore, the Turbo LED will always remain lit as long as the system power is on.

Pins [7 & 9] SMI suspend switch lead - If your system’s case has a suspend switch, hook the lead from the switch to pins 7 & 9. A suspend switch is used to save electricity by putting the system into a suspend mode when the computer is not being used. For this switch to be functional, “*Suspend Mode*” must first be enabled in the **Power Management Setup** in the BIOS Setup utility.

Pins [17 & 19] Reset switch lead - Connects to the Reset Switch lead from the system’s case. The reset switch is used to “cold-boot” the system without actually turning off the power, reducing wear and tear on the power supply.

Pins [2, 6, 8 & 10] Keyboard lock switch lead – Pins 2 & 6 connect to the power LED from the system’s case, Pins 8 and 10 connect to the case-mounted keylock switch.

Pins [14 & 20] Speaker connector - Connects to the Speaker lead from the system’s case.

INSTALLATION

IDE Activity LED (JP2)


Hook the IDE LED lead to this connector, with the RED lead corresponding to Pin-1.

Soft Power Switch (JP9)

Connects to the Power Switch featured on ATX case designs. This switch must be hooked up before the system can be powered on, unlike traditional “Baby-AT” designs where the power switch is located on the Power Supply itself.




Note: Under the following two conditions, you have to press and hold the switch for more than 4 seconds to power off your system, regardless of *the “Soft-Off by PWRBTN”* setting in the **Power Management Setup** of the BIOS.

- *Shortly after the system is powered on, when the BIOS message is not yet appear.*
- *When CPU hangs.*

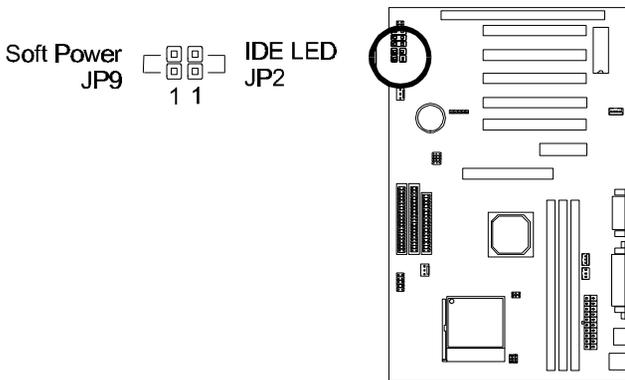

IrDA-Compliant Infrared Module Connector (JP4)

The IrDA connector bracket hooks directly to this connector on the mainboard. This connector provides support for the optional wireless transmitting and receiving infrared module. You must first configure through the BIOS setup where UART2 is directed, COM2 or IrDA.

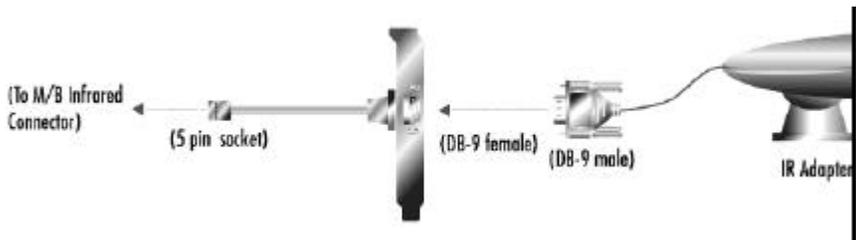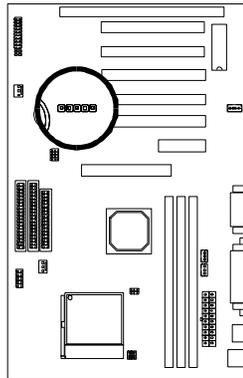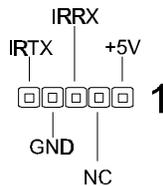

INSTALLATION

Wake-up On LAN Connector (J12)


The Wake-up On LAN function will allow the network to wake up a Soft Power Down (Soft-Off) PC. However, if your system is in the Suspend mode, you can wake-up the system only through an IRQ or DMA interrupt. To use the Wake-up On LAN function, you must enable the “**Power On By Ring/LAN**” field in the **Power Management Setup** of the Award BIOS. Connect the cable that comes with your LAN card to this connector on the system board. Refer to the add-in card’s manual for details.

Note: Your LAN card must support Magic Packet in order to use the Wake-up On LAN function.

Wake-on-Modem Function (JP10)

The Wake-on-Ring function allows the modem to remotely power on the system. Install an external modem (normally to COM2) and enable “**Power On by Ring/LAN**” function in the **Power Management Setup** from the BIOS.

For the function to work for an *internal modem card*, you must also connect the Wake-on-Ring cable on the modem card to the *Wake-on-Ring function connector* on the mainboard.

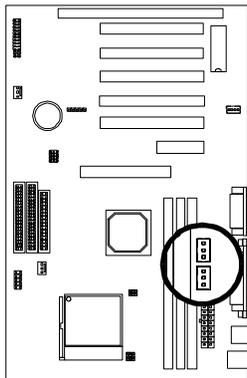


Wake-on-Modem JP10

Wake-on-LAN J12

Serial and Parallel Ports

A 25-pin D-Sub header is provided on the back panel for a multi-mode bi-directional parallel port.

Two 9-pin D-Sub headers are also provided on the back panel for Serial ports.

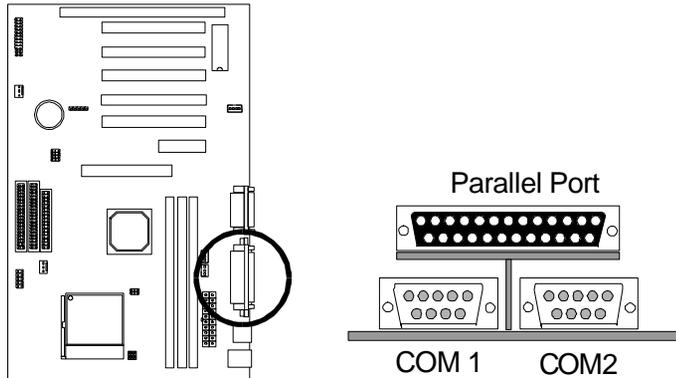


INSTALLATION

USB Connectors

These two connectors permit connection of two USB peripheral devices directly to the system without an external hub.


PS/2 Keyboard and Mouse Connectors

These two connectors are located on the back panel of the mainboard.

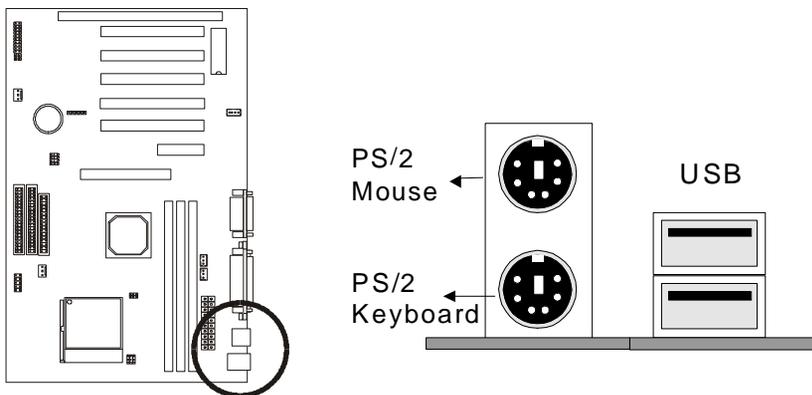

Floppy Drives

The on-board floppy controller supports (2) floppy disk drives with the floppy ribbon cable provided. Make sure the RED stripe on the ribbon cable is oriented towards Pin-1. Notice the “twist” between the sets of connectors on the floppy cable. The floppy drive “A” position is at the END of the cable, whereas floppy drive “B” is hooked to one of the connectors on the other side of the twist. The cable provides both “Edge” and “Pin” connectors for both the A and B positions to match the connector on your floppy drives.

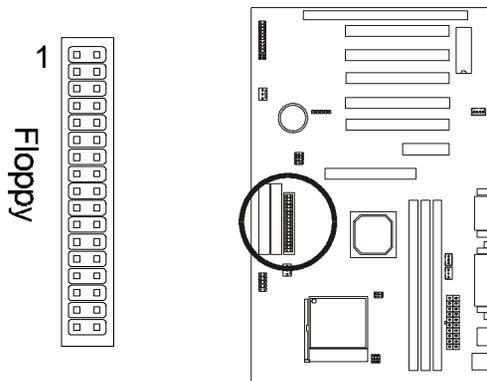

INSTALLATION


IDE Hard Drives and CD-ROMs

The on-board Enhanced IDE controller can support up to (4) IDE hard drives or other ATAPI devices, such as CD-ROMs. This controller, as with all Enhanced IDE controllers, consists of both Primary and Secondary ports. Each port has an associated connector and cable which can support up to (2) ATAPI devices each.

All IDE devices have jumpers which allow the user to configure the device as either “Master” or “Slave”. A Master device is one that is ALONE on the IDE cable, whereas a Slave device is installed as a SECOND device on the same cable. Keep in mind that the Master device will appear before the Slave device in the CMOS Setup, as well as the Operating System software. *Refer to the device documentation for jumper settings.

The Secondary IDE port can be used for up to (2) additional ATAPI devices. Normally it’s recommended that you connect your first hard drive to the Primary port, and the first CD-ROM to the Secondary.

Make sure to align the RED stripe on the ribbon cable with Pin-1 on the mainboard IDE connector. On most hard drives and CD-ROMs, the RED stripe should be oriented towards the power connector of the device.

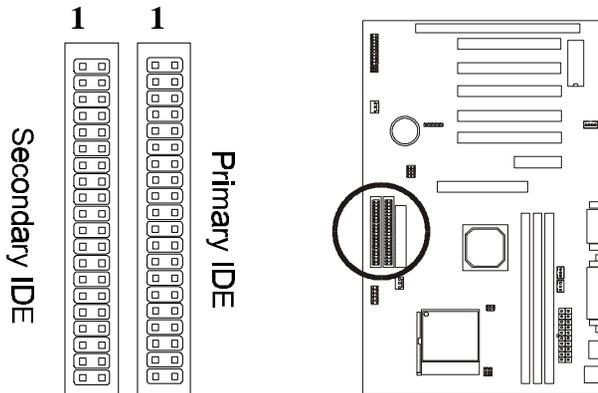


MIDI/Game Port

You may plug a joystick or game pad to this 15-pin female connector for game playing, or connect a MIDI device for playing or editing audio.

Audio Port

You can connect powered speakers or headphones to Line Out jack. Cassette players or other external audio sources can be connected to Line In jack. Plug in your microphones to MIC jack.

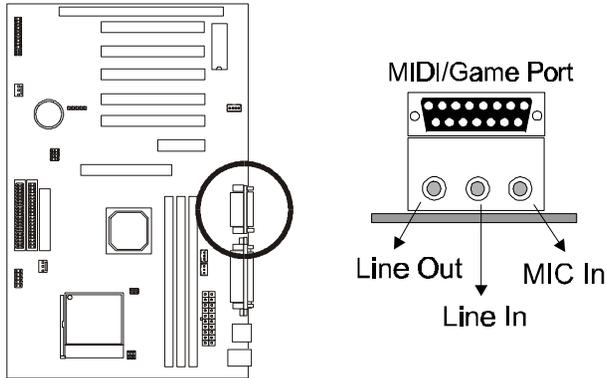

Note:


To use the onboard AC97 audio features, make sure that the “*OnChip Sound*” option in **Chipset Features Setup** of the BIOS is enabled (default).

To use the on-chip legacy SoundBlaster-compatible audio support, make sure that the “*Onboard Legacy Audio*” options in **Integrated Peripherals Setup** of the BIOS is set according to your system configuration *before driver installation*.

INSTALLATION

Audio Connectors (J13)


A CD Audio connector is available for connecting the CD-ROM drive using CD audio cables.

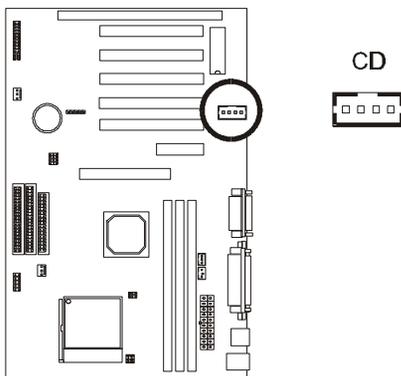

Installing an AMR Card

One AMR (Audio/Modem Riser) standard interface connector is provided for Audio Codec 97 (AC97) and/or Modem Codec 97 (MC97) cards.


- * If your AC97 and/or MC97 is coming from the AMR card, make sure the “*OnChip Sound*” and/or the “*OnChip Modem*” option in **Chipset Features Setup** of the BIOS are set to *Disabled*.

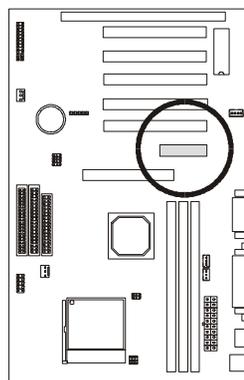

Installing an AGP Card

This mainboard provides an AGP slot to support a new generation of graphics cards with high performance graphics capability.

Note: Make sure that the AGP card is firmly seated in the AGP slot. For the card that complies with the *AGP 1.x specifications*, a slightly more force may be required to fully insert the card into the slot. For cards that comply with AGP 2.0 and later specifications, the installation should be relatively easy.

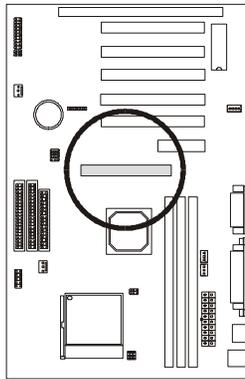


INSTALLATION

Installing the Memory Modules (DIMM)

- This mainboard has three sockets available for **168-pin DIMMs**. They can be 3.3 volt Unbuffered Synchronous DRAMs (SDRAM), 3.3 volt FPG or EDO DRAMs.
 - *To ensure reliability, it is recommended to use **PC100 SDRAM** for your 100MHz clocked SDRAM performance requirement.*
- DIMM Sizes supported: **8MB, 16MB, 32MB, 64MB and 128MB**
- A total of **(3)** DIMMs can be installed for a maximum RAM capacity of **384MB**.


To insert the DIMMs, the modules must be oriented in the correct way. Notice the notches of the DIMM. Align these notches as shown in the diagram below. Gently push the DIMM until the retainers on both sides of the socket lock the module in place.

To remove a DIMM, push the retainers outwards to release the module then pull the module out of the socket.

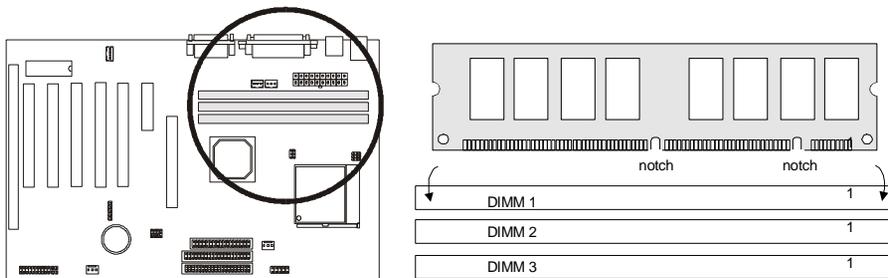

Installing the Support Drivers and Utilities

Included in your mainboard package you can find a CD-ROM containing support drivers and utilities. Just insert the CD-ROM, and from the Autorun screen, click the driver/utility that you want to install. Follow the on-screen instructions to complete the installation.

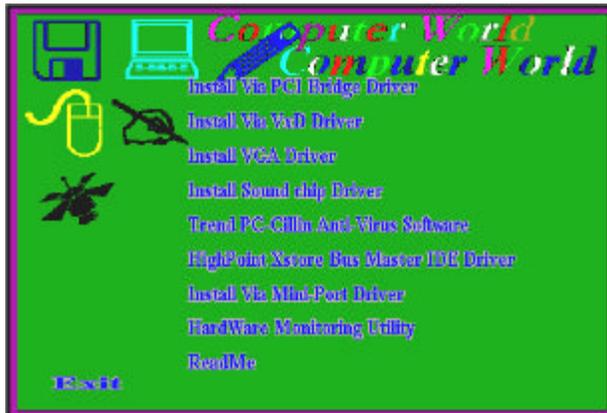

* The screen may look different under different color mode.

More utilities can be found under the “Utilities” folder of the CD-ROM.

INSTALLATION

Special Note on the Onboard Audio Features

Using the Onboard Audio Features

To use the onboard AC97 audio features, make sure that the “*OnChip Sound*” option in **Chipset Features Setup** of the BIOS is enabled (default).

To use the on-chip legacy SoundBlaster-compatible audio support, make sure that the “*Onboard Legacy Audio*” options in **Integrated Peripherals Setup** of the BIOS is set according to your system configuration *before driver installation*.

Special Note on VIA MVP4 and VGA Drivers

Before installing the AGP VGA drivers under Windows 95/98, specific software support must be included in your system first:

Windows 95

- A. Though Windows 95 OSR2.0 supports AGP, it is necessary that you first *upgrade OSR2.0 to OSR2.1 with a USB upgrade* to take full advantage of the AGP features.
- B. To access the advanced 3D features in Windows 95, you also need to first *install the Microsoft DirectX 5.0*.
- C. Then install the following VIA drivers found in the supplied CD-ROM:
 - 1) VIA PCI Bridge driver.
 - 2) VIA Bus Master driver.
 - 3) VIA VxD driver.

Make sure all the above are included in your system before you install the display driver.

Windows 98

Install VIA VxD driver found in the supplied CD-ROM before you install the display driver.

SOFTWARE SUPPORT

For detailed information, please refer to the **BIOS, Driver & Utility Guide** included in your mainboard package.

Mainboard BIOS

Shortly after the system is powered on, provided that the system is properly setup, you will see the message:

Press DEL to enter SETUP

- Press the **DEL** key to enter the Award BIOS Setup program.

The Main Menu will appear on the screen. Use the **arrow keys** to select among the items and press **<Enter>** to accept and enter the sub-menu.

ROM PCI/ISA BIOS (xxxxxxx)
CMOS SETUP UTILITY
AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	INTEGRATED PERIPHERALS
BIOS FEATURES SETUP	SUPERVISOR PASSWORD
CHIPSET FEATURES SETUP	USER PASSWORD
POWER MANAGEMENT SETUP	IDE HDD AUTO DETECTION
PNP / PCI CONFIGURATION	SAVE & EXIT SETUP
LOAD BIOS DEFAULTS	EXIT WITHOUT SAVING
LOAD SETUP DEFAULTS	
Esc : Quit	↑ ↓ → ← : Select Item
F10 : Save & Exit Setup	(Shift) F2 : Change Color


Select **LOAD SETUP DEFAULTS** for optimum system performance.

SOFTWARE SUPPORT

Flash BIOS Programming Utility

Since this mainboard features FLASH BIOS, the user can simply re-program the old BIOS using the AWDFLASH Utility (found under “Utilities” folder of the supplied CD-ROM) as follows:

1. First, boot the system with DOS or to “Safe Mode” under Windows 95. *This is the only correct way to run the AWDFLASH Utility program.*
2. Make sure the files “AWDFLASH.EXE” and the updated “BIN” file (which contains the actual BIOS code) are in the same directory.
3. Changing to the directory where the two required files exist, type: AWDFLASH and press [ENTER]. The AWDFLASH Utility Screen appears:

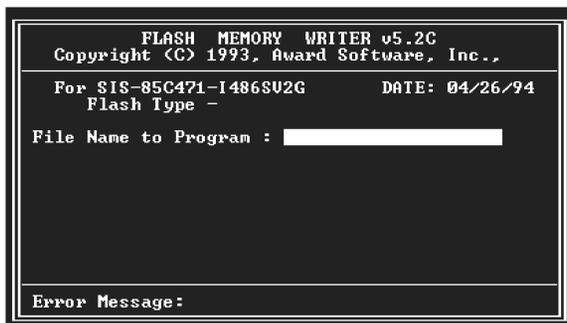

4. Type in the name of the new BIOS (.bin) file and hit [ENTER].
5. Backup the old BIOS by entering the name of the new backup file (such as “backup.bin”) and press [ENTER].
6. To begin programming, hit “y”. The Utility can be aborted at this time by hitting “n”.
7. A bar indicator will show the progress of the programming operation. After successful completion, hit the reset button or power off the computer.

Be sure to perform “**LOAD SETUP DEFAULTS**” for your new BIOS to synchronize the previous BIOS with the updated BIOS.

Symbios SCSI Configuration Utility

This mainboard features built-in Symbios SCSI BIOS. The **Symbios SCSI Configuration Utility** is a menu driven utility that allows you to view and change the default configuration settings for host adapters using Symbios 53C8XX chips.

In most cases you should not need to change the default configuration of your host adapter. You may decide to alter these default values if there is a conflict between device settings, or if you need to optimize system performance. A message appears on your computer monitor (for about 5 seconds) during boot that looks like this:

Press Ctrl-C to start Symbios Configuration Utility

If you decide to press Ctrl-C during boot, the following message appears:

Please wait, invoking Symbios Configuration Utility ...

After a brief pause, your computer will display the Main Menu of the utility.

Note: Pressing **Ctrl-A** after memory count during re-boot allows you to recover the default settings and reconfigure.

DMI Utility

This mainboard supports the **Desktop Management Interface (DMI)**, which is a new method of providing enterprise management for personal computers. The main component of DMI is the Management Information Format Database (MIF), which contains information about the computer system and its components, such as BIOS version/vendor, CPU speed/type, memory size/type, L1/L2 cache, port connectors (IDE, floppy, 2S/1P, USB, keyboard, mouse,), slots ... etc. Using DMI, remote PC management software is able to obtain various information about the system, including hardware profiles, capabilities, operational status, installation dates, and other information about the system and its components.

This DMI utility, DMICFG.EXE (found under “Utilities” folder of the supplied CD-ROM), allows you to add additional information, such as serial numbers, vendor information, and enclosure/chassis configurations, into the MIF.

FCC & DoC Compliance Statement

This device complies with Part 15 of the FCC rules, operation is subject to the following two conditions.

1. This device may not cause harmful interference and,
2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in residential installations. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interface to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television equipment reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Move the equipment away from the receiver.
- Plug the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for additional suggestions.

The FCC requires the user to be notified that any change or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the user's authority to operate such equipment. The use of shielded cables for connection of the monitor to the graphics card is required to assure compliance with FCC regulations.



27-0M0586-47