


Quick Jumper Setting Reference

JP1: Clear CMOS memory jumper

Use this 3-pin jumper to clear all the current data stored in the CMOS memory.


Function	Jumper Cap
Clear CMOS	Short pins 1-2
Normal operation	Short pins 2-3

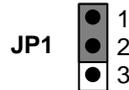

JP2: Keyboard power on jumper

Use this 3-pin jumper to enable keyboard power on with hot keys or password.


Function	Jumper Cap
Enable keyboard power on	Short pins 1-2
Disable keyboard power on	Short pins 2-3

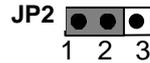

JP3: Audio enable/disable jumper

Use this 3-pin jumper to enable or disable the built-in audio system.


Function	Jumper Cap
Enable audio system	Short pins 1-2
Disable audio system	Short pins 2-3

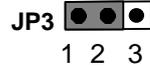

JP4: Set System Bus Frequency

Use this 3-pin jumper to set the system bus frequency. In the normal setting, the system automatically selects the correct frequency according to the kind of processor installed. In the Force 100 MHz setting, the system uses a 100 MHz system bus even if the processor is designed to operate with a 66 MHz bus.

Function	Jumper Cap
Normal operation	Short pins 1-2
Force 100 MHz	Short pins 2-3

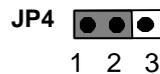

Panel Connector

The mainboard PANEL1 connector has a standard set of switch and indicator connectors that are commonly found on ATX system cases. Use the illustration below to make the correct connections to the case switches and indicators.

