

The AT31 Mainboard Manual Updated

The mainboard manual were updated since it was printed.

1). Page 1-4:

■ Easy Installation

BIOS with support for Plug and Play, auto detection of IDE hard drives, LS-120 drives, IDE ZIP drives. *The mainboard supports Windows 2000, Windows XP only.*

2). Page 2-12:


The TV-OUT bracket with cable is optional.

The two jacks on the optional TV-OUT bracket can not be used at the same time.



3). Page 2-17:

If your mainboard version is **1.3**, a conversion cable is provided for Intel spec. USB pin assignments.

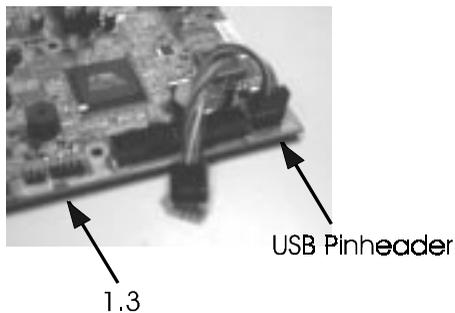

4). *Page 2-3, 2-7:*

The allowed settings of CPU/SDRAM/PCI/AGP freq. are listed below:

CPU/SDRAM/PCI/AGP Freq. Select

	J7	CPU	SDRAM	PCI	AGP
<i>(Default)</i>	OFF	100.00	100.00	33.33	66.67
	ON	133.33	133.33	33.33	66.67

(unit: MHz)

