


Universal Serial Bus Connector: USB1, USB2

The Onboard USB connector allows the system to link with USB peripheral devices. The operating system you are using, such as MS Windows 95 OSR 2.1 or USB supplement must support the USB feature.

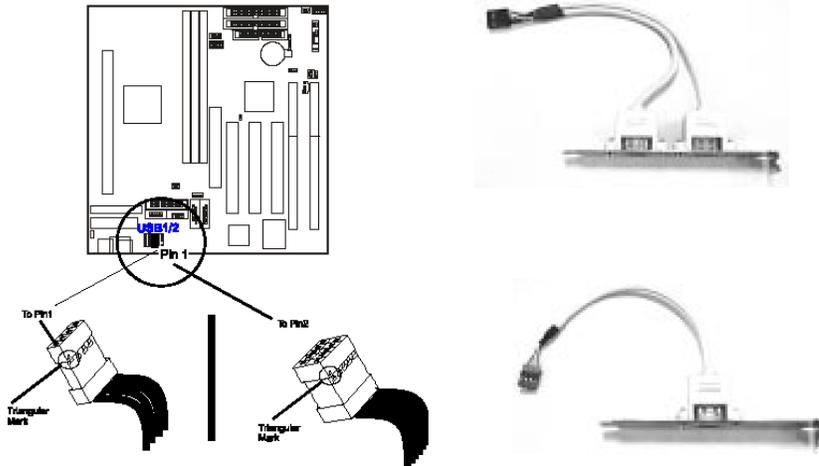

External Front Panel Universal Serial Bus Connector: USB3

This 4-pin block connector is connected to an external USB module mounted to a small opening on the system case that supports this feature.

