


SERVICE MANUAL

notebook

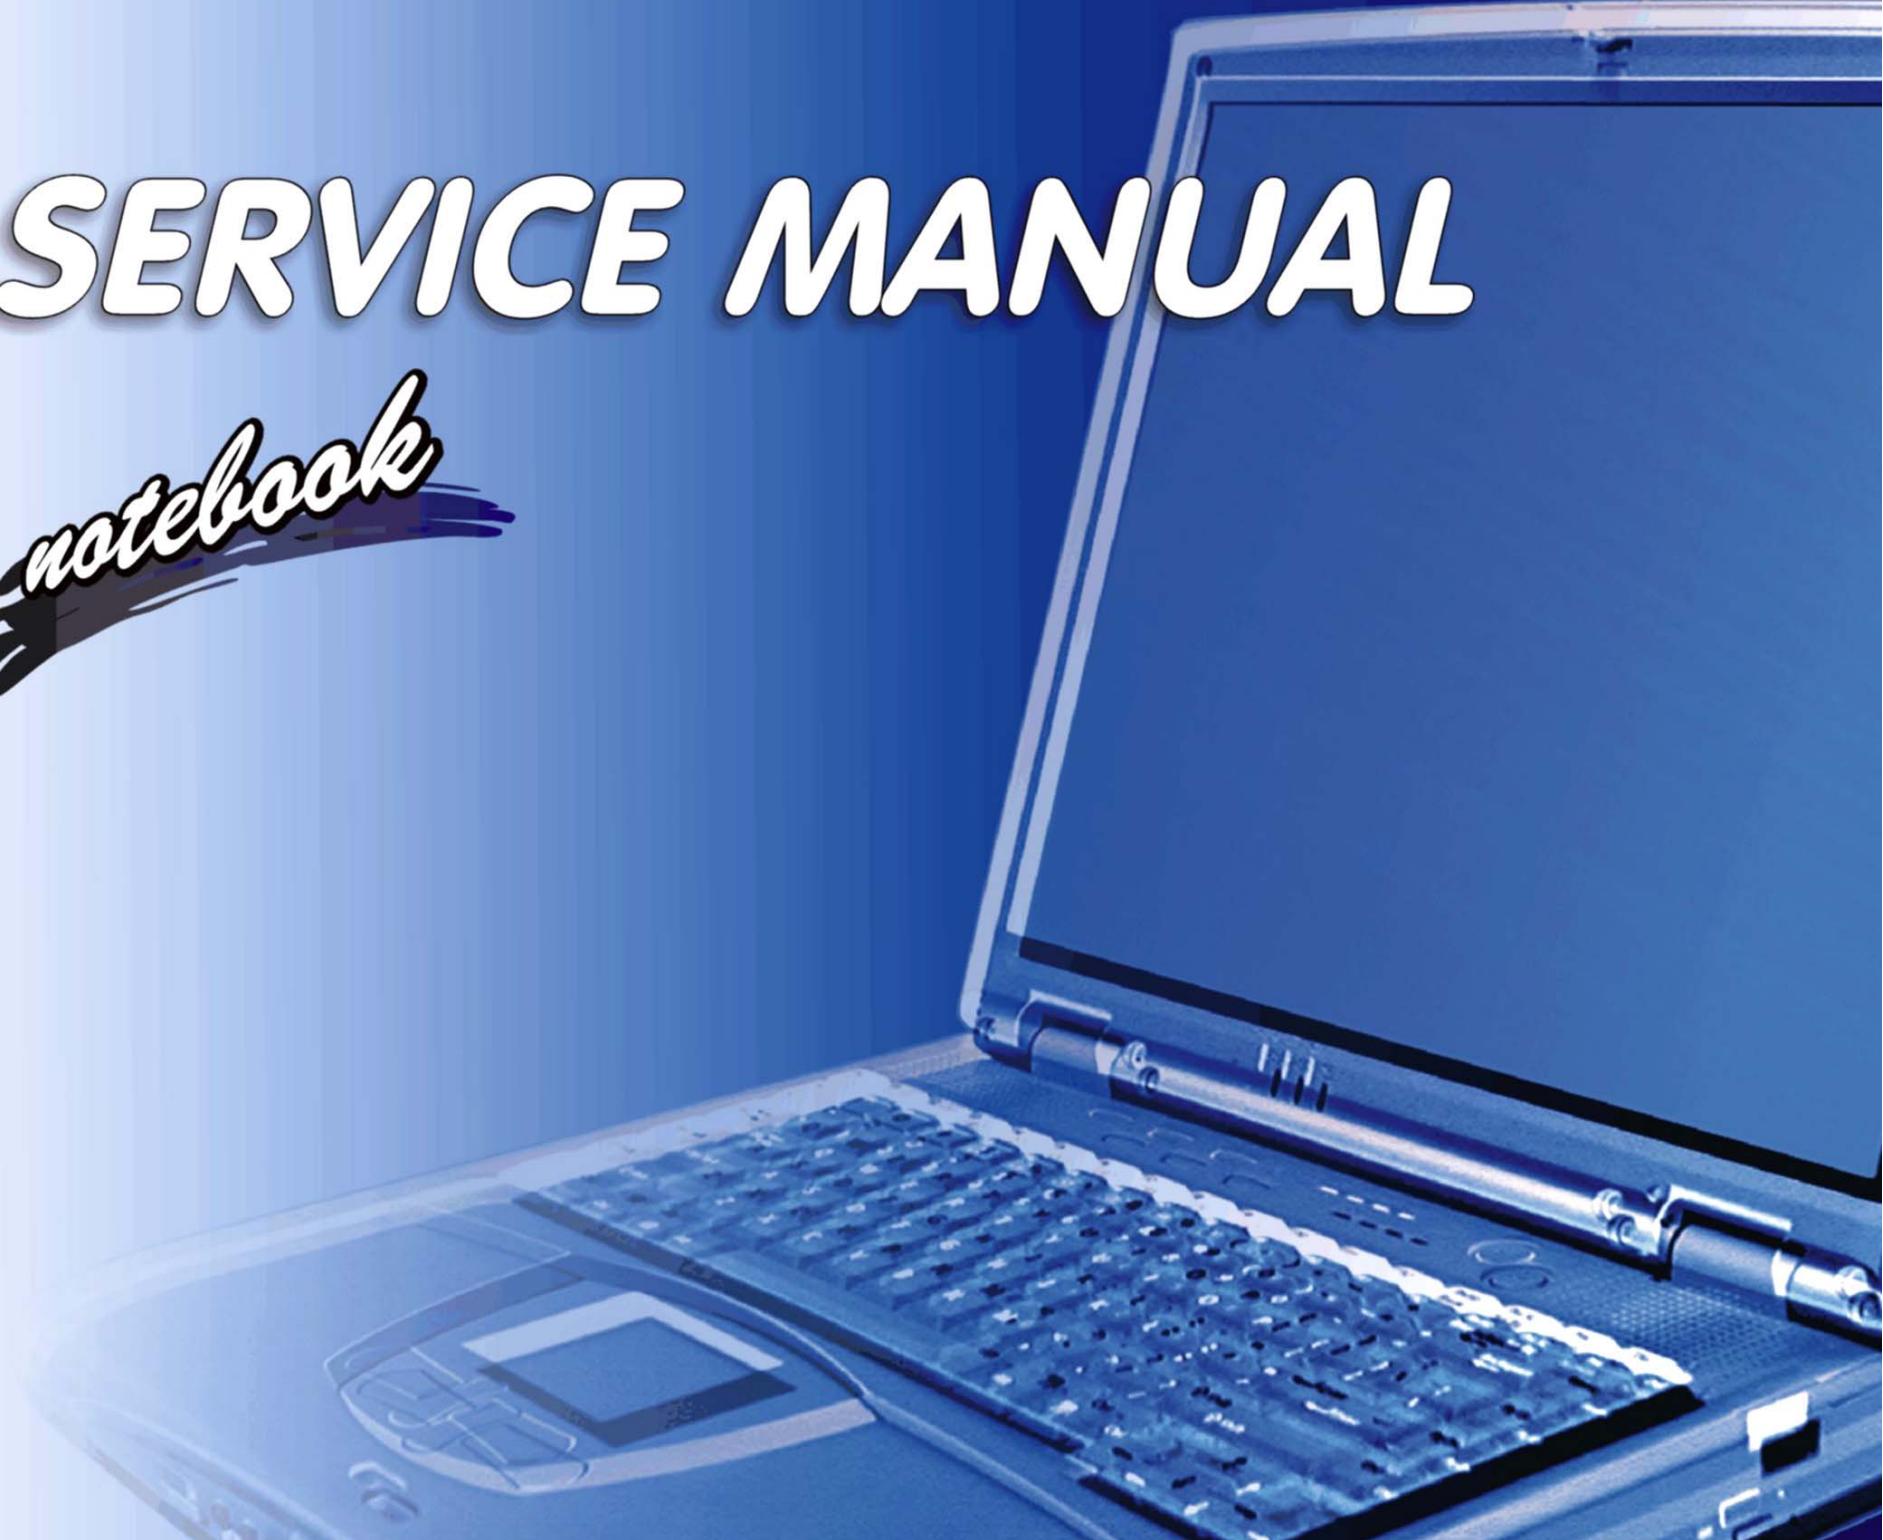

Notebook Computer
5600P/5620P/5800P/5820P
Service Manual

Notice

The company reserves the right to revise this publication or to change its contents without notice. Information contained herein is for reference only and does not constitute a commitment on the part of the manufacturer or any subsequent vendor. They assume no responsibility or liability for any errors or inaccuracies that may appear in this publication nor are they in anyway responsible for any loss or damage resulting from the use (or misuse) of this publication.

This publication and any accompanying software may not, in whole or in part, be reproduced, translated, transmitted or reduced to any machine readable form without prior consent from the vendor, manufacturer or creators of this publication, except for copies kept by the user for backup purposes.

Brand and product names mentioned in this publication may or may not be copyrights and/or registered trademarks of their respective companies. They are mentioned for identification purposes only and are not intended as an endorsement of that product or its manufacturer.

Version 1.0

May 2002

Trademarks

Intel® and **Pentium®** are registered trademarks of Intel Corporation.

Windows® is a registered trademark of Microsoft Corporation.

Other brand and product names are trademarks and./or registered trademarks of their respective companies.

About this Manual

This manual is intended for service personnel who have completed sufficient training to undertake the maintenance and inspection of personal computers.

It is organized to allow you to look up basic information for servicing and/or upgrading components of the notebook PC.

The following information is included:

Chapter 1, Introduction, provides general information about the location of system elements and their specifications.

Chapter 2, Disassembly, provides step-by-step instructions for disassembling parts and subsystems and how to upgrade elements of the system.

Appendix A, Part Lists

Appendix B, Schematic Diagrams

Appendix C, Updating the FLASH ROM BIOS

Preface

Related Documents

You may also need to consult the following manual for additional information:

User's Manual on CD

This describes the notebook PC's features and the procedures for operating the computer and its ROM-based setup program. It also describes the installation and operation of the utility programs provided with the notebook PC.

Contents

Introduction	1-1
Overview	1-1
System Specifications	1-2
Processor	1-2
Core Logic	1-2
Structure	1-2
Security	1-2
Memory	1-2
BIOS	1-2
LCD	1-2
Display	1-3
Storage	1-3
Audio	1-3
PC Card	1-3
Interface	1-4
Communication	1-4
Power Management	1-4
Power	1-5
Indicators	1-5
Environmental Spec	1-5
Physical Dimensions	1-5
Weight	1-5
Optional	1-5
External Locator - Top Views	1-6
Front View	1-7
External Locator - Right & Rear Views	1-8
External Locator - Bottom View	1-9
Mainboard Overview - Top	1-10
Key Parts	1-10

Mainboard Overview - Bottom	1-11
Key Parts	1-11
Mainboard Overview - Top	1-12
Cable Connectors	1-12
Mainboard Overview - Bottom	1-13
Cable Connectors	1-13

Disassembly 2-1

Overview	2-1
Maintenance Tools	2-2
Connections	2-2
Maintenance Precautions	2-3
Cleaning	2-3
Disassembly Steps	2-4
To remove the Battery:	2-4
To remove the Bay One Device:	2-4
To remove the Hard Disk Drive:	2-4
To remove the Bay Two Device:	2-4
To remove the Keyboard:	2-4
To remove the System Memory:	2-4
To remove the CPU:	2-4
To remove the Modem:	2-4
To remove the Wireless LAN Module:	2-4
To remove the Palm Rest:	2-4
To remove the Bottom Case:	2-4
To remove the Audio “DJ” Module:	2-5
To remove the HDD Converter Board:	2-5
To remove the Mainboard:	2-5
To remove the DC/DC Board:	2-5
To remove the Click Board:	2-5
To remove the TouchPad:	2-6
To remove the LED Board:	2-6

To remove the Speakers:	2-6
To remove the Inverter:	2-6
To remove the LCD panel:	2-6
Removing the Battery	2-7
Removing the Bay One Device	2-8
Removing the Hard Disk Drive Assembly	2-9
Removing the Bay Two Device	2-10
Removing the Keyboard	2-11
Removing the System Memory	2-12
Removing the CPU	2-13
Removing the Modem	2-15
Removing the Wireless LAN Module	2-15
Removing the Palm Rest	2-16
Removing the Bottom Case	2-17
Removing the Audio "DJ" Module	2-19
Removing the HDD Converter Board	2-20
Removing the Mainboard	2-21
Removing the DC/DC Board	2-23
Removing the Click Board	2-24
Removing the TouchPad	2-24
Removing the LED Board	2-25
Removing the Speakers	2-25
Removing the Inverter	2-26
Removing the LCD Panel	2-27

Part Lists A-1

Part List Illustration Location	A-2
Top (5600P)	A-3
Bottom (5600P)	A-4
LCD 15" (5600P)	A-5
Battery (5600P)	A-6
Second Battery (5600P)	A-7

Preface

TEAC CD-ROM Drive (5600P)	A-8
KME CD-RW Drive (5600P)	A-9
Combo Drive (5600P)	A-10
DVD-ROM Drive (5600P)	A-11
Audio DJ (5600P)	A-12
Floppy Disk Drive (5600P)	A-13
Top (5620P)	A-14
Bottom (5620P)	A-15
LCD 15"(5620P)	A-16
Battery (5620P)	A-17
Second Battery (5620P)	A-18
TEAC CD-ROM Drive (5620P)	A-19
KME CD-RW Drive (5620P)	A-20
Combo Drive (5620P)	A-21
DVD-ROM Drive (5620P)	A-22
Audio DJ (5620P)	A-23
Floppy Disk Drive (5620P)	A-24
Top (5800P)	A-25
Bottom (5800P)	A-26
LCD 15" (5800P)	A-27
Battery (5800P)	A-28
Second Battery (5800P)	A-29
TEAC CD-ROM Drive (5800P)	A-30
KME CD-RW Drive (5800P)	A-31
Combo Drive (5800P)	A-32
DVD-ROM Drive (5800P)	A-33
Audio DJ (5800P)	A-34
Floppy Disk Drive (5800P)	A-35
Top (5820P)	A-36
Bottom (5820P)	A-37
LCD 15" (5820P)	A-38
Battery (5820P)	A-39

Second Battery (5820P)	A-40
TEAC CD-ROM Drive (5820P)	A-41
KME CD-RW Drive (5820P)	A-42
Combo Drive (5820P)	A-43
DVD-ROM Drive (5820P)	A-44
Audio "DJ" (5820P)	A-45
Floppy Disk Drive (5820P)	A-46

Schematic DiagramsB-1

System Block Diagram	B-3
CPU Socket 478 - 1 of 2	B-4
CPU Socket 478 - 2 of 2	B-5
North Bridge MCH 845 Power & Ground - 1 of 2	B-6
North Bridge MCH 845 Memory Interface - 2 of 2	B-7
Clock Generator	B-8
DDRAM	B-9
DDR Termination	B-10
Mobility P7	B-11
Mobility Mem A: Term; LVDS	B-12
Mobility Mem B: CRT; LVDS; TV OUT	B-13
ICH3 - 1 of 3	B-14
ICH3 - 2 of 3	B-15
ICH3 (USB) - 3 of 3	B-16
HDD; CD-ROM; FDD	B-17
Mini PCI; MDC Modem	B-18
LAN RTL8139CL	B-19
TI 1394 (43AB22)	B-20
NS-PC87393; IR; ROM	B-21
H8	B-22
KBC Conn; Fan Conn; LDO	B-23
AC-In; Power Button	B-24
AC '97 AD 1886	B-25

Preface

PCI 1410	B-26
PCMCIA Socket	B-27
CPU Core Power	B-28
D/D Conn	B-29
+3V; +5V	B-30
LED Board	B-31
Charger Board - PCharger	B-32
Charger Board - PConn	B-33

Updating the FLASH ROM BIOS..... C-1

1: Introduction

Overview

This manual covers the information you need to service or upgrade the 5600P/5620P/5800P/5820P notebook computer. Information about operating the computer (e.g. getting started, and the *Setup* utility) is in the *User's Manual*. Information about drivers (e.g. VGA & audio) is also found in *User's Manual*. That manual is shipped with the computer.

Operating systems (e.g. *DOS*, *Windows 9x*, *Windows NT 4.0*, *Windows 2000*, *Windows XP*, *OS/2 Warp*, *UNIX*, etc.) have their own manuals as do application software (e.g. word processing and database programs). If you have questions about those programs, you should consult those manuals.

The 5600P/5620P/5800P/5820P notebook is designed to be upgradeable. See “**Disassembly**” on page 2 - 1 for a detailed description of the upgrade procedures for each specific component. Please note the warning and safety information indicated by the “” symbol.

The balance of this chapter reviews the computer’s technical specifications and features.

Introduction

System Specifications

Processor

- Intel Pentium 4 Processor - (478-pin) FC-PGA2 package
(μ0.18) 0.18 Micron Process Technology - 1.4/1.5/1.6/1.7/1.8GHz
(μ0.13) 0.13 Micron Process Technology - 2.0/2.2/2.4GHz
- Mobile Intel Pentium 4 Processor-M - (478-pin) Micro-FCPGA package
(μ0.13) 0.13 Micron Process Technology - 1.4/1.5/1.6/1.7/1.8/2.0GHz

Core Logic

- Intel® 845MP+ICH3M chipset

Structure

- All-in-one
- Compliant to PC99 standard

Security

- Kensington® Lock

Memory

- Two 200Pin SODIMM sockets, PC200/266MHz DDR devices
- Expandable up to 1024 MB (128/256/512MB SODIMM Modules)

BIOS

- One 512KB Flash ROM
- Phoenix BIOS

LCD

- 14.1" XGA 1024x768/ SXGA+ 1400x1050, 15.0" XGA 1024X768, 15.0" 1400x1050 TFT SXGA+, 15.0" UXGA 1600x1200

Display

- ATI M7-P chipset, Integrated AGP™ 4X
- Integrated 128-bit 2D / 3D Graphics Accelerator- Advanced HW Acceleration for DVD Playback (Motion Compensation engine and IDCT)- Fully DirectX 8 Compliant Graphics Engine
- External memory up to 32/64/128MB DDR SGRAM on board
- Dual-view Display Monitor
- TV resolution up 1024x768 32bpp
- CRT resolution up to 2048x1536

Storage

- Bay one interchangeable for 3.5" 3-mode FDD, OR DVD-ROM, OR CD-ROM, OR CD-RW, OR Combination DVD-ROM/ CD-RW drive, OR secondary battery
- Bay two fixed DVD-ROM, OR CD-ROM, OR CD-RW, OR Combination DVD-ROM/ CD-RW drive
- Easy changeable 2.5" 9.5 mm (h) HDD
- Support Master mode IDE, support PIO mode 4 / ATA-33/66/100 (Ultra DMA)

Audio

- AC'97 2.1 Compliant Interface
- 3D stereo enhanced sound system
- Compatible Sound-Blaster PRO™
- S/PDIF Digital output (5.1 CH)
- Built in microphone
- Audio DJ
- Built in 2 speakers 1 watt 36F, 8Ω

PC Card

- One PCMCIA 3.3V/5V sockets, one type II
- Supports CardBus

Introduction

Interface

- Built in TouchPad (Scroll functionality included)
- Four USB ports
- One IEEE 1394 port
- One S-Video jack for TV output
- One parallel port (LPT1), support ECP/EPP
- Infrared file transfer, IrDA 1.1 FIR/SIR/ASKIR
- External CRT monitor
- One PS/2 port support mouse and keyboard (through Y cable)
- One headphone-out jack
- One microphone-in jack
- One S/PDIF out port
- One RJ-11 jack for MDC Modem
- One RJ-45 jack for LAN
- DC-in jack
- Built-in 3 instant keys, www, email, and Player

Communication

- Infrared transfer: 115.2K bps SIR/ 4M bps FIR, IrDA 1.1 compliant
- 10/100Mb Ethernet LAN built-in
- 802.11b Wireless LAN mini-PCI interface (option)
- 56K MDC Modem with V.90 & V.92 compliant

Power Management

- Supports ACPI v1.0b
- Supports APM v1.2
- Power on suspend
- Supports suspend to RAM
- Supports suspend to disk
- Battery low suspend
- Modem resume from system suspend
- Resume from LAN ring
- Cover switch

Power

- Full Range AC adapter - AC in 100~240V, 50~60Hz DC Output 20V, 6.0A.
- Main battery smart Li-Ion 59W (removable)
- Second battery smart Li-Ion 50W (removable)

Indicators

- LED indicator (HDD, Suspend/Power on/ AC-In, Battery Charging/Battery full, E-mail, Num Lock, Caps Lock, Scroll Lock)

Environmental Spec

- | | |
|-------------------------------|--------------------------|
| • Temperature | Relative Humidity |
| • Operating: 5°C~ 35°C | Operating: 20% ~ 80% |
| • Non-Operating: -20°C ~ 60°C | Non-Operating: 10% ~ 90% |

Physical Dimensions

- 329 (w) x290 (d) x 44(h) mm

Weight

- 3.2 kg without battery

Optional



- Secondary battery pack
- 3.5" 3-mode FDD
- DVD-ROM Drive
- CD-RW Drive
- DVD-ROM and CD-RW Combo Drive
- Software DVD Player
- Wireless LAN module

Introduction

Figure 1 - 1
Top Views

1. LCD
2. LED Power & E-Mail Indicators
3. Close Cover Switch
4. Speakers
5. Hot-Key buttons
6. LED Status Indicators
7. Power Button
8. Keyboard
9. TouchPad and Buttons
10. Palm Rest (Removable)
11. LCD Latch



External Locator - Top Views

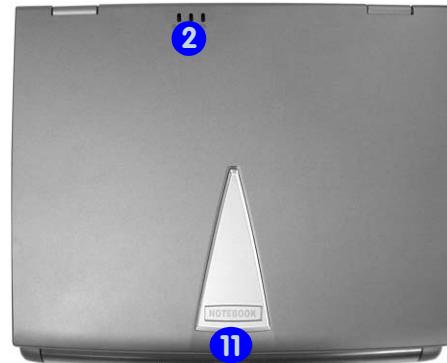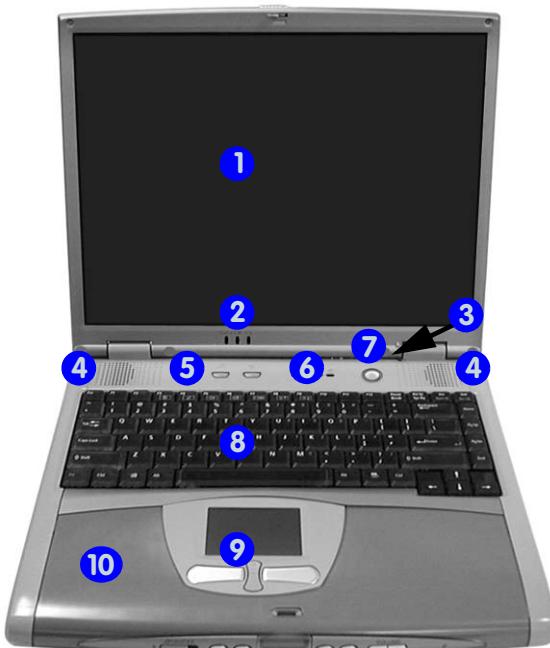

Model A

 **Model Differences**

This manual refers to the two notebook models pictured on this page. The models vary slightly in external design. Photographs used throughout this manual are of Model A.

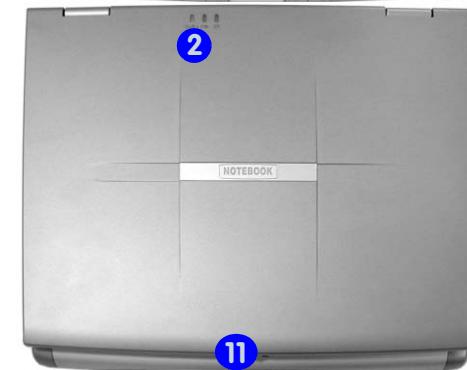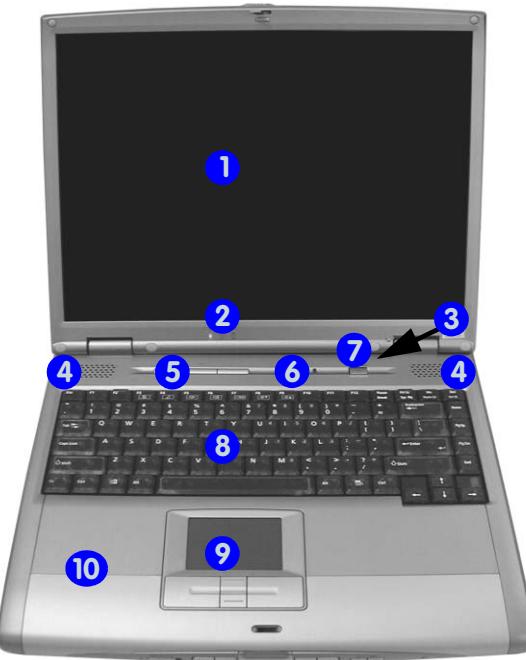

Model B

Front View



Figure 1 - 2
Front View

1. LCD Latch
2. Audio "DJ" CD Player Control Panel On/Off Switch
3. Previous Track
4. Next Track
5. LCD
6. Play Pause
7. Stop
8. Volume Down
9. Volume Up
10. Built-In Microphone

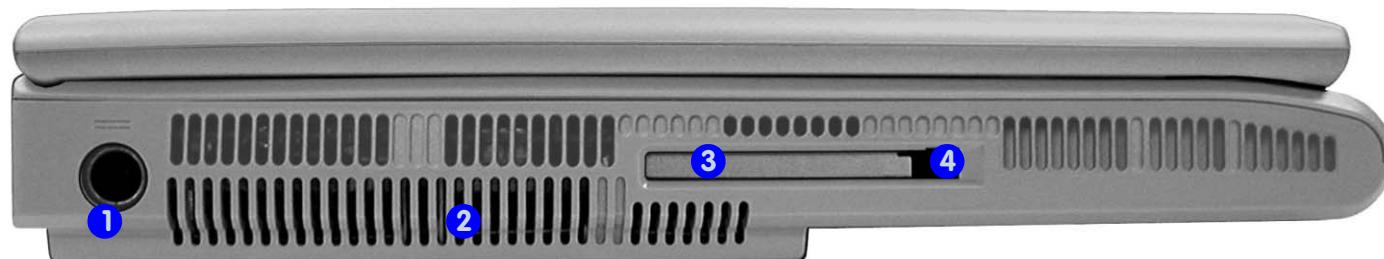


Figure 1 - 3
Left Side View

1. DC-In Jack
2. Vent
3. PC Card Slot
4. PC Card Eject Button

Introduction

External Locator - Right & Rear Views

Figure 1 - 4
Right Side View

1. Device Bay One
2. Device Bay Two
3. Infrared Transceiver




Figure 1 - 5
Rear View

1. Security Lock
2. Microphone-In Jack
3. Headphone-Out Jack
4. S/PDIF Out Port
5. Mini - IEEE 1394 Port
6. 4 USB Ports
7. RJ-11 Phone Jack
8. RJ-45 LAN Jack
9. S-Video Connector
10. External Monitor (CRT) Port
11. Parallel Port
12. PS/2 Type Port
13. Vents



External Locator - Bottom View

Figure 1 - 6
Bottom View

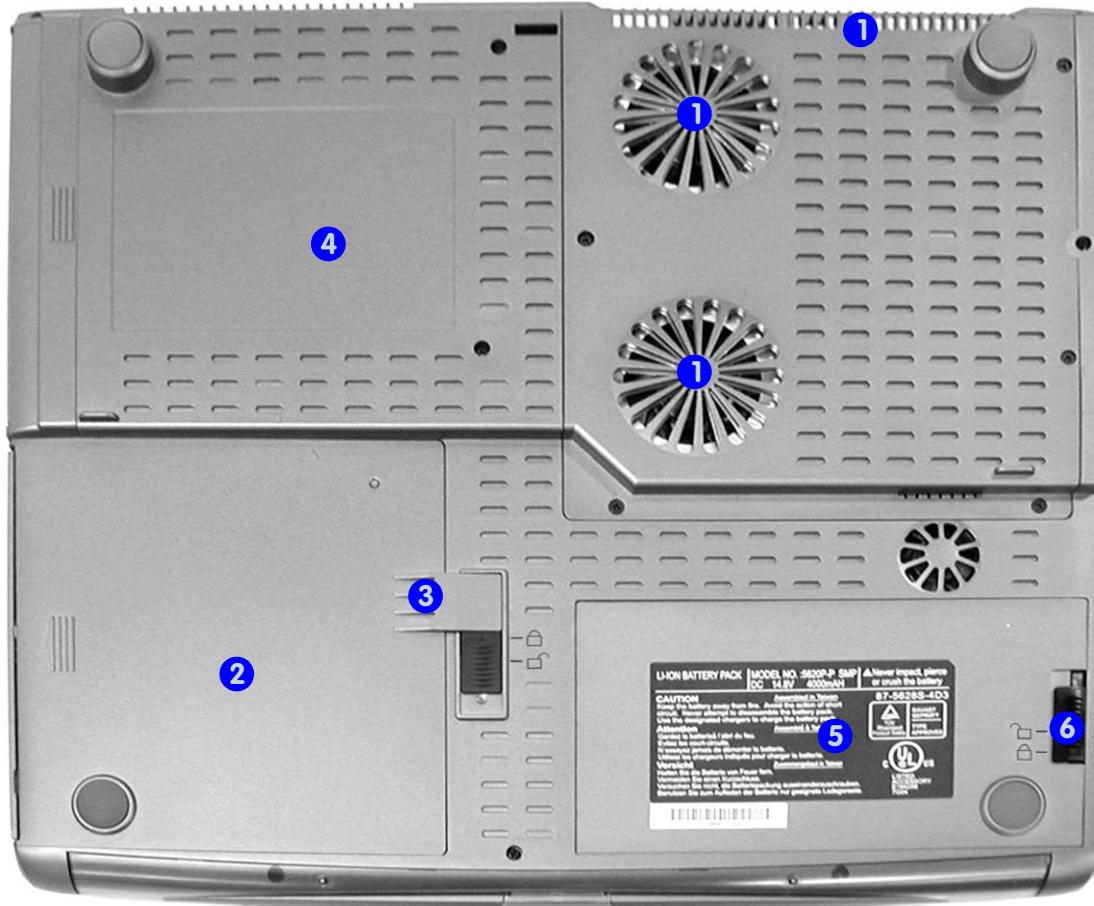


Introduction

Figure 1 - 7
Mainboard
Overview - Top
Key Parts

1. 2 * SO-DIMM sockets
2. AC'97 Codec
3. TI 1394 Controller
4. Flash BIOS ROM
5. Audio DJ Controller
6. CMOS Battery
7. On-Board Video Memory

Mainboard Overview - Top Key Parts

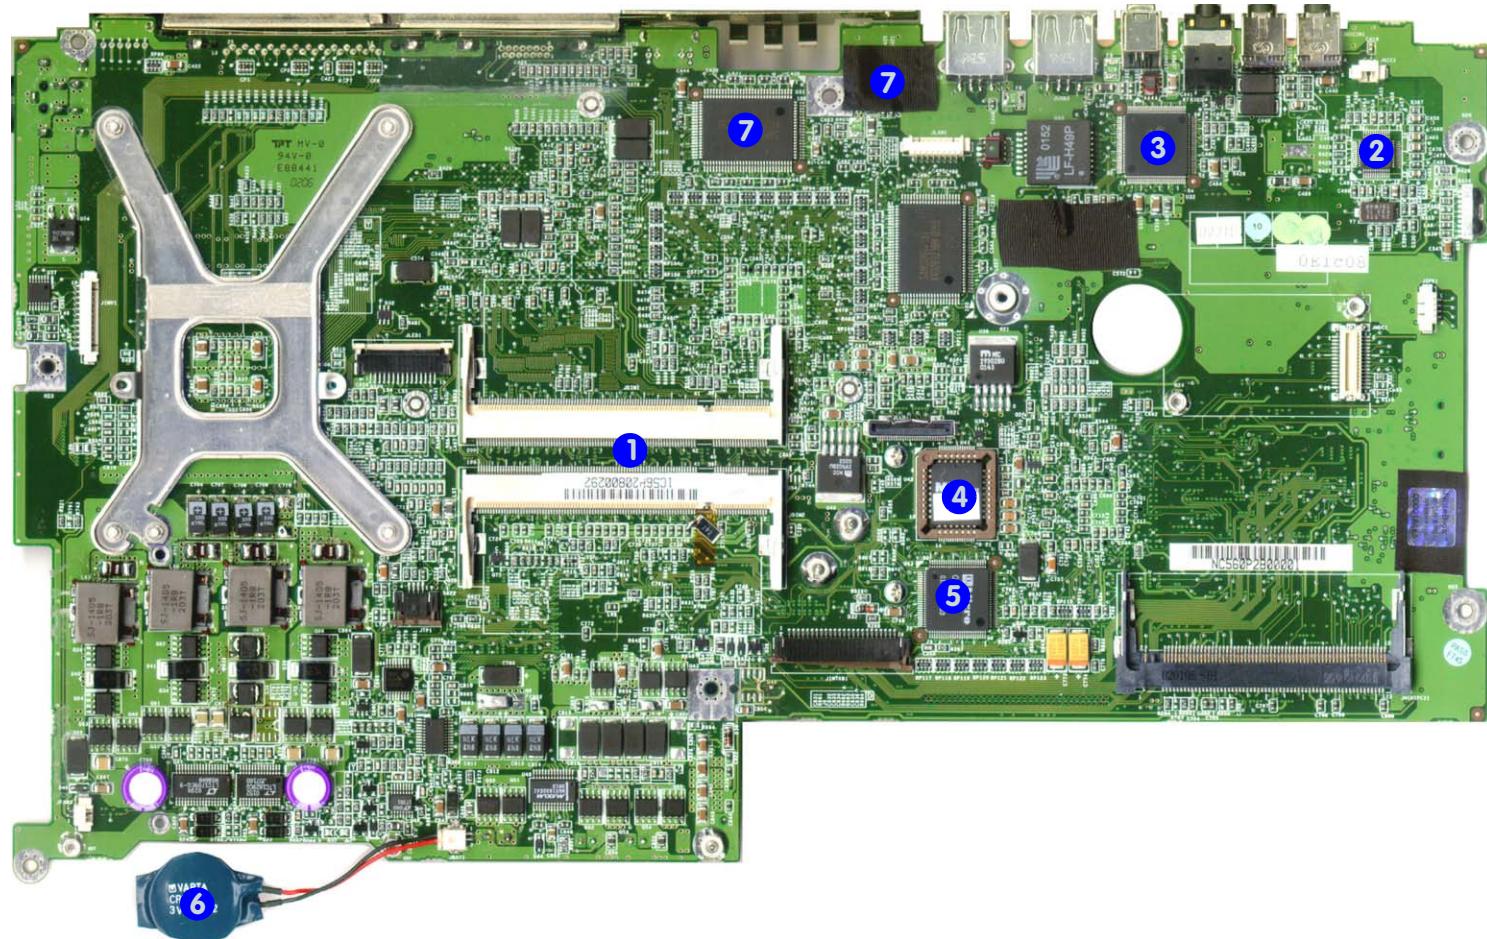

Mainboard Overview - Bottom

Key Parts

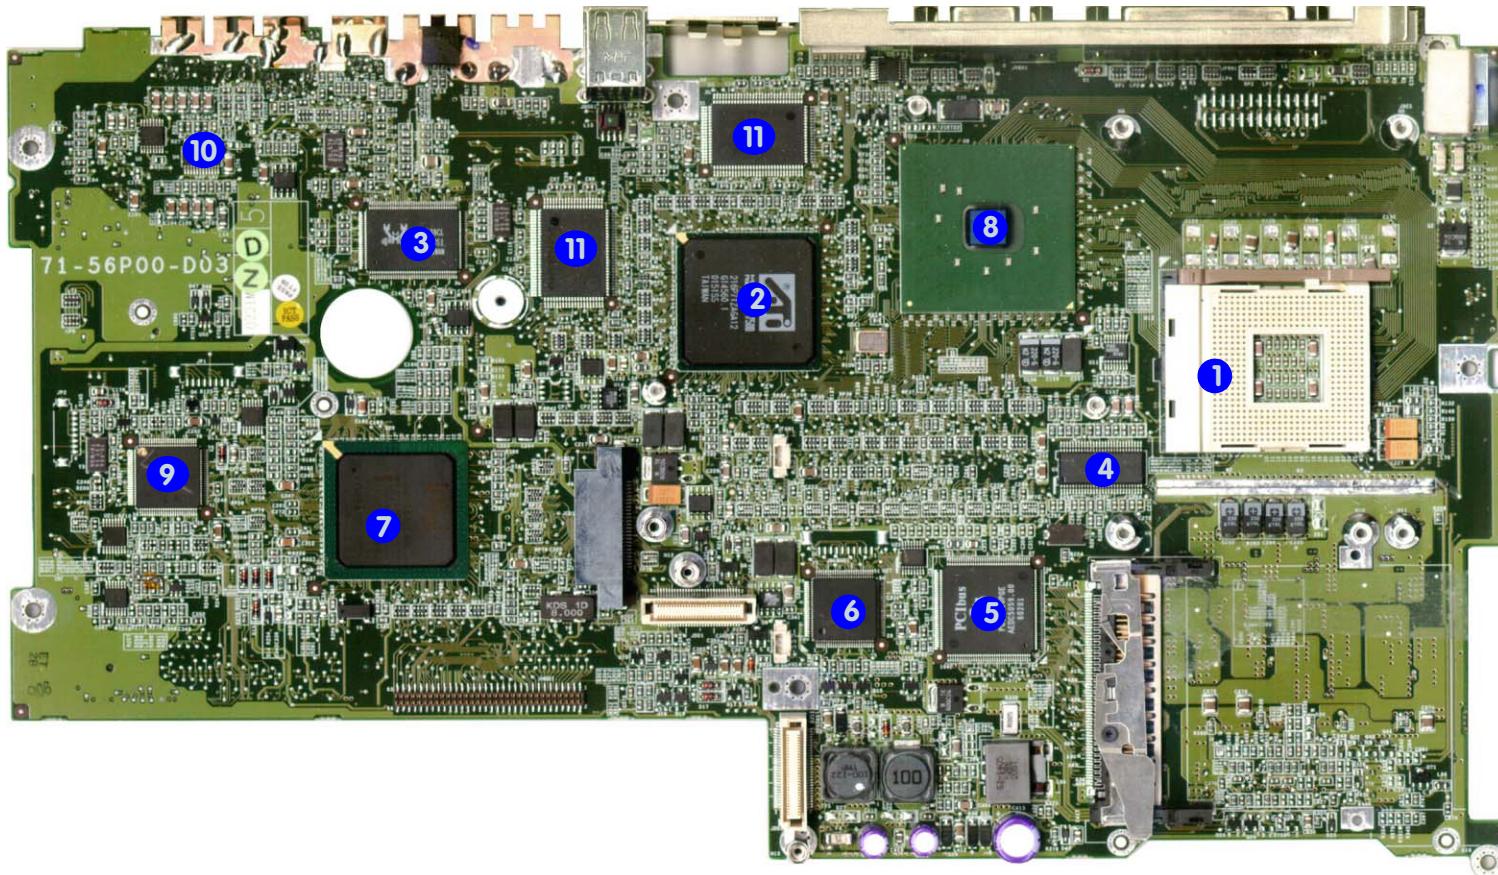


Figure 1 - 8
Mainboard
Overview - Bottom
Key Parts

1. CPU Socket (no CPU installed)
2. VGA Chip - ATI M7-P
3. LAN Controller - RTL8139
4. Clock Generator
5. PCI Bus1410 Controller
6. Super IO NS87393
7. Southbridge Intel ICH3 421 EBGA
8. Northbridge Intel MCH 845-MP Brookdale 593 FCBGA
9. H8 Keyboard Controller
- 10.Audio AMP TI-TPA0132
- 11.On-Board Video Memory


Introduction

Figure 1 - 9
Mainboard
Overview - Top
Cable Connectors

1. JINTKB1 (Keyboard Connector)
2. JTP1 (TouchPad Connector)
3. JMDC1 (Modem Connector)
4. JSPK1 (Speaker Connector)
5. JLED1 (LED Connector)
6. JLCD1 (LCD Connector)
7. JBAT1 (CMOS Battery Connector)
8. JINV1 (Inverter Connector)
9. JLAN1 (LAN Connector)
10. JMINPCI1 (Wireless LAN Connector)
11. JFAN3 (Fan Connector)
12. JMIC1 (Microphone Connector)


Mainboard Overview - Top

Cable Connectors

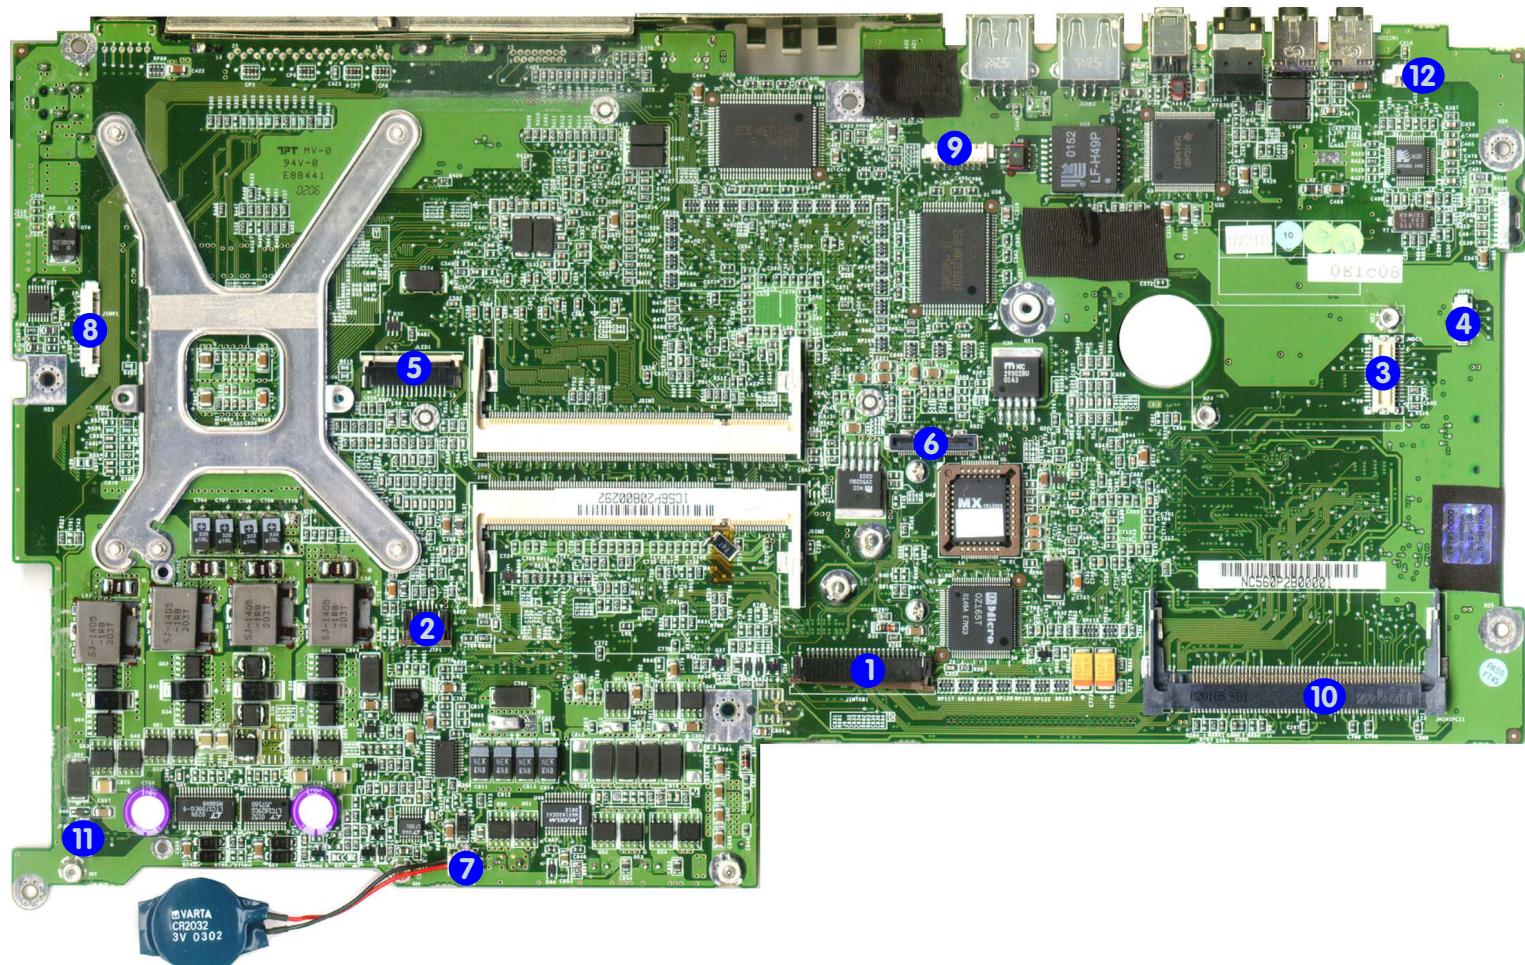

Mainboard Overview - Bottom

Cable Connectors

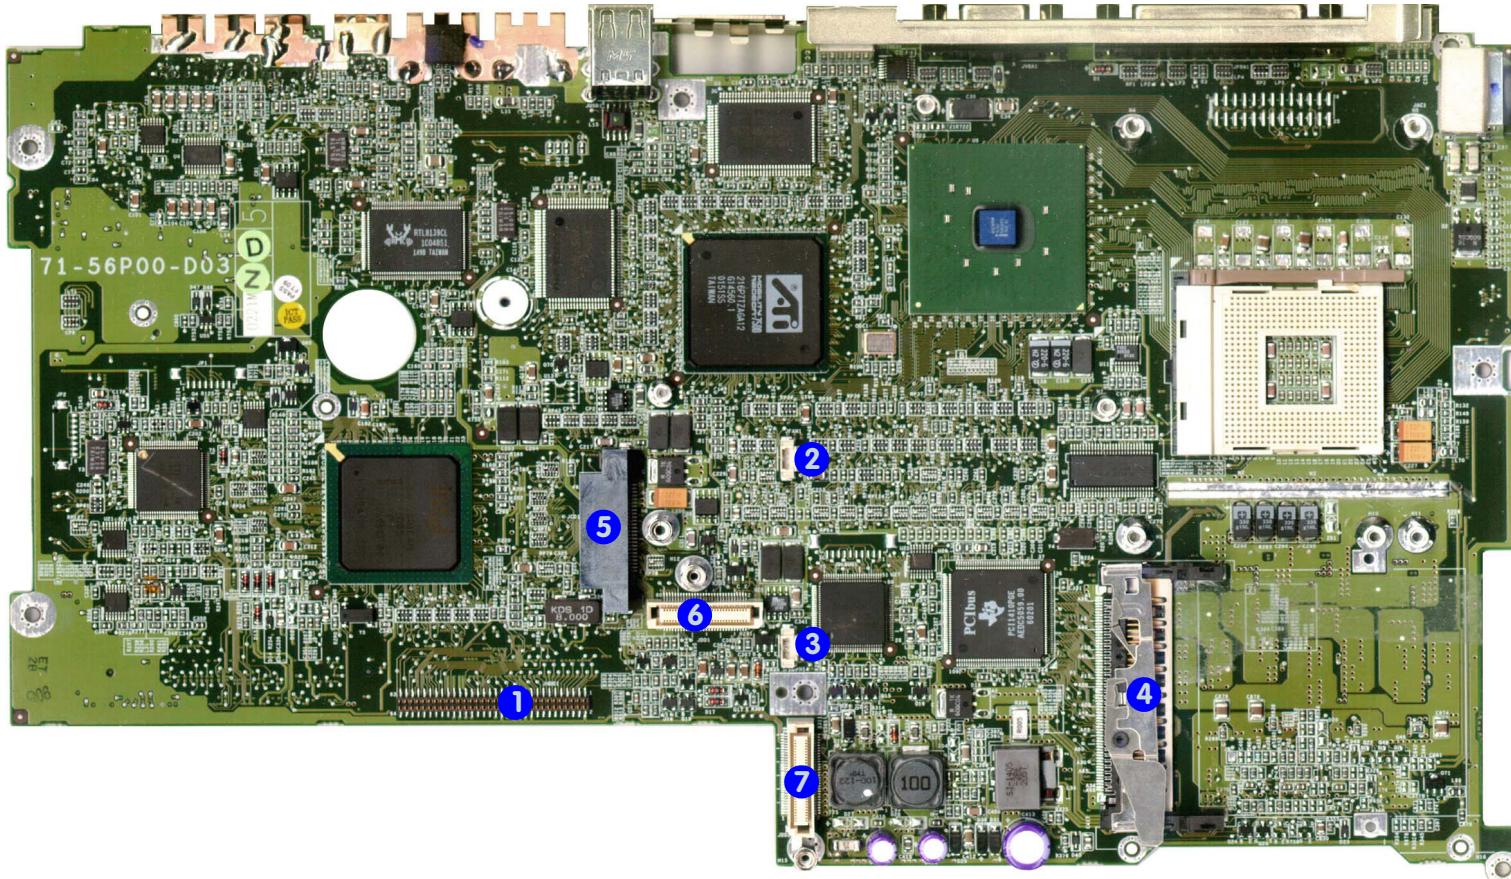

*Figure 1 - 10
Mainboard
Overview - Bottom
Cable Connectors*

1. JHDD1 (Hard Disk Connector)
2. JFAN1 (Fan Connector)
3. JFAN2 (Fan Connector)
4. PCMCIA Connector
5. JCD1 (Bay One Device Connector)
6. JDD1 (DC/DC Board Connector)
7. JDD2 (DC/DC Board Connector)

Introduction

2: Disassembly

Overview

This chapter provides step-by-step instructions for disassembling parts and subsystems. When it comes to reassembly, reverse the procedures (unless otherwise indicated).



We suggest you completely review any procedure before you take the computer apart.

Procedures such as upgrading/replacing the RAM, CD device and hard disk are included in the User's Manual but are repeated here for your convenience.

To make the disassembly process easier each section may have a box in the page margin. Information contained under the figure # will give a synopsis of the sequence of procedures involved in the disassembly procedure. A box with a  lists the relevant parts you will have after the disassembly process is complete. **Note:** The parts listed will be for the disassembly procedure listed ONLY, and not any previous disassembly step(s) required. Refer to the part list for the previous disassembly procedure. The amount of screws you should be left with will be listed here also.

A box with a  will provide any possible helpful information. A box with a  contains warnings.

An example of these types of boxes are shown in the sidebar.

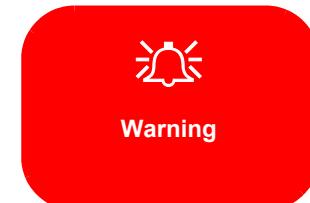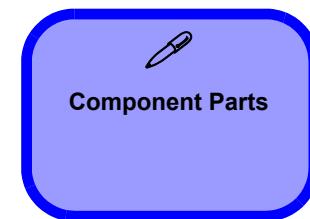

Disassembly

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

Connections

Connections within the computer are one of four types:

Locking collar sockets for ribbon connectors

To release these connectors, use a small flat-head screwdriver to gently pry the locking collar away from its base. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Pressure sockets for multi-wire connectors

To release this connector type, grasp it at its head and gently rock it from side to side as you pull it out. Do not pull on the wires themselves. When replacing the connection, do not try to force it. The socket only fits one way.

Pressure sockets for ribbon connectors

To release these connectors, use a small pair of needle-nose pliers to gently lift the connector away from its socket. When replacing the connection, make sure the connector is oriented in the same way. The pin1 side is usually not indicated.

Board-to-board or multi-pin sockets

To separate the boards, gently rock them from side to side as you pull them apart. If the connection is very tight, use a small flat-head screwdriver - use just enough force to start.

Maintenance Precautions

The following precautions are a reminder. To avoid personal injury or damage to the computer while performing a removal and/or replacement job, take the following precautions:

1. **Don't drop it.** Perform your repairs and/or upgrades on a stable surface. If the computer falls, the case and other components could be damaged.
2. **Don't overheat it.** Note the proximity of any heating elements. Keep the computer out of direct sunlight.
3. **Avoid interference.** Note the proximity of any high capacity transformers, electric motors, and other strong magnetic fields. These can hinder proper performance and damage components and/or data. You should also monitor the position of magnetized tools (i.e. screwdrivers).
4. **Keep it dry.** This is an electrical appliance. If water or any other liquid gets into it, the computer could be badly damaged.
5. **Be careful with power.** Avoid accidental shocks, discharges or explosions.
 - Before removing or servicing any part from the computer, turn the computer off and detach any power supplies.
 - When you want to unplug the power cord or any cable/wire, be sure to disconnect it by the plug head. Do not pull on the wire.
6. **Peripherals** – Turn off and detach any peripherals. **Beware of static discharge.** ICs, such as the CPU and main support chips, are vulnerable to static electricity. Before handling any part in the computer, discharge any static electricity inside the computer. When handling a printed circuit board, do not use gloves or other materials which allow static electricity buildup. We suggest that you use an anti-static wrist strap instead.
7. **Beware of corrosion.** As you perform your job, avoid touching any connector leads. Even the cleanest hands produce oils which can attract corrosive elements.
8. **Keep your work environment clean.** Tobacco smoke, dust or other air-born particulate matter is often attracted to charged surfaces, reducing performance.
9. **Keep track of the components.** When removing or replacing any part, be careful not to leave small parts, such as screws, loose inside the computer.

Cleaning

Do not apply cleaner directly to the computer, use a soft clean cloth.

Do not use volatile (petroleum distillates) or abrasive cleaners on any part of the computer.



Power Safety Warning

Before you undertake any upgrade procedures, make sure that you have turned off the power, and disconnected all peripherals and cables (including telephone lines). It is advisable to also remove your battery in order to prevent accidentally turning the machine on.

Disassembly**Disassembly Steps**

The following table lists the disassembly steps, and on which page to find the related information. **PLEASE PERFORM THE DISASSEMBLY STEPS IN THE ORDER INDICATED.**

To remove the Battery:

1. Remove the battery page 2 - 7

To remove the Bay One Device:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8

To remove the Hard Disk Drive:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9

To remove the Bay Two Device:

1. Remove the battery page 2 - 7
2. Remove the Bay Two device page 2 - 10

To remove the Keyboard:

1. Remove the battery page 2 - 7
2. Remove the keyboard page 2 - 11

To remove the System Memory:

1. Remove the battery page 2 - 7
2. Remove the keyboard page 2 - 11
3. Remove the memory page 2 - 12

To remove the CPU:

1. Remove the battery page 2 - 7
2. Remove the CPU page 2 - 13

To remove the Modem:

1. Remove the battery page 2 - 7
2. Remove the keyboard page 2 - 11
3. Remove the modem page 2 - 15

To remove the Wireless LAN Module:

1. Remove the battery page 2 - 7
2. Remove the keyboard page 2 - 11
3. Remove the Wireless LAN module page 2 - 15

To remove the Palm Rest:

1. Remove the Palm Rest page 2 - 16

To remove the Bottom Case:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17

To remove the Audio “DJ” Module:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the Audio “DJ” module page 2 - 19

To remove the HDD Converter Board:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the Audio “DJ” module page 2 - 19
10. Remove the HDD converter board page 2 - 20

To remove the Mainboard:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17

9. Remove the Audio “DJ” module page 2 - 19
10. Remove the HDD converter board page 2 - 20
11. Remove the mainboard page 2 - 21

To remove the DC/DC Board:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the Audio “DJ” module page 2 - 19
10. Remove the HDD converter board page 2 - 20
11. Remove the mainboard page 2 - 21
12. Remove the DC/DC board page 2 - 23

To remove the Click Board:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the Click Board page 2 - 24

Disassembly

To remove the TouchPad:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the TouchPad page 2 - 24

To remove the LED Board:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the LED board page 2 - 25

To remove the Speakers:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the speakers page 2 - 25

To remove the Inverter:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the inverter page 2 - 26

To remove the LCD panel:

1. Remove the battery page 2 - 7
2. Remove the Bay One device page 2 - 8
3. Remove the hard disk drive assembly page 2 - 9
4. Remove the Bay Two device page 2 - 10
5. Remove the keyboard page 2 - 11
6. Remove the CPU page 2 - 13
7. Remove the Palm Rest page 2 - 16
8. Remove the bottom case page 2 - 17
9. Remove the LCD Panel page 2 - 27

Removing the Battery

1. With the computer shut down and on a level surface, raise the LCD cover.
2. Turn the computer over and locate the battery release latch "1" (Figure 2 - 1-a).
3. Slide the battery release latch towards the unlock symbol.
4. The battery will pop-up and can be lifted out of the computer.

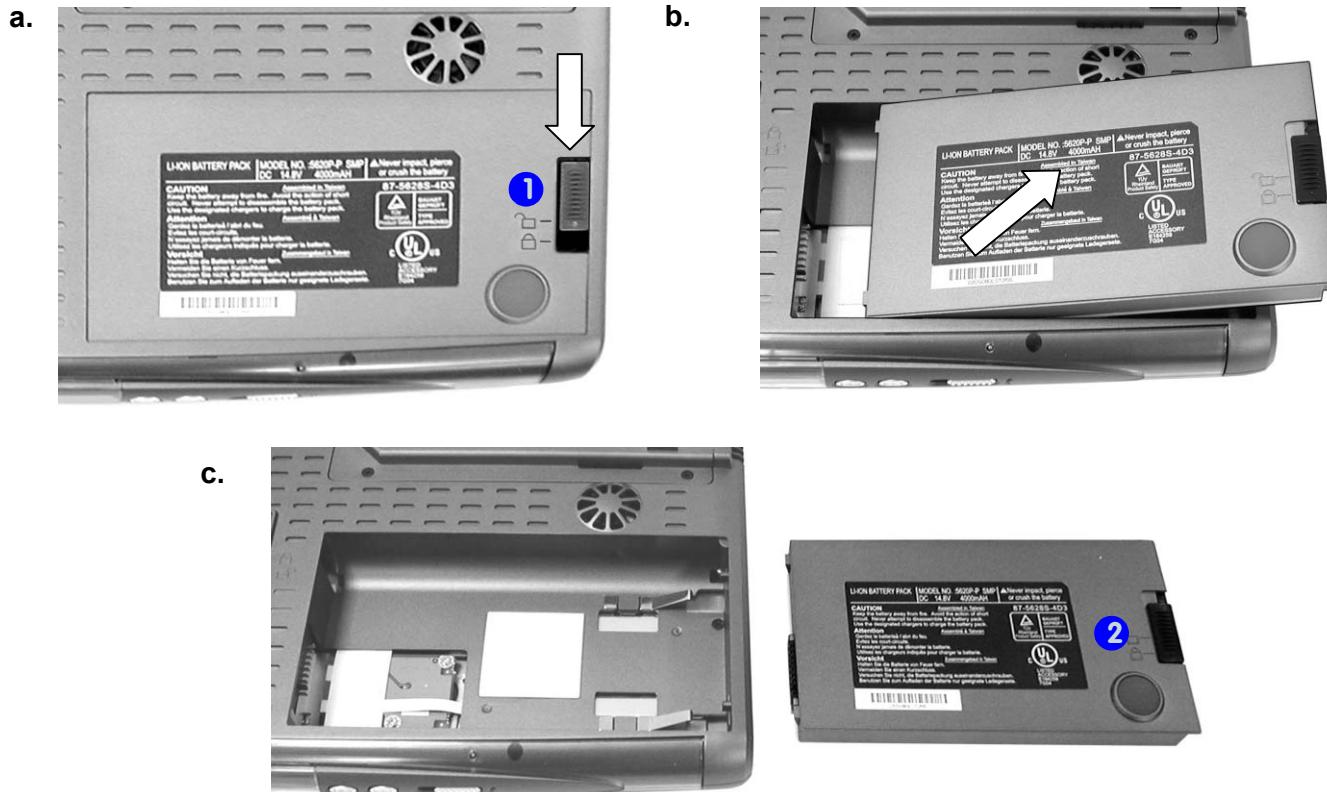


Figure 2 - 1
Battery Removal
Sequence

- a. Slide the battery release latch to the unlock position.
- b. The battery will pop-up.
- c. Remove the battery.

Disassembly

Figure 2 - 2
**Bay One Device
Removal
Sequence**

- a. Slide the release latch to the unlock position and hold it in position.
- b. Partially slide the device out partially.
- c. Lift the device up and out of the computer.



Removing the Bay One Device

1. Turn the computer OFF.
2. Place the computer on a clean, stable surface and turn it over.
3. Locate the release latch "1" (**Figure 2 - 2a**) for the Bay One device.
4. Slide the release latch towards the unlock symbol and hold it in position.
5. With the release latch held in position, slide the device out slightly, then lift it up out of the computer.


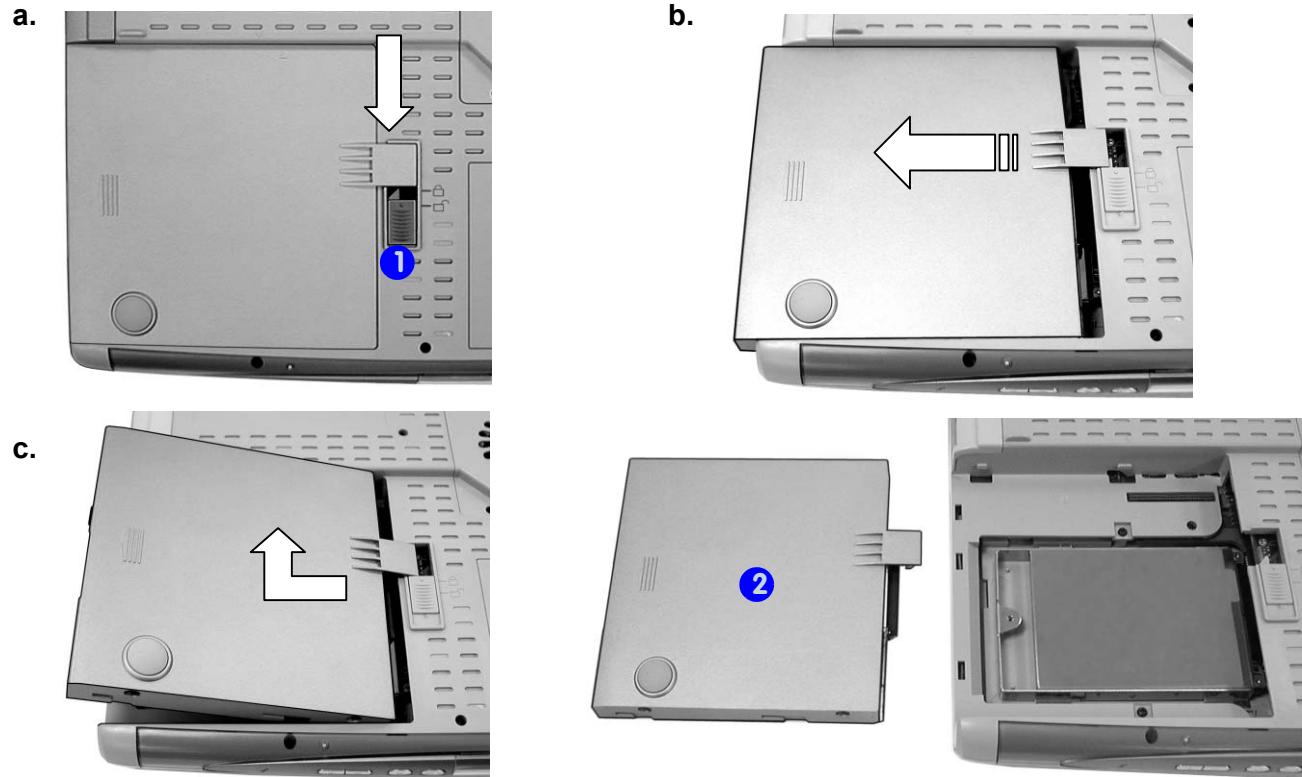



Figure 2 - 3
**Hard Disk
Removal
Sequence**

Removing the Hard Disk Drive Assembly

1. Turn the computer **OFF** and turn it over.
2. Remove the device in Bay One (see “**Removing the Bay One Device**” on page **2 - 8**).
3. Remove screw “**1**” (**Figure 2 - 3a**).
4. Slide the HDD assembly forward, then lift it up out of the computer.
5. Remove screws “**2 - 5**” (**Figure 2 - 3e**) from the assembly, and slide the hard disk out of the case.

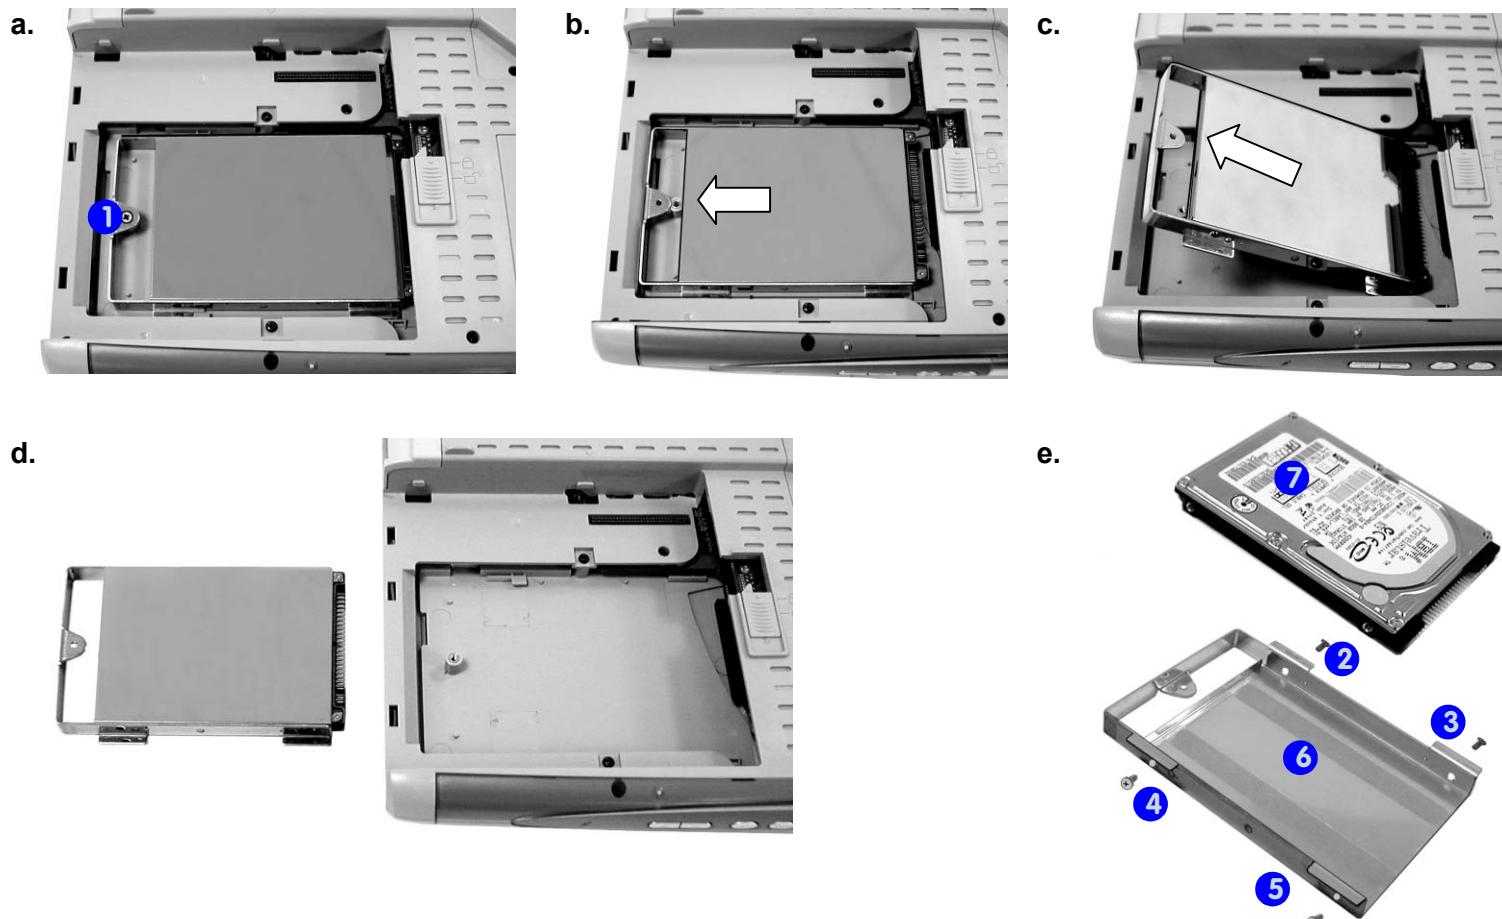

- a. Remove the HDD assembly screw.
- b. Slide the HDD assembly in the direction of the arrow.
- c. Lift the HDD assembly up.
- d. Lift the HDD assembly out of the computer.
- e. Remove the screws and separate the HDD from the case.

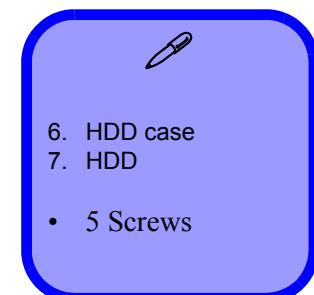


Disassembly

Figure 2 - 4 Bay Two Device Removal Sequence

- a. Remove the screw from point "1".
- b. Apply pressure to point "2" to slide the device out of the computer.

Removing the Bay Two Device

1. Turn **OFF** the computer.
2. Turn the computer over.
3. Remove screw "1" (**Figure 2 - 4a**)
4. Apply gentle but firm pressure at point "2" (**Figure 2 - 4b**), and slide the device out of the computer.

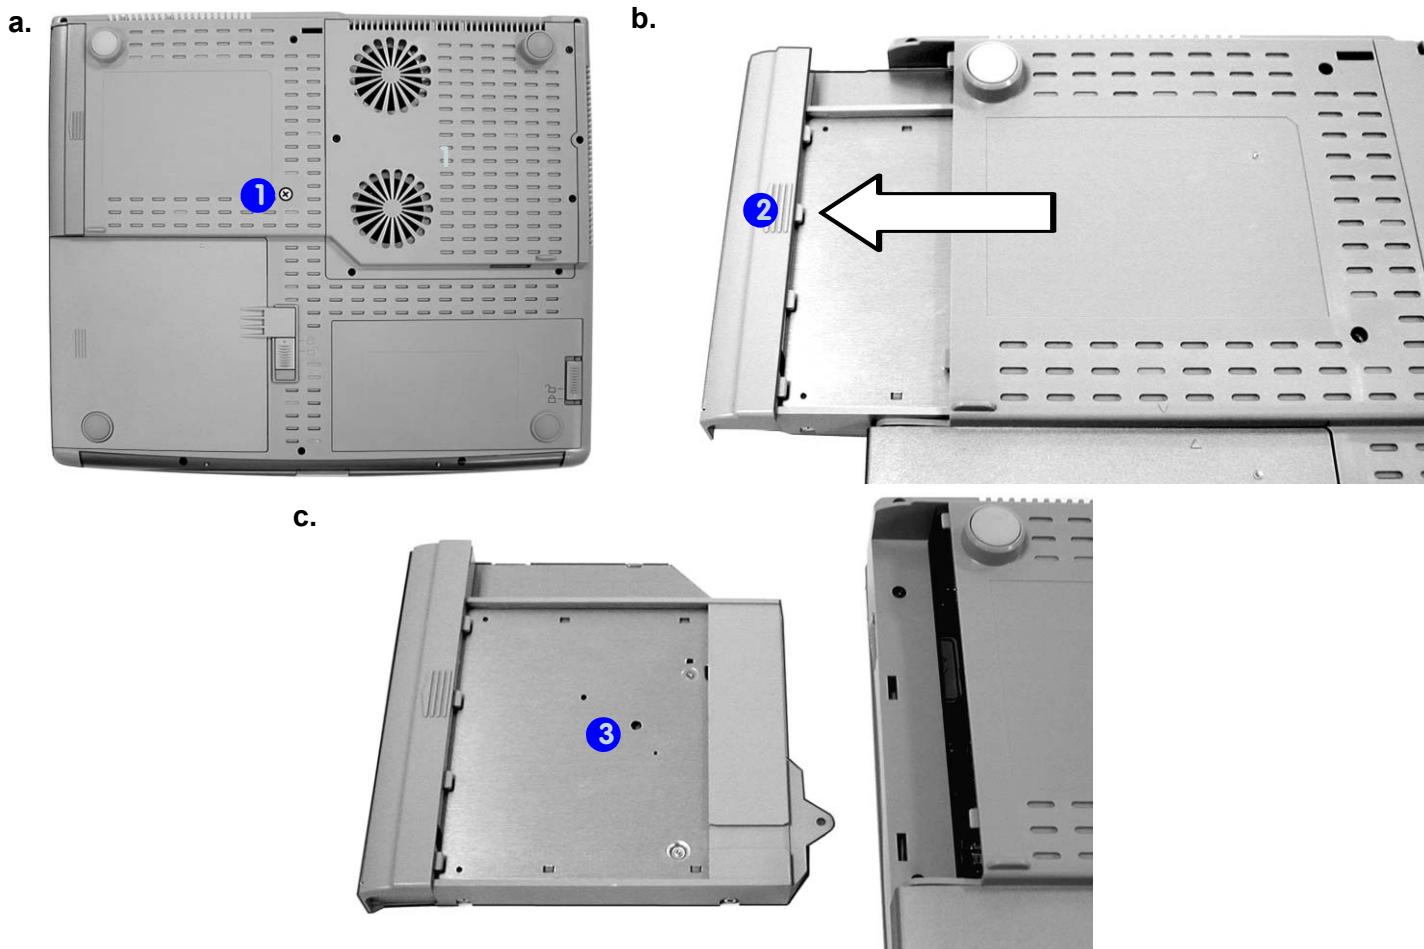

Removing the Keyboard

1. Turn **OFF** the computer.
2. Press the two keyboard latches at the top of the keyboard to elevate the keyboard from its normal position as in **Figure 2 - 5a** (you may need to use a small screwdriver to do this).
3. Carefully lift the keyboard up and out, being careful not to bend the keyboard ribbon cable "3" (**Figure 2 - 5b**).
4. Disconnect the keyboard ribbon cable from the locking collar socket "3" (**Figure 2 - 5b**).


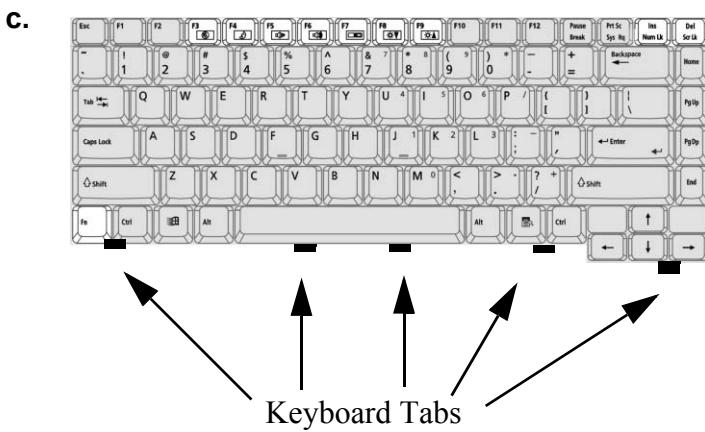


Figure 2 - 5
Keyboard
Removal
Sequence

- a. Press the two latches to release the keyboard.
- b. Lift the keyboard out and disconnect the cable from the locking collar.

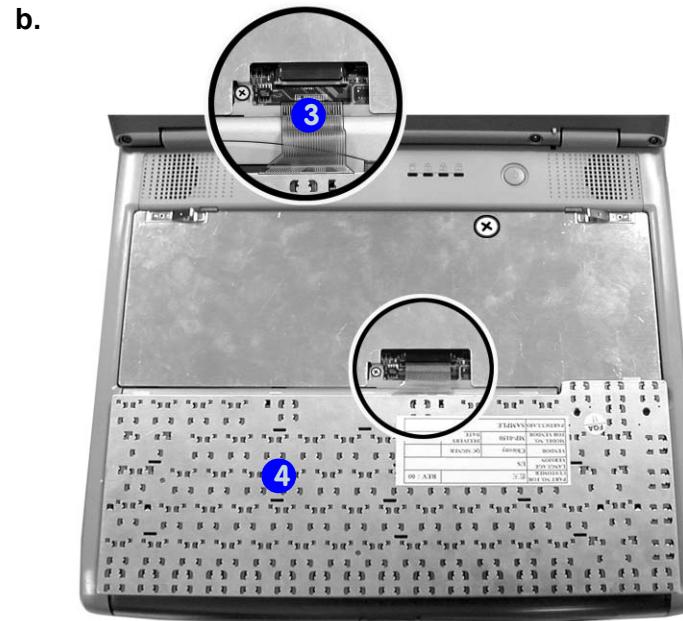

Re-Inserting the Keyboard

When re-inserting the keyboard firstly align the **five** keyboard tabs (**Figure 2 - 5c**) at the bottom of the keyboard with the slots in the case.



3. Ribbon cable
4. Keyboard

Disassembly

Figure 2 - 6

Memory Removal Sequence

- Remove the screws from the shielding plate.
- Remove the shielding plate.
- Pull the latch(es) on the memory sockets to release the module(s).
- When the module pops up, lift it out.



1. Shielding plate
8. Memory module(s)
• 2 Screws




Contact Warning

Be careful not to touch the metal pins on the module's connecting edge. Even the cleanest hands have oils which can attract particles, and degrade the module's performance.


Removing the System Memory

- Remove the keyboard (see page 2 - 11).
- Remove screws "2" and "3" (Figure 2 - 6a) from the shielding plate, and lift the plate up off the computer.
- Locate the memory sockets "4" and "5" (Figure 2 - 6c), and gently pull latches "6" and "7" (Figure 2 - 6c) on the memory socket toward the sides of the computer as indicated in Figure 2 - 6c.
- The module "8" (Figure 2 - 6c) will pop-up, and you can remove it.
- Insert a new module holding it at about a 30° angle and fit the connectors firmly into the memory slot.

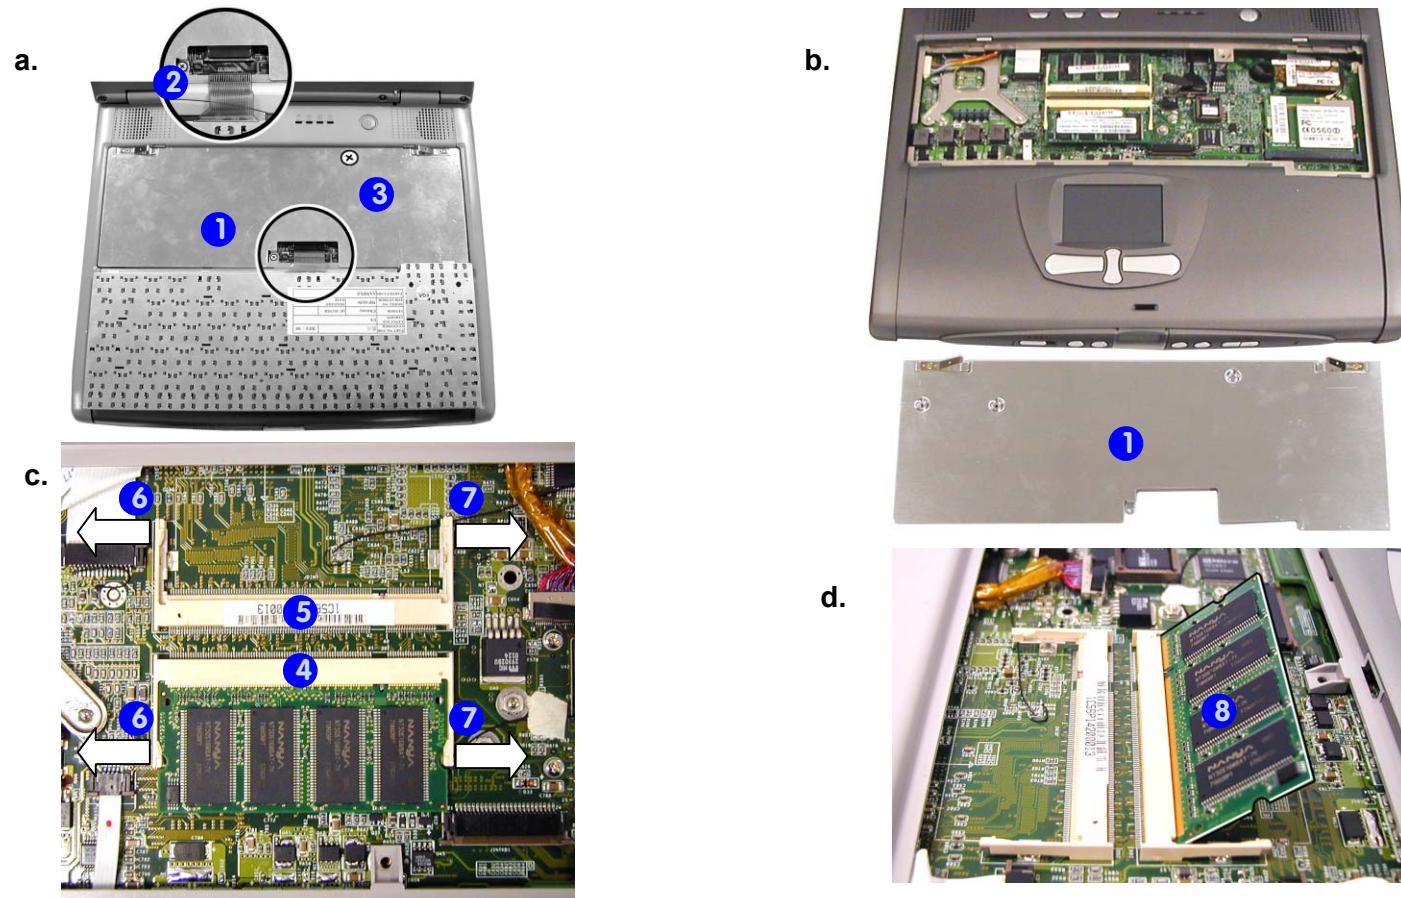


Removing the CPU

1. Turn **OFF** the computer and turn it over.
2. Remove the screws "1 - 5" (Figure 2 - 7a) from the CPU cover, and remove the CPU cover "6".

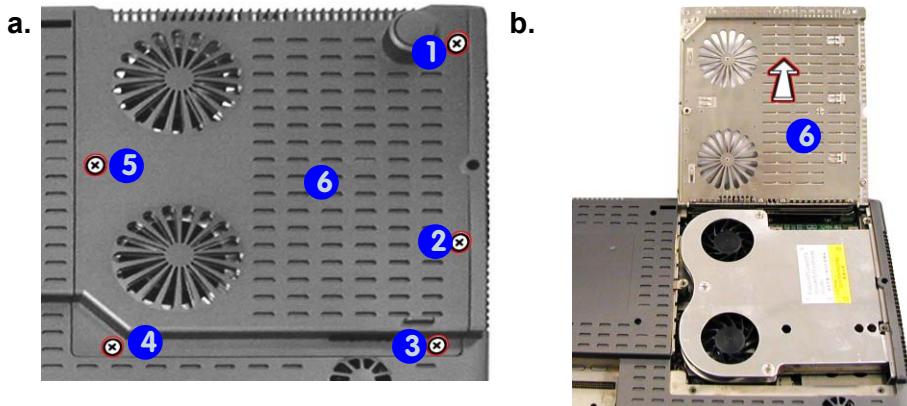

3. Remove the five screws from the heat sink in order "1 - 5" as indicated (Figure 2 - 8).

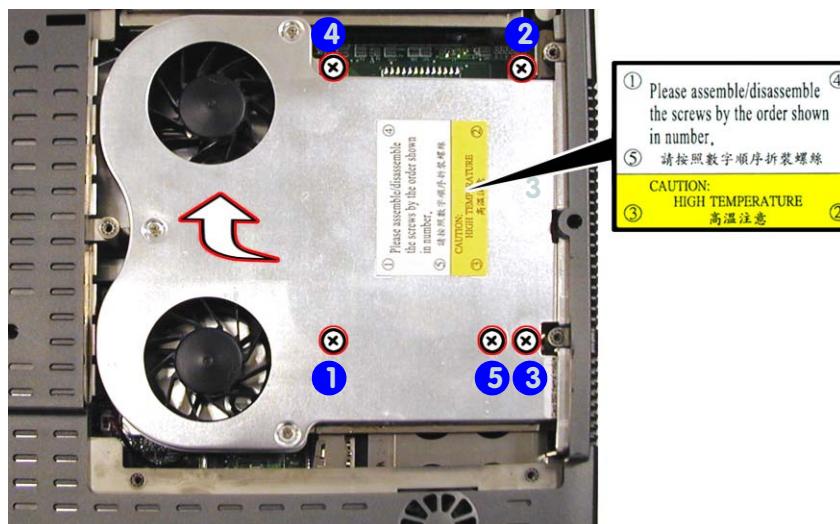

Caution

The heat sink, and CPU area in general, contains parts which are subject to high temperatures - Please allow the area time to cool before removing these parts).



Reassembly Screw Order

When inserting a new or replacement CPU, make sure you insert the screws in the same order indicated in Figure 2 - 8.

Figure 2 - 7
Processor
Removal
Sequence

- a. Remove the five screws and the CPU cover.
- b. Remove the CPU cover.

Figure 2 - 8
Processor
Removal
Sequence
(cont'd)

Remove the five screws from the heat sink in the order indicated.



6. CPU cover
 - 10 Screws


Disassembly

Figure 2 - 9
**Processor
Removal
Sequence
(cont'd)**

- Slide the heat sink forward slightly, and prise the unit upwards.
- Release the fan cables.
- Unlock the cpu and remove it.

- Use a screwdriver to apply pressure at point "2" (**Figure 2 - 9a**) in order to carefully slide the heat sink forward slightly, and prise the unit upwards.
- Release the fan cables from points "3 - 4" (**Figure 2 - 9b**), and remove the heat sink.
- Unlock the processor by raising lever "5" (**Figure 2 - 9c**) to the fully vertical position, and carefully lift the processor "6" off the socket.


a.

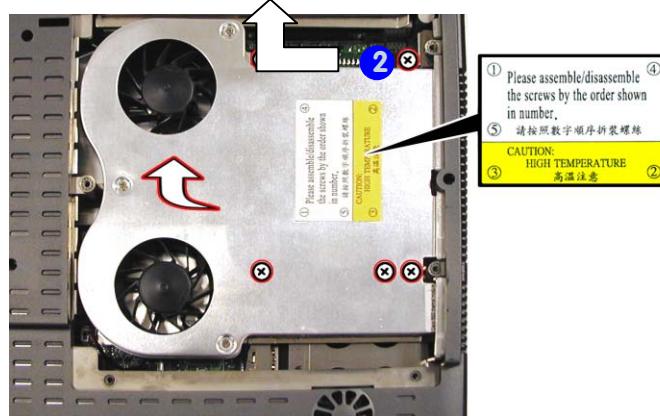

b.



c.

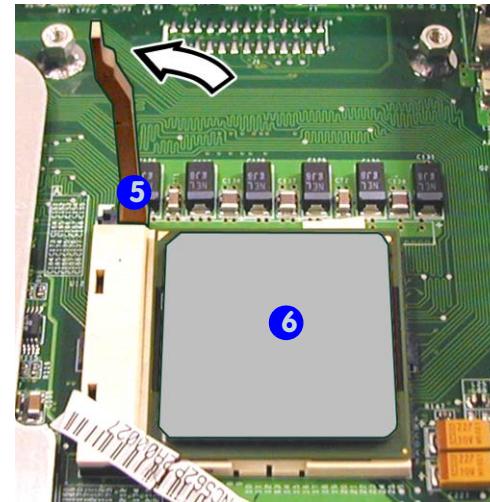

1. Heat sink
6. CPU

Removing the Modem

1. Remove the keyboard (see page 2 - 11).
2. Remove screws "1 - 2" and carefully lift the modem "3" up off the mainboard (Figure 2 - 10).
3. Disconnect the modem cable "4" from the modem module.



Removing the Wireless LAN Module

1. Remove the keyboard (see page 2 - 11).
2. Gently pull latches "1 & 2" in the direction of the arrows (Figure 2 - 11) and the module will pop-up.
3. Carefully remove the wireless LAN module, and disconnect the cables at points "3 & 4"

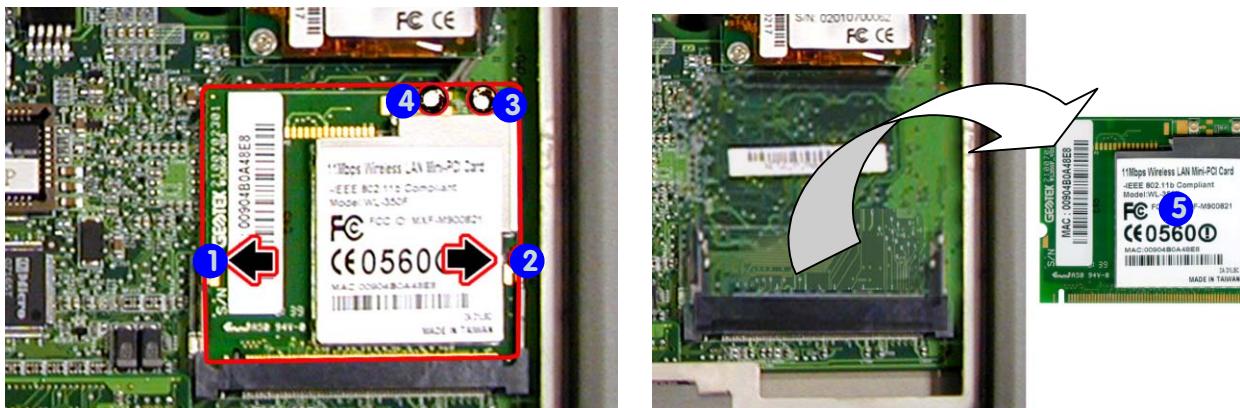


Figure 2 - 10
Modem Removal
Sequence

Remove the screws,
lift the modem off
the mainboard, and
disconnect the ca-
ble.

3. Modem
- 2 Screws

Figure 2 - 11
Wireless LAN
Module Removal
Sequence

Pull the latches,
lift the module off the
mainboard, and dis-
connect the cables.

5. Wireless LAN
module

Disassembly

Figure 2 - 12

Palm Rest Removal Sequence

Apply gentle upward pressure with your fingers close to the area indicated, and lift the palm rest up.

Removing the Palm Rest


1. With the computer shut down and on a level surface, raise the LCD cover.
2. Remove the palm rest by applying gentle upward pressure with your fingers close to the area around the **left Alt** key, and the **right Ctrl** key (**Figure 2 - 12**).
3. To replace the palm rest, slide it back in to place, and then apply slight downward pressure to points "2" and "3" in order to snap it gently back down.



1. Palm Rest


Removing the Bottom Case

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)) and palm rest ([page 2 - 16](#)).
2. Turn the computer over and remove screws "1 - 15" ([Figure 2 - 13](#)).

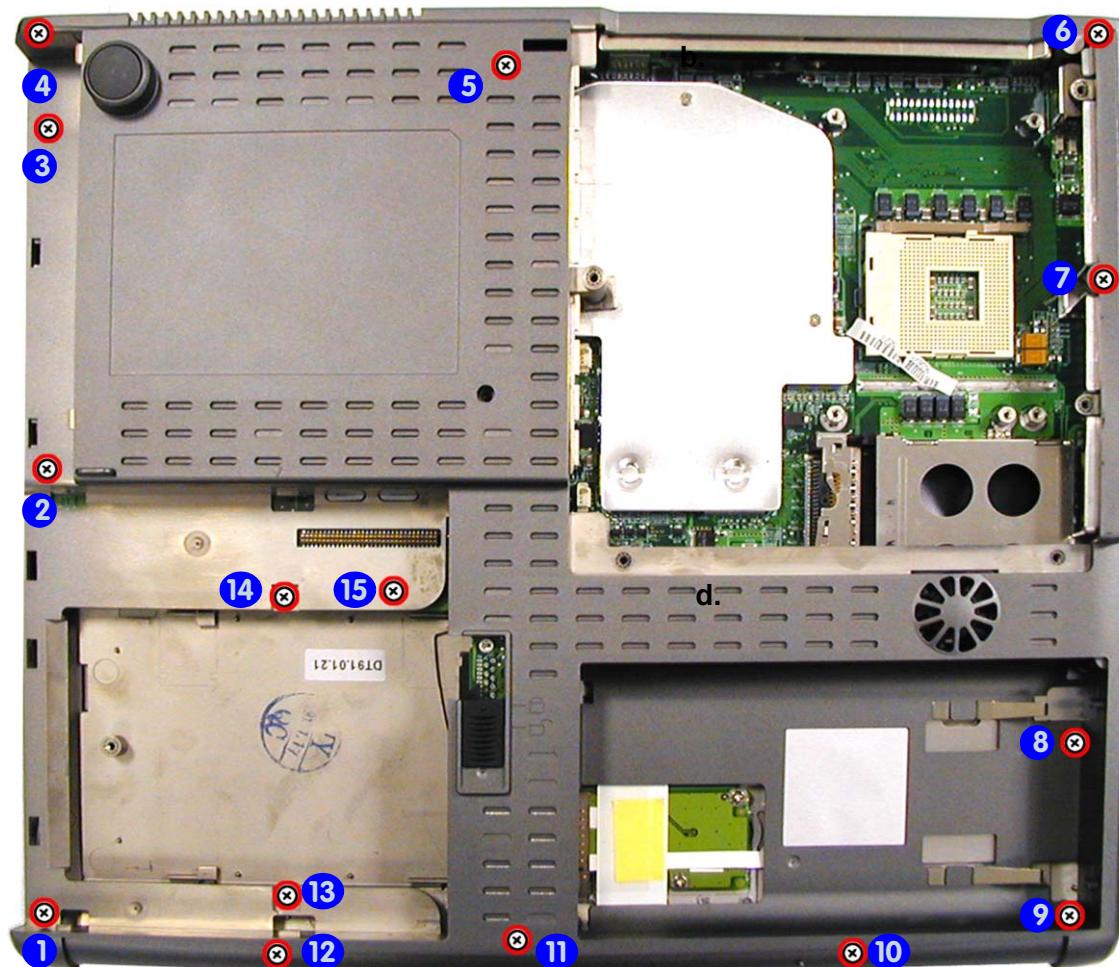

**Figure 2 - 13
Bottom Case
Removal
Sequence**

Remove the 15 screws from the bottom of the case.

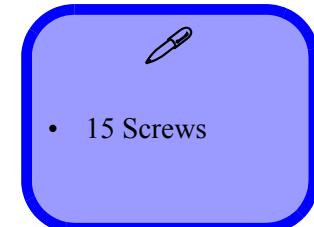

2. Disassembly

Disassembly

Figure 2 - 14

Bottom Case Removal Sequence (cont'd)

Remove the six screws from the rear of the computer.

- Turn the computer around and remove screws "1 - 6" (Figure 2 - 14) from the rear of the computer.


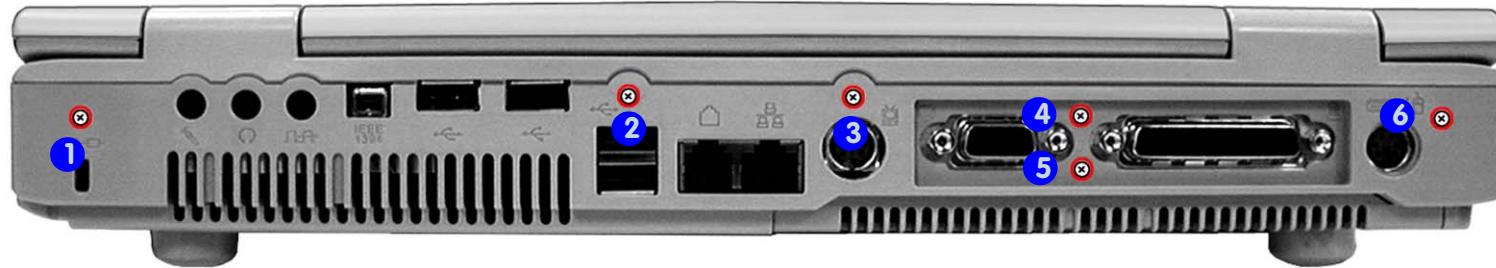


Figure 2 - 15

Bottom Case Removal Sequence (cont'd)

- Remove the cables connected to the mainboard.
- Lift the LCD and top case off the bottom case.

- Disconnect the inverter cable "1", touchpad cable "2", LED cable "3", LCD cable "4", Wireless LAN module "5" (if included) speaker cable "6" (Figure 2 - 15).
- Carefully lift the LCD and top case assembly "7" off the bottom case assembly "8".

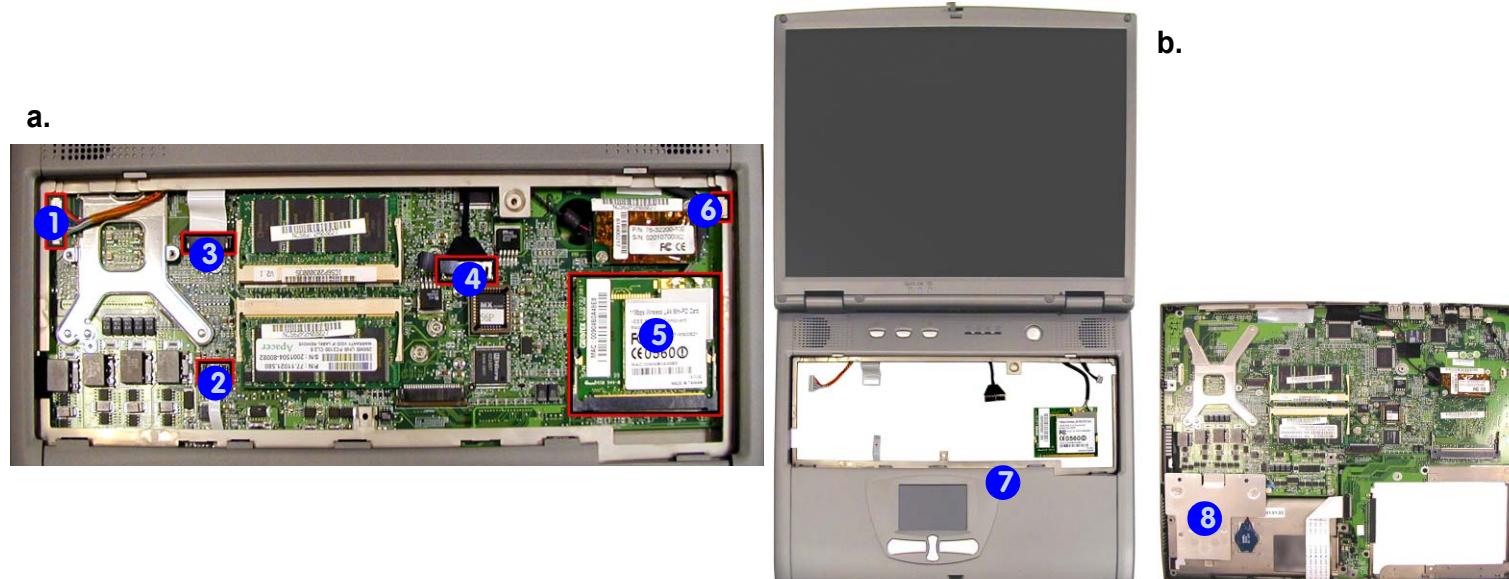


- 7. LCD & Top Case
- 8. Bottom Case
- 6 Screws

2 - 18 Removing the Bottom Case

Removing the Audio "DJ" Module

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)) and bottom case ([page 2 - 17](#)).
2. When the top and bottom case assemblies are separated the Audio "DJ" module will be visible.
3. Disconnect the microphone cable "1", the Audio "DJ" cable "2", then carefully remove the Audio "DJ" module "3" ([Figure 2 - 16b](#)).
4. Remove screws "4 - 7" from the back of the Audio "DJ" board in order to separate the board "8" from the module "3" and power button "9" ([Figure 2 - 16c](#)).

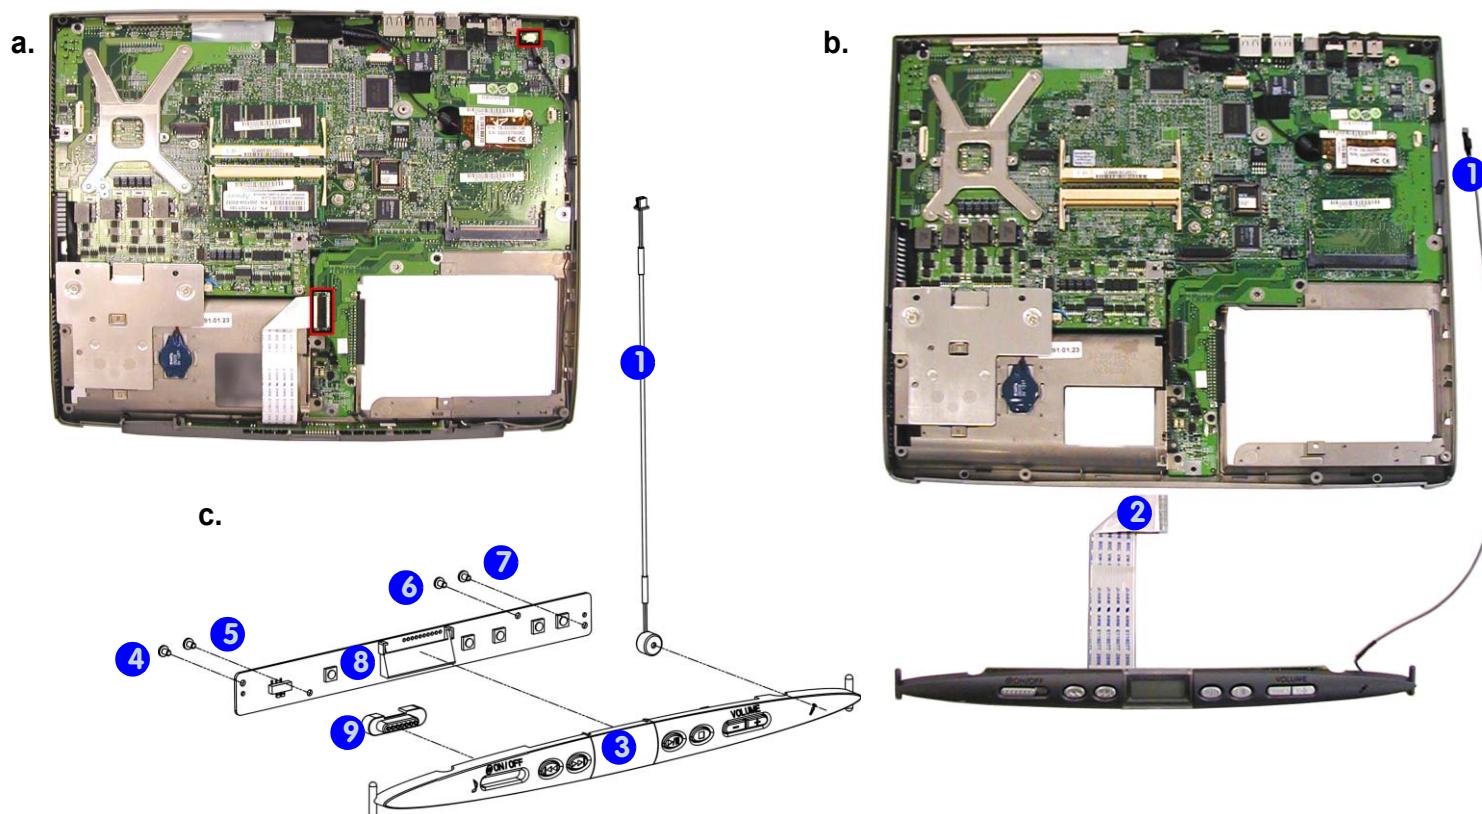

*Figure 2 - 16
Audio "DJ"
Module Removal
Sequence*

- a. Disconnect the microphone and Audio "DJ" cables.
- b. Remove the module.
- c. Remove the 4 screws to separate the board, module and power button.




Disassembly

Figure 2 - 17 HDD Converter Board Removal Sequence

- a. Remove screws 1 - 6.
- b. Remove the shielding plate, cover and HDD converter board.

Removing the HDD Converter Board


1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)) bottom case ([page 2 - 17](#)) and Audio "DJ" module ([page 2 - 19](#)).
2. Remove screws "1 - 6" from the PCMCIA shielding plate and HDD converter board (**Figure 2 - 17**).
3. Carefully lift the PCMCIA shielding plate "7", cover "8" and HDD converter board "9" away from the mainboard (be careful not to bend the pins in the HDD converter board when removing and inserting it).

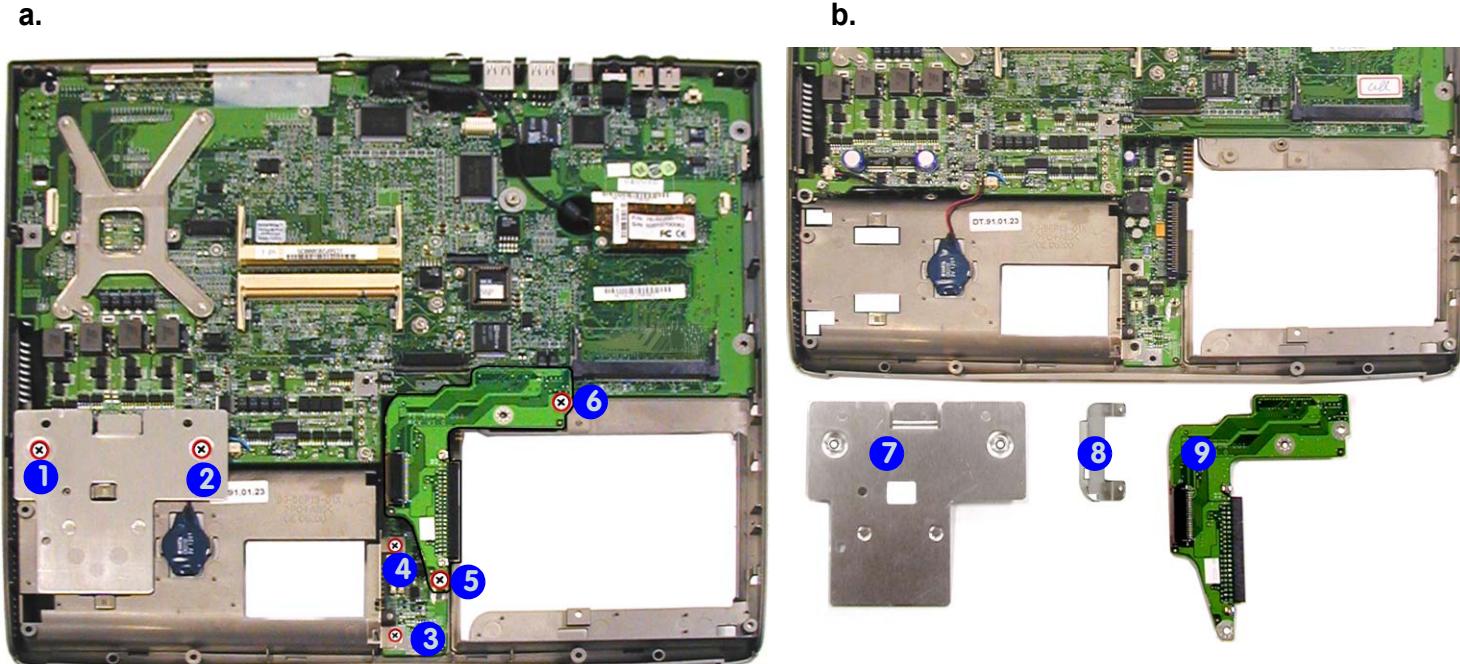

- 7. PCMCIA Shielding Plate
- 8. Cover
- 9. HDD converter board
- 6 Screws

Removing the Mainboard

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)) bottom case ([page 2 - 17](#)), Audio "DJ" module ([page 2 - 19](#)) and HDD converter board ([page 2 - 20](#)).
2. Remove screws "1 - 4" from the rear of the computer ([Figure 2 - 18a](#)).
3. Remove screws "5 - 13" (screws "12 & 13" hold the modem in place and will only need removed if you haven't already removed the modem module) from the mainboard ([Figure 2 - 18b](#)).
4. Disconnect the battery cable "14", fan cable "15" and LAN cable "16" ([Figure 2 - 18b](#)).

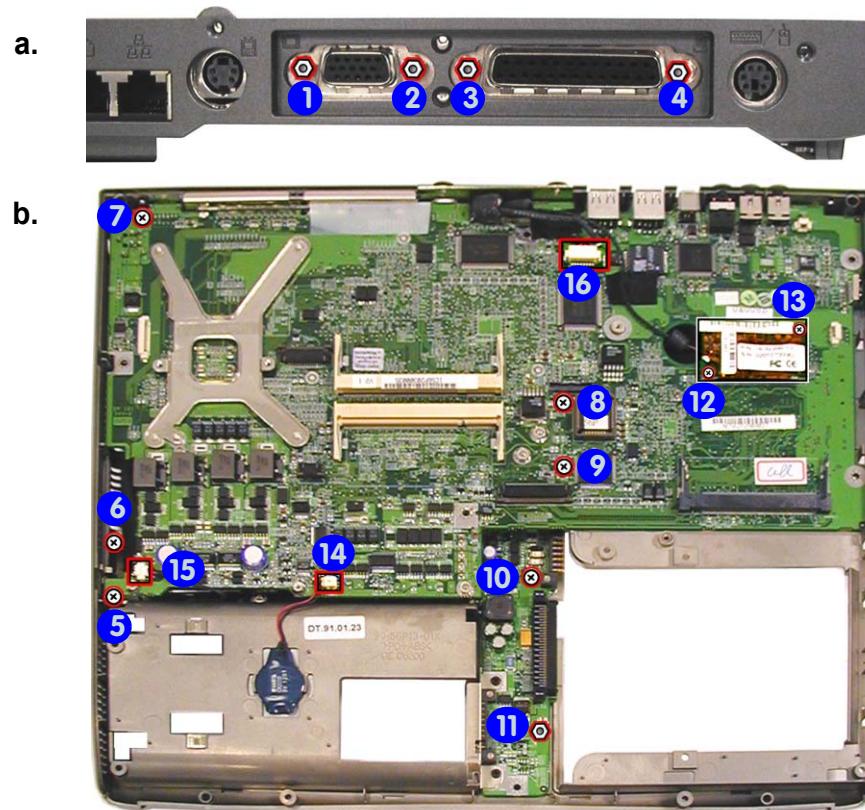

**Figure 2 - 18
Mainboard
Removal
Sequence**

- a. Remove screws 1 - 4.
- b. Remove screws 5 - 13, and disconnect cables 14 - 16.

- 13 Screws


2. Disassembly

Disassembly

Figure 2 - 19
Mainboard
Removal
Sequence
(cont'd)

- a. Lift the mainboard assembly out of the bottom case.
- b. Separate the LAN and modem ports/cables.

5. Lift the mainboard "1" and DC/DC board "5" out of the bottom case "2" (Figure 2 - 19a).
6. If required, separate the LAN and modem ports and cables "3" from the bottom case.

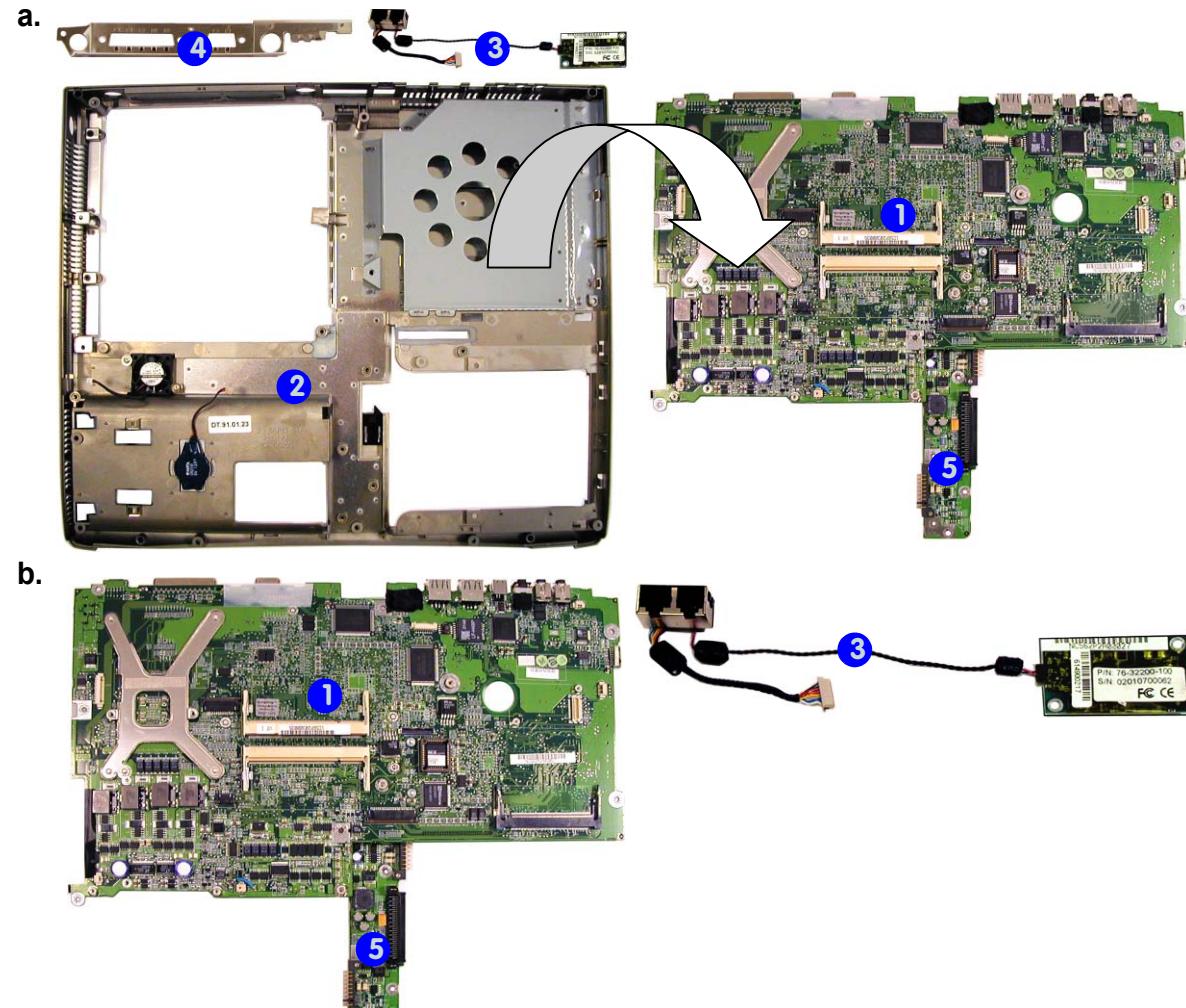


1. Mainboard
2. Bottom case
3. LAN & modem ports/cables and modem
4. Bracket
5. DC/DC board




Removing the DC/DC Board

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)), bottom case ([page 2 - 17](#)), Audio "DJ" module ([page 2 - 19](#)), HDD converter board ([page 2 - 20](#)) and mainboard ([page 2 - 21](#)).
2. Turn the mainboard over and remove screws "1 - 2" ([Figure 2 - 20a](#)).
3. Carefully separate the DC/DC board "3" from the mainboard "4" ([Figure 2 - 20b](#)).

a.

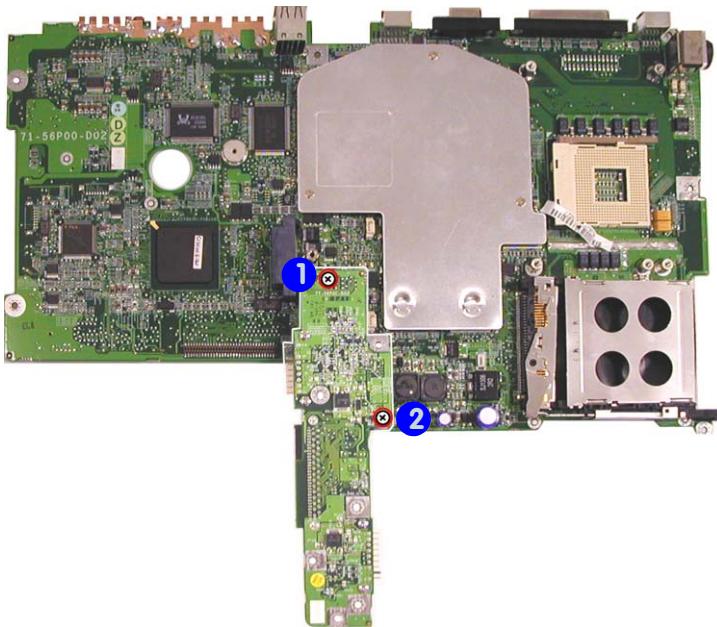

b.

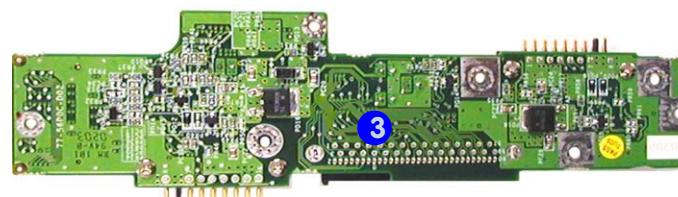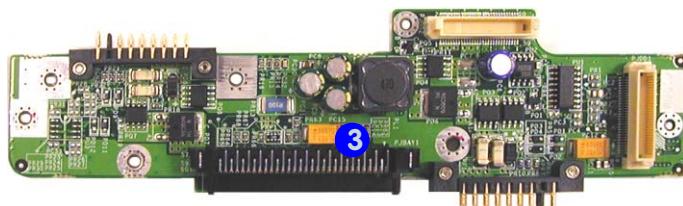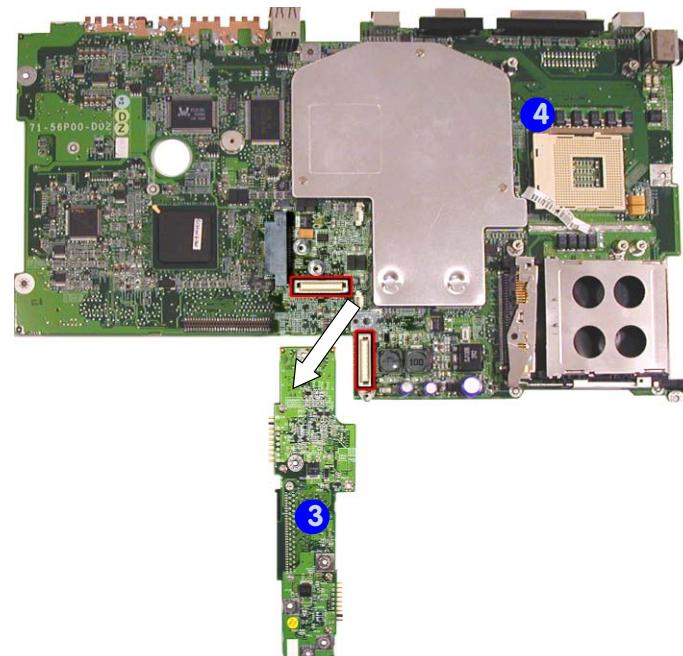

**Figure 2 - 20
DC/DC Board
Removal
Sequence**

- a. Remove screws 1-2.
- b. Separate the mainboard from the DC/DC board.



3. DC/DC board
4. Mainboard

Disassembly


Figure 2 - 21 Click Board Removal Sequence

- Remove the screws and disconnect the cable.
- Lift the click board off the top case assembly.




Figure 2 - 22 TouchPad Removal Sequence

- Remove the screws and disconnect the cable.
- Lift the TouchPad and bracket off the top case assembly.

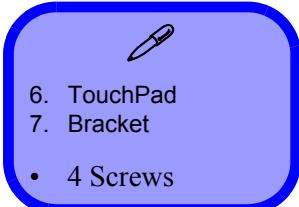


Removing the Click Board

- Remove the battery (page 2 - 7), bay one device (page 2 - 8), hard disk assembly (page 2 - 9), bay two device (page 2 - 10), keyboard (page 2 - 11) CPU (page 2 - 13), palm rest (page 2 - 16) and bottom case (page 2 - 17).
- Turn the top case assembly over and remove screws "1 - 4", and disconnect cable "5" (Figure 2 - 21a).
- Lift the click board "6" off the top case assembly (Figure 2 - 21b).

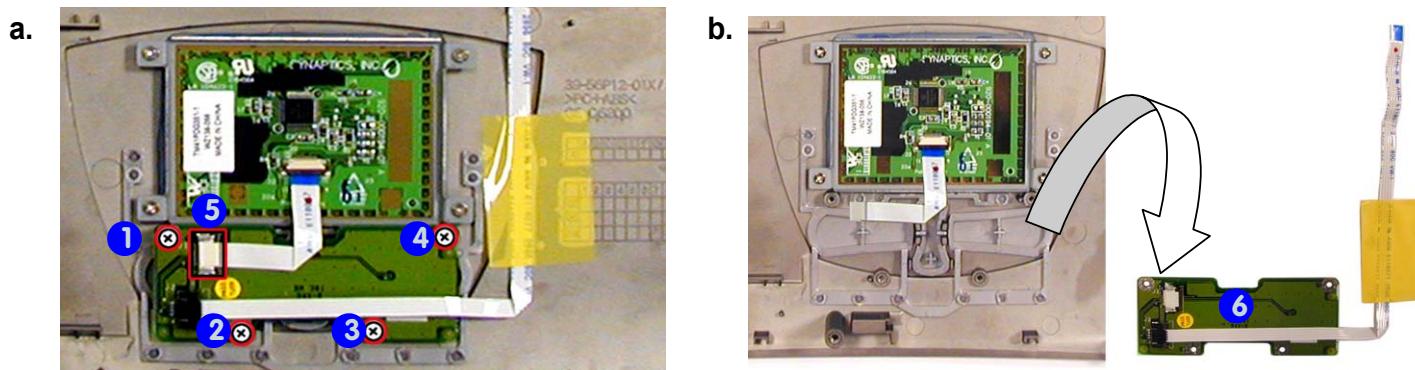


Removing the TouchPad

- Remove the battery (page 2 - 7), bay one device (page 2 - 8), hard disk assembly (page 2 - 9), bay two device (page 2 - 10), keyboard (page 2 - 11) CPU (page 2 - 13), palm rest (page 2 - 16) and bottom case (page 2 - 17).
- Turn the top case assembly over and remove screws "1 - 4", and disconnect cable "5" (Figure 2 - 22a).
- Lift the TouchPad "6" and bracket "7" off the top case assembly (Figure 2 - 22b).

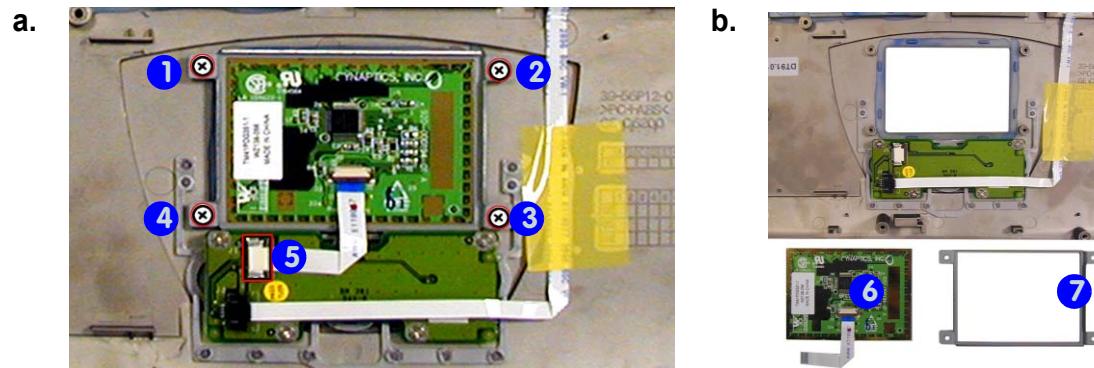


Removing the LED Board

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)) and bottom case ([page 2 - 17](#)).
2. Turn the top case assembly over and remove screws "1 - 5" from the LED board ([Figure 2 - 23a](#)).
3. Lift the LED board "6" off the top case assembly ([Figure 2 - 23b](#)).

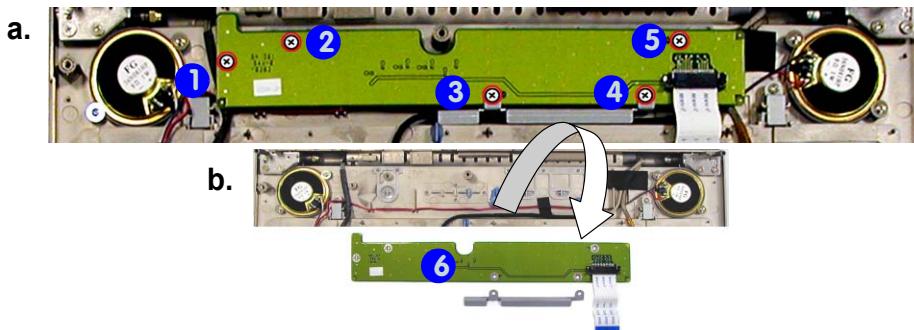

Removing the Speakers

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)), bottom case ([page 2 - 17](#)) and LED board (above).
2. Remove screws "1 - 4" from the speakers ([Figure 2 - 24a](#)).
3. Carefully lift the speakers "5" off the top case assembly ([Figure 2 - 24b](#)).

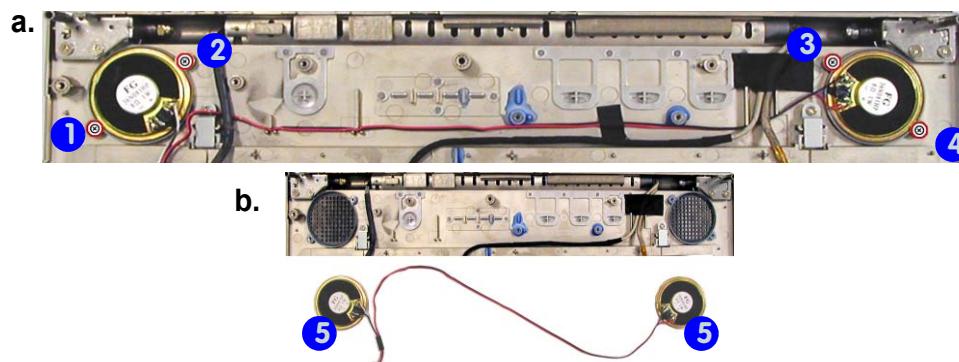

**Figure 2 - 23
LED Board
Removal
Sequence**

- a. Remove the screws.
- b. Lift the LED board off the top case assembly.

6. LED board
• 5 Screws

**Figure 2 - 24
Speakers
Removal
Sequence**

- a. Remove the screws.
- b. Lift the speakers off the top case assembly.

5. Speakers
• 4 Screws


Disassembly

Figure 2 - 25 LCD Removal Sequence

- a. Remove the screws.
- b. Unsnap the LCD front panel from the back.
- c. Remove the screw from the inverter.
- d. Disconnect the cables and remove the inverter.

Removing the Inverter


1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)) and bottom case ([page 2 - 17](#)).
2. Remove the rubber covers and screws "1 - 6" from the LCD ([Figure 2 - 25a](#)).
3. Run your finger around the middle of the frame to carefully unsnap the LCD front panel module "7" from the back ([Figure 2 - 25b](#)).
4. Remove screw "8" from the inverter, and disconnect cables "9 & 10" from the rear of the inverter ([Figure 2 - 25c](#)).
5. Lift the inverter "11" off the LCD assembly ([Figure 2 - 25d](#)).

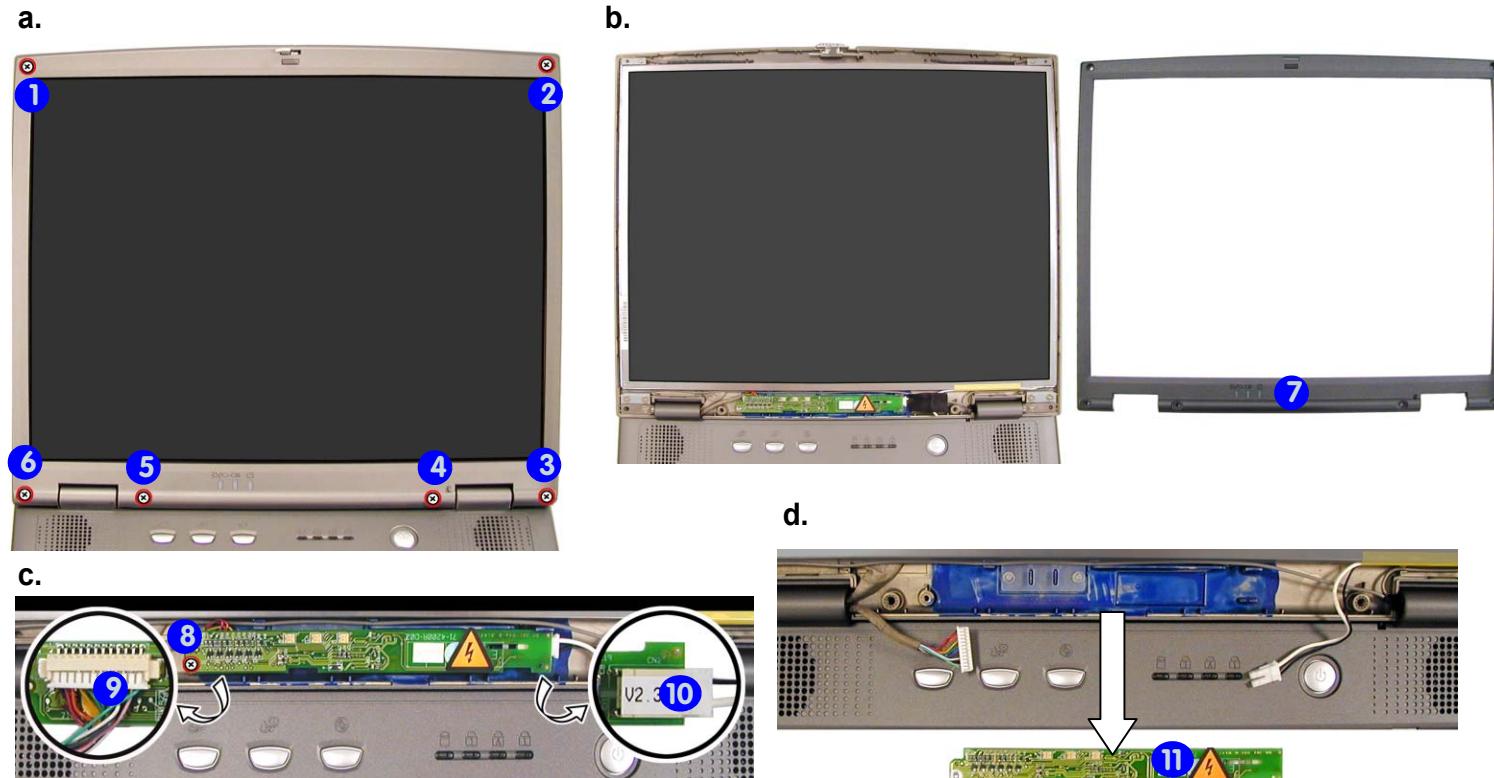

7. LCD Front Panel
11. Inverter
• 7 Screws

Removing the LCD Panel

1. Remove the battery ([page 2 - 7](#)), bay one device ([page 2 - 8](#)), hard disk assembly ([page 2 - 9](#)), bay two device ([page 2 - 10](#)), keyboard ([page 2 - 11](#)) CPU ([page 2 - 13](#)), palm rest ([page 2 - 16](#)), bottom case ([page 2 - 17](#)) and inverter ([page 2 - 26](#)).
2. Remove screws "1 - 8" and lift the LCD panel "9" off the top assembly ([Figure 2 - 26a](#)).
3. Remove screws "10 - 17" to separate the LCD panel from the brackets "18" ([Figure 2 - 25b](#)).

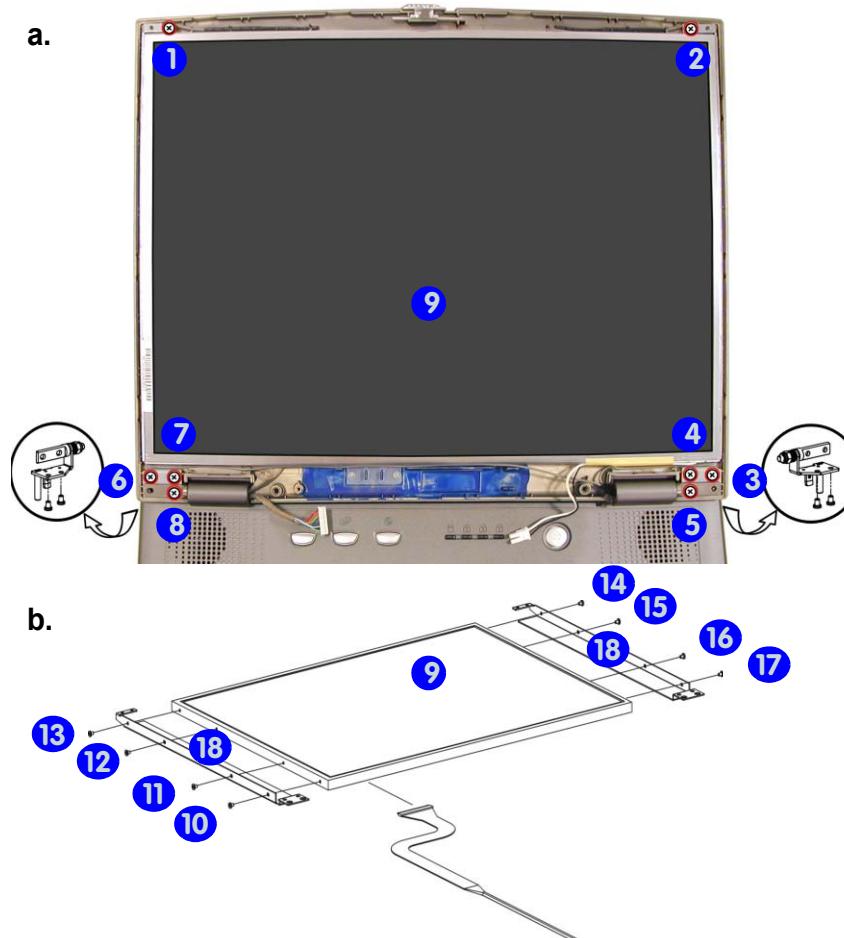

**Figure 2 - 26
LCD Removal
Sequence**

- a. Remove the screws.
- b. Lift the panel off the assembly and remove the screws to release the brackets.


9. LCD Panel
18. 2 * Brackets
• 16 Screws

2. Disassembly

Disassembly

Appendix A:Part Lists

This appendix breaks down the notebook PC's construction into a series of illustrations. The component part numbers are indicated in the tables opposite the drawings.

Note: This section indicates the *manufacturer's* part numbers. Your organization may use a different system, so be sure to cross-check any relevant documentation.

Note: Some assemblies may have parts in common (especially screws). However, the part lists DO NOT indicate the total number of duplicated parts used.

Note: Be sure to check any update notices. The parts shown in these illustrations are appropriate for the system at the time of publication. Over the product life, some parts may be improved or re-configured, resulting in *new* part numbers.


Part Lists**Part List Illustration Location**

The following table indicates where to find the appropriate part list illustration.

*Table 1 - 1***Part List Illustration Location**

Part	5600P	5620P	5800P	5820P
Top	page A - 3	page A - 14	page A - 25	page A - 36
Bottom	page A - 4	page A - 15	page A - 26	page A - 37
LCD 15"	page A - 5	page A - 16	page A - 27	page A - 38
Battery	page A - 6	page A - 17	page A - 28	page A - 39
Second Battery	page A - 7	page A - 18	page A - 29	page A - 40
TEAC CD-ROM	page A - 8	page A - 19	page A - 30	page A - 41
KME CD-RW	page A - 9	page A - 20	page A - 31	page A - 42
Combo	page A - 10	page A - 21	page A - 32	page A - 43
DVD-ROM	page A - 11	page A - 22	page A - 33	page A - 44
Audio DJ	page A - 12	page A - 23	page A - 34	page A - 45
FDD	page A - 13	page A - 24	page A - 35	page A - 46

Top (5600P)

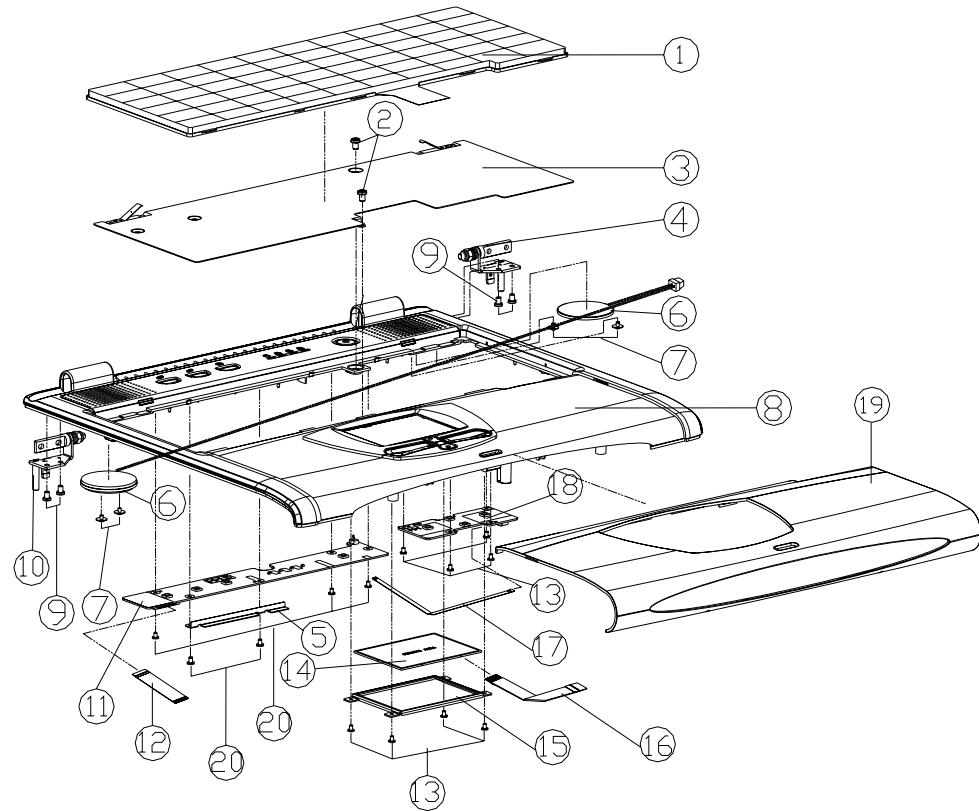


ITEM	PART	NAME	PART NO	REMARK
1	KEYBOARD		80-56P08-7G0	
2	SCREW M2.5*6L P BZ ICT NY		35-06125-6RA	
3	SHIELDING FOR KEYBOARD		33-56P07-010	
4	HINGE (RIGHT)		33-56P01-070	
5	FIXED BRACKET FOR CABLE		33-56P03-060	
6	SPEAKER W/CABLE		23-53610-281	
7	SCREW M2*5L P NI ICT NY W/WASHER		35-01020-2RE	
8	TOP CASE MODULE		39-56P02-010	
9	M3*0.5P*4L K1 NI ICT NY		35-BI130-4R0	
10	HINGE (LEFT)		33-56P01-080	
11	LED BOARD		77-56P04-D0X	
12	FFC CABLE FOR LED&HOTKEY		43-56P02-020	
13	SCREW M2*3L K1 NI ICT NY		35-BI120-3RA	
14	TOUCH PAD SYNAPTICS TM41PDG351-1		49-42002-010	
15	TOUCH PAD BRACKET		33-56P02-050	
16	FFC CABLE FOR TOUCH PAD		43-56P02-010	
17	FFC CABLE FOR CLICK		43-56P03-010	
18	CLICK BOARD		77-56002-D0X	
19	PALMREST		42-56P72-030	
20	SCREW M2*4L K1 NI ICT NY		35-BI120-4R0	

Figure 1 - 1
Top (5600P)

Part Lists

Bottom (5600P)

Figure 1 - 2
Bottom(5600P)

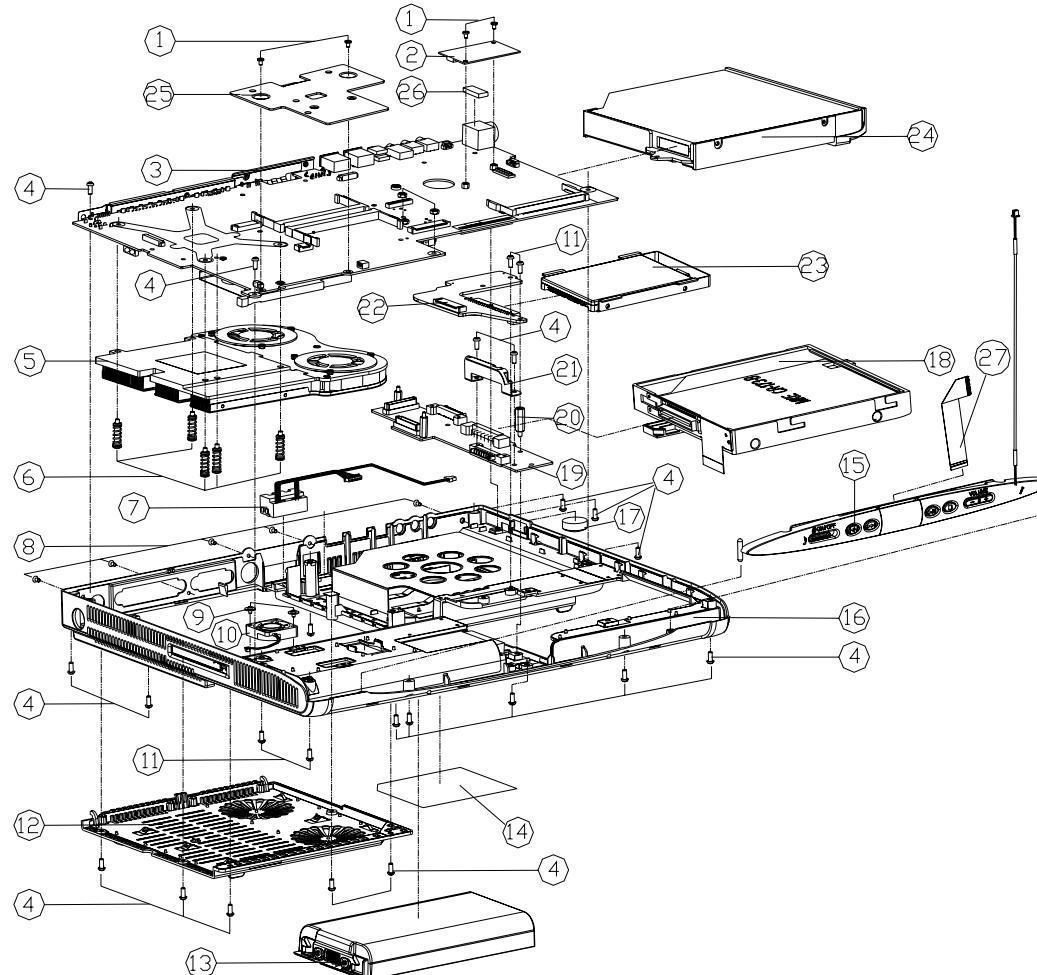

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-BI120-3RA	
2	MDC MODEM+TEL.CABLE MODULE	76-32200-100	
3	MAIN BOARD	77-56P00-D0X	
4	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
5	CPU HEATSINK MODULE	31-56P0N-100	
6	SCREW	35-41025-175	
7	WIRE CABLE FOR LAN AND MODEM	43-56P0U-010	
8	SCREW M2.5*4L F NI ICT NY	35-2II20-4RA	
9	SCREW M6*8.5 P NI ICT NY W/WASHER	35-01020-2RE	
10	FAN 25*25*6.5T 5V 0.09A CDR	23-A2514-050	
11	SCREW M2.5*4L K1 BK/D ICT NY	35-84125-4RA	
12	CPU COVER & SHIELDING PLATE MODULE PA	42-56P7S-100	
13	BATTERY S LI 4.0AH FOR SMP/SAMSUNG	87-56P8S-4D3	Reference Ass'y No (99-56P0S-100)
13	BATTERY S LI 4.0H FOR GLW/LG	87-56P8S-4E3	Reference Ass'y No (99-56P0S-020)
13	BATTERY S LI 3.4AH FOR SMP/PANASONIC	87-56P8S-4C1	Reference Ass'y No (99-56P0S-021)
13	BATTERY S LI 3.4AH FOR GLW/LG	87-56P8S-4E1	Reference Ass'y No (99-56P0S-100)
14	PRODUCT LABEL(TUV) 5600P	45-56P03-010	
15	AUDIO DJ ASS'Y	79-56P08-001	Reference Ass'y No (99-56P0S-110)
16	BOTTOM CASE-SHIELDING PLATE MODULE	39-56P03-010	
17	RUBBER PAD H=7mm (BACK)	47-56P23-020	
18	FDD ASS'Y 5600P	79-56P2J-010	Reference Ass'y No (99-56P0S-020)
18	CD-ROM ASS'Y 5600P	79-56P2Z-010	Reference Ass'y No (99-56P0S-020)
18	DVD ROM ASS'Y 5600P	79-56P2V-020	Reference Ass'y No (99-56P0S-070)
19	DC/DC BOARD	77-56P0C-D0X	
20	HEX H=16MM M=M2.5 F=M2.5	34-56P03-010	
21	COSMETIC COVER (METAL)	33-56P03-030	
22	HDD CONVERTER BOARD	77-5600N-D0X	
23	W/D HDD ASS'Y 5600P	79-56P2I-010	
24	CD-RW ASS'Y 5600P	79-56P2W-010	Reference Ass'y No (99-56P0S-080)
24	COMBO ASS'Y 5600P	79-56P2X-010	Reference Ass'y No (99-56P0S-080)
25	HEATSINK FOR PCMCIA	31-56P0N-020	
26	EMI GASKET(L18*W9*H3.5MM)	47-00190-181	
27	FFC CABLE FOR AUDIO DJ MODULE	43-56P08-010	

LCD 15" (5600P)

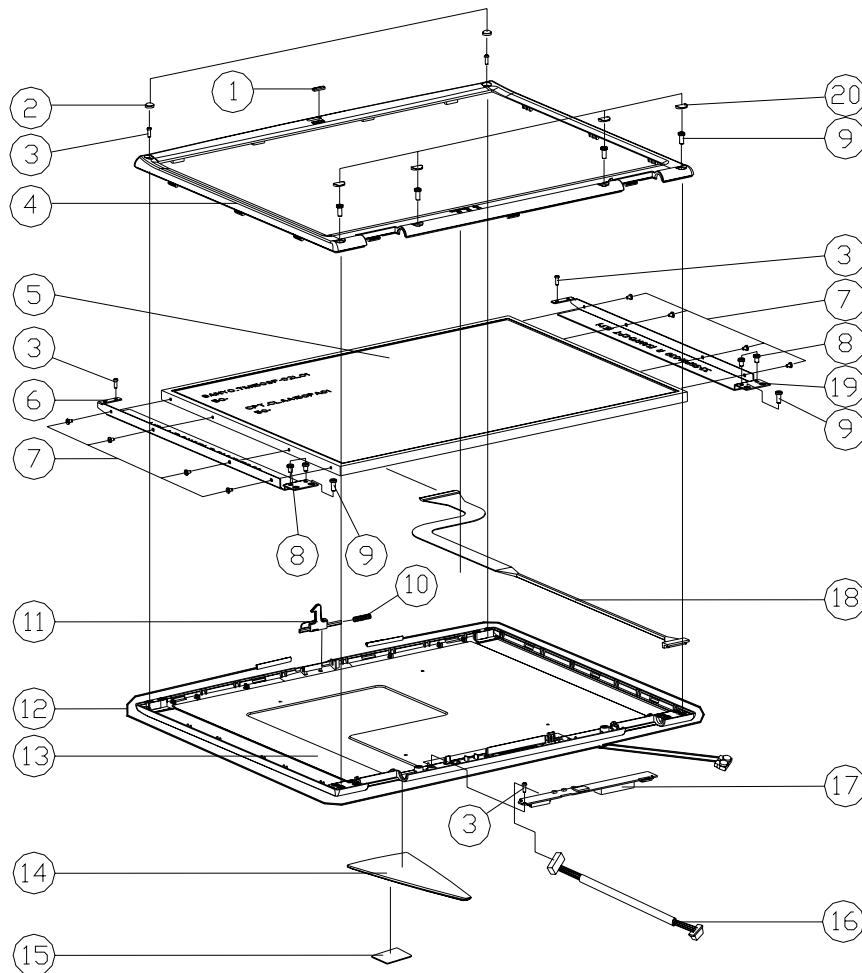



Figure 1 - 3
LCD 15" 5600P

ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR LCD (MIDDLE)	47-56P21-030	
2	RUBBER FOR LCD (TOP)	47-56P32-010	
3	SCREW M2*6L P NI ICT NY	35-01120-6RA	
4	LCD FRONT PANEL MODULE(15")	39-56P01-010	
5	LCD T CPT CLAA150PA01 15" SXGA+ 7.0MM	50-L5270-C00	
6	LCD BRACKET LEFT SANYO-CPT 15"	33-56P01-040	
7	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
8	SCREW M3*0.5P*4L KI NI ICT NY	35-B1130-4R0	
9	SCREW M3*0.5*7L KI NI ICT NY	35-B1130-7R0	
10	SPRING FOR HOOK φ3.7*15*0.3φ	38-21P30-011	
11	HOOK KNOB	42-56P81-010	
12	2.4GHZ DIPOLE ANTENNA Ø0.38MM L=RIGHT	23-712R4-002	
13	BACK PANEL MODULE	39-56P01-020	
14	NAMEPLATE BASE	42-56P03-010	
15	NAME PLATE "NOTEBOOK"	45-42001-010	
16	WIRE CABLE FOR INVERTER	43-56P0R-010	
17	INVERTER BOARD	77-4200R-D02	
18	LCD WIRE CABLE FOR CPT	43-56P01-030	
19	LCD BRACKETRIGHT SANYO-CPT 15"	33-56P01-030	
20	RUBBER FOR LCD (BOTTOM)	47-56P33-010	

Part Lists

Battery (5600P)

Figure 1 - 4
Battery (5600P)

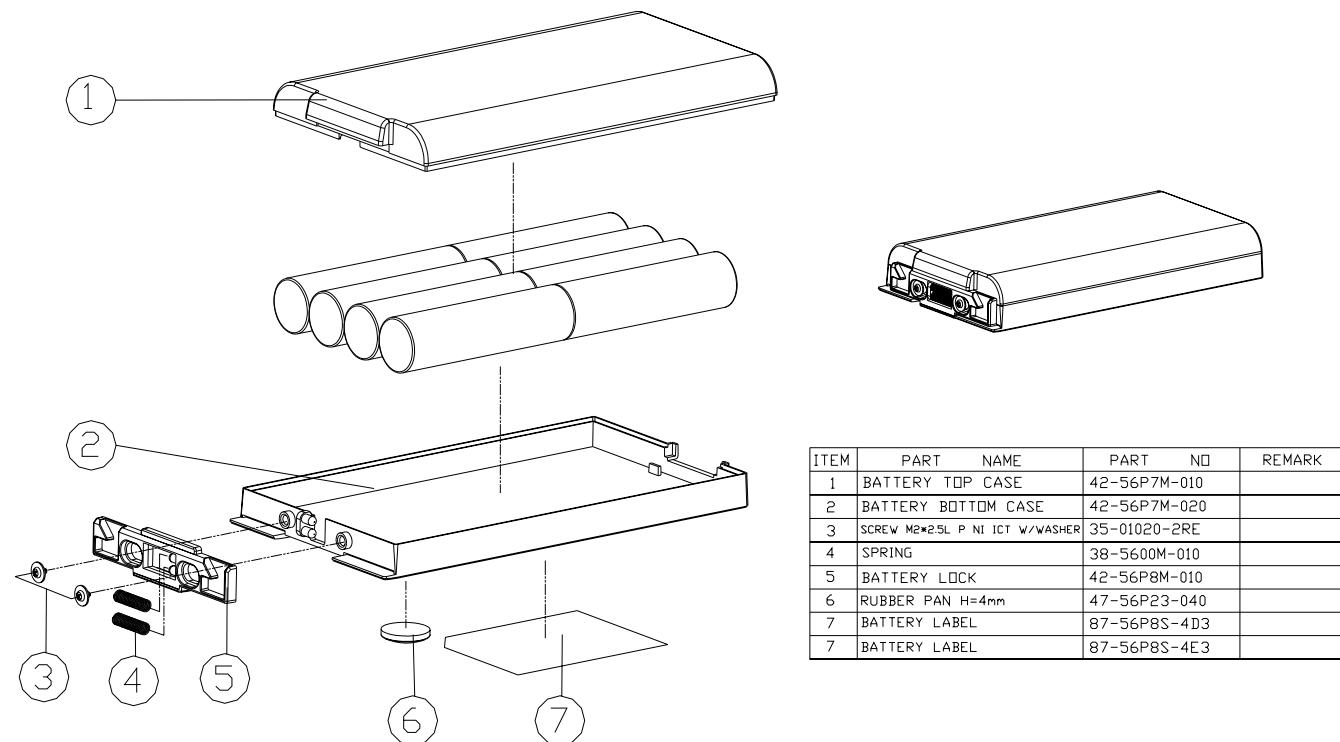

ITEM	PART NAME	PART NO	REMARK
1	BATTERY TOP CASE	42-56P7M-010	
2	BATTERY BOTTOM CASE	42-56P7M-020	
3	SCREW M2*25L P NI IGT W/WASHER	35-01020-2RE	
4	SPRING	38-5600M-010	
5	BATTERY LOCK	42-56P8M-010	
6	RUBBER PAD H=4mm	47-56P23-040	
7	BATTERY LABEL	87-56P8S-4D3	
7	BATTERY LABEL	87-56P8S-4E3	

Second Battery (5600P)


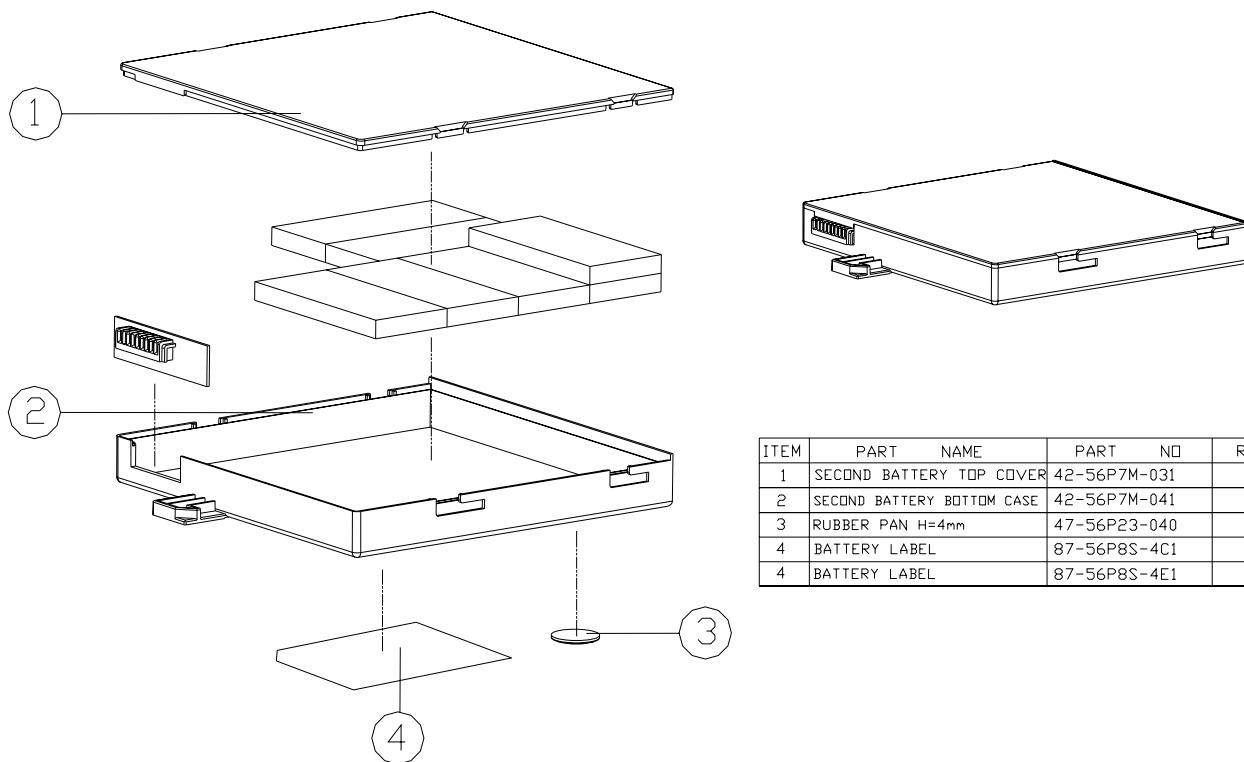


Figure 1 - 5
Second Battery
(5600P)

ITEM	PART NAME	PART NO	REMARK
1	SECOND BATTERY TOP COVER	42-56P7M-031	
2	SECOND BATTERY BOTTOM CASE	42-56P7M-041	
3	RUBBER PAN H=4mm	47-56P23-040	
4	BATTERY LABEL	87-56P8S-4C1	
4	BATTERY LABEL	87-56P8S-4E1	

TEAC CD-ROM Drive (5600P)

Figure 1 - 6
CD-ROM TEAC
(5600P)

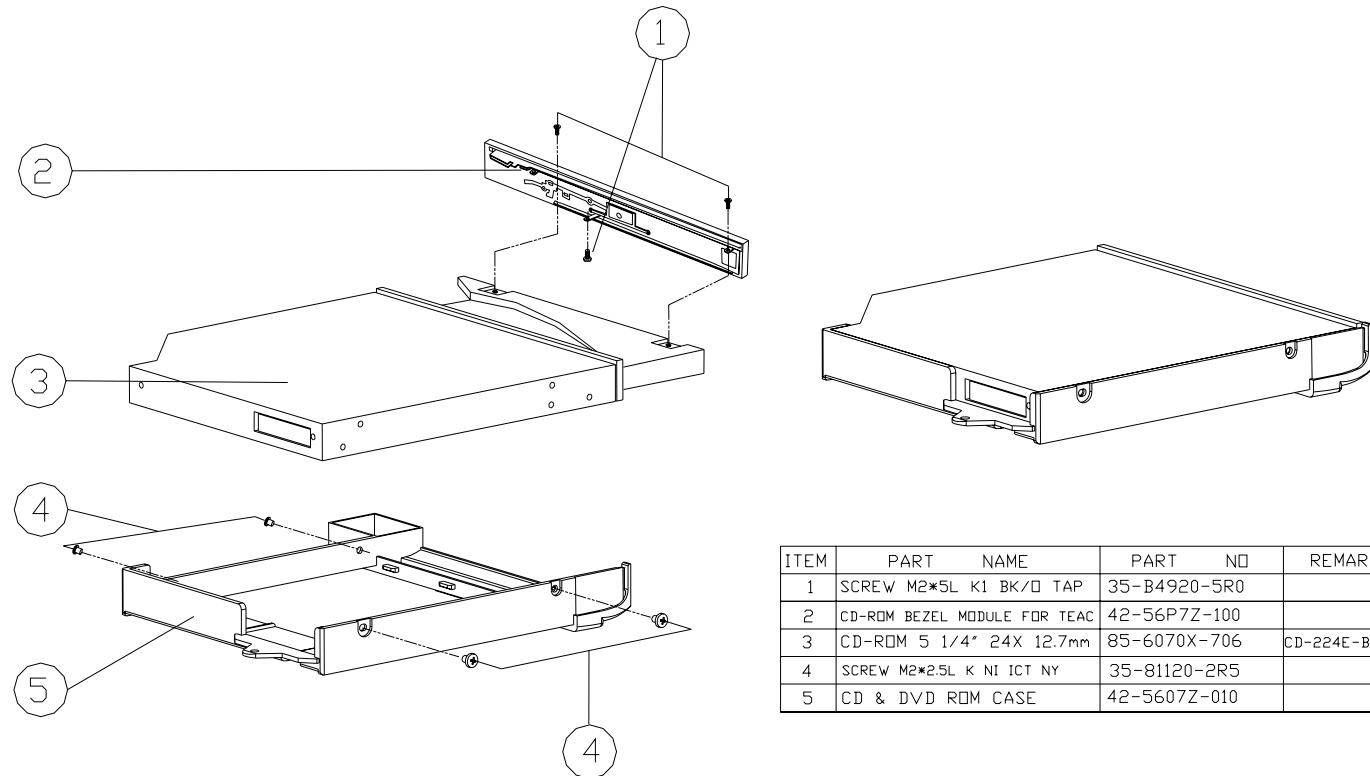

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*5L K1 BK/D TAP	35-B4920-5R0	
2	CD-ROM BEZEL MODULE FOR TEAC	42-56P7Z-100	
3	CD-ROM 5 1/4" 24X 12.7mm	85-6070X-706	CD-224E-B20
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD & DVD ROM CASE	42-5607Z-010	

KME CD-RW Drive (5600P)



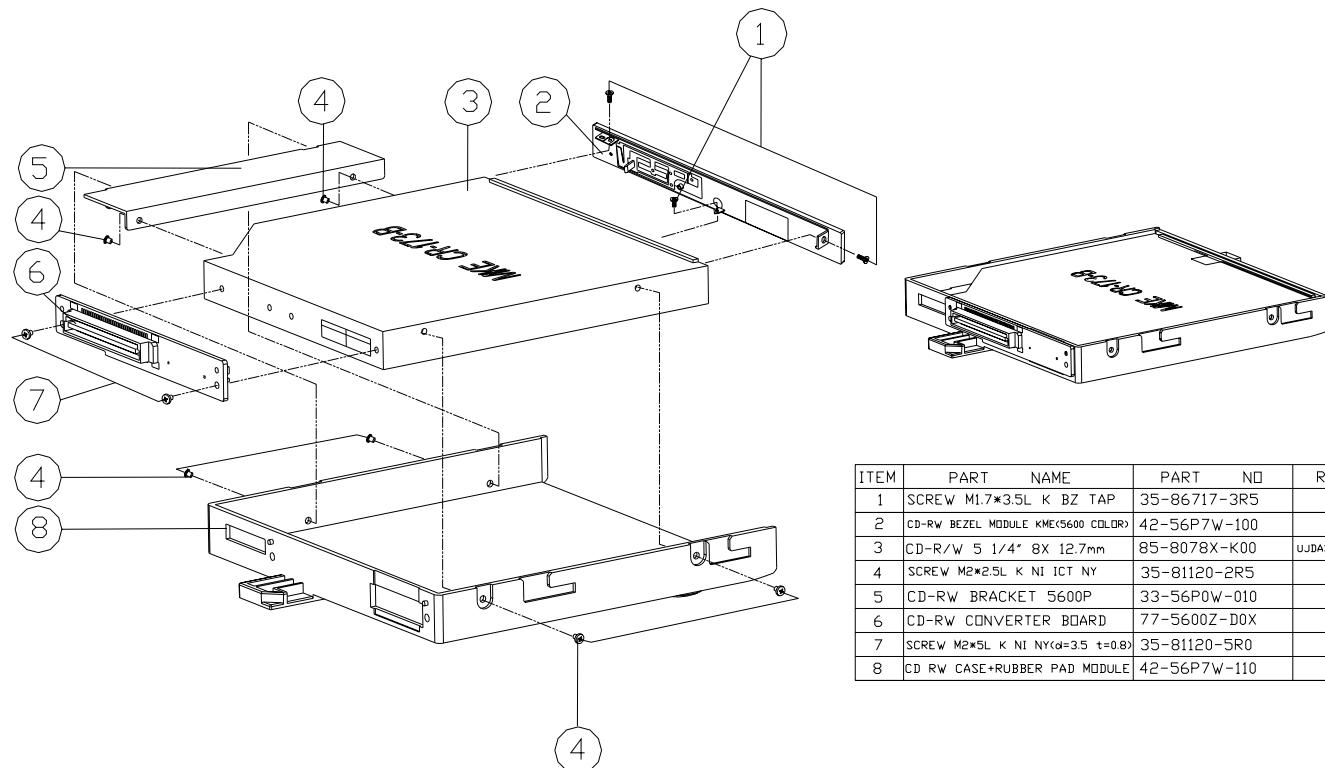


Figure 1 - 7
CD-RW KME
(5600P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M1.7*3.5L K BZ TAP	35-86717-3R5	
2	CD-RW BEZEL MODULE KME(5600 COLOR)	42-56P7W-100	
3	CD-R/W 5 1/4" 8X 12.7mm	85-8078X-K00	UJDA330CL-Z KME
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD-RW BRACKET 5600P	33-56P0W-010	
6	CD-RW CONVERTER BOARD	77-5600Z-D0X	
7	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
8	CD RW CASE+RUBBER PAD MODULE	42-56P7W-110	

Combo Drive (5600P)

Figure 1 - 8
Combo (5600P)

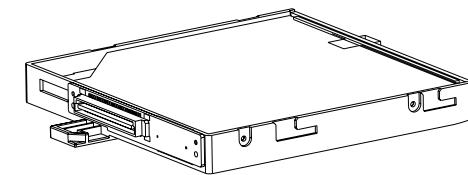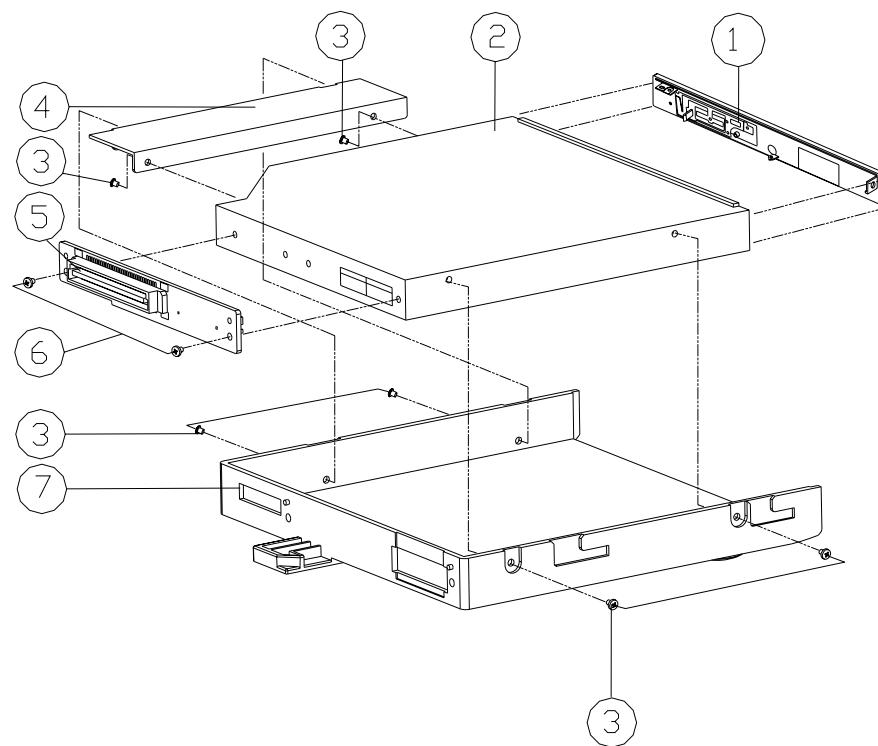

ITEM	PART NAME	PART NO	REMARK
1	SAMSUNG COMBO BEZEL MODULE	42-56P7X-100	
2	CD-RW/DVD 5 1/4" 8X 12.7mm	85-9078X-S00	SN-308B SAMSUNG
3	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
4	CD-RW BRACKET 5600P	33-56P0W-010	
5	CD-RW CONVERTER BOARD	77-5600Z-D0X	
6	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
7	CD RW CASE+RUBBER PAD MODULE	42-56P7W-110	

DVD-ROM Drive (5600P)


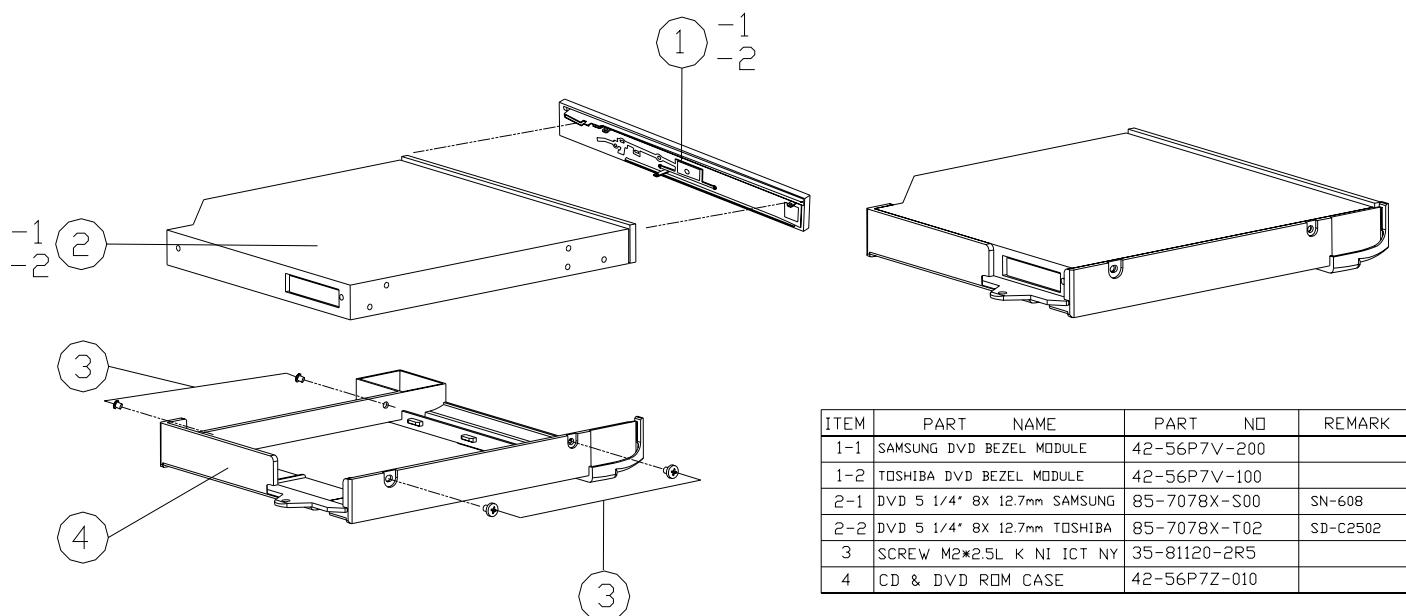


Figure 1 - 9
DVD (5600P)

ITEM	PART NAME	PART NO	REMARK
1-1	SAMSUNG DVD BEZEL MODULE	42-56P7V-200	
1-2	TOSHIBA DVD BEZEL MODULE	42-56P7V-100	
2-1	DVD 5 1/4" 8X 12.7mm SAMSUNG	85-7078X-S00	SN-608
2-2	DVD 5 1/4" 8X 12.7mm TOSHIBA	85-7078X-T02	SD-C2502
3	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
4	CD & DVD ROM CASE	42-56P7Z-010	

Audio DJ (5600P)

Figure 1 - 10
Audio DJ (5600P)

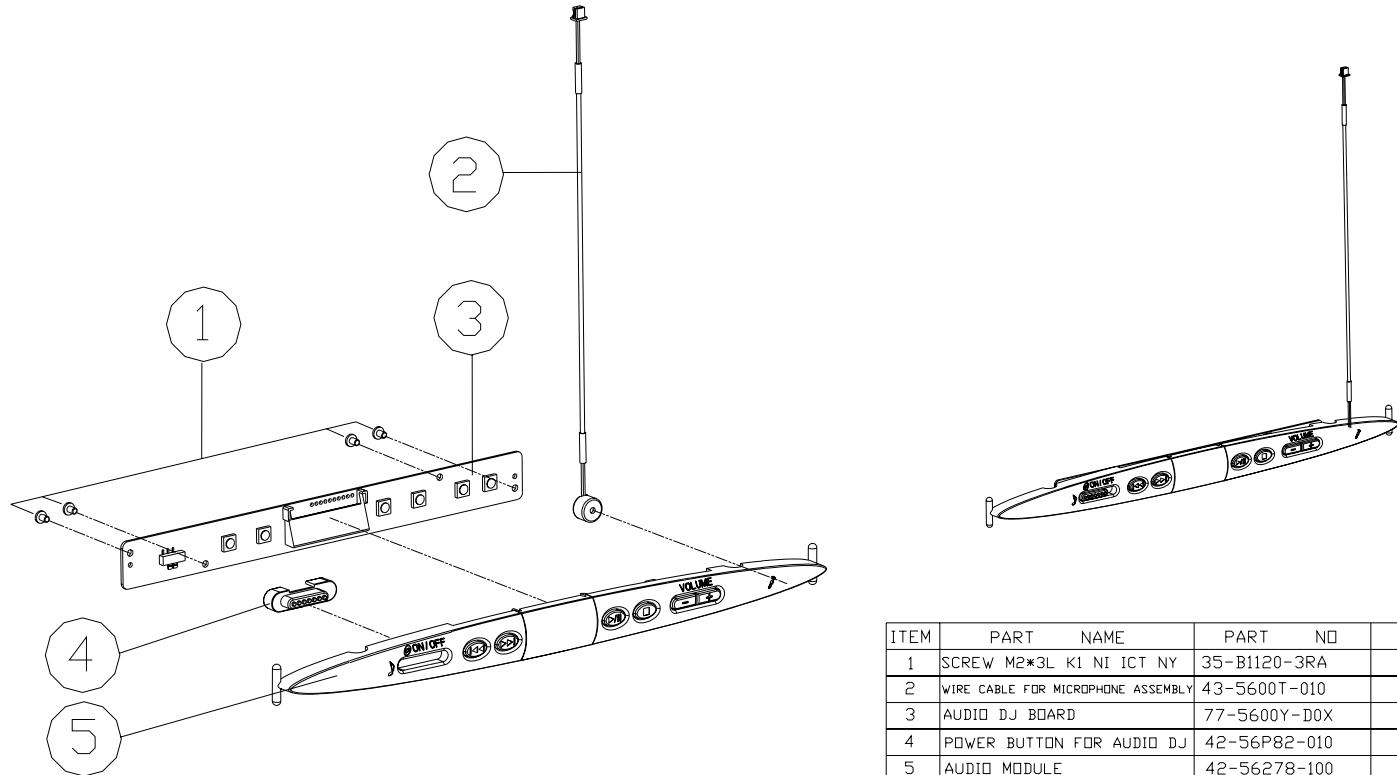

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	WIRE CABLE FOR MICROPHONE ASSEMBLY	43-5600T-010	
3	AUDIO DJ BOARD	77-5600Y-D0X	
4	POWER BUTTON FOR AUDIO DJ	42-56P82-010	
5	AUDIO MODULE	42-56278-100	

Floppy Disk Drive (5600P)



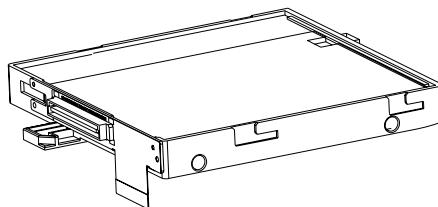


Figure 1 - 11
Floppy Disk Drive
(5600P)

ITEM	PART NAME	PART NO	REMARK
1	3.5" FDD 12.7mm Y-E DATA	85-11700-Y01	YD-702J-6637J
2	FDD BRACKET 5600P	33-56P0J-010	
3	SCREW M2.5*4L K1 BK/D ICT NY	35-B4125-4RA	
4	FDD CASE+RUBBER PAD MODULE	42-56P7J-100	
5	FPC CABLE MODULE FOR FDD ADAPTOR	43-5600J-010	
6	SCREW M2*4L K BZ ICT NY	35-86120-4RA	


Part Lists**Top (5620P)**

*Figure 1 - 12
Top (5620P)*

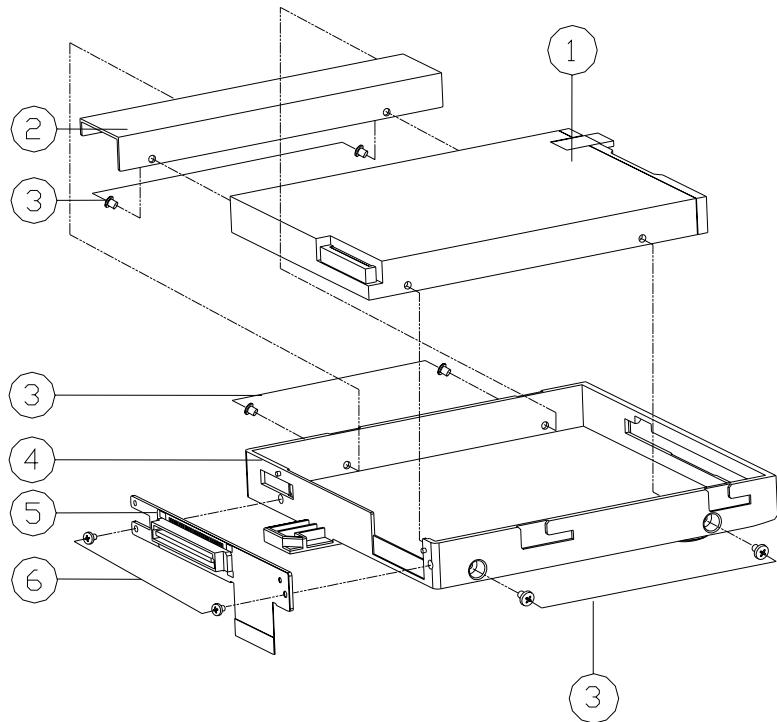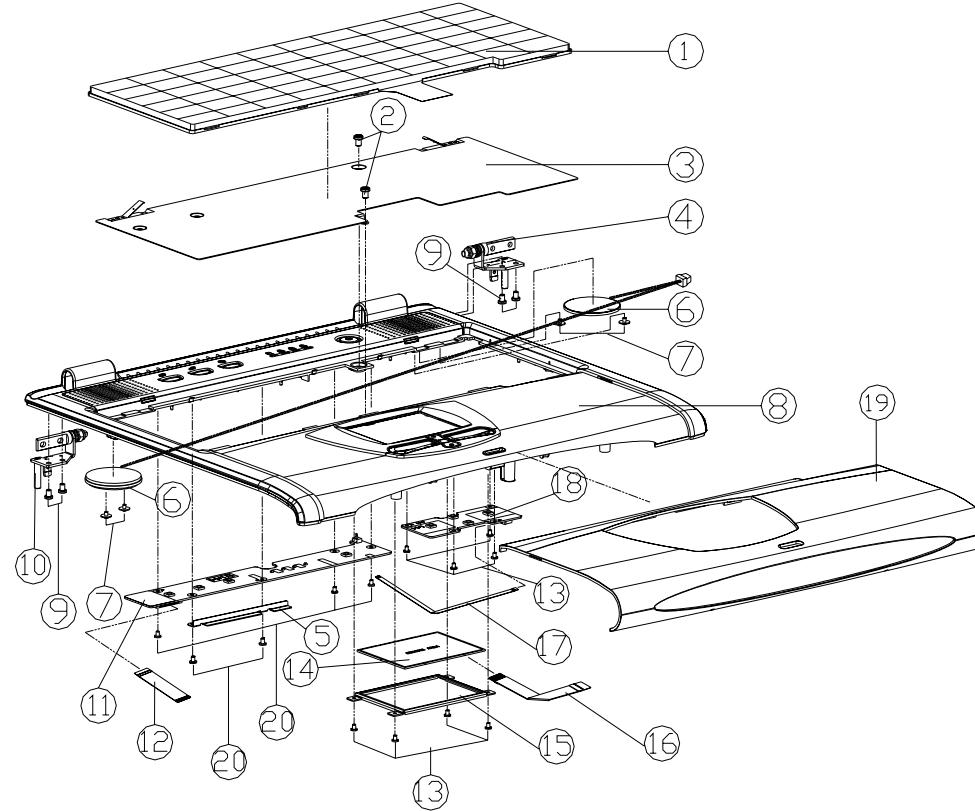

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD	80-56P08-7G0	
2	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
3	SHIELDING FOR KEYBOARD	33-56P07-010	
4	HINGE (RIGHT)	33-56P01-070	
5	FIXED BRACKET FOR CABLE	33-56P03-060	
6	SPEAKER W/CABLE	23-53610-281	
7	SCREW M2*5L P NI ICT NY W/WASHER	35-01020-2RE	
8	TOP CASE MODULE	39-56202-010	
9	M3*0.5P*4L KI NI ICT NY	35-B1130-4R0	
10	HINGE (LEFT)	33-56P01-080	
11	LED BOARD	77-56P04-D0X	
12	FFC CABLE FOR LED&HOTKEY	43-56P02-020	
13	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
14	TOUCH PAD SYNAPTICS TM14PG035I-I	49-42002-010	
15	TOUCH PAD BRACKET	33-56P02-050	
16	FFC CABLE FOR TOUCH PAD	43-56P02-010	
17	FFC CABLE FOR CLICK	43-56P03-010	
18	CLICK BOARD	77-56002-D0X	
19	PALMREST	42-56272-030	
20	SCREW M2*4L KI NI ICT NY	35-B1120-4R0	

Bottom (5620P)

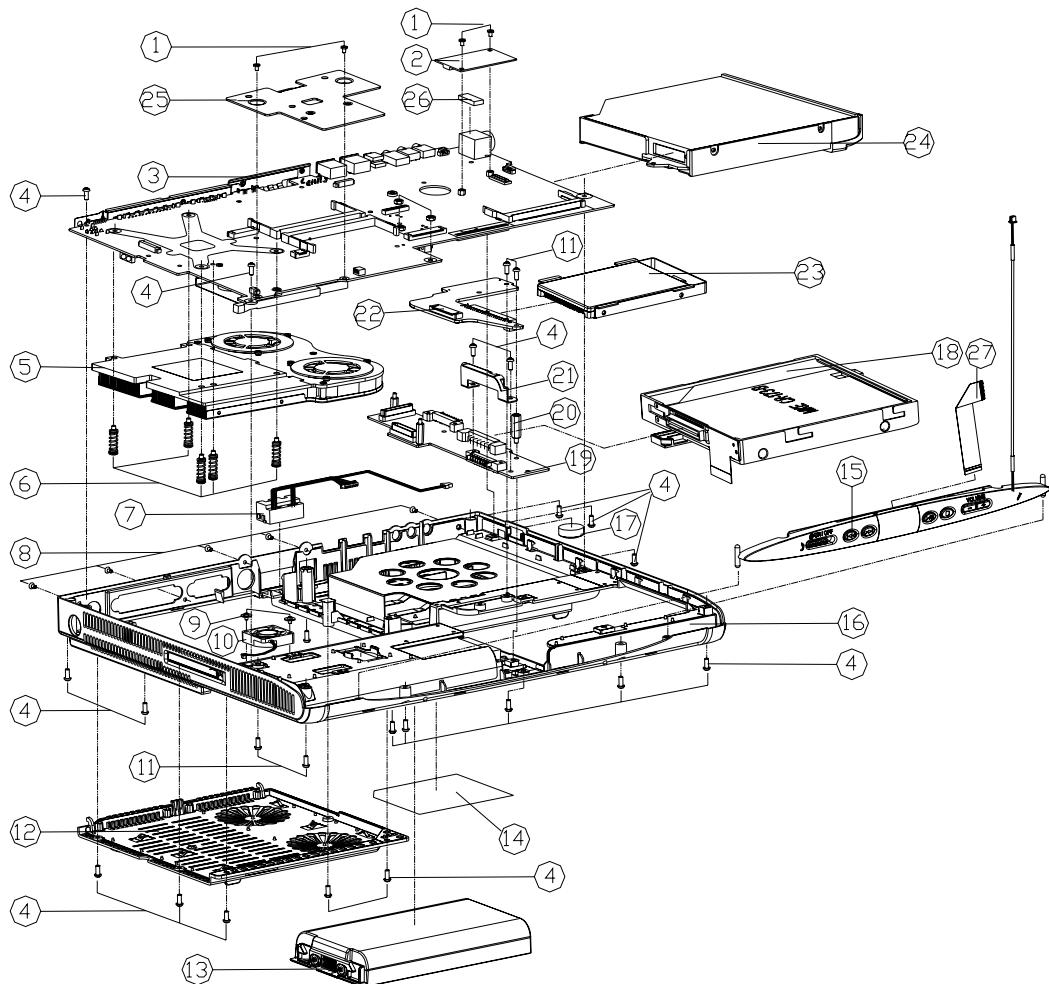


ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	MDC MODEM+TEL.CABLE MODULE	76-32200-100	
3	MAIN BOARD	77-56P00-DOX	
4	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
5	CPU HEATSINK MODULE	31-56P0N-100	
6	SCREW	35-41025-175	
7	WIRE CABLE FOR LAN AND MODEM	43-56POU-010	
8	SCREW M2*4L F NI ICT NY	35-B1120-4RA	
9	SCREW M2*5L P NI ICT NY W/WASHER	35-01020-2RE	
10	FAN 25*25*6.5T 5V 0.09A CDR	23-A2514-050	
11	SCREW M2.5*4L K1 BK/D ICT NY	35-B4125-4RA	
12	CPU COVER + SHIELDING PLATE+RUBBER PAD MODULE	42-5627S-100	
13	BATTERY S LI 4.0AH FOR SMP/SAMSUNG	87-5628S-4D3	Reference Ass'y No. (99-56205-360)
13	BATTERY S LI 4AH FOR GLV/LG	87-5628S-4E3	Reference Ass'y No. (99-56205-361)
13	BATTERY S LI 3.4AH FOR SMP/PANASONIC	87-5628S-4C1	Reference Ass'y No. (99-56205-362)
13	BATTERY S LI 3.3AH FOR GLV/LG	87-5628S-4E1	Reference Ass'y No. (99-56205-363)
14	PRODUCT LABELLTUV 5620P	45-56203-010	
15	AUDIO DJ ASS'Y	79-56P08-001	Reference Ass'y No. (99-56205-110)
16	BOTTOM CASE+SHIELDING PLATE MODULE	39-56203-010	
17	RUBBER PAD H=7mm (BACK)	47-56P23-020	
18	FDD ASS'Y 5600P	79-5622J-010	Reference Ass'y No. (99-56205-140)
18	CD-RDM ASS'Y 5600P	79-5622Z-010	Reference Ass'y No. (99-56205-141)
18	DVD RDM ASS'Y 5600P	79-5622V-020	Reference Ass'y No. (99-56205-170)
19	DC/DC BOARD	77-56P0C-DOX	
20	HEX H=16MM M=M2.5 F=M2.5	34-56P03-010	
21	COSMETIC COVER (METAL)	33-56P03-030	
22	HDD CONVERTER BOARD	77-5600N-DOX	
23	W/D HDD ASS'Y 5600P	79-56P21-010	
24	CD-RW ASS'Y 5600P	79-5622W-010	Reference Ass'y No. (99-56205-150)
24	COMBO ASS'Y 5600P	79-5622X-010	Reference Ass'y No. (99-56205-150)
25	HEATSINK FOR PCMCIA	31-56P0N-020	
26	EMI GASKET(L18*W9*H3.5MM)	47-00190-181	
27	FFC CABLE FOR AUDIO DJ MODULE	43-56P08-010	

Figure 1 - 13
Bottom (5620P)

Part Lists

LCD 15"(5620P)

*Figure 1 - 14
LCD 15" (5620P)*

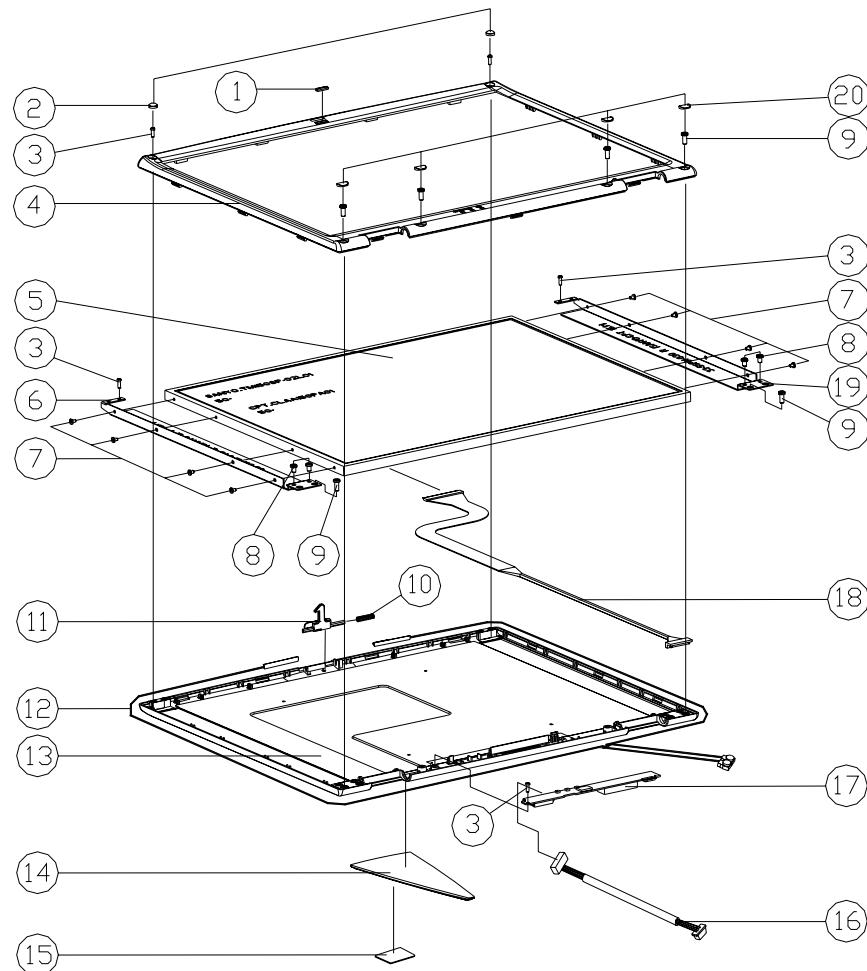

ITEM	PART NO	NAME	PART NO	REMARK
1	47-56221-030	RUBBER FOR LCD (MIDDLE)		
2	47-56232-010	RUBBER FOR LCD (TOP)		
3	35-01120-6RA	SCREW M2x6L P NI ICT NY		
4	39-56201-010	LCD FRONT PANEL MODULE(15")		
5	50-L5270-C00	LCD T CPT CLAA150PA01 150° SXGA 7.0W		
6	33-56P01-040	LCD BRACKET (LEFT SANYO-CPT 15")		
7	35-B1120-3RA	SCREW M2x3L KI NI ICT NY		
8	35-B1130-4R0	SCREW M3x0.5x4L KI NI ICT NY		
9	35-B1130-7R0	SCREW M3x0.5x7L KI NI ICT NY		
10	38-21P30-011	SPRING FOR HOOK (Φ3.7x15x0.3d)		
11	42-56P81-010	HOOK KNOB		
12	23-712R4-002	2.4GHZ DIPOLE ANTENNA DD132MM L=RIGHT+LEFT		
13	39-56201-020	BACK PANEL MODULE		
14	42-56203-010	NAMEPLATE BASE		
15	45-18N01-010	NAME PLATE "NOTEBOOK"		
16	43-56P01-010	WIRE CABLE FOR INVERTER		
17	77-4200R-D02	INVERTER BOARD		
18	43-56P01-030	LCD WIRE CABLE FOR CPT		
19	33-56P01-030	LCD BRACKET(RIGHT SANYO-CPT 15")		
20	47-56233-010	RUBBER FOR LCD (BOTTON)		

Battery (5620P)



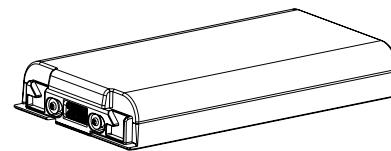


Figure 1 - 15
Battery (5620P)

ITEM	PART NAME	PART NO	REMARK
1	BATTERY TOP CASE	42-5627M-010	
2	BATTERY BOTTOM CASE	42-5627M-020	
3	SCREW M2*2.5L P NI ICT W/WASHER	35-01020-2RE	
4	SPRING	38-5600M-010	
5	BATTERY LOCK	42-58P8M-010	
6	RUBBER PAN H=4mm	47-56223-040	
7	BATTERY LABEL	87-5628S-4D3	
7	BATTERY LABEL	87-5628S-4E3	

Second Battery (5620P)

Figure 1 - 16
Second Battery
(5620P)

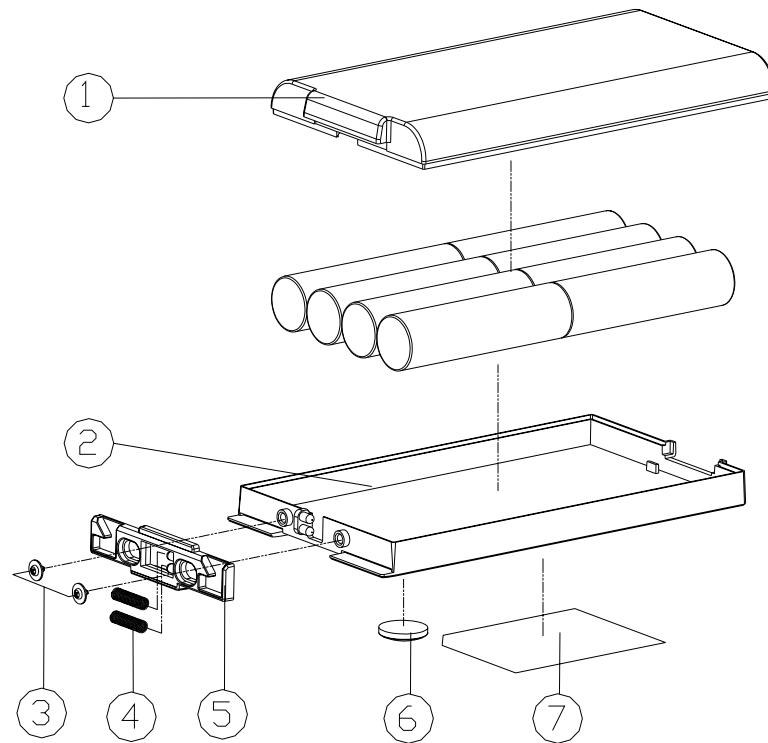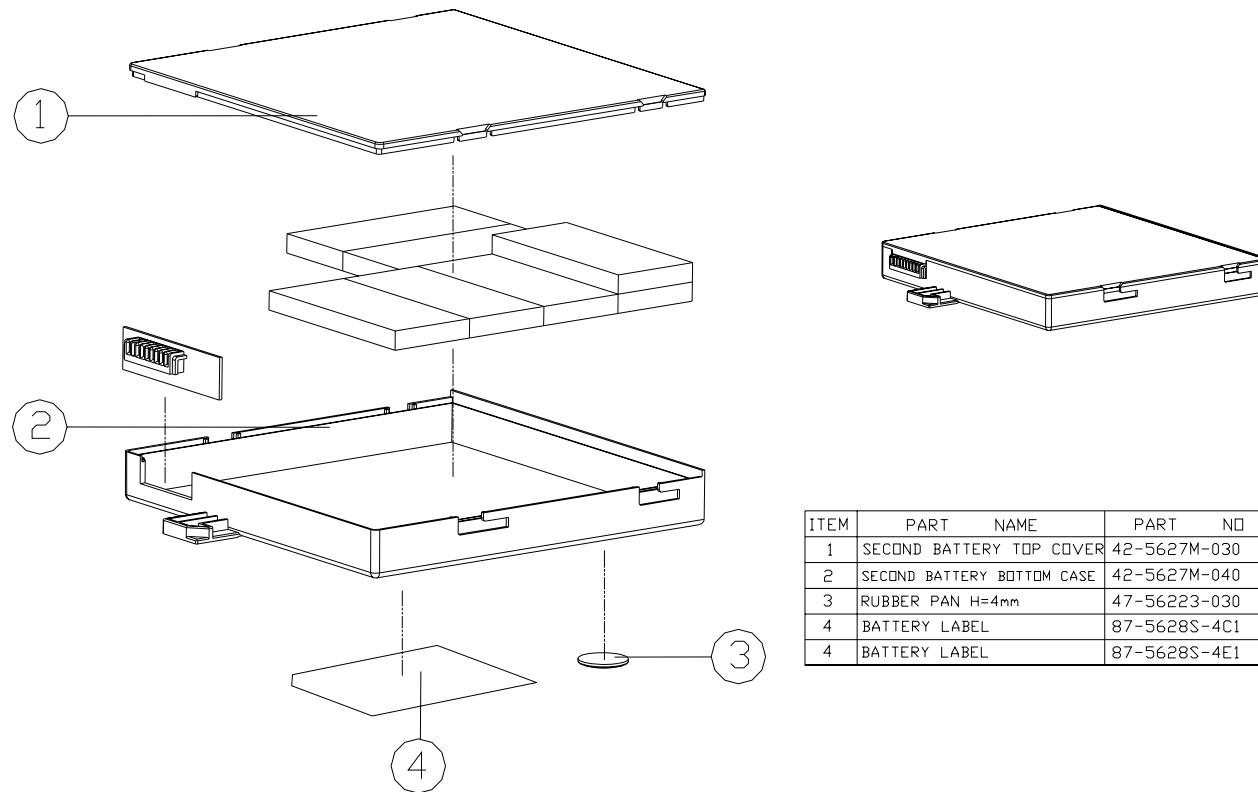

ITEM	PART NAME	PART NO	REMARK
1	SECOND BATTERY TOP COVER	42-5627M-030	
2	SECOND BATTERY BOTTOM CASE	42-5627M-040	
3	RUBBER PAN H=4mm	47-56223-030	
4	BATTERY LABEL	87-5628S-4C1	
4	BATTERY LABEL	87-5628S-4E1	

TEAC CD-ROM Drive (5620P)



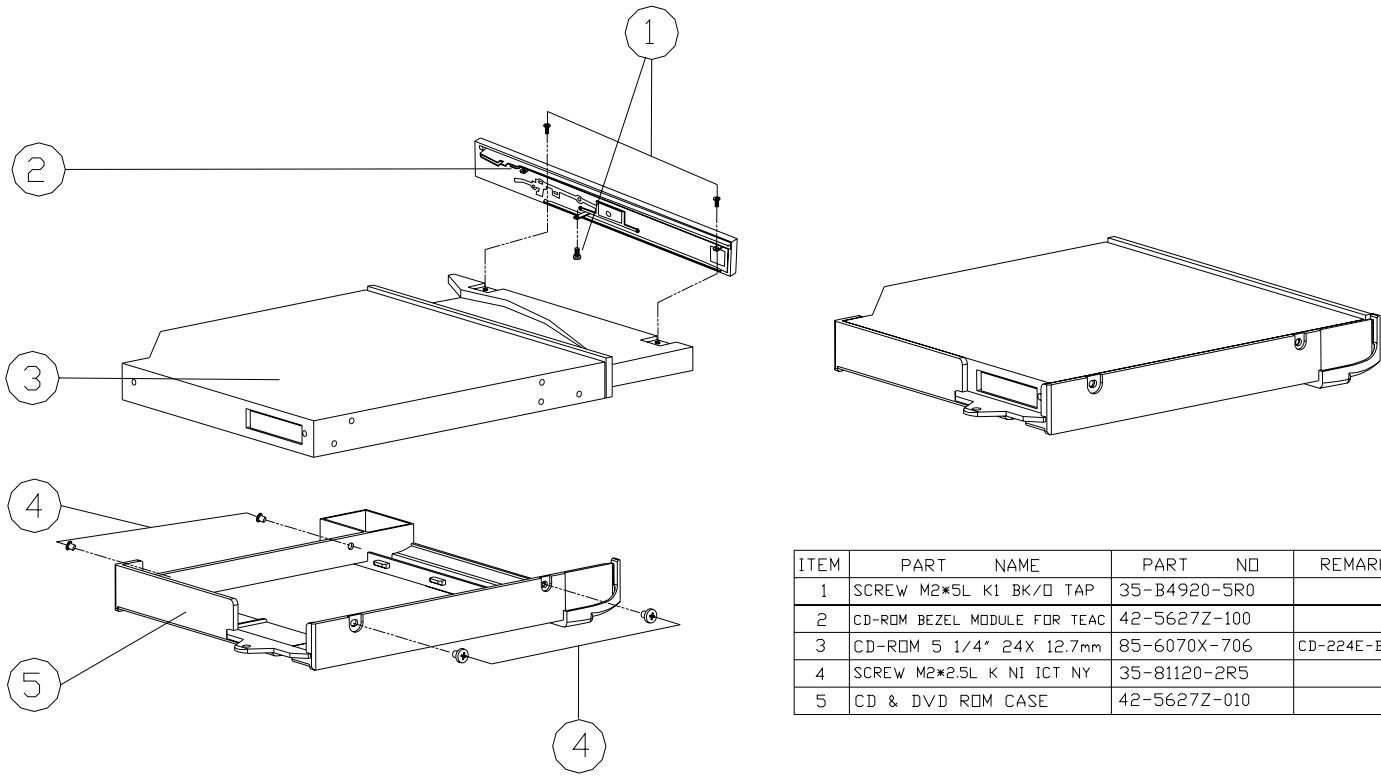


Figure 1 - 17
TEAC CD-ROM
Drive
(5620P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*5L K1 BK/D TAP	35-B4920-5R0	
2	CD-ROM BEZEL MODULE FOR TEAC	42-5627Z-100	
3	CD-ROM 5 1/4" 24X 12.7mm	85-6070X-706	CD-224E-B20
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD & DVD ROM CASE	42-5627Z-010	

KME CD-RW Drive (5620P)

Figure 1 - 18
KME CD-RW Drive
(5620P)

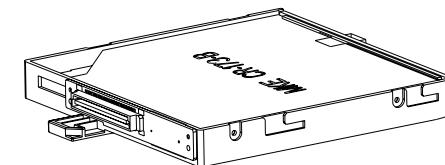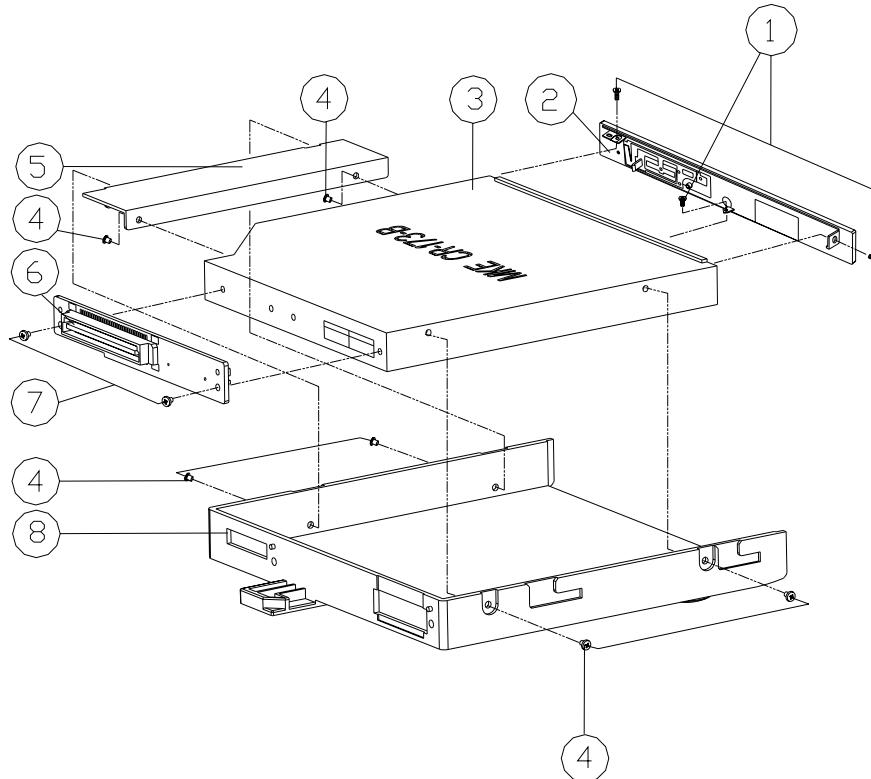

ITEM	PART NAME	PART NO	REMARK
1	SCREW M1.7*3.5L K BZ TAP	35-86717-3R5	
2	CD-RW BEZEL MODULE KME<5600 COLOR>	42-5627W-100	
3	CD-R/W 5 1/4" 8X 12.7mm	85-8078X-K00	UJDA330CL-Z KME
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD-RW BRACKET 5600P	33-56P0W-010	
6	CD-RW CONVERTER BOARD	77-5600Z-D0X	
7	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
8	CD RW CASE+RUBBER PAD MODULE	42-5627W-110	

Combo Drive (5620P)



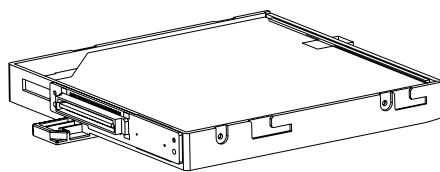


Figure 1 - 19
Combo Drive
(5620P)

ITEM	PART NAME	PART NO	REMARK
1	SAMSUNG COMBO BEZEL MODULE	42-5620X-100	
2	CD-RW/DVD 5 1/4" 8X 12.7mm	85-907BX-S00	SN-308B SAMSUNG
3	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
4	CD-RW BRACKET 5600P	33-56P0W-010	
5	CD-RW CONVERTER BOARD	77-5600Z-D0X	
6	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
7	CD RW CASE+RUBBER PAD MODULE	42-5627W-110	

DVD-ROM Drive (5620P)

Figure 1 - 20
DVD-ROM Drive
(5620P)

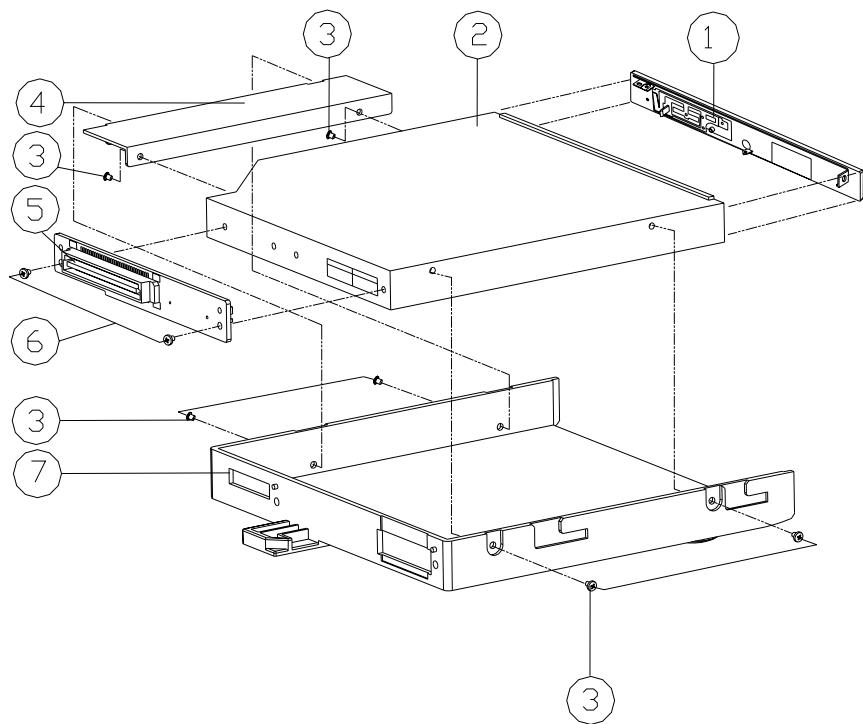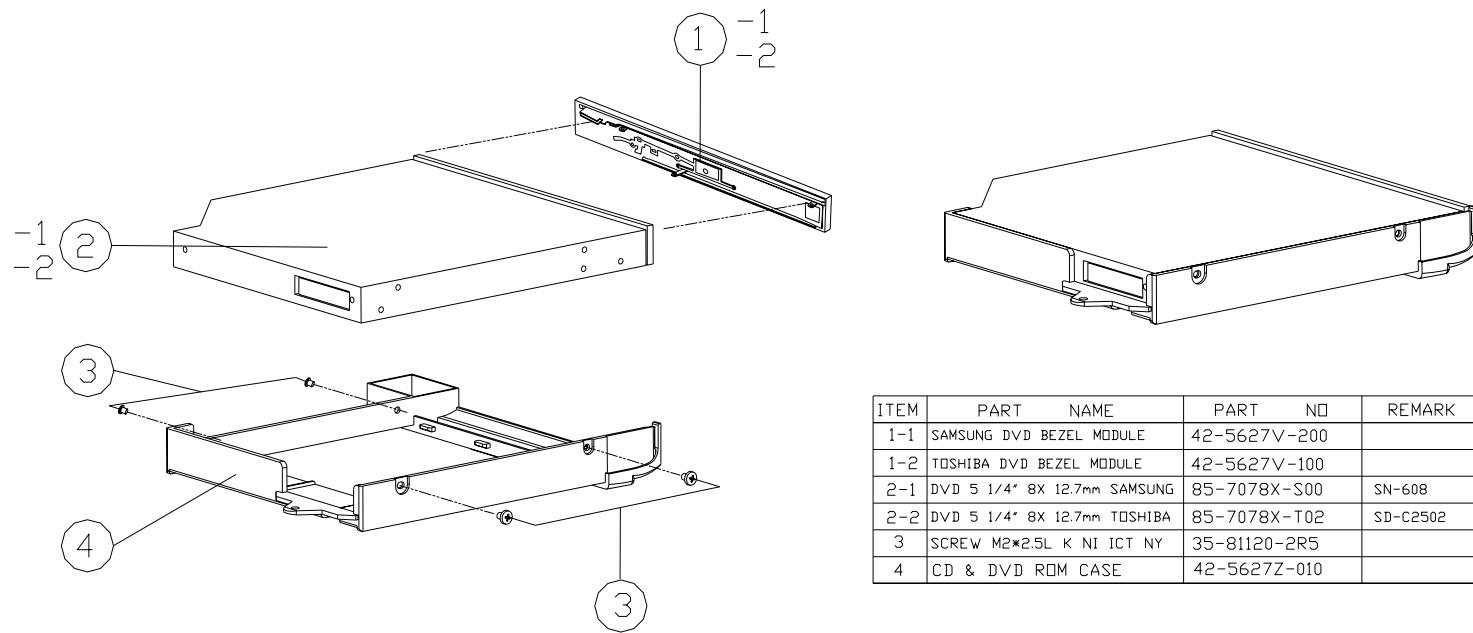

ITEM	PART NAME	PART NO	REMARK
1-1	SAMSUNG DVD BEZEL MODULE	42-5627V-200	
1-2	TOSHIBA DVD BEZEL MODULE	42-5627V-100	
2-1	DVD 5 1/4" 8X 12.7mm SAMSUNG	85-7078X-S00	SN-608
2-2	DVD 5 1/4" 8X 12.7mm TOSHIBA	85-7078X-T02	SD-C2502
3	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
4	CD & DVD ROM CASE	42-5627Z-010	

Audio DJ (5620P)



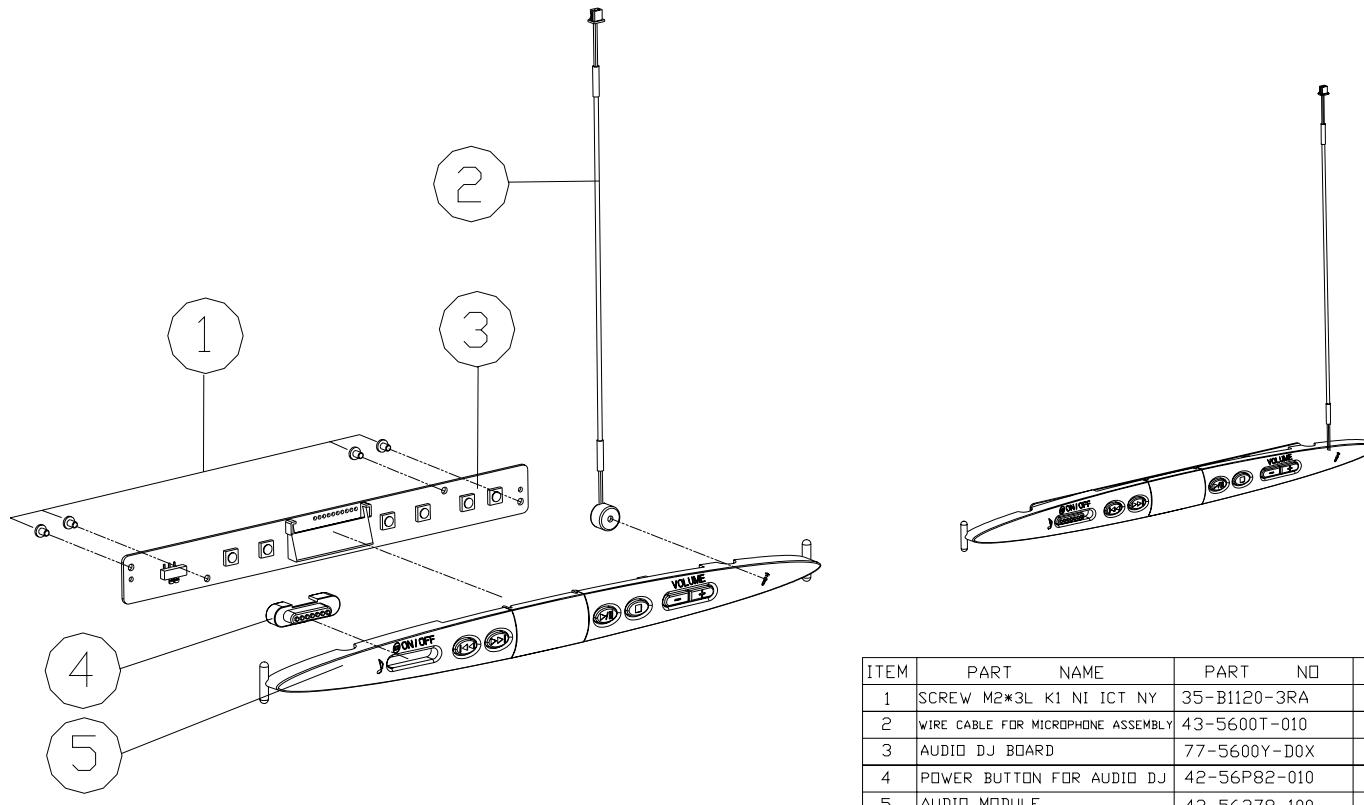


Figure 1 - 21
Audio DJ
(5620P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	WIRE CABLE FOR MICROPHONE ASSEMBLY	43-5600T-010	
3	AUDIO DJ BOARD	77-5600Y-D0X	
4	POWER BUTTON FOR AUDIO DJ	42-56P82-010	
5	AUDIO MODULE	42-56278-100	

Floppy Disk Drive (5620P)

Figure 1 - 22
Floppy Disk Drive
(5620P)

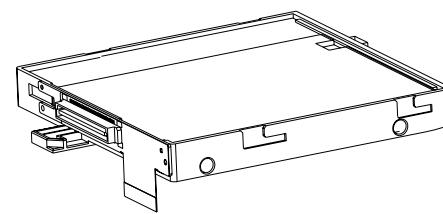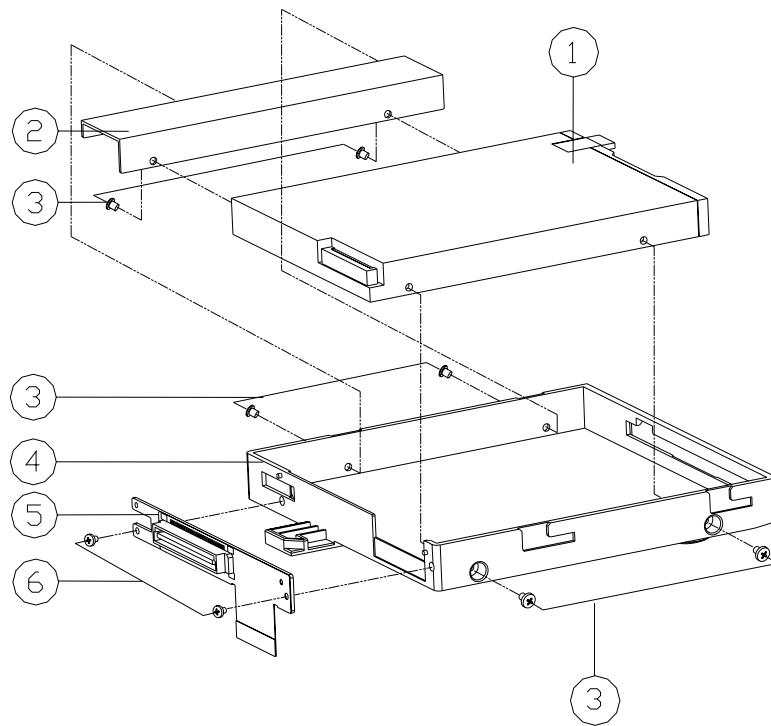

ITEM	PART NAME	PART NO	REMARK
1	3.5" FDD 12.7mm Y-E DATA	85-11700-Y01	YD-702J-6637J
2	FDD BRACKET 5600P	33-56P0J-010	
3	SCREW M2*4L K1 BK/D ICT NY	35-B4125-4RA	
4	FDD CASE+RUBBER PAD MODULE	42-5627J-100	
5	FPC CABLE MODULE FOR FDD ADAPTOR	43-5600J-010	
6	SCREW M2*4L K1 NI ICT NY	35-B1120-4RA	

Top (5800P)

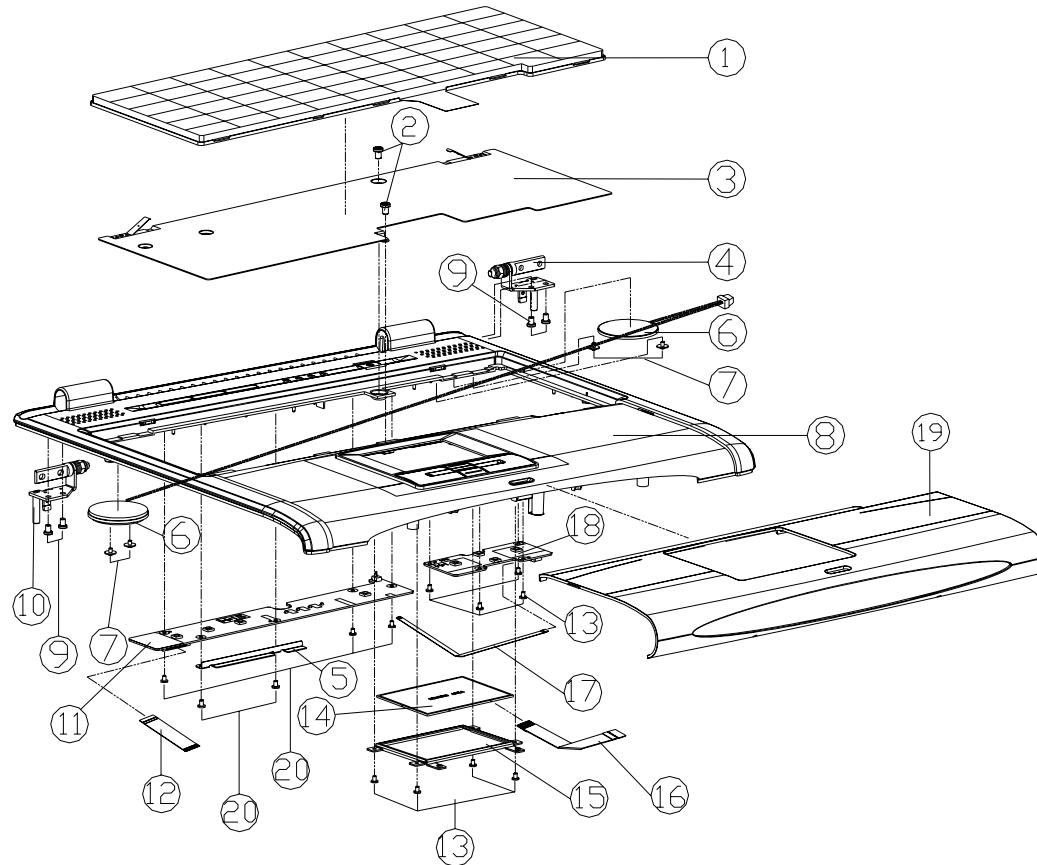
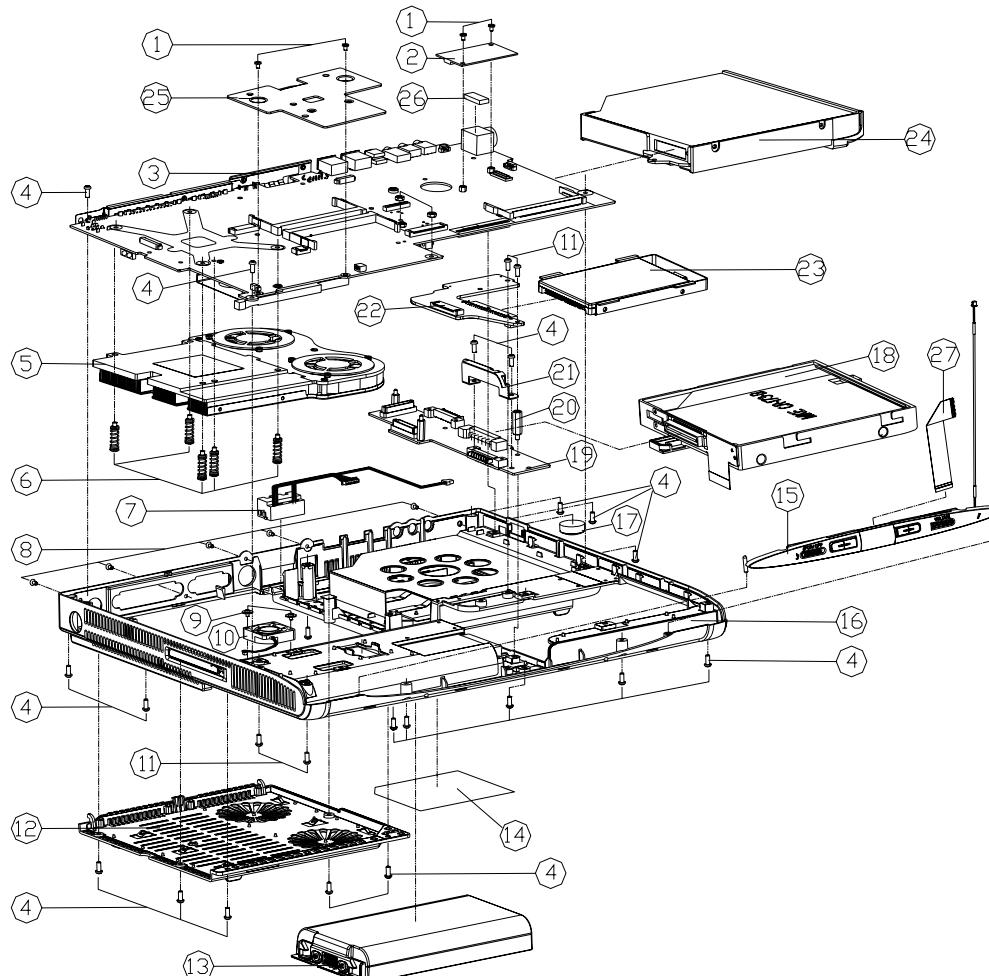


Figure 1 - 23
Top (5800P)

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD	80-56P08-7G0	
2	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
3	SHIELDING FOR KEYBOARD	33-56P07-010	
4	HINGE (RIGHT)	33-56P01-070	
5	FIXED BRACKET FOR CABLE	33-56P03-060	
6	SPEAKER W/CABLE	23-53610-281	
7	SCREW M2*5L P NI ICT NY V/WASHER	35-01020-2RE	
8	TOP CASE MODULE	39-58P02-010	
9	M3*0.5P*4L KI NI ICT NY	35-B1130-4R0	
10	HINGE (LEFT)	33-56P01-080	
11	LED BOARD	77-56P04-0DX	
12	FFC CABLE FOR LED&HOTKEY	43-56P02-020	
13	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
14	TOUCH PAD SYNAPTICS T41PDG3H-I	49-42002-010	
15	TOUCH PAD BRACKET	33-58P02-050	
16	FFC CABLE FOR TOUCH PAD	43-56P02-010	
17	FFC CABLE FOR CLICK	43-56P03-010	
18	CLICK BOARD	77-58002-0DX	
19	TRANSPARENTE COVER	42-58P72-030	
20	SCREW M2*4L KI NI ICT NY	35-B1120-4R0	


Part Lists

Bottom (5800P)

Figure 1 - 24
Bottom (5800P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	MDC MODEM+TEL CABLE MODULE	76-32200-100	
3	MAIN BOARD	77-56P00-D0X	
4	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
5	CPU HEATSINK MODULE	31-56P0N-100	
6	SCREW	35-41025-175	
7	WIRE CABLE FOR LAN AND MODEM	43-56P0U-010	
8	SCREW M2.5*4L F NI ICT NY	35-21120-4RA	
9	SCREW M2*5L P NI ICT NY W/WASHER	35-01020-2RE	
10	FAN 25*25*6.5T 5V 0.09A CON	23-A2514-050	
11	SCREW M2.5*4L K1 BK/D ICT NY	35-B4125-4RA	
12	CPU COVER & SHIELDING PLATE MODULE	42-58P7S-100	
13	BATTERY S LI 3.4AH FOR SMP/SAMSUNG	87-58P8S-4D3	Reference Ass'y No (99-58P05-300)
13	BATTERY S LI 3.4AH FOR SMP/PANASONIC	87-58P8S-4C1	Reference Ass'y No (99-58P05-300)
14	PRODUCT LABEL(UV) 5600P	45-56P03-010	
15	AUDIO DJ ASS'Y	79-58P08-001	Reference Ass'y No (99-58P05-110)
16	BOTTOM CASE-SHELDING PLATE MODULE	39-58P03-010	
17	RUBBER PAD H=7mm (BACK)	47-56P23-020	
18	FDD ASS'Y 5600P	79-58P2J-010	Reference Ass'y No (99-58P05-040)
18	CD-ROM ASS'Y 5600P	79-58P2Z-010	Reference Ass'y No (99-58P05-040)
18	DVD ROM ASS'Y 5600P	79-58P2V-020	Reference Ass'y No (99-58P05-070)
19	DC/DC BOARD	77-56P0C-D0X	
20	HEX H=16M M=M2.5 F=M2.5	34-56P03-010	
21	COSMETIC COVER (METAL)	33-56P03-030	
22	HDD CONVERTER BOARD	77-5600N-D0X	
23	W/H HDD ASS'Y 5600P	79-58P21-010	
24	CD-RW ASS'Y 5600P	79-58P2W-010	Reference Ass'y No (99-58P05-020)
24	COMBO ASS'Y 5600P	79-58P2X-010	Reference Ass'y No (99-58P05-090)
25	HEATSINK FOR PCMCIA	31-56P0N-020	
26	EMI GASKET(L18*W9*H3.5MM)	47-00190-181	
27	FFC CABLE FOR AUDIO DJ MODULE	43-56P08-010	

LCD 15" (5800P)

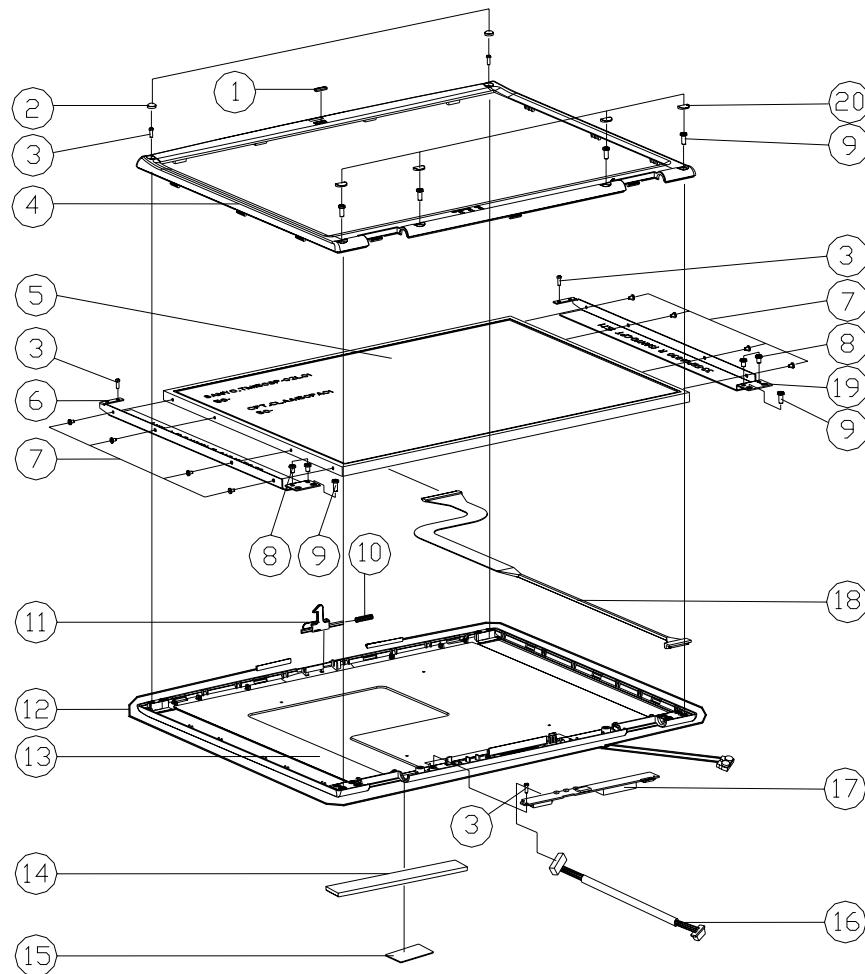


ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR LCD (MIDDLE)	47-56221-030	
2	RUBBER FOR LCD (TOP)	47-56232-010	
3	SCREW M2*6L P NI ICT NY	35-01120-6RA	
4	LCD FRONT PANEL MODULE(15.1")	39-58P01-010	
5	LCD T CPT CLA4150PA01 15.0" SXGA+ 7.0MM	50-L5270-C00	
6	LCD BRACKET (LEFT SANYO-CPT 15.1")	33-56P01-040	
7	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
8	SCREW M3*0.5P*4L K1 NI ICT NY	35-B1130-4R0	
9	SCREW M3*0.5*7L K1 NI ICT NY	35-B1130-7R0	
10	SPRING FOR HOOK (Φ3.7*15*0.3d)	38-21P30-011	
11	HOOK KNOB	42-58P81-010	
12	24GHZ DIPOLE ANTENNA 0D132MM L=RIGHT+LEFT	23-712R4-002	
13	BACK PANEL MODULE	39-58P01-020	
14	NAMEPLATE BASE	42-58P03-010	
15	LCD BACK COVER LABEL	43-4200R-010	
16	WIRE CABLE FOR INVERTER	43-56P0R-010	
17	INVERTER BOARD	77-4200R-D02	
18	LCD WIRE CABLE FOR CPT	43-56P01-030	
19	LCD BRACKET(RIGHT SANYO-CPT 15.1")	33-56P01-030	
20	RUBBER FOR LCD (BOTTOM)	47-56233-010	

Figure 1 - 25
LCD 15"
(5800P)


Part Lists**Battery (5800P)**

Figure 1 - 26
Battery (5800P)

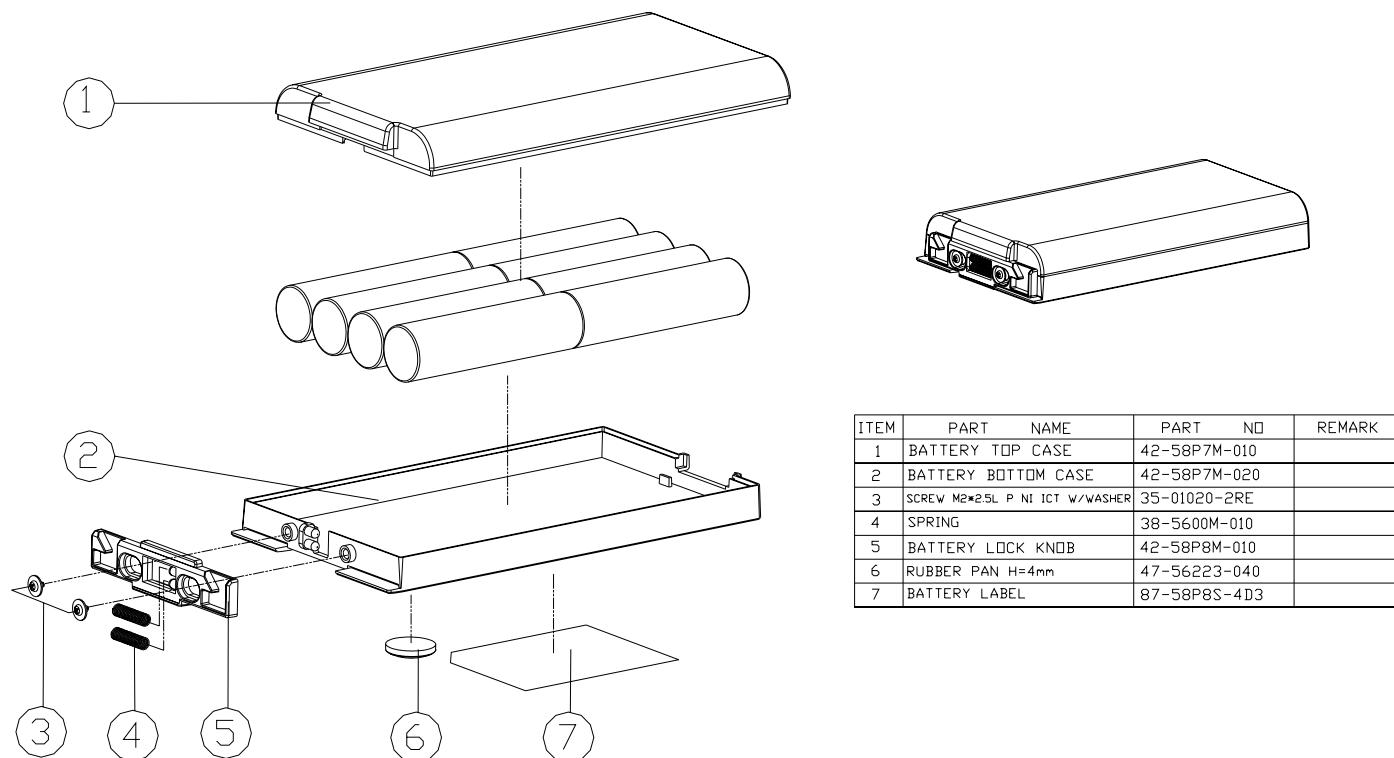


ITEM	PART NAME	PART NO	REMARK
1	BATTERY TOP CASE	42-58P7M-010	
2	BATTERY BOTTOM CASE	42-58P7M-020	
3	SCREW M2*25L P NI ICT W/WASHER	35-01020-2RE	
4	SPRING	38-5600M-010	
5	BATTERY LOCK KNOB	42-58P8M-010	
6	RUBBER PAN H=4mm	47-56223-040	
7	BATTERY LABEL	87-58P8S-4D3	

Second Battery (5800P)

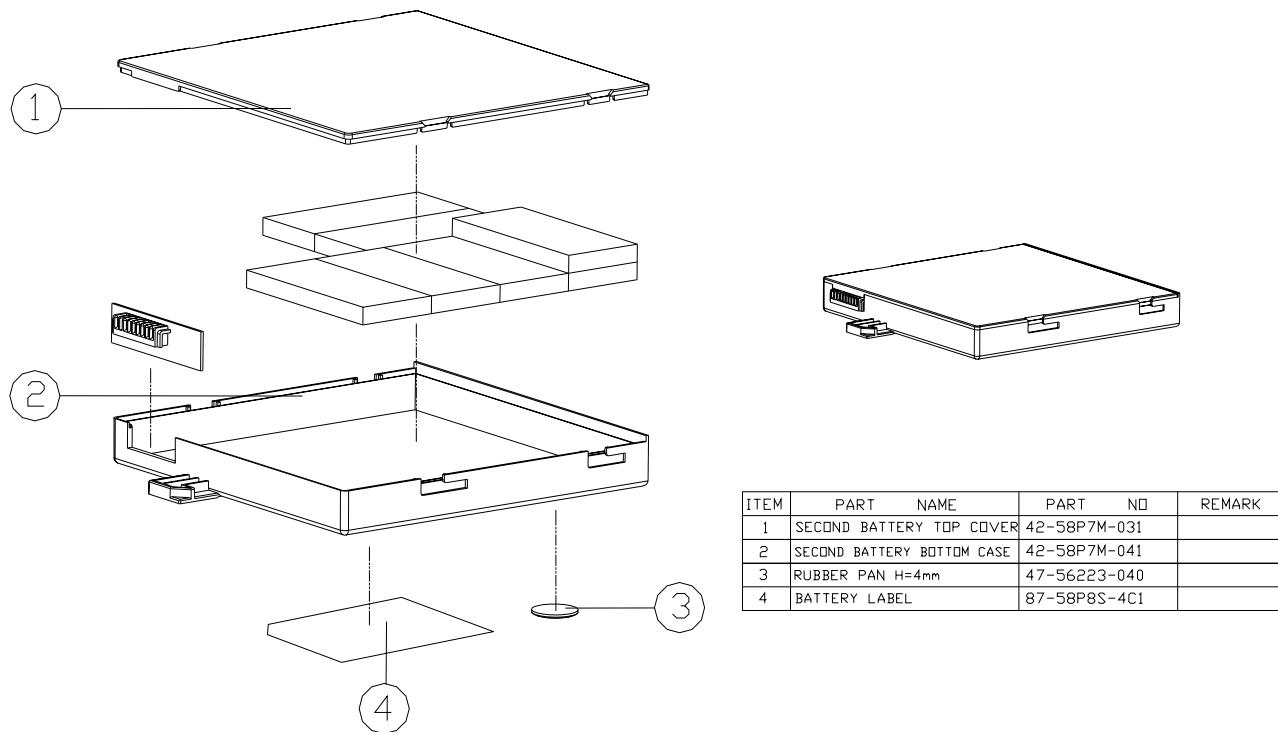

TEAC CD-ROM Drive (5800P)

Figure 1 - 28
TEAC CD_ROM
Drive
(5800P)

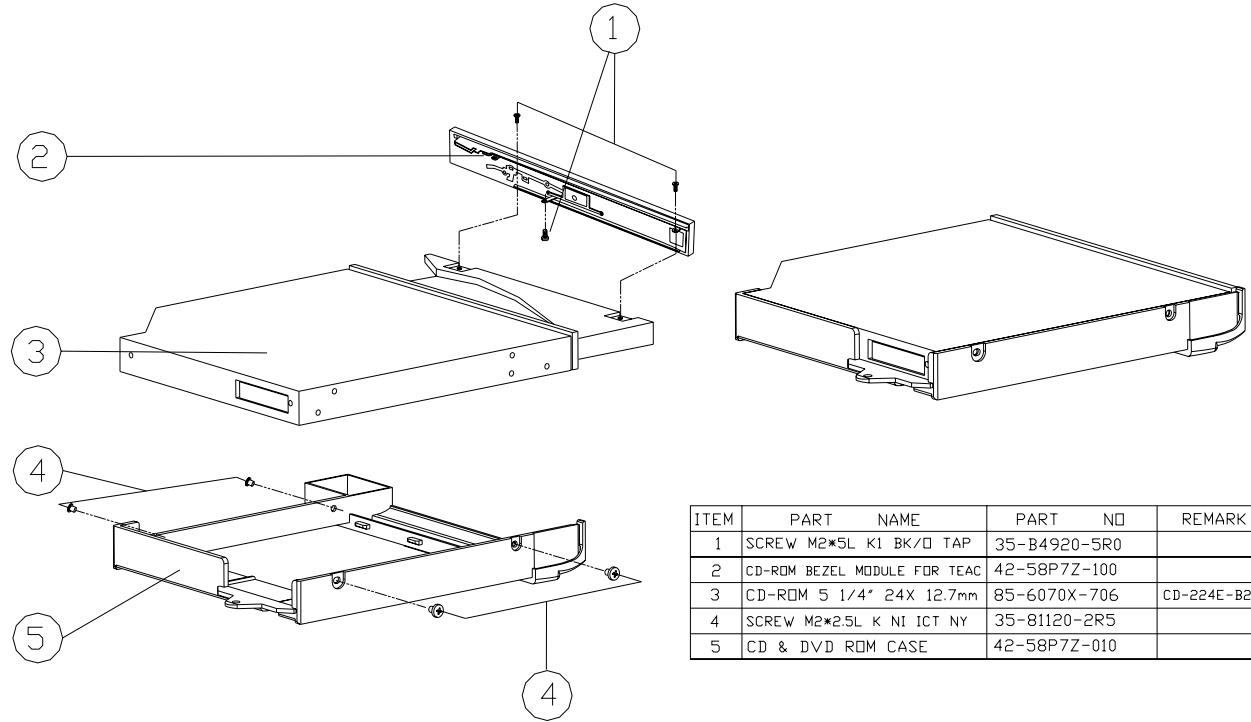

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*5L K1 BK/O TAP	35-B4920-5R0	
2	CD-ROM BEZEL MODULE FOR TEAC	42-58P7Z-100	
3	CD-ROM 5 1/4" 24X 12.7mm	85-6070X-706	CD-224E-B20
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD & DVD ROM CASE	42-58P7Z-010	

KME CD-RW Drive (5800P)



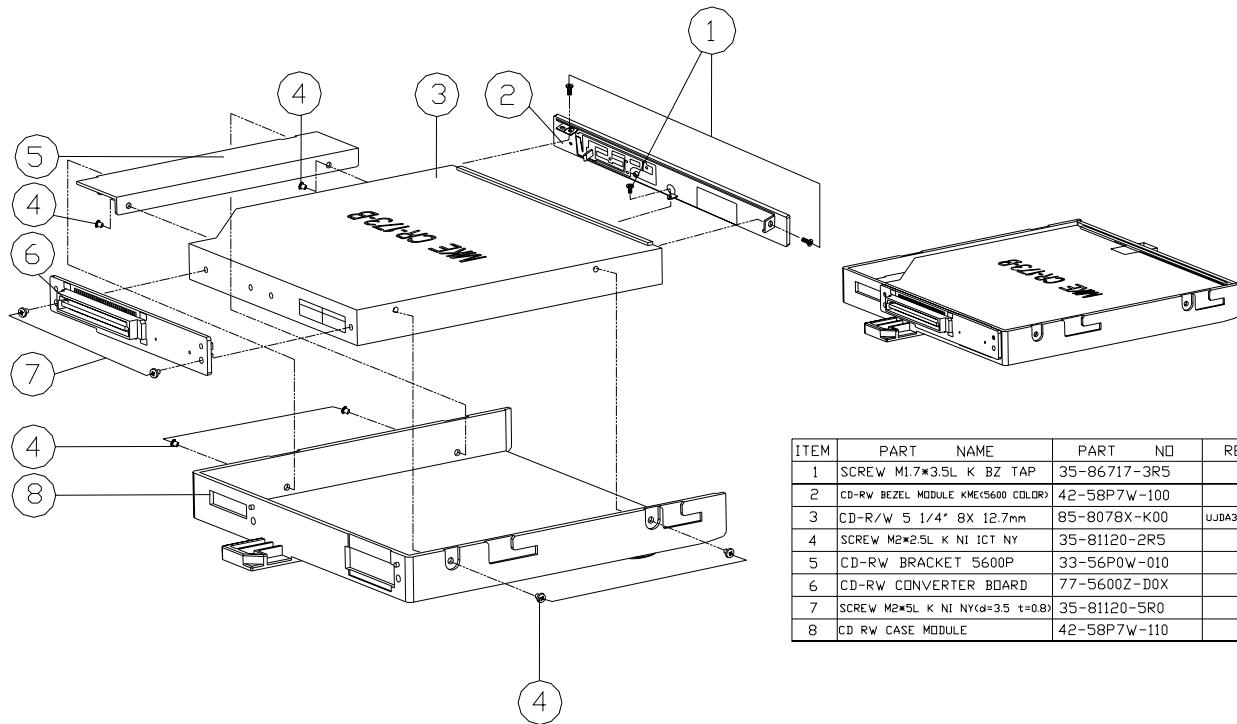


Figure 1 - 29
**KME CD-RW Drive
(5800P)**

ITEM	PART NAME	PART NO	REMARK
1	SCREW M1.7*3.5L K BZ TAP	35-86717-3R5	
2	CD-RW BEZEL MODULE KME(5600 COLOR)	42-58P7W-100	
3	CD-R/W 5 1/4" 8X 12.7mm	85-8078X-K00	UJDA330CL-Z KME
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD-RW BRACKET 5600P	33-56P0W-010	
6	CD-RW CONVERTER BOARD	77-5600Z-DOX	
7	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
8	CD RW CASE MODULE	42-58P7W-110	

Combo Drive (5800P)

Figure 1 - 30
Combo Drive
(5800P)

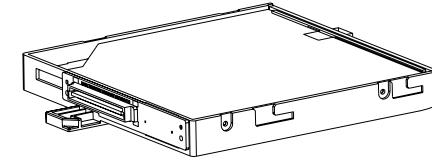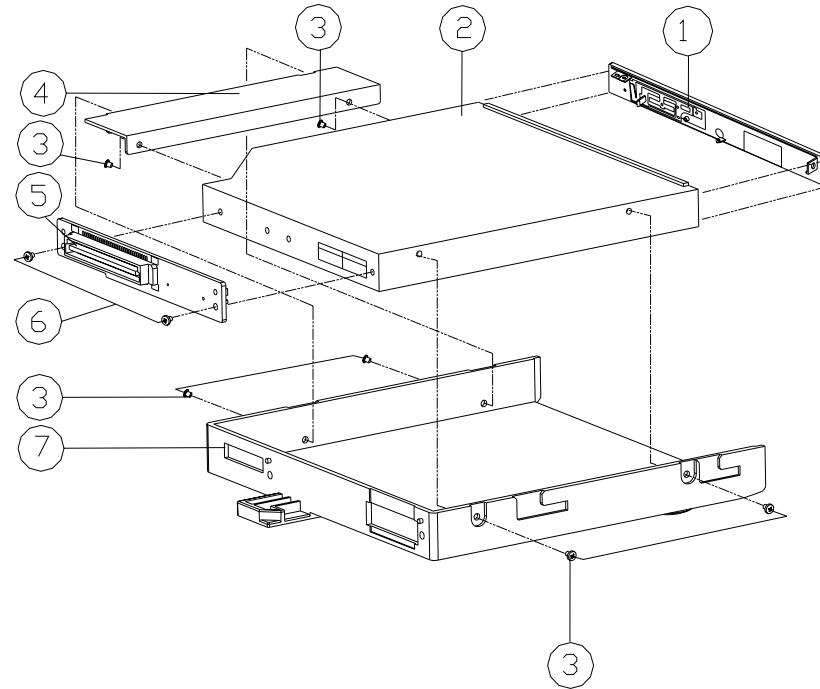

ITEM	PART NAME	PART NO	REMARK
1	SAMSUNG COMBO BEZEL MODULE	42-58P7X-100	
2	CD-RW/DVD 5 1/4" 8X 12.7mm	85-9078X-S00	SN-308B SAMSUNG
3	SCREW M2*2.5L K NI IGT NY	35-81120-2R5	
4	CD-RW BRACKET 5600P	33-56P0W-010	
5	CD-RW CONVERTER BOARD	77-5600Z-D0X	
6	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
7	CD RW CASE MODULE	42-58P7W-110	

DVD-ROM Drive (5800P)


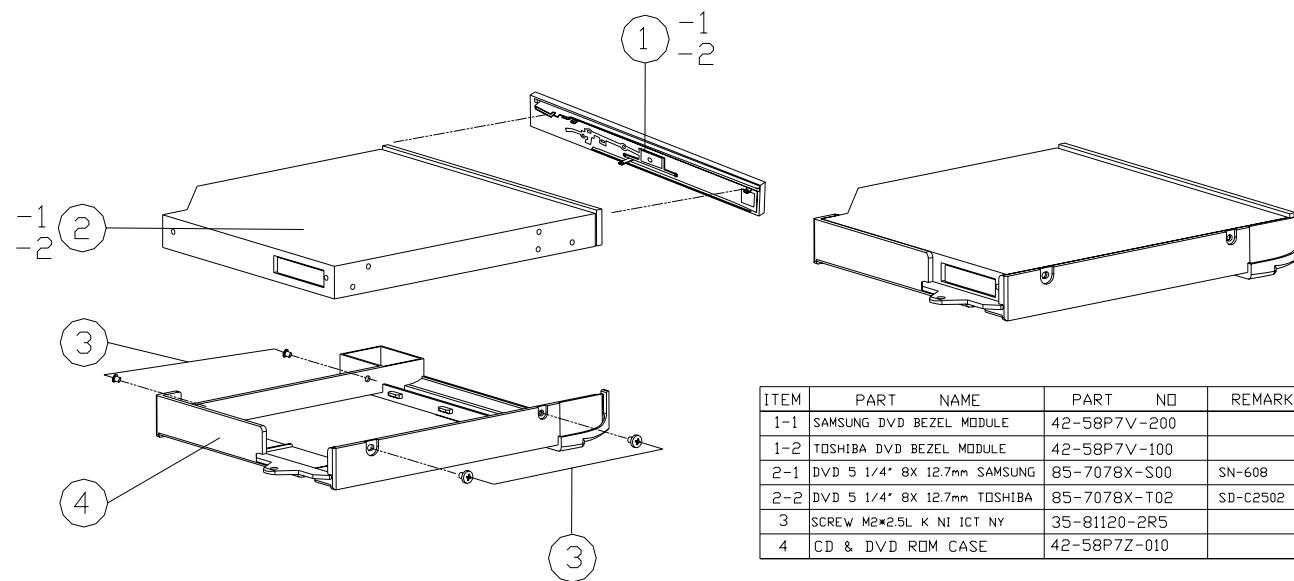


Figure 1 - 31
DVD-ROM Drive
(5800P)

ITEM	PART NAME	PART NO	REMARK
1-1	SAMSUNG DVD BEZEL MODULE	42-58P7V-200	
1-2	TOSHIBA DVD BEZEL MODULE	42-58P7V-100	
2-1	DVD 5 1/4" 8X 12.7mm SAMSUNG	85-7078X-S00	SN-608
2-2	DVD 5 1/4" 8X 12.7mm TOSHIBA	85-7078X-T02	SD-C2502
3	SCREW M2*25L K NI ICT NY	35-81120-2R5	
4	CD & DVD ROM CASE	42-58P7Z-010	

Audio DJ (5800P)

Figure 1 - 32
Audio DJ
(5800P)

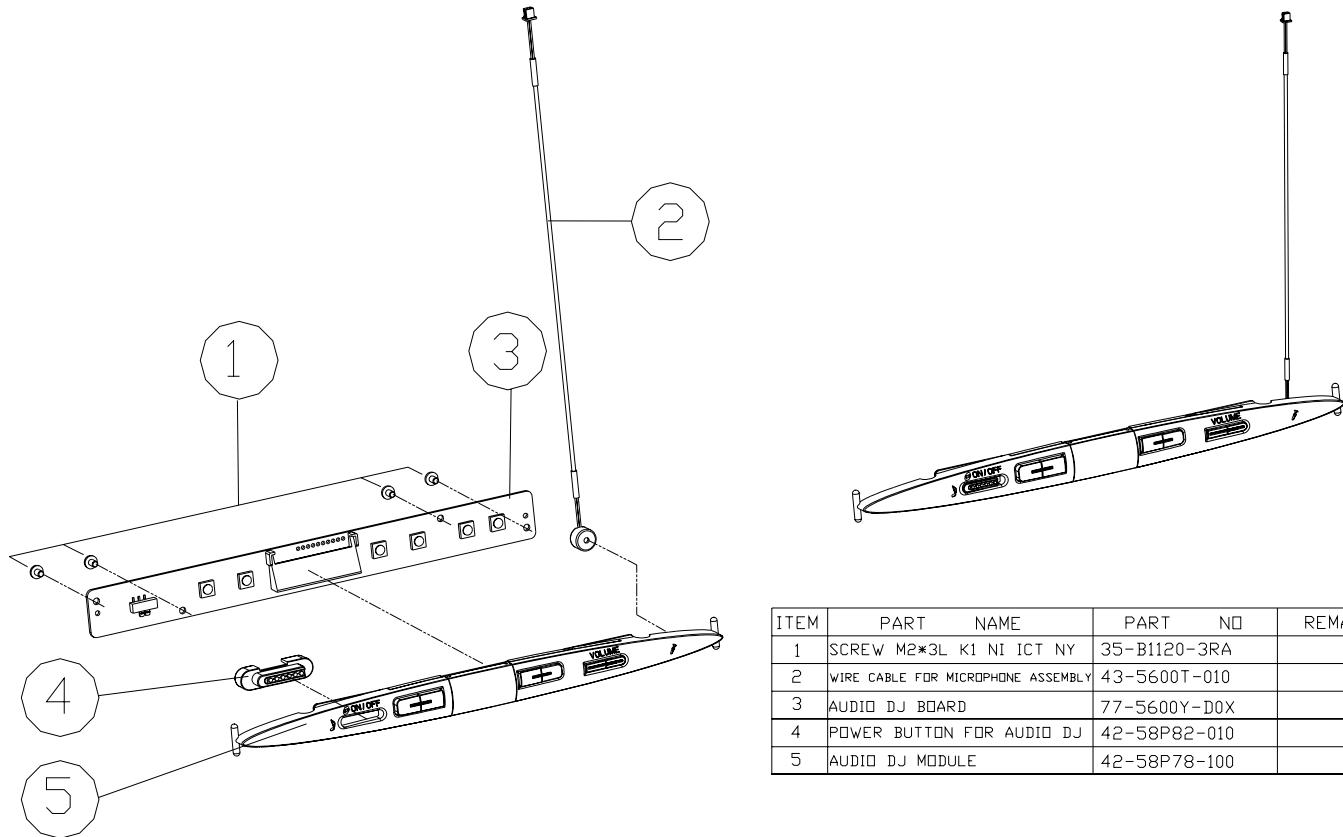

Floppy Disk Drive (5800P)

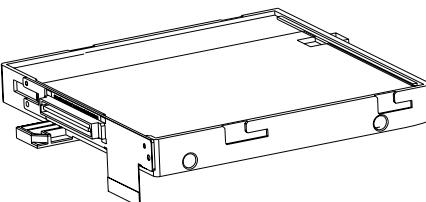
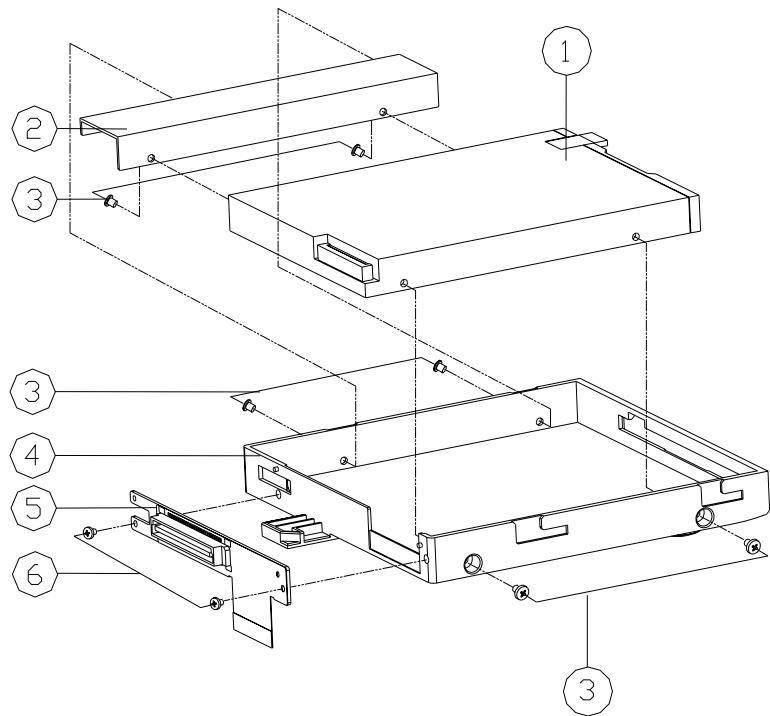



Figure 1 - 33
Floppy Disk Drive
(5800P)

ITEM	PART NAME	PART NO	REMARK
1	3.5" FDD 12.7mm Y-E DATA	85-11700-Y01	YD-702J-6637J
2	FDD BRACKET 5600P	33-56P0J-010	
3	SCREW M2.5*4L K1 BK/D ICT NY	35-B4125-4RA	
4	FDD CASE MODULE	42-58P7J-100	
5	FPC CABLE MODULE FOR FDD ADAPTOR	43-5600J-010	
6	SCREW M2*4L K1 NI ICT NY	35-B1120-4RA	

Part Lists


Top (5820P)

Figure 1 - 34
Top
(5820P)

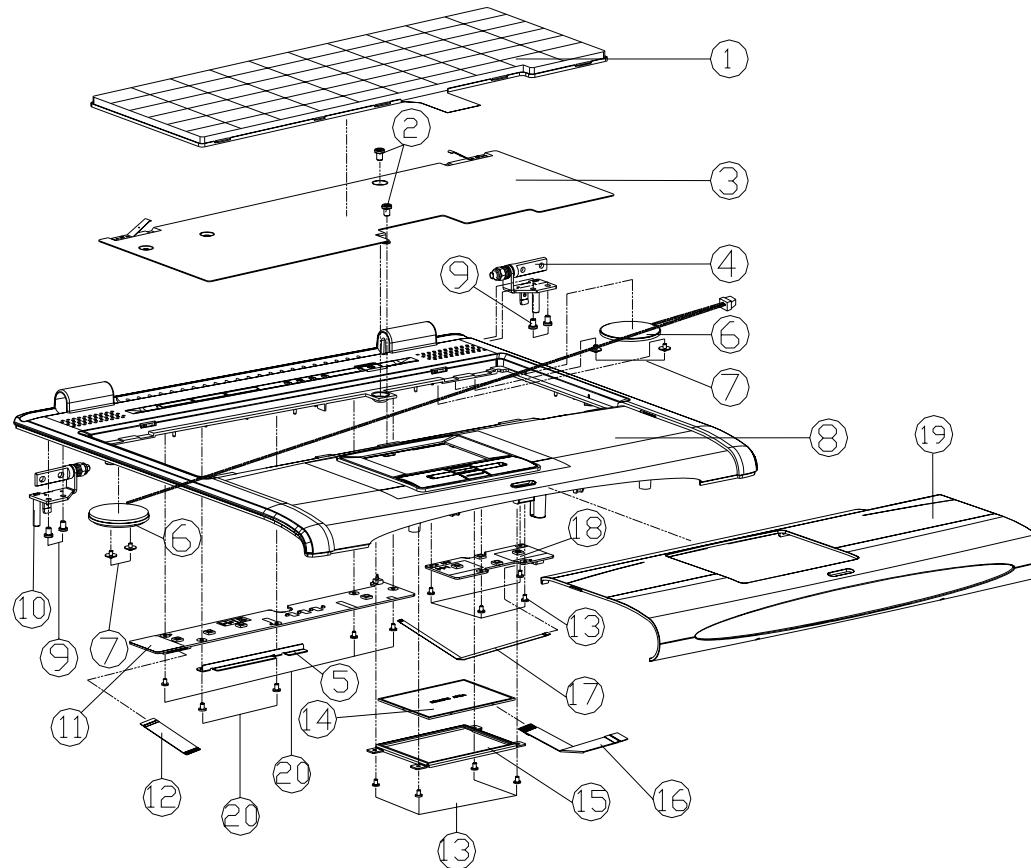

ITEM	PART NAME	PART NO	REMARK
1	KEYBOARD	80-56P08-7G0	
2	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
3	SHIELDING FOR KEYBOARD	33-56P07-010	
4	HINGE (RIGHT)	33-56P01-070	
5	FIXED BRACKET FOR CABLE	33-56P03-060	
6	SPEAKER W/CABLE	23-53610-281	
7	SCREW M2*5L P NI ICT NY W/WASHER	35-01020-2RE	
8	TOP CASE MODULE	39-58202-010	
9	M3*0.5P*4L KI NI ICT NY	35-B1130-4R0	
10	HINGE (LEFT)	33-56P01-080	
11	LED BOARD	77-56P04-D0X	
12	FFC CABLE FOR LED&HOTKEY	43-56P02-020	
13	SCREW M2*3L KI NI ICT NY	35-B1120-3RA	
14	TOUCH PAD SYNPATICS TM41PDG351-1	49-42002-010	
15	TOUCH PAD BRACKET	33-56P02-050	
16	FFC CABLE FOR TOUCH PAD	43-56P02-010	
17	FFC CABLE FOR CLICK	43-56P03-010	
18	CLICK BOARD	77-58002-D0X	
19	PALMREST	42-58272-030	

Bottom (5820P)

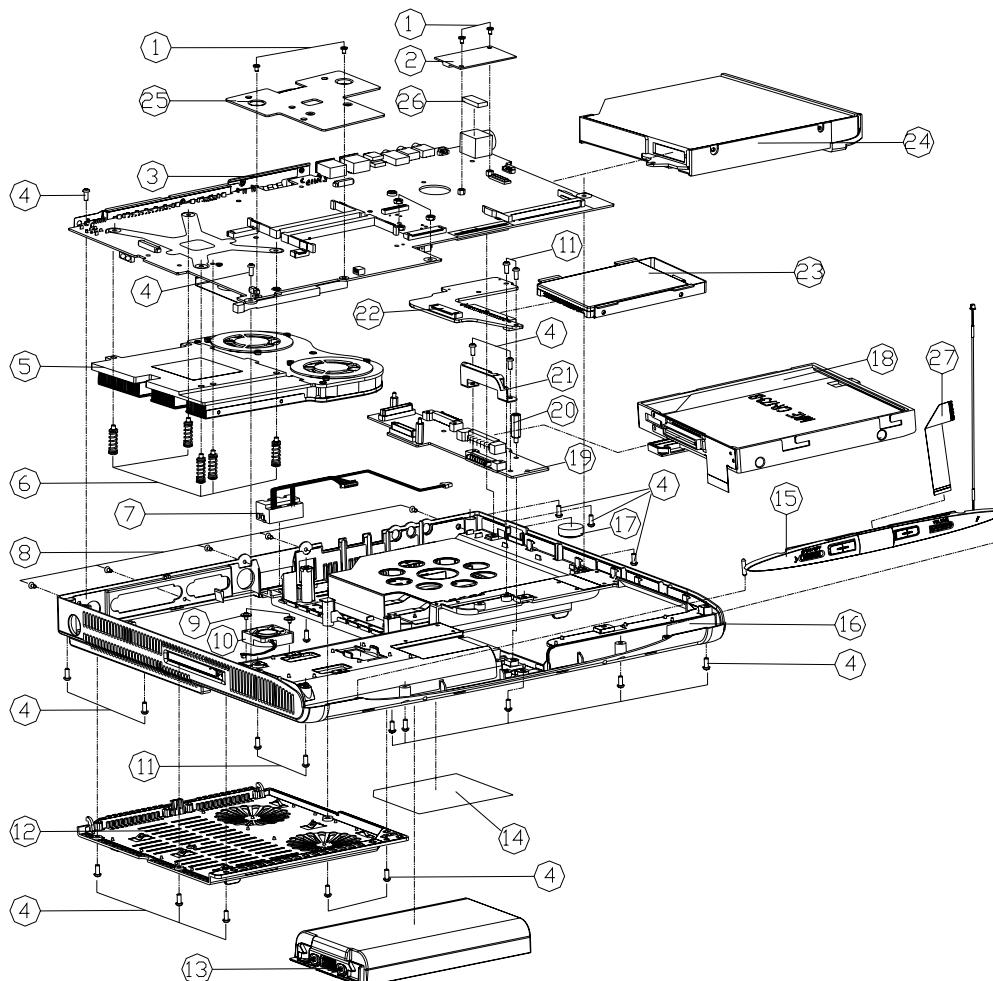


ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	MDC MODEM+TEL.CABLE MODULE	76-32200-100	
3	MAIN BOARD	77-56P00-D0X	
4	SCREW M2.5*6L P BZ ICT NY	35-06125-6RA	
5	CPU HEATSINK MODULE	31-56P0N-100	
6	SCREW	35-41025-175	
7	WIRE CABLE FOR LAN AND MODEM	43-56P0U-010	
8	SCREW M2*4L F NI ICT NY	35-21120-4RA	
9	SCREW M2*5L P NI ICT NY W/ WASHER	35-01020-2RE	
10	FAN 25*25*6.5T 5V 0.09A CCW	23-A2514-050	
11	SCREW M2.5*4L K1 BK/D ICT NY	35-B4125-4RA	
12	CPU COVER & SHIELDING PLATE MODULE PA	42-56P7S-100	
13	BATTERY S LI 4.0AH FOR SMP/SAMSUNG	87-58P8S-4D3	Reference Ass'y No (99-58P05-363)
13	BATTERY S LI 3.4AH FOR SMP/PANASONIC	87-58P8S-4C1	
14	PRODUCT LABEL(TUV) 5600P	45-56P03-010	
15	AUDIO DJ ASS'Y	79-58P08-001	Reference Ass'y No (99-58P05-100)
16	BOTTOM CASE-SHIELDING PLATE MODULE	39-56P03-011	
17	RUBBER PAD H=7mm (BACK)	47-56P23-020	
18	FDD ASS'Y 5600P	79-56P2J-010	Reference Ass'y No (99-56P05-040)
18	CD-RDM ASS'Y 5600P	79-56P2Z-010	Reference Ass'y No (99-56P05-041)
18	DVD RDM ASS'Y 5600P	79-56P2V-020	Reference Ass'y No (99-56P05-070)
19	DC/DC BOARD	77-56P00-D0X	
20	HEX H=16MM M=M2.5 F=M2.5	34-56P03-010	
21	COSMETIC COVER (METAL)	33-56P03-030	
22	HDD CONVERTER BOARD	77-5600N-D0X	
23	W/D HDD ASS'Y 5600P	79-56P21-010	
24	CD-RW ASS'Y 5600P	79-56P2W-010	Reference Ass'y No (99-56P05-042)
24	COMBO ASS'Y 5600P	79-56P2X-010	Reference Ass'y No (99-56P05-050)
25	HEATSINK FOR PCMCIA	31-56P0N-020	
26	EMI GASKET(L18*W9*H3.5MM)	47-00190-181	
27	FFC CABLE FOR AUDIO DJ MODULE	43-56P08-010	

Figure 1 - 35
Bottom
(5820P)

Part Lists

LCD 15" (5820P)

Figure 1 - 36
LCD 15"
(5820P)

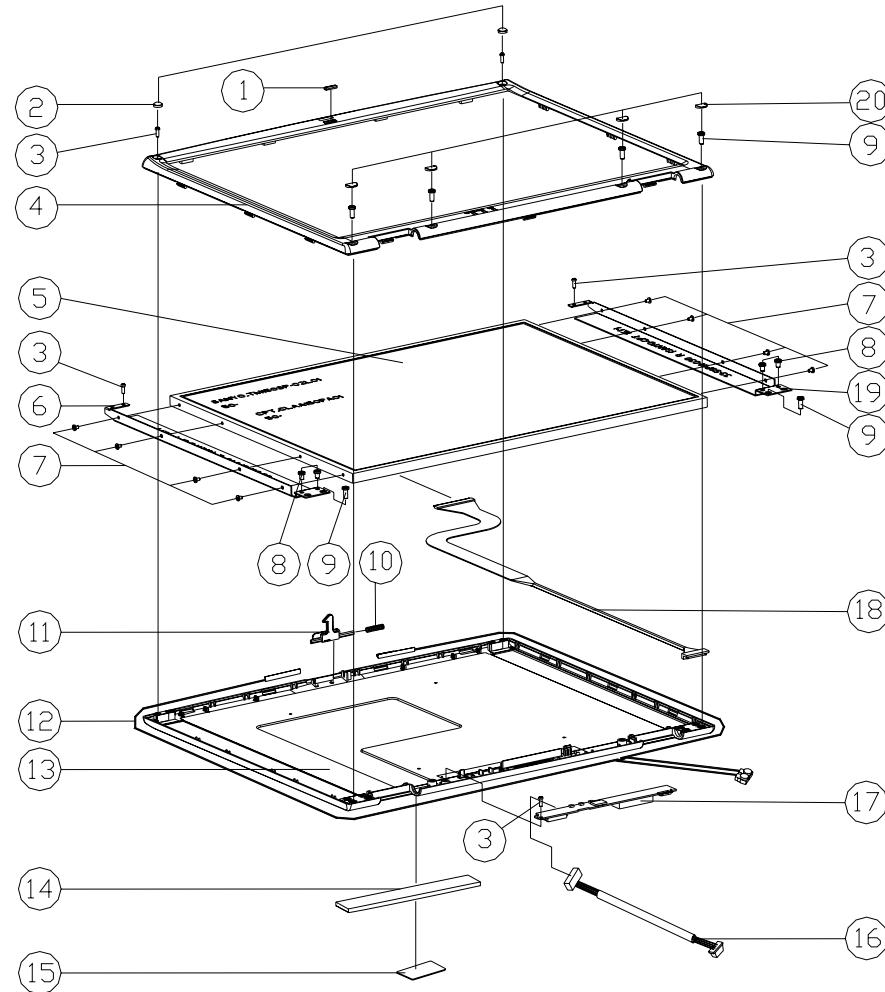

ITEM	PART NAME	PART NO	REMARK
1	RUBBER FOR LCD (MIDDLE)	47-56P21-030	
2	RUBBER FOR LCD (TOP)	47-56P32-010	
3	SCREW M2x6L P NI ICT NY	35-01120-6RA	
4	LCD FRONT PANEL MODULE(15.1")	39-56P01-010	
5	LCD T CPT CLAA150PA01 150° SXGA+ 7.0MM	50-L5270-C00	
6	LCD BRACKET (LEFT SANYO-CPT 15.1")	33-56P01-040	
7	SCREW M2x3L KI NI ICT NY	35-B1120-3RA	
8	SCREW M3x0.5Px4L KI NI ICT NY	35-B1130-4R0	
9	SCREW M3x0.5x7L KI NI ICT NY	35-B1130-7R0	
10	SPRING FOR HOOK (Φ3.7x15x0.3φ)	38-21P30-011	
11	HOOK KNOB	42-56P81-010	
12	2.4GHZ DIPOLE ANTENNA DB132MM L=RIGHT/LEFT	23-712R4-002	
13	BACK PANEL MODULE	39-58201-020	
14	NAMEPLATE BASE	42-58203-010	
15	NAME PLATE "NOTEBOOK"	45-42001-010	
16	WIRE CABLE FOR INVERTER	43-56P0R-010	
17	INVERTER BOARD	77-4200R-D02	
18	LCD WIRE CABLE FOR CPT	43-56P01-030	
19	LCD BRACKET(RIGHT SANYO-CPT 15.1")	33-56P01-030	
20	RUBBER FOR LCD (BOTTOM)	47-56P33-010	

Battery (5820P)


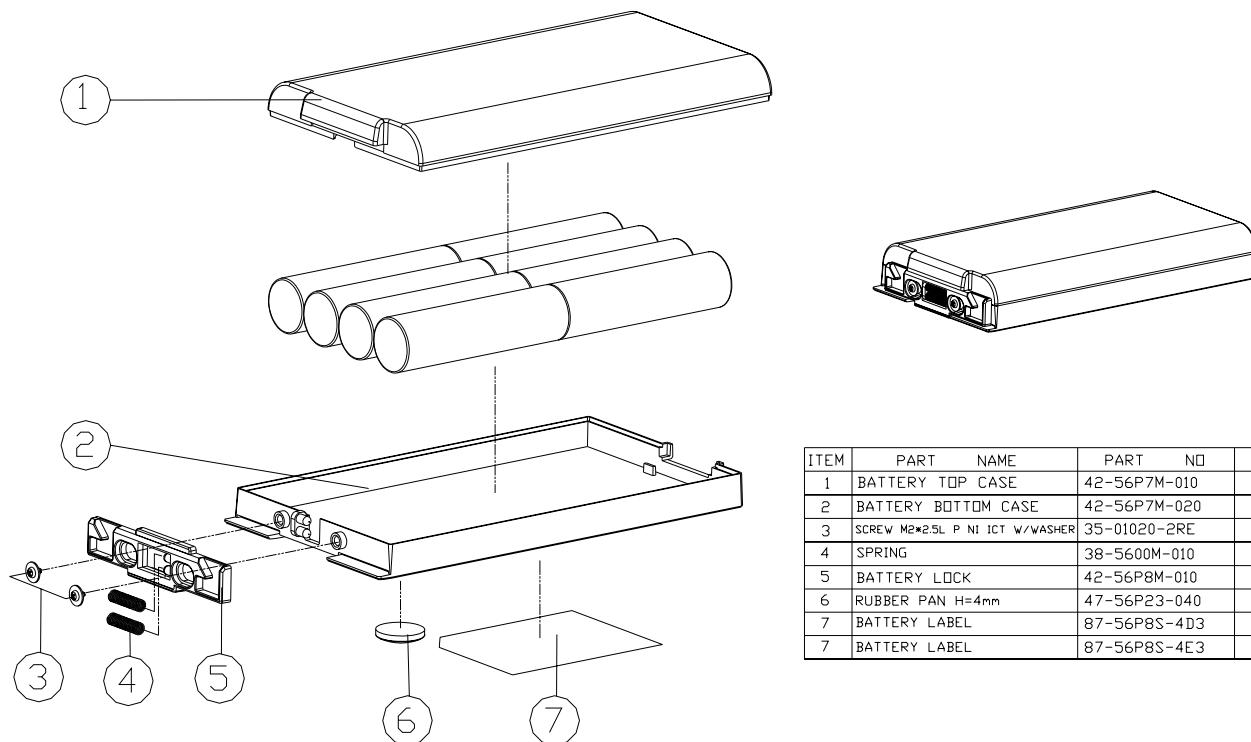


Figure 1 - 37
Battery (5820P)

ITEM	PART NAME	PART NO	REMARK
1	BATTERY TOP CASE	42-56P7M-010	
2	BATTERY BOTTOM CASE	42-56P7M-020	
3	SCREW M2*2.5L P NI ICT W/WASHER	35-01020-2RE	
4	SPRING	38-5600M-010	
5	BATTERY LOCK	42-56P8M-010	
6	RUBBER PAD H=4mm	47-56P23-040	
7	BATTERY LABEL	87-56P8S-4D3	
7	BATTERY LABEL	87-56P8S-4E3	

Second Battery (5820P)

Figure 1 - 38
Second Battery
(5820P)

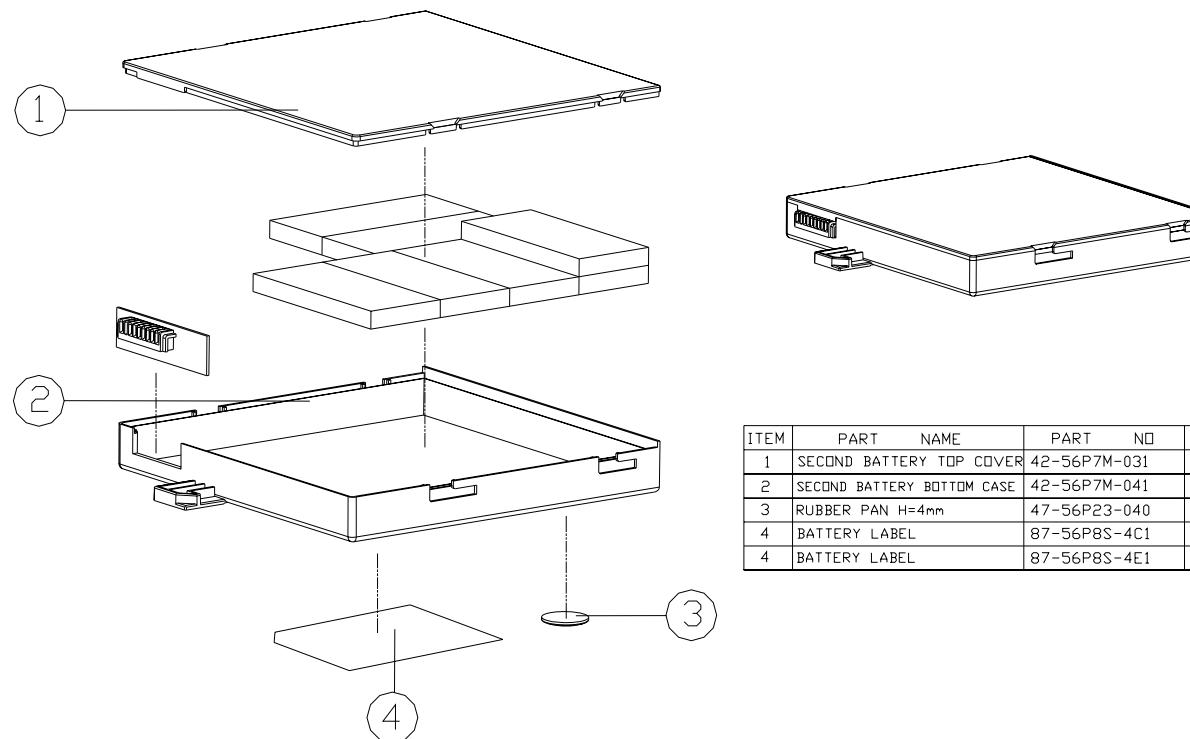

ITEM	PART NAME	PART NO	REMARK
1	SECOND BATTERY TOP COVER	42-56P7M-031	
2	SECOND BATTERY BOTTOM CASE	42-56P7M-041	
3	RUBBER PAN H=4mm	47-56P23-040	
4	BATTERY LABEL	87-56P8S-4C1	
4	BATTERY LABEL	87-56P8S-4E1	

TEAC CD-ROM Drive (5820P)


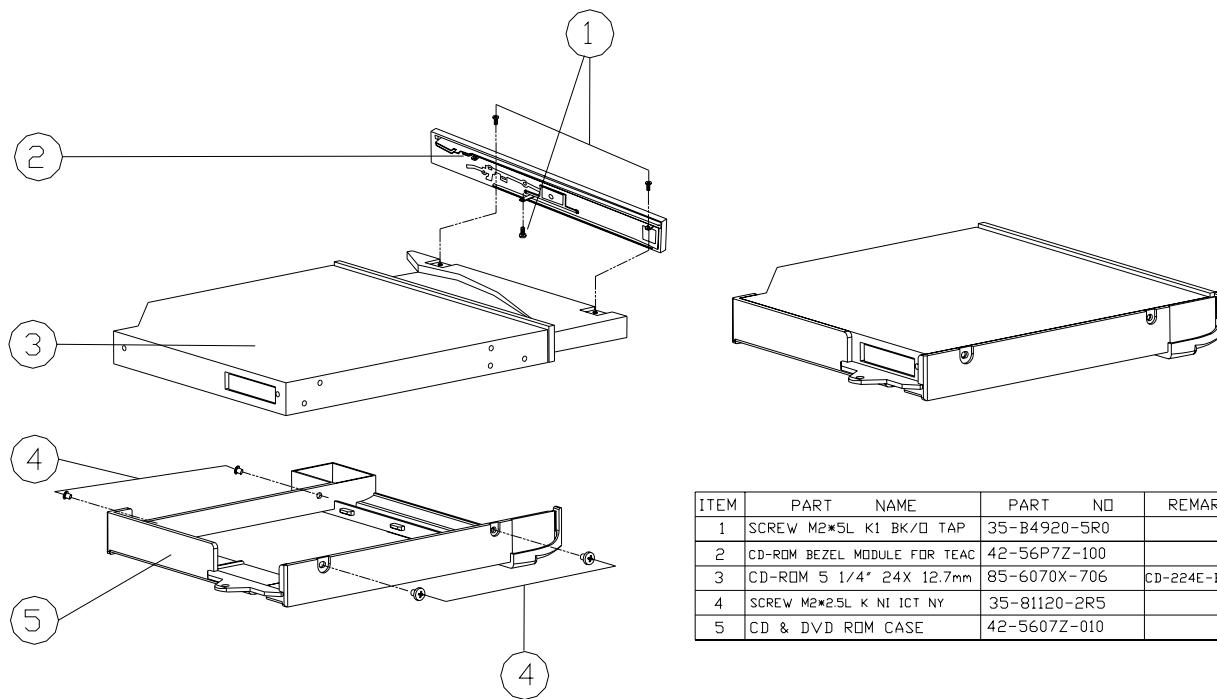


Figure 1 - 39
CD-ROM TEAC
(5820P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*5L K1 BK/D TAP	35-B4920-5R0	
2	CD-ROM BEZEL MODULE FOR TEAC	42-56P7Z-100	
3	CD-ROM 5 1/4" 24X 12.7mm	85-6070X-706	CD-224E-B20
4	SCREW M2*25L K NI ICT NY	35-81120-2R5	
5	CD & DVD ROM CASE	42-5607Z-010	

KME CD-RW Drive (5820P)

Figure 1 - 40
CD-RW KME
(5820P)

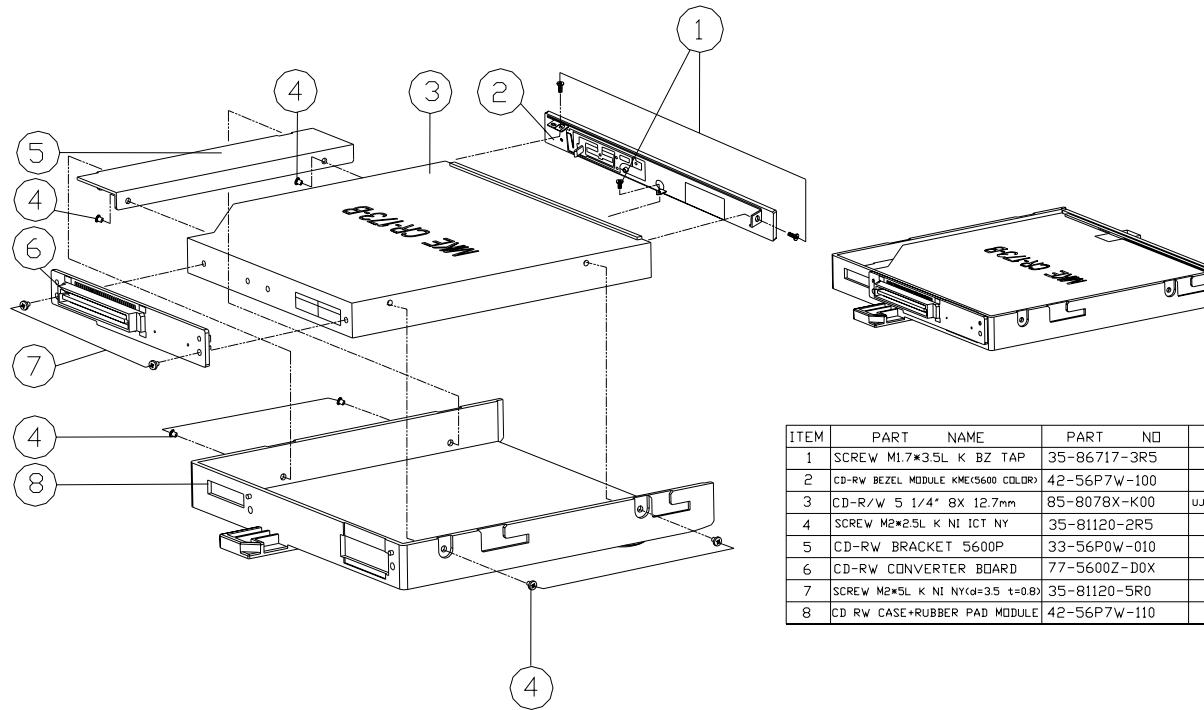

ITEM	PART NAME	PART NO	REMARK
1	SCREW M1.7*3.5L K BZ TAP	35-86717-3R5	
2	CD-RW BEZEL MODULE KME(5600 COLOR)	42-56P7W-100	
3	CD-R/W 5 1/4" 8X 12.7mm	85-8078X-K00	UJDA330CL-Z KME
4	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
5	CD-RW BRACKET 5600P	33-56P0W-010	
6	CD-RW CONVERTER BOARD	77-5600Z-D0X	
7	SCREW M2*5L K NI NY(d=3.5 t=0.8)	35-81120-5R0	
8	CD RW CASE+RUBBER PAD MODULE	42-56P7W-110	

Combo Drive (5820P)



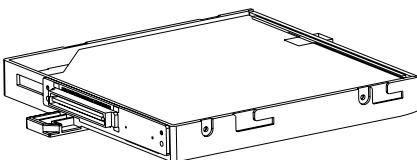


Figure 1 - 41
Combo (5820P)

ITEM	PART NAME	PART NO	REMARK
1	SAMSUNG COMBO BEZEL MODULE	42-56P7X-100	
2	CD-RW/DVD 5 1/4" 8X 12.7mm	85-9078X-S00	SN-30BB SAMSUNG
3	SCREW M2*2.5L K NI IGT NY	35-81120-2R5	
4	CD-RW BRACKET 5600P	33-56P0W-010	
5	CD-RW CONVERTER BOARD	77-5600Z-D0X	
6	SCREW M2*5L K NI NY(d=35 t=0.8)	35-81120-5R0	
7	CD RW CASE+RUBBER PAD MODULE	42-56P7W-110	

DVD-ROM Drive (5820P)

Figure 1 - 42
DVD (5820P)

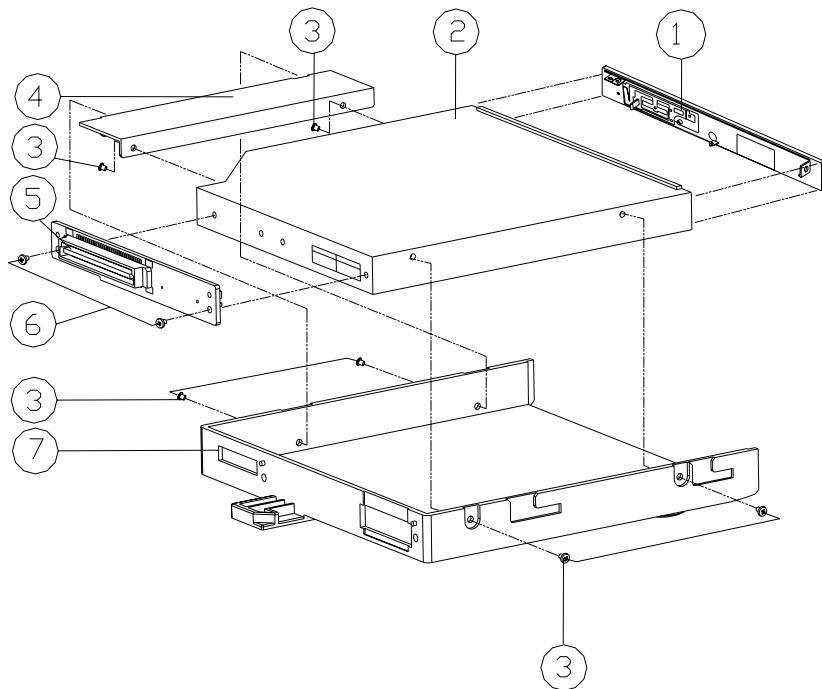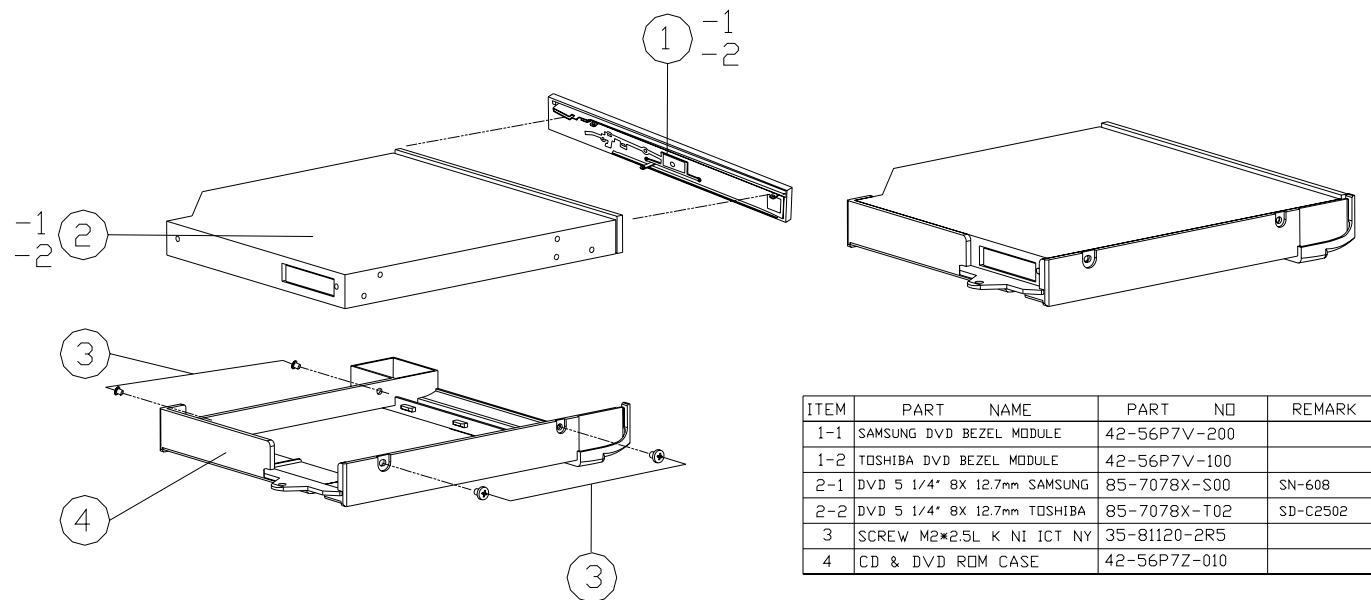

ITEM	PART NAME	PART NO	REMARK
1-1	SAMSUNG DVD BEZEL MODULE	42-56P7V-200	
1-2	TOSHIBA DVD BEZEL MODULE	42-56P7V-100	
2-1	DVD 5 1/4" 8X 12.7mm SAMSUNG	85-7078X-S00	SN-608
2-2	DVD 5 1/4" 8X 12.7mm TOSHIBA	85-7078X-T02	SD-C2502
3	SCREW M2*2.5L K NI ICT NY	35-81120-2R5	
4	CD & DVD ROM CASE	42-56P7Z-010	

Audio “DJ” (5820P)



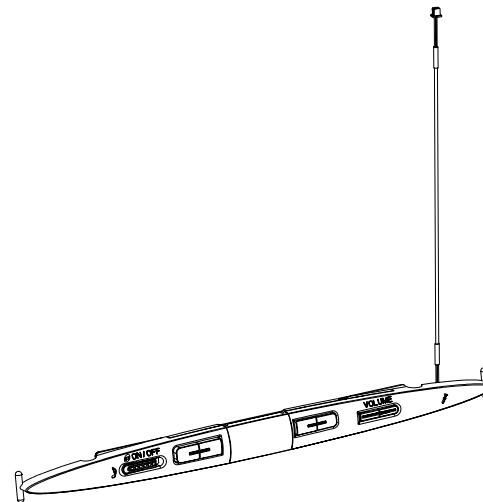


Figure 1 - 43
Audio “DJ”
(5820P)

ITEM	PART NAME	PART NO	REMARK
1	SCREW M2*3L K1 NI ICT NY	35-B1120-3RA	
2	WIRE CABLE FOR MICROPHONE ASSEMBLY	43-5600T-010	
3	AUDIO DJ BOARD	77-5600Y-D0X	
4	POWER BUTTON FOR AUDIO DJ	42-58282-010	
5	AUDIO DJ MODULE	42-58278-100	

Floppy Disk Drive (5820P)

Figure 1 - 44
Floppy Disk Drive
(5820P)

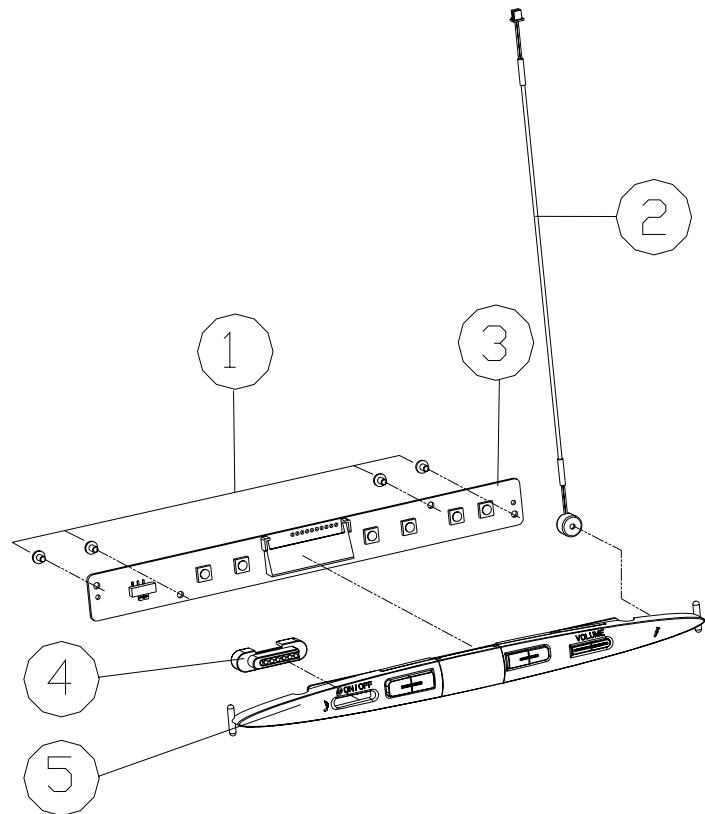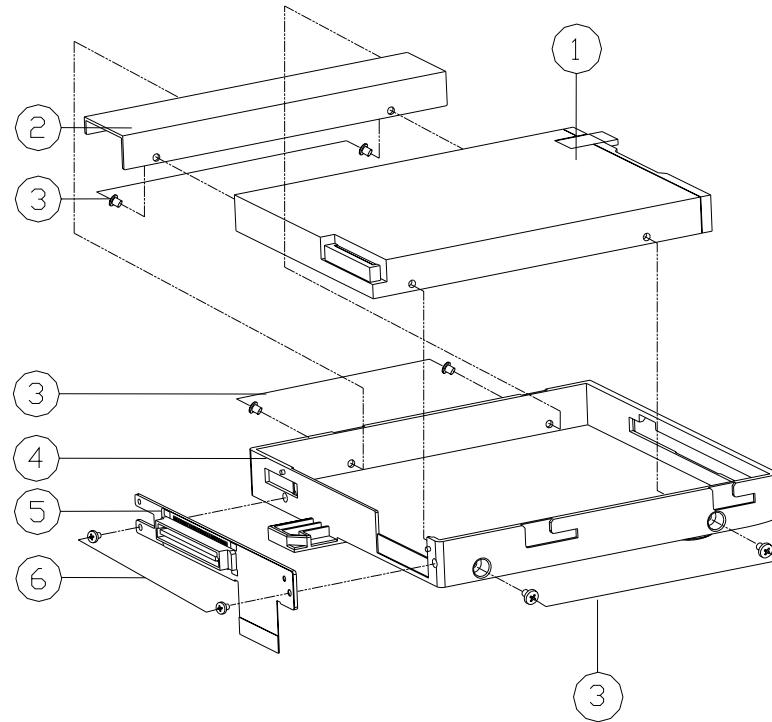

ITEM	PART NAME	PART NO	REMARK
1	3.5" FDD 12.7mm Y-E DATA	85-11700-Y01	YD-702J-6637J
2	FDD BRACKET 5600P	33-56P0J-010	
3	SCREW M2*4L K1 BK/D ICT NY	35-B4125-4RA	
4	FDD CASE+RUBBER PAD MODULE	42-56P7J-100	
5	FPC CABLE MODULE FOR FDD ADAPTOR	43-5600J-010	
6	SCREW M2*4L K BZ ICT NY	35-86120-4RA	

Appendix B:Schematic Diagrams

This appendix has circuit diagrams of the systems PCB's:

<u>Printed Circuit Board</u>	<u>Part No. of the Latest Version</u>
System Board	71-56P00-D03
LED Board	71-56P04-D03
Charger Board	71-56P0C-D03

Schematic Diagrams

The following table indicates where to find the appropriate schematic diagram.


Table 1 - 1

Schematic Diagram

Diagram - Page	Diagram - Page
System Block Diagram - Page B - 3	LAN RTL8139CL - Page B - 19
Socket 478 1 of 2 - Page B - 4	TI1394 (43AB22) - Page B - 20
Socket 478 2 of 2 - Page B - 5	NS-PC87393; IR; ROM - Page B - 21
North Bridge 845 1 of 2 - Page B - 6	H8 - Page B - 22
North Bridge 845 2 of 2 - Page B - 7	KBC Conn; Fan Conn; LDO - Page B - 23
Clock Gen - Page B - 8	AC-In; Power Button - Page B - 24
DDRAM - Page B - 9	AC '97 AD 1886 - Page B - 25
DDR Termination - Page B - 10	PCI 1410 - Page B - 26
Mobility P7 - Page B - 11	PCMCIA Socket - Page B - 27
Mobility Mem A - Page B - 12	CPU Core Power - Page B - 28
Mobility Mem B - Page B - 13	D/D Conn - Page B - 29
ICH3 1 of 3 - Page B - 14	+3V; + 5V - Page B - 30
ICH 3 2 of 3 - Page B - 15	LED Board - Page B - 31
ICH 3 (USB) 3 of 3 - Page B - 16	Charger Board - PCharger - Page B - 32
HDD; CD-ROM; FDD - Page B - 17	Charger Board - PConn - Page B - 33
Mini PCI; MDC Modem - Page B - 18	

System Block Diagram

Sheet 1 of 28
System Block
Diagram

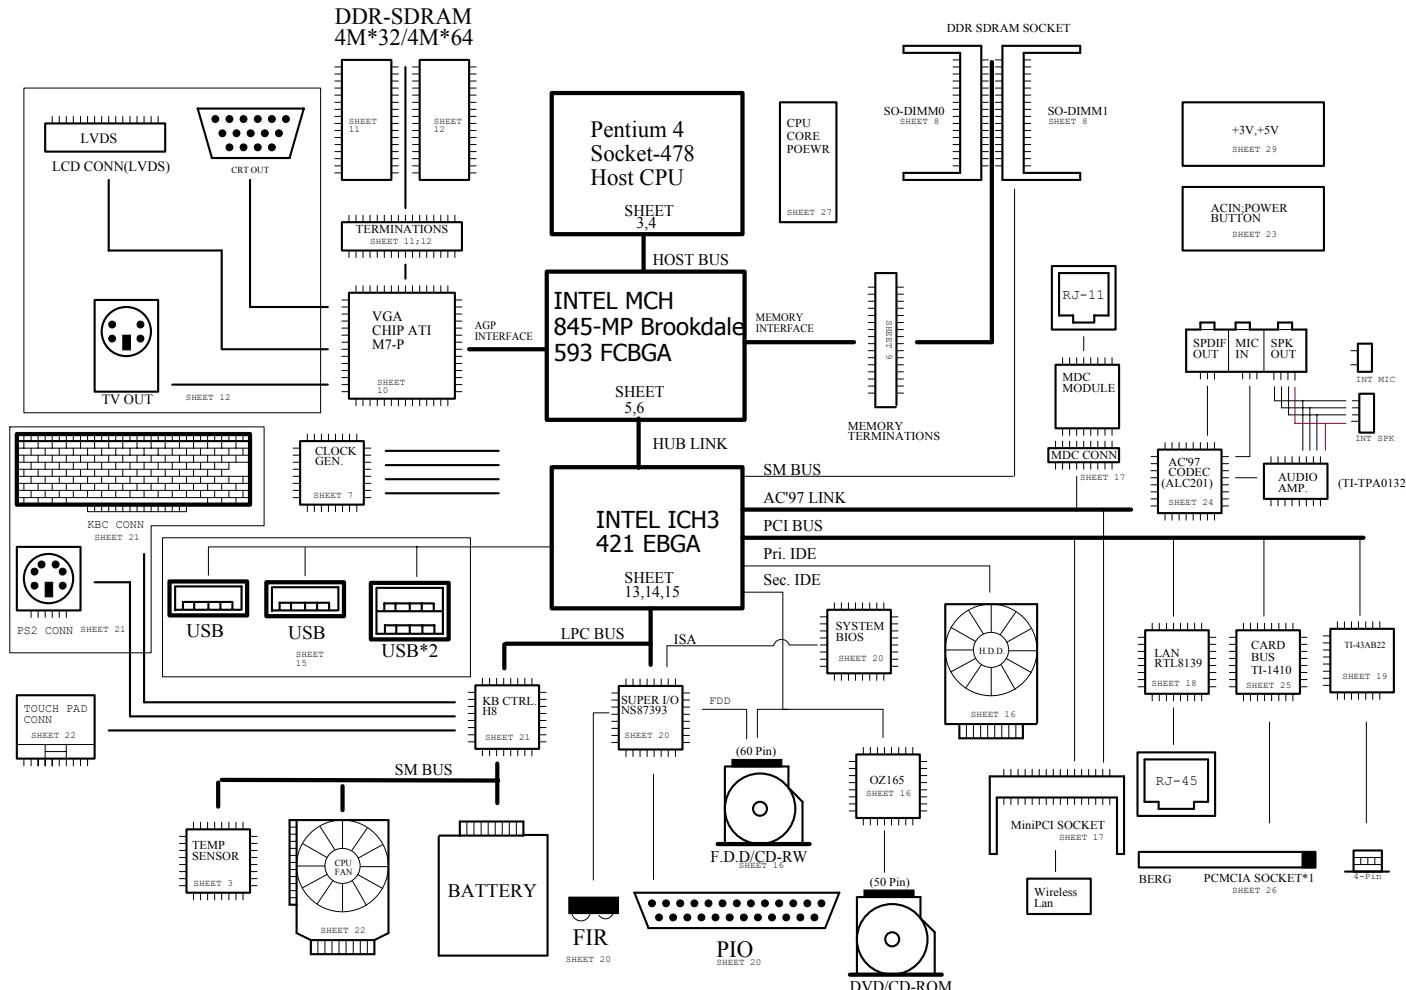


Schematic Diagrams

Schematic Diagrams



CPU Socket 478 - 1 of 2

Sheet 2 of 28
Socket 478
1 of 2

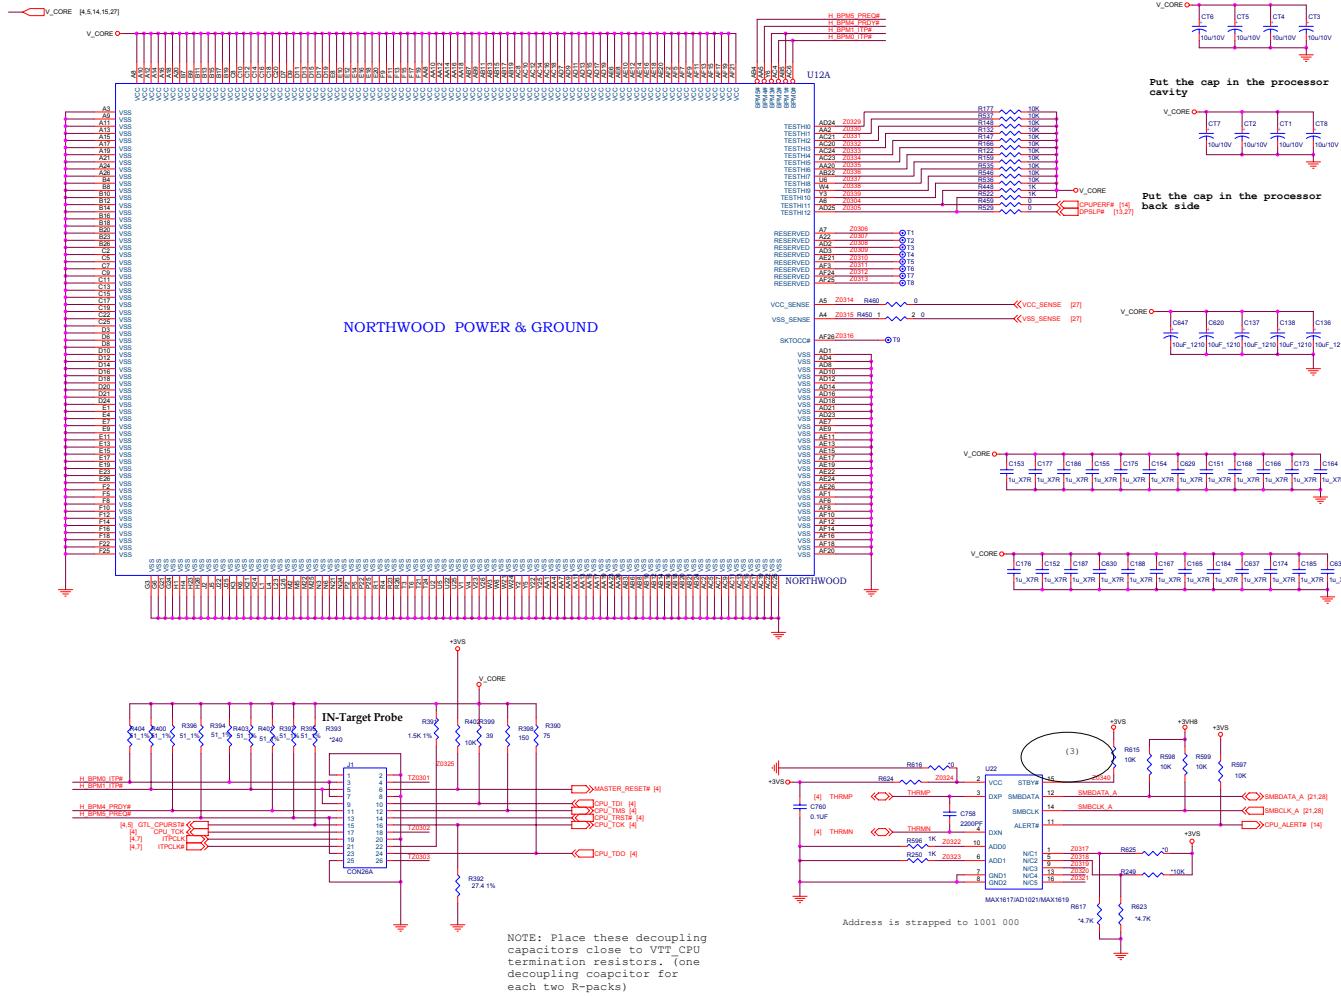

CPU Socket 478 - 2 of 2

Sheet 3 of 28
Socket 478
2 of 2

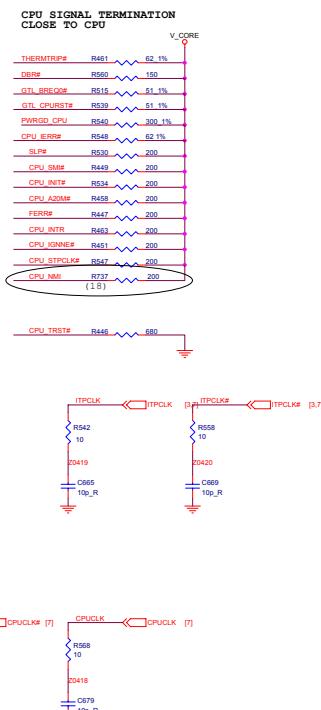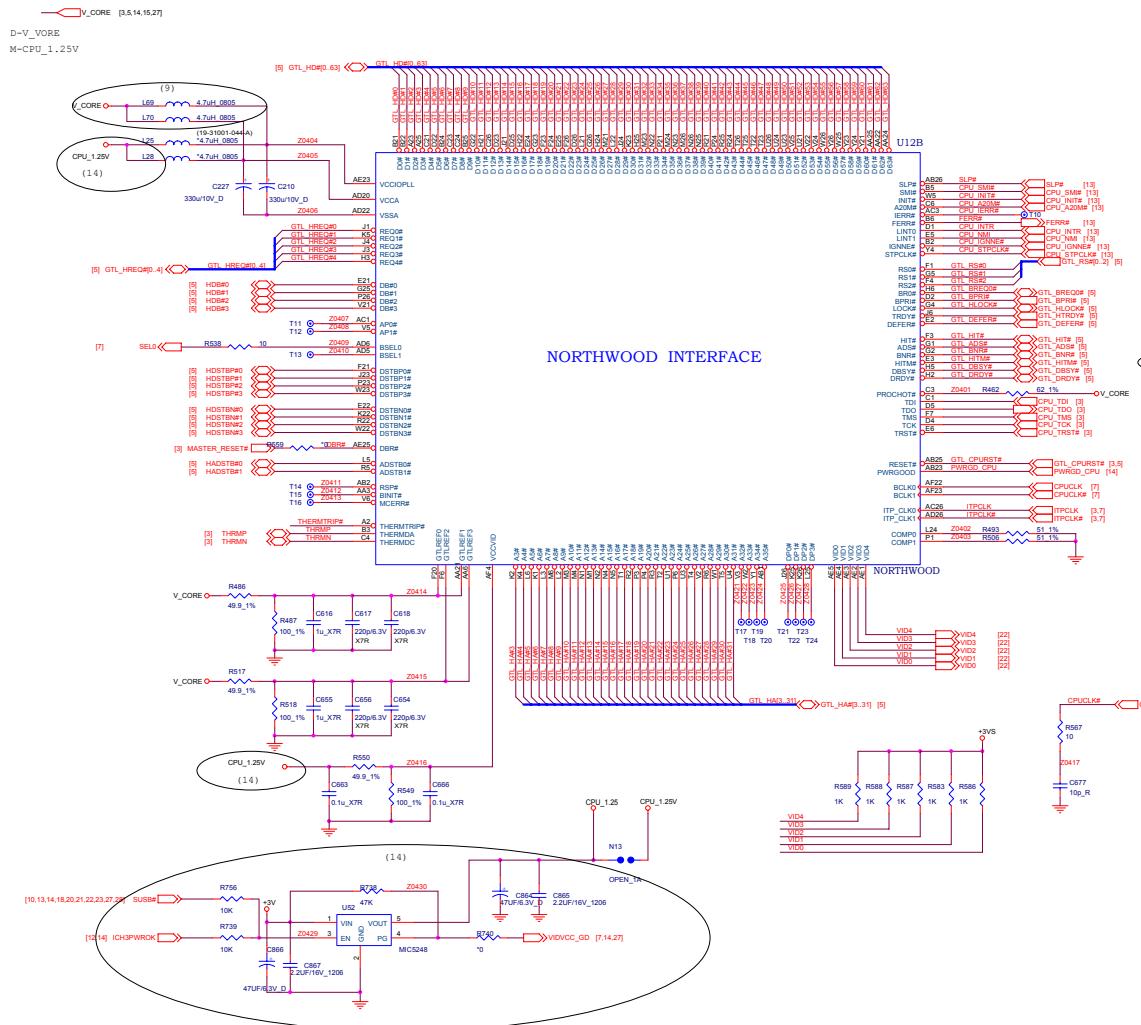


Schematic Diagrams

Schematic Diagrams

North Bridge MCH 845 Power & Ground - 1 of 2


Sheet 4 of 28
North Bridge 845
1 of 2

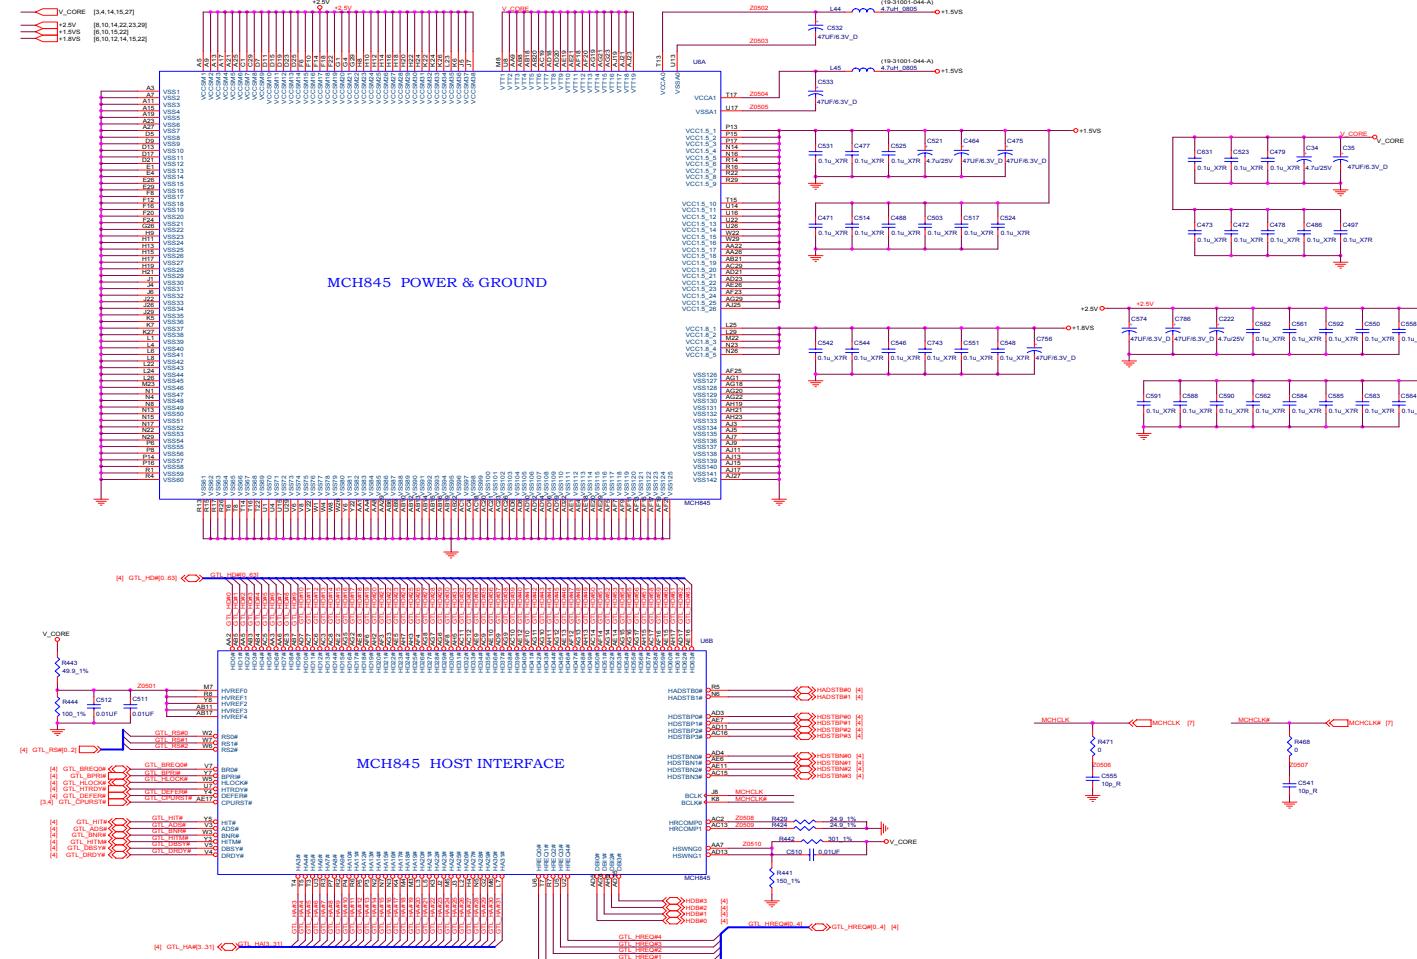

B - 6 Mainboard (71-56P00-D03)

North Bridge MCH 845 Memory Interface - 2 of 2

Sheet 5 of 28
North Bridge 845
2 of 2

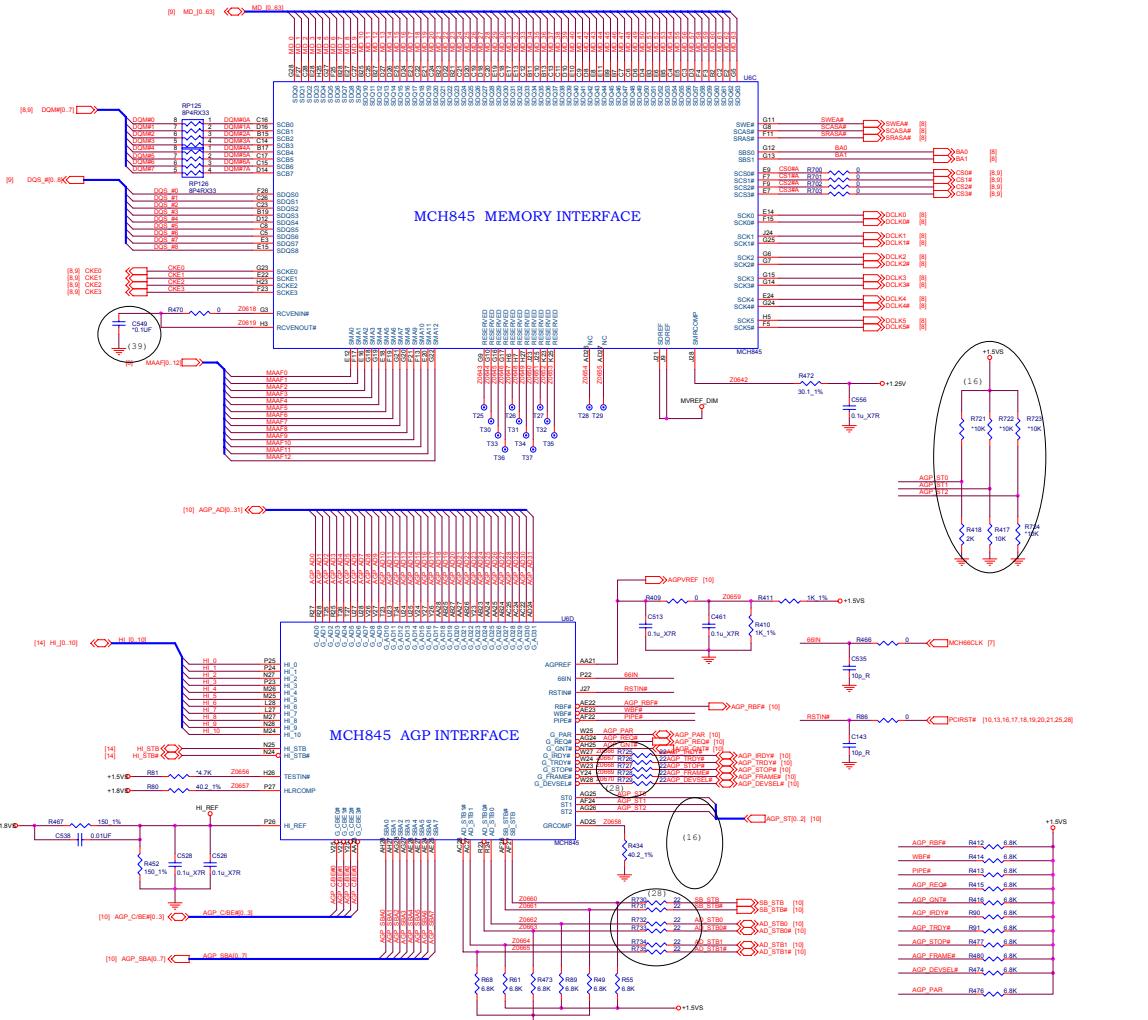


Schematic Diagrams

Schematic Diagrams

Clock Generator

Sheet 6 of 28
Clock Gen


FREQUENCY SETUP TABLE						
(FS2)	(FS1)	(FS0)	CPU (MHz)	3V6 (MHz)	6MHz OUT (MHz)	PCI (MHz)
0	0	0	66.66	66.66	66.66	33.33
0	0	1	100	66.66	66.66	33.33
0	1	0	200	66.66	66.66	33.33
0	1	1	333	66.66	66.66	33.33
1	0	0	66.66	66.66	66MHz_IN	66MHz_IN2
1	0	1	100	66.66	66MHz_IN	66MHz_IN2
1	1	0	200	66.66	66MHz_IN	66MHz_IN2
1	1	1	333	66.66	66MHz_IN	66MHz_IN2

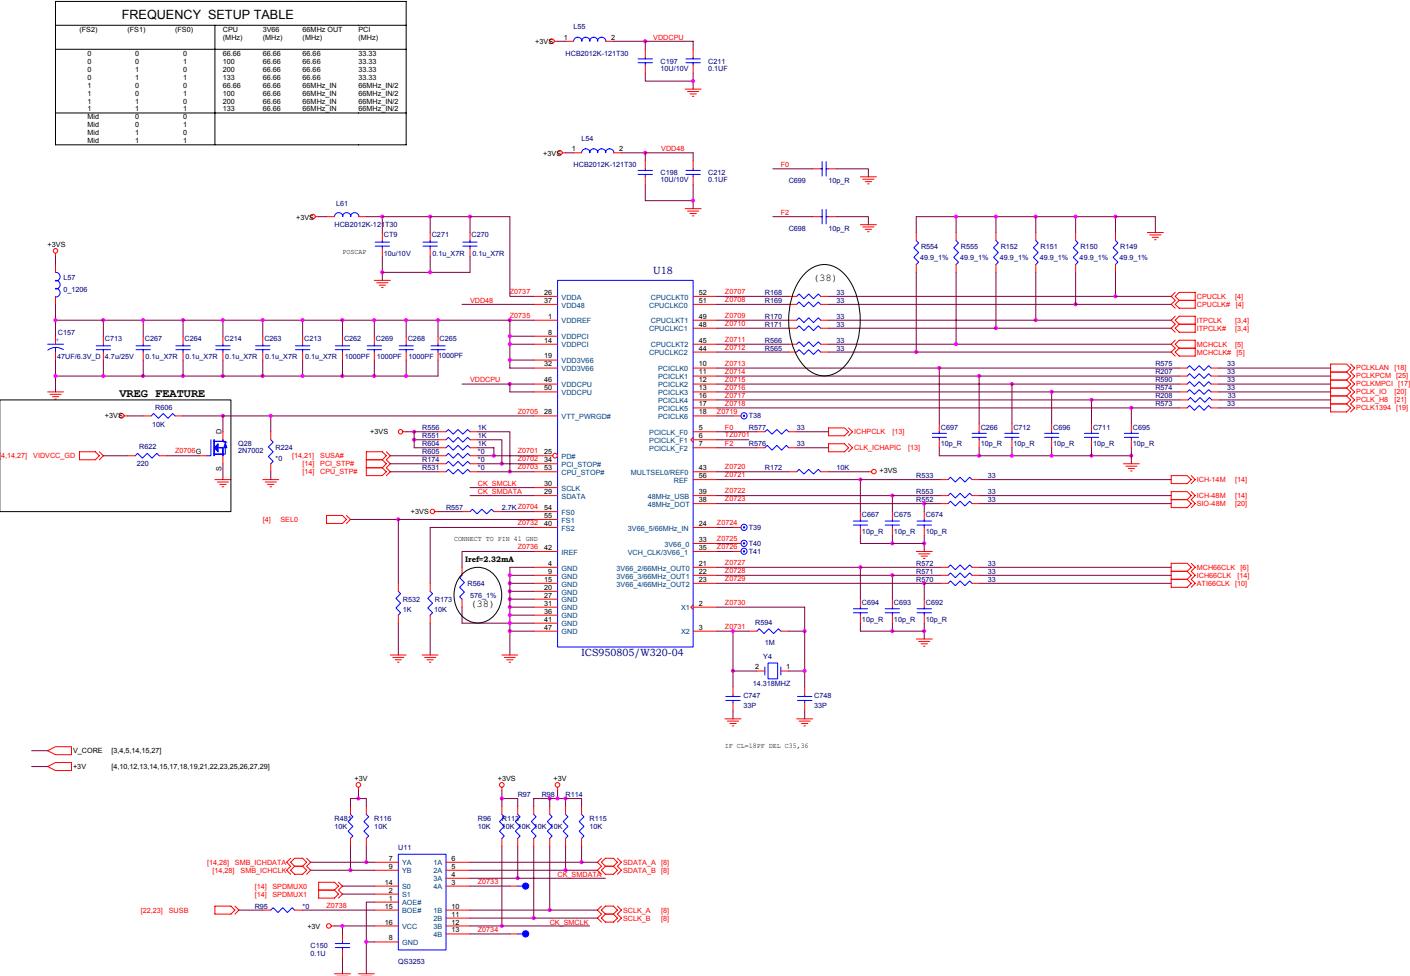

B - 8 Mainboard (71-56P00-D03)

DDRAM

Sheet 7 of 28
DDRAM


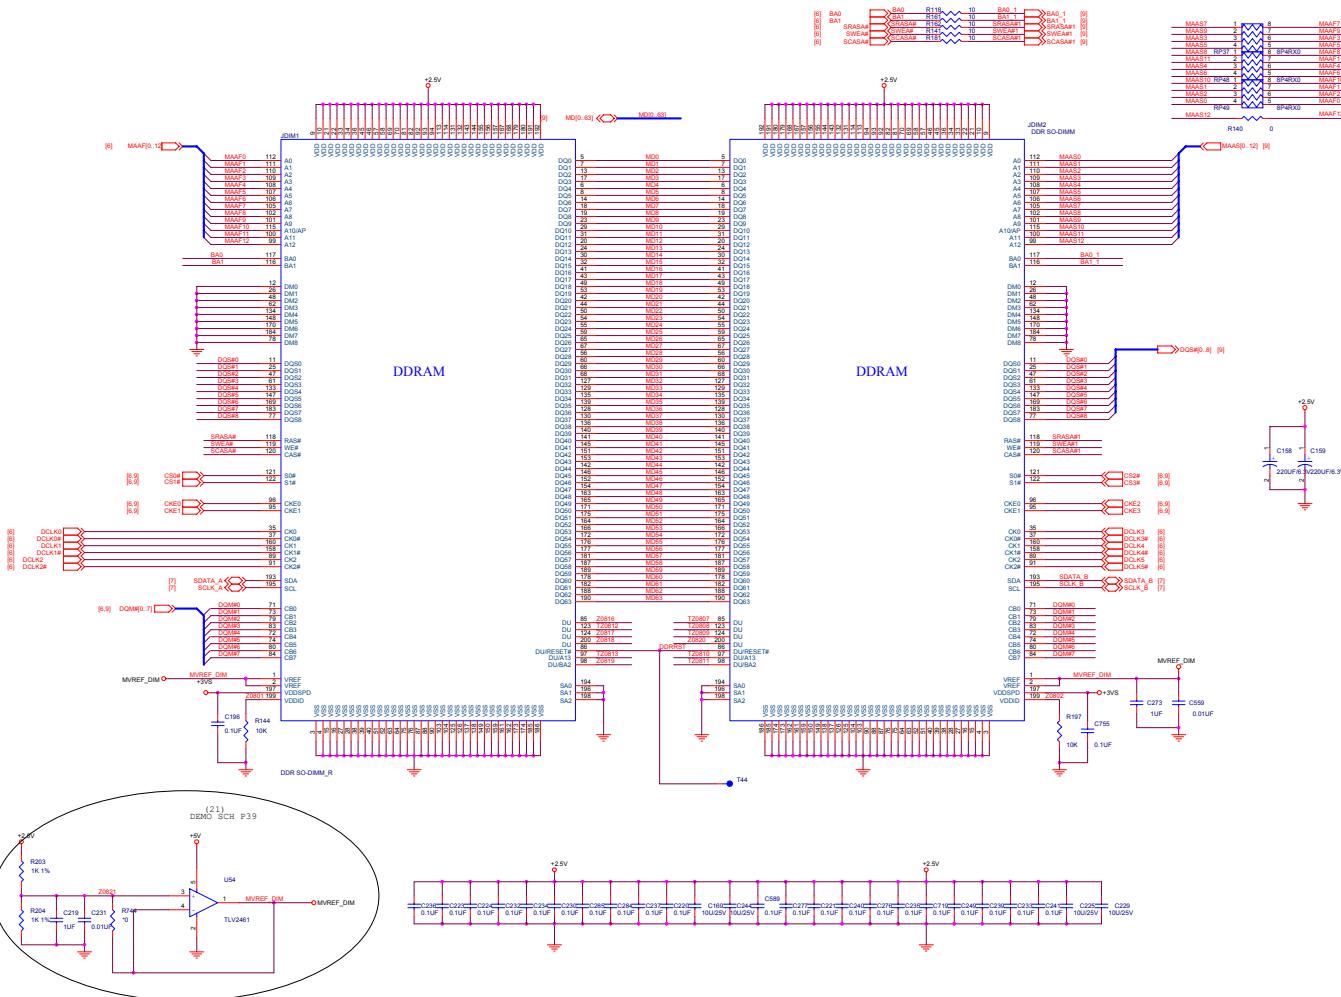


Schematic Diagrams


Schematic Diagrams

DDR Termination


Sheet 8 of 28 DDR Termination

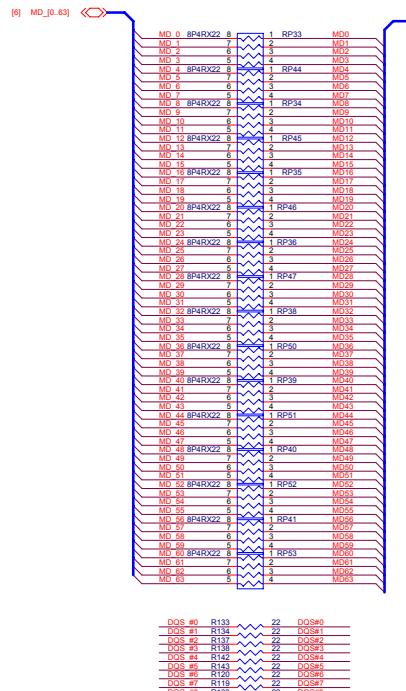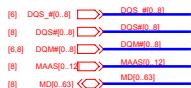


Place these damping resistors close to SO-DIMM

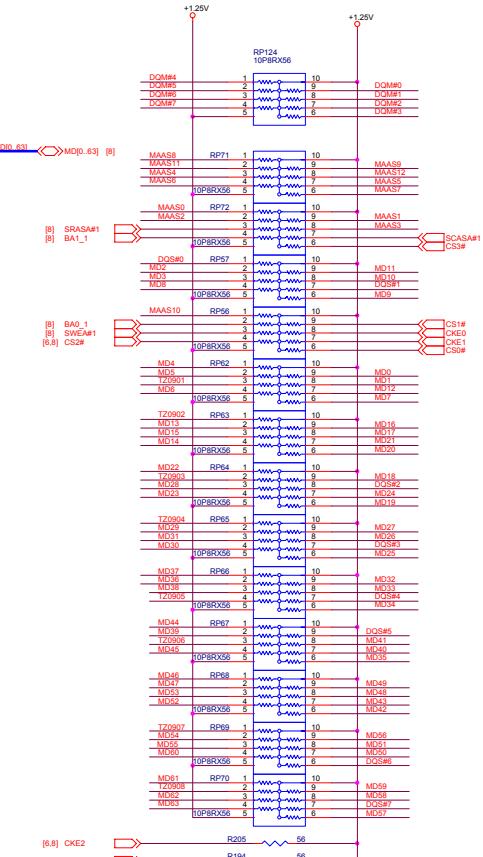

VTT_MEM RESISTORS

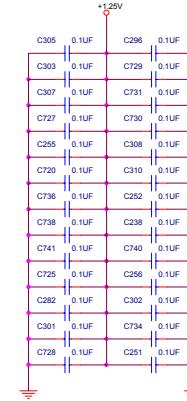


NOTE: Place these decoupling capacitors close to VTT_MEM termination resistors. (one decoupling capacitor for each two R-packs)

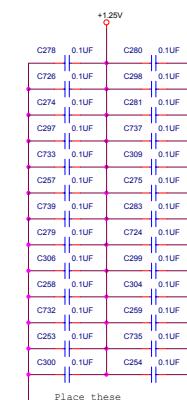

Place these decoupling capacitors on VTT_MEM trace

Mobility P7


Sheet 9 of 28
Mobility P7

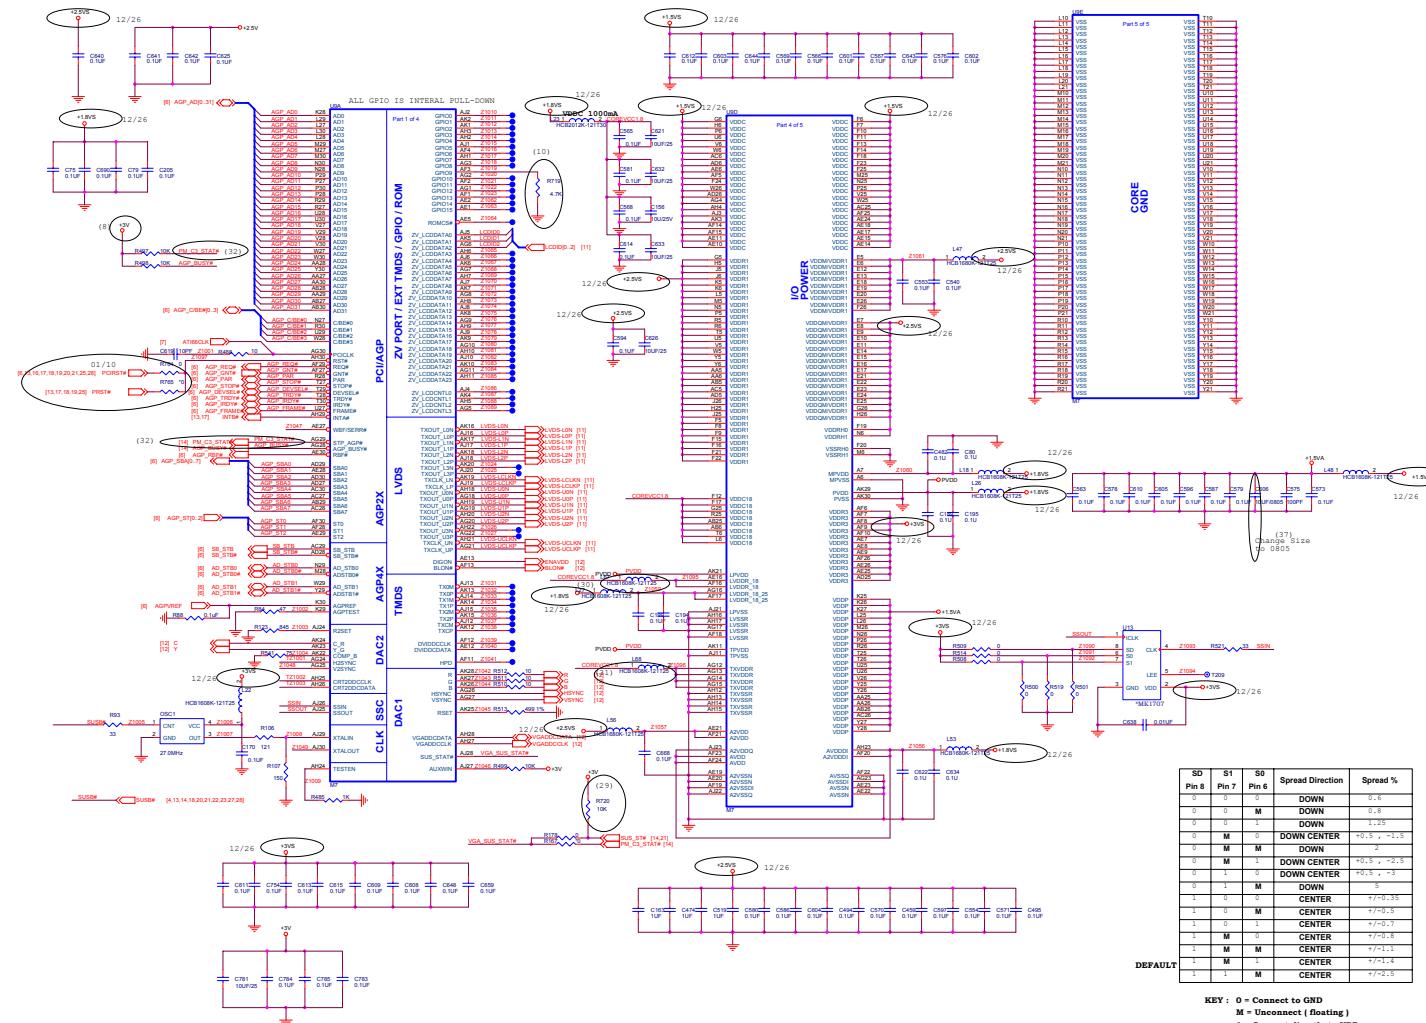

Schematic Diagrams


Mobility Mem A: Term; LVDS

Sheet 10 of 28
Mobility Mem A

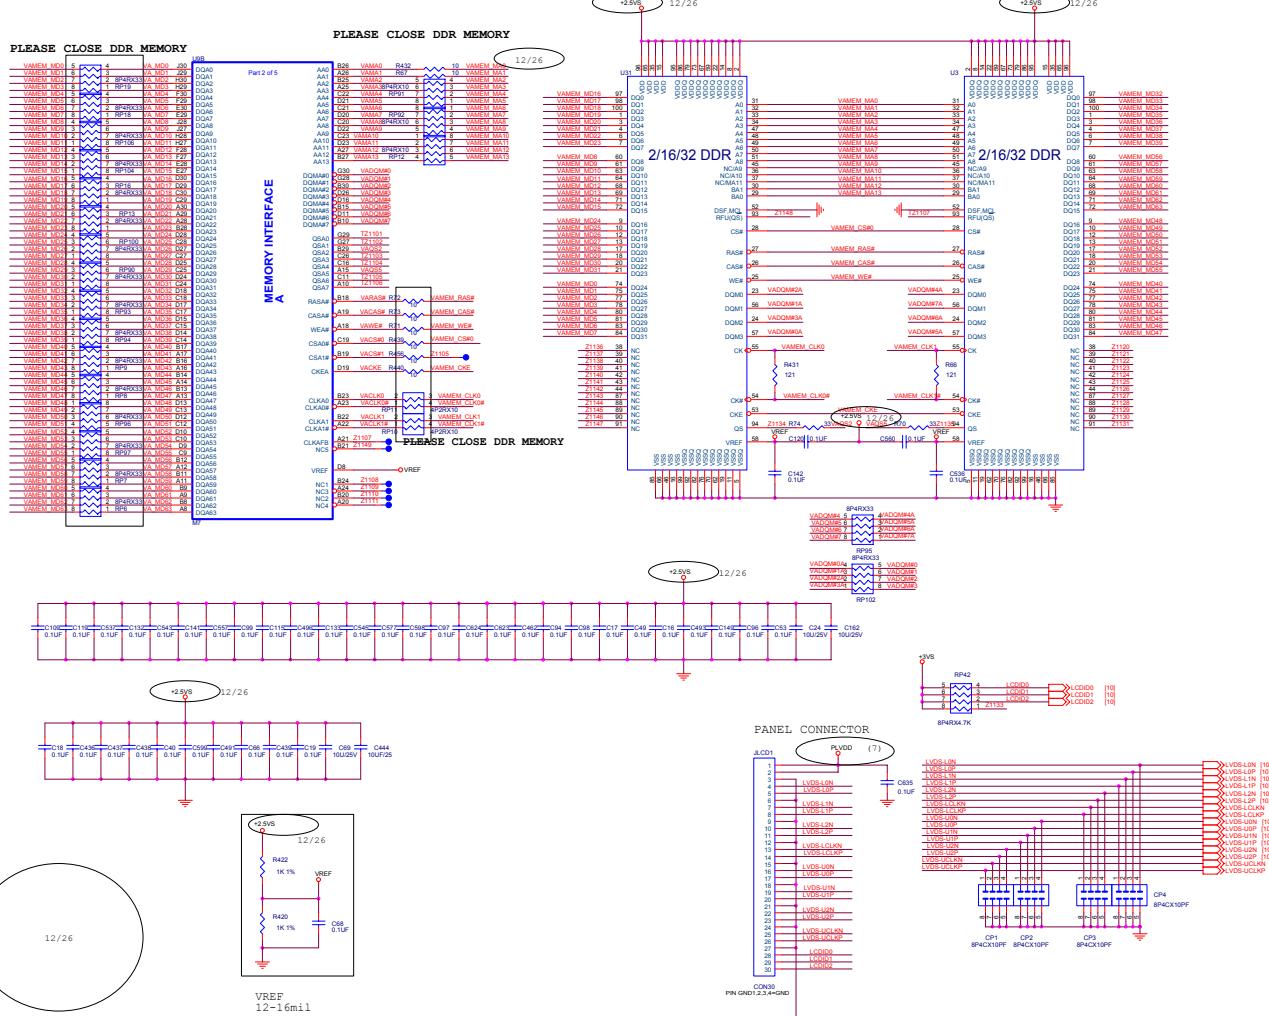

Mobility Mem B: CRT; LVDS; TV OUT

Sheet 11 of 28
Mobility Mem B

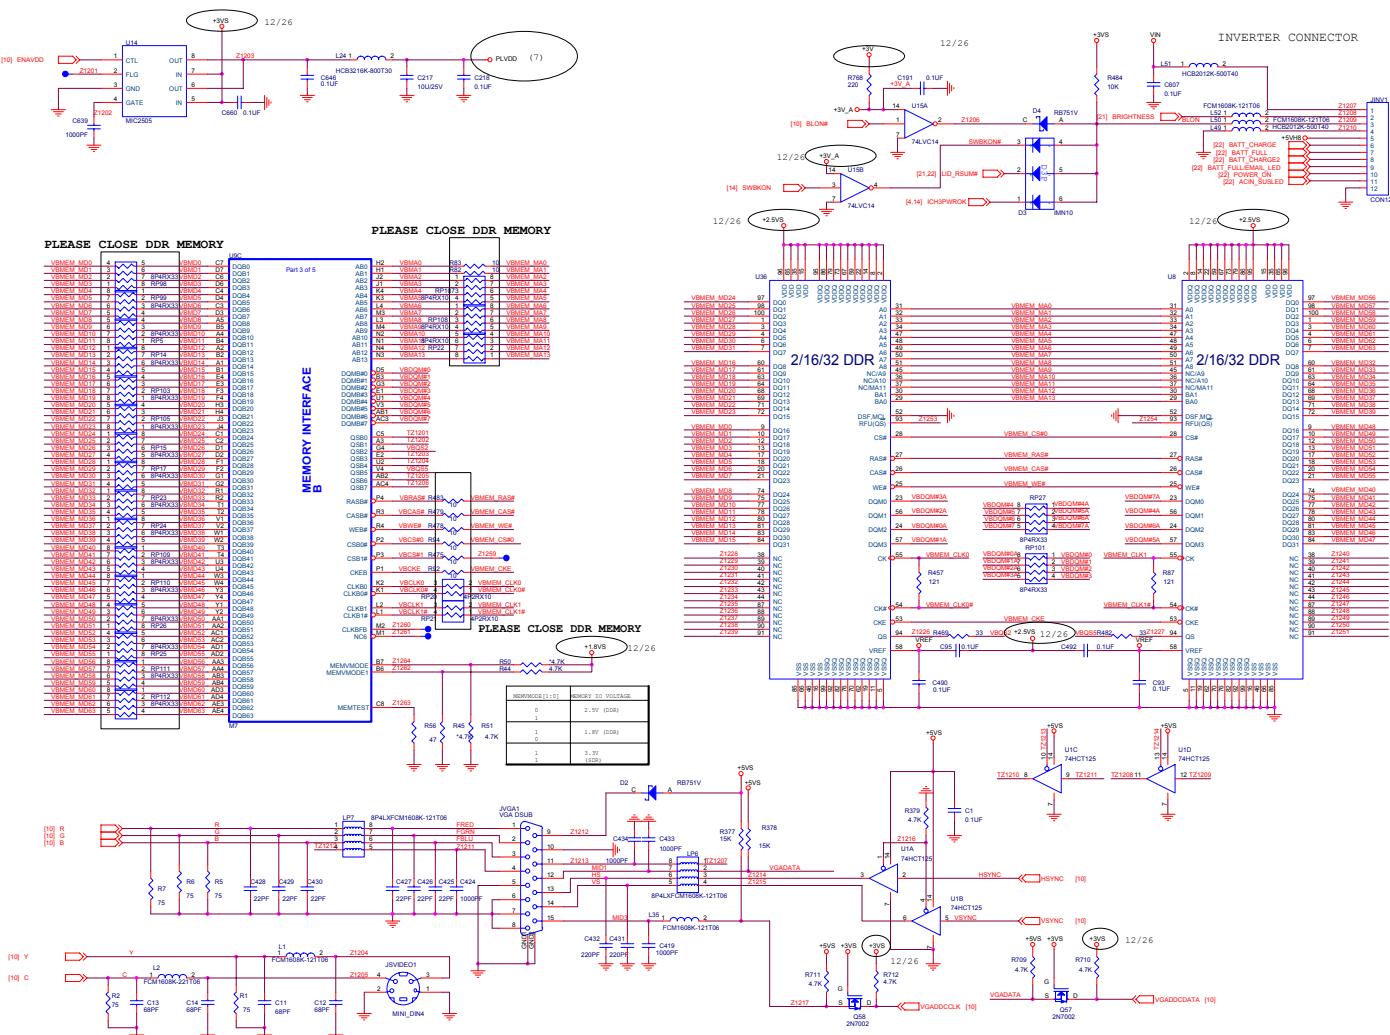


Schematic Diagrams

ICH3 - 1 of 3

Sheet 12 of 28


ICH3

1 of 3

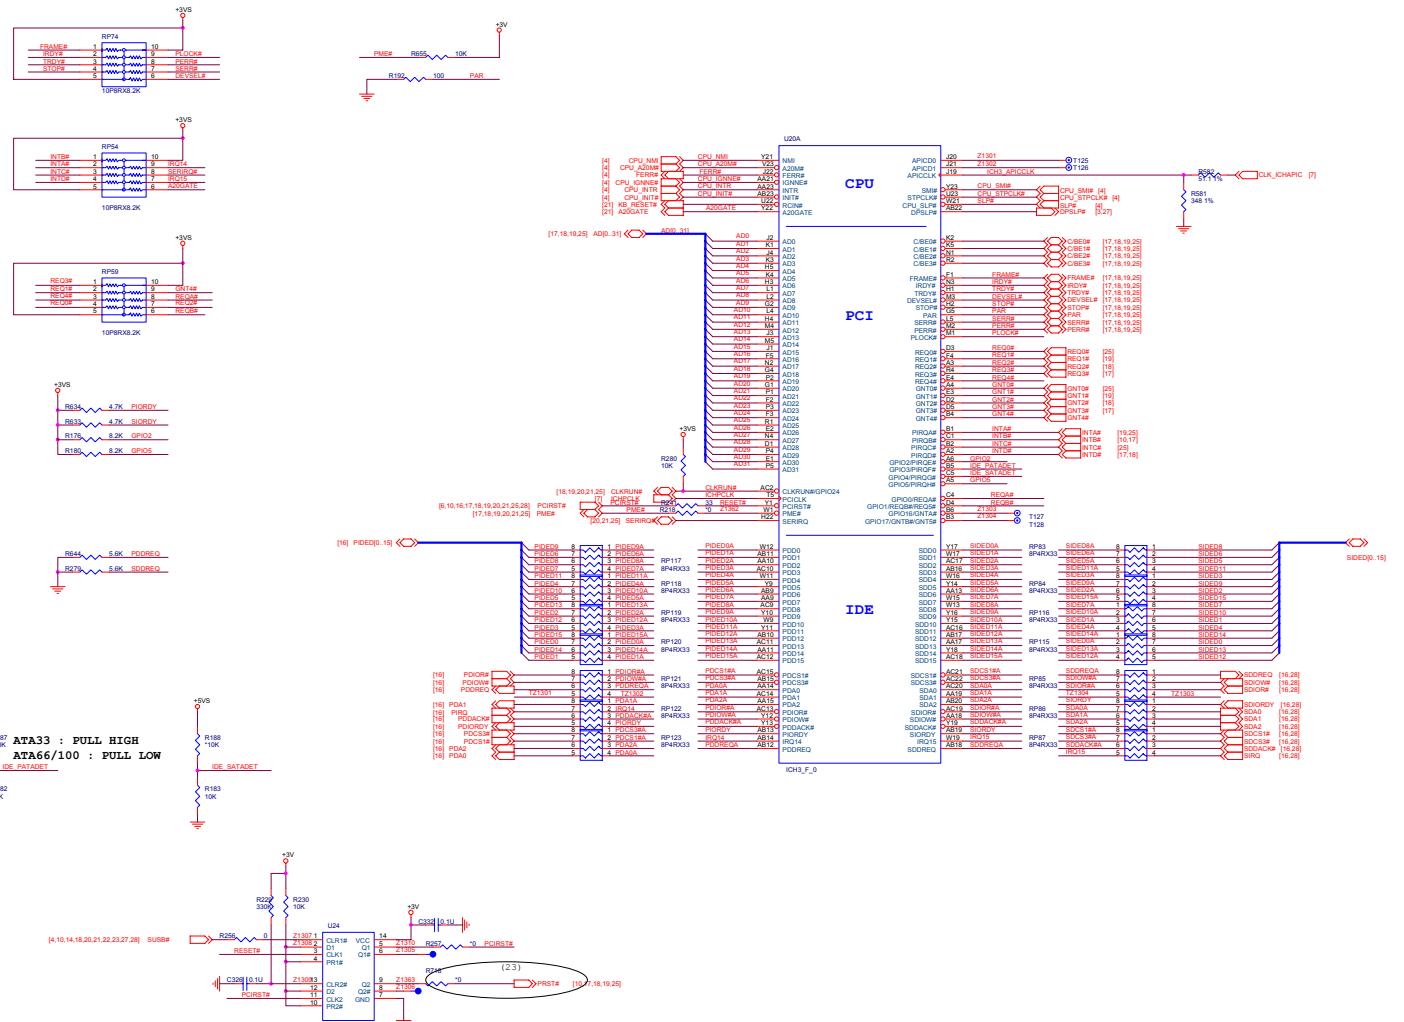

ICH3 - 2 of 3


Sheet 13 of 28
ICH 3
2 of 3

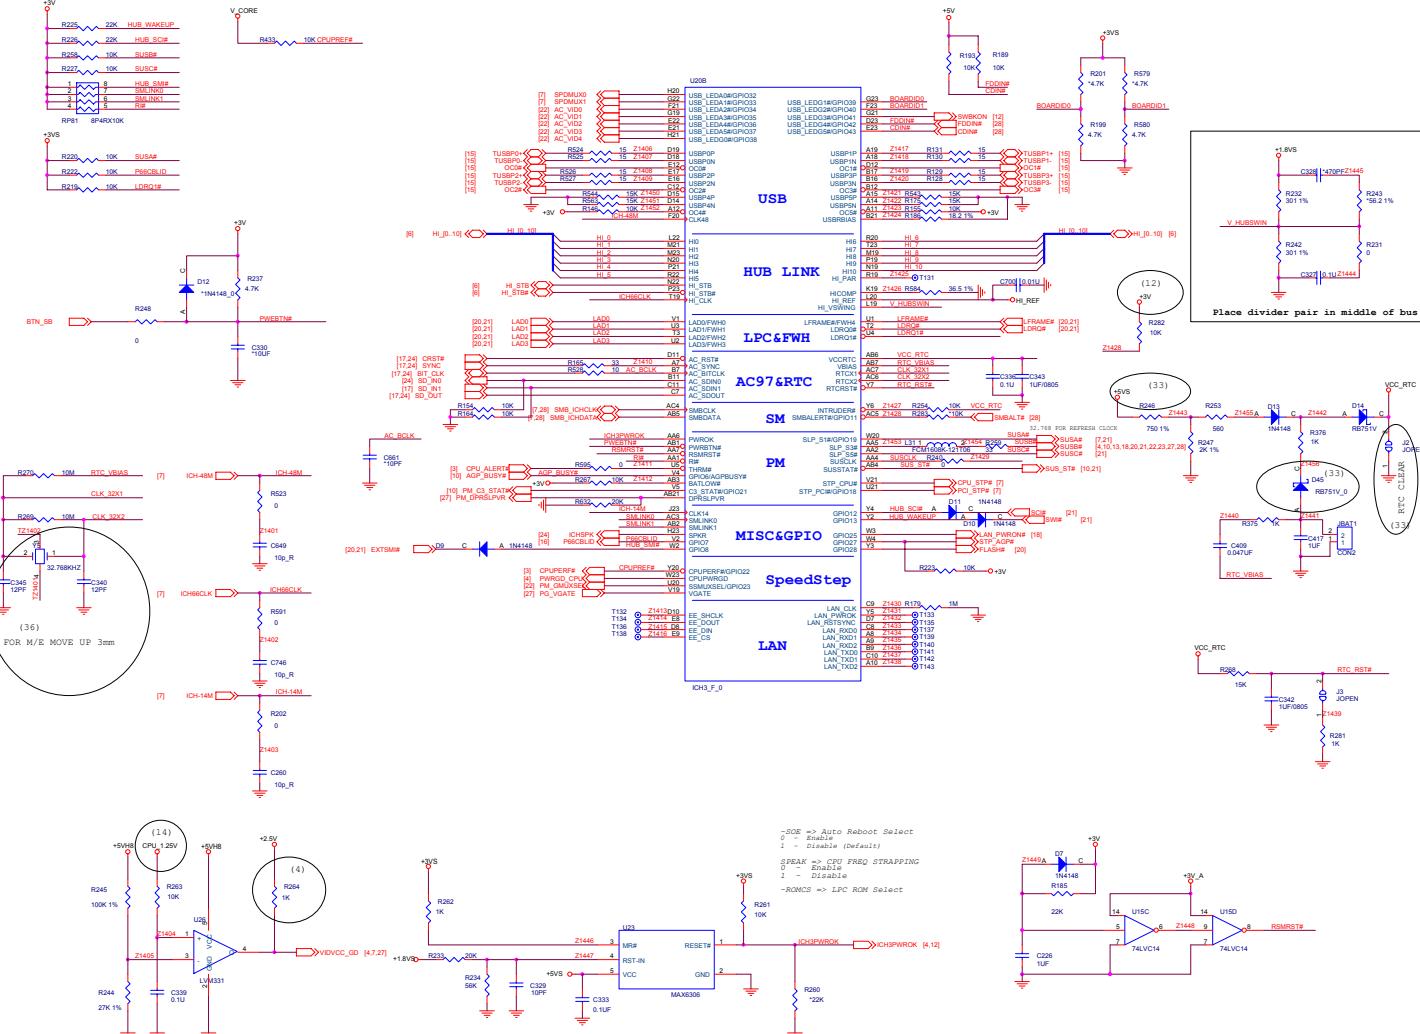

Schematic Diagrams


ICH3 (USB) - 3 of 3

Sheet 14 of 28
ICH 3 (USB)
3 of 3

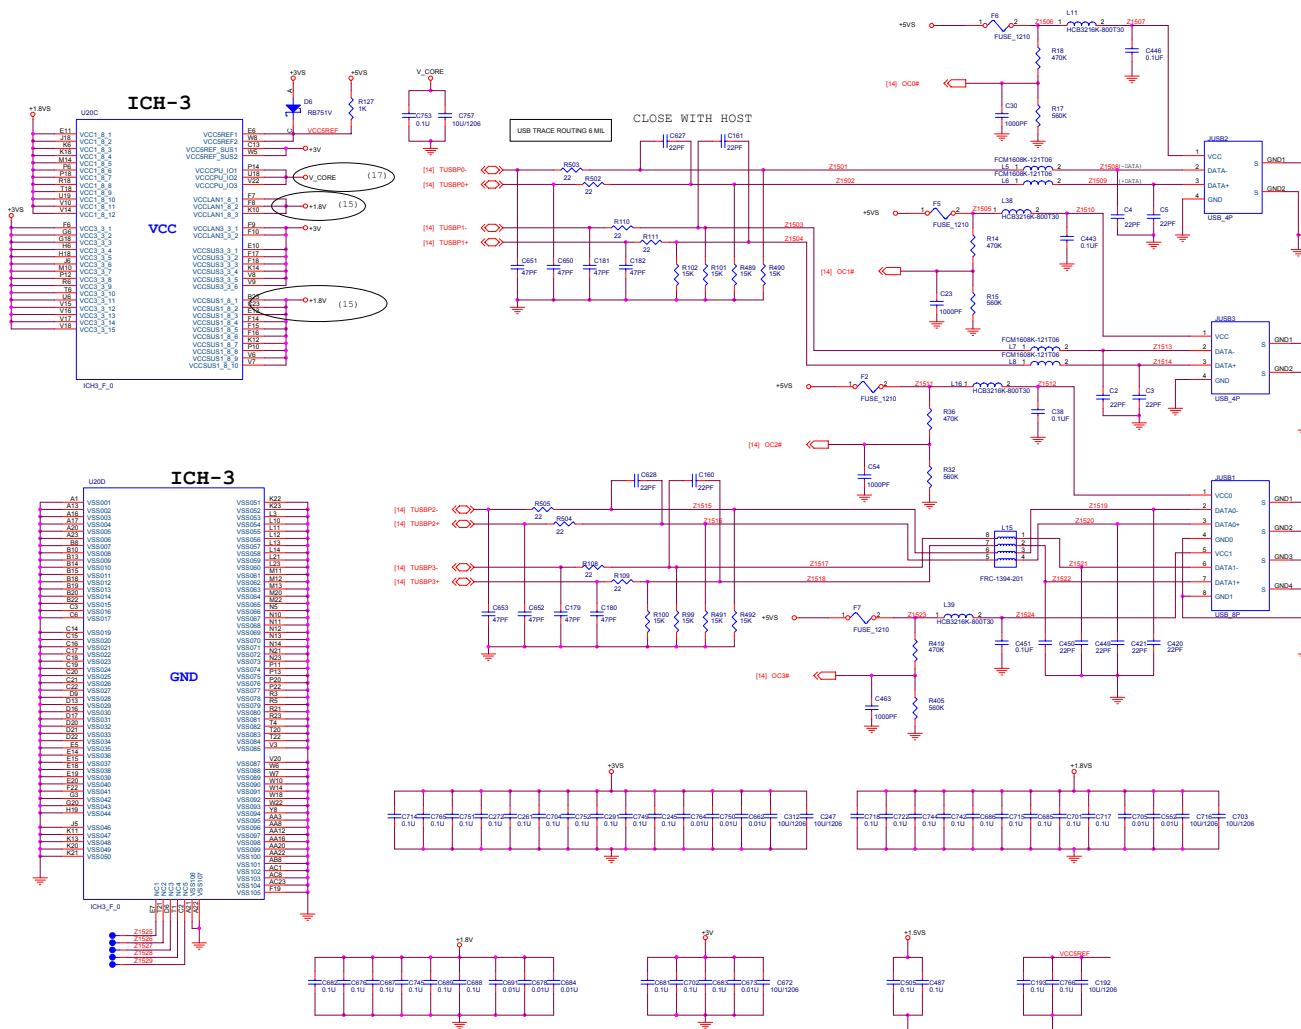

HDD; CD-ROM; FDD


Sheet 15 of 28
HDD; CD-ROM; FDD

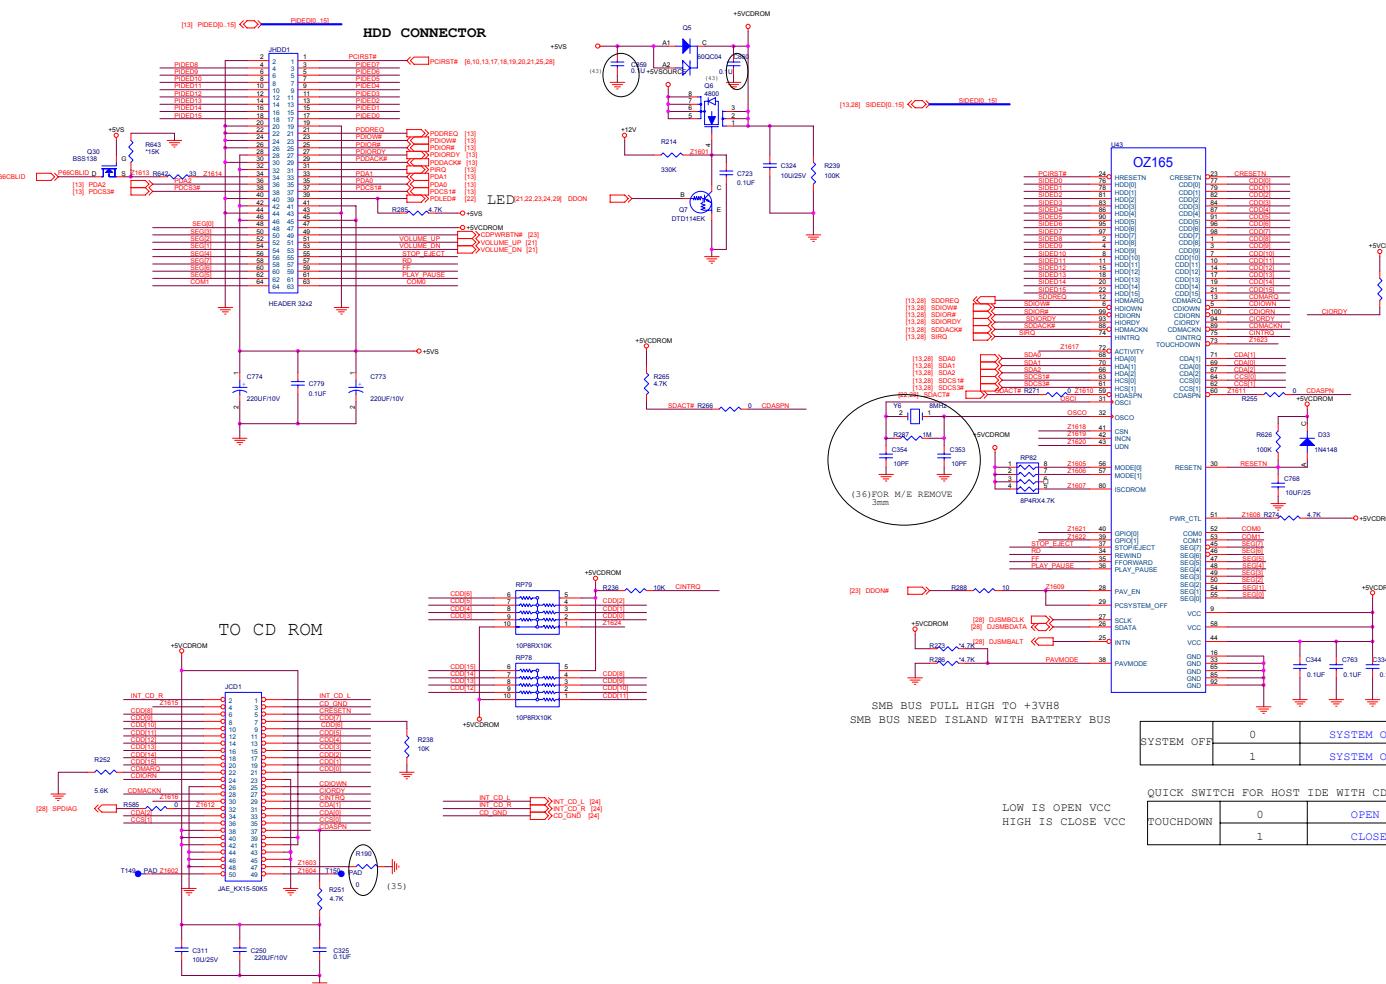

Schematic Diagrams


Mini PCI; MDC Modem

Sheet 16 of 28
Mini PCI; MDC
Modem

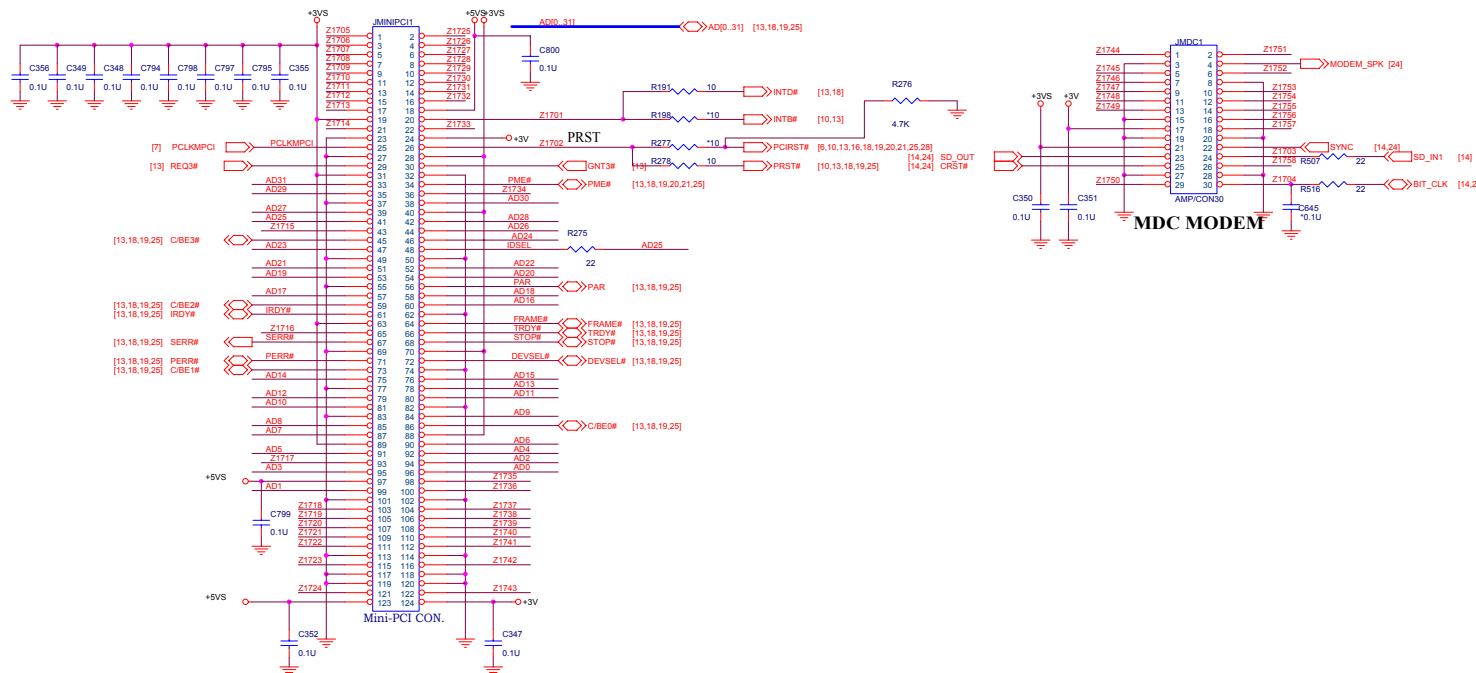

LAN RTL8139CL


Sheet 17 of 28
LAN RTL8139CL

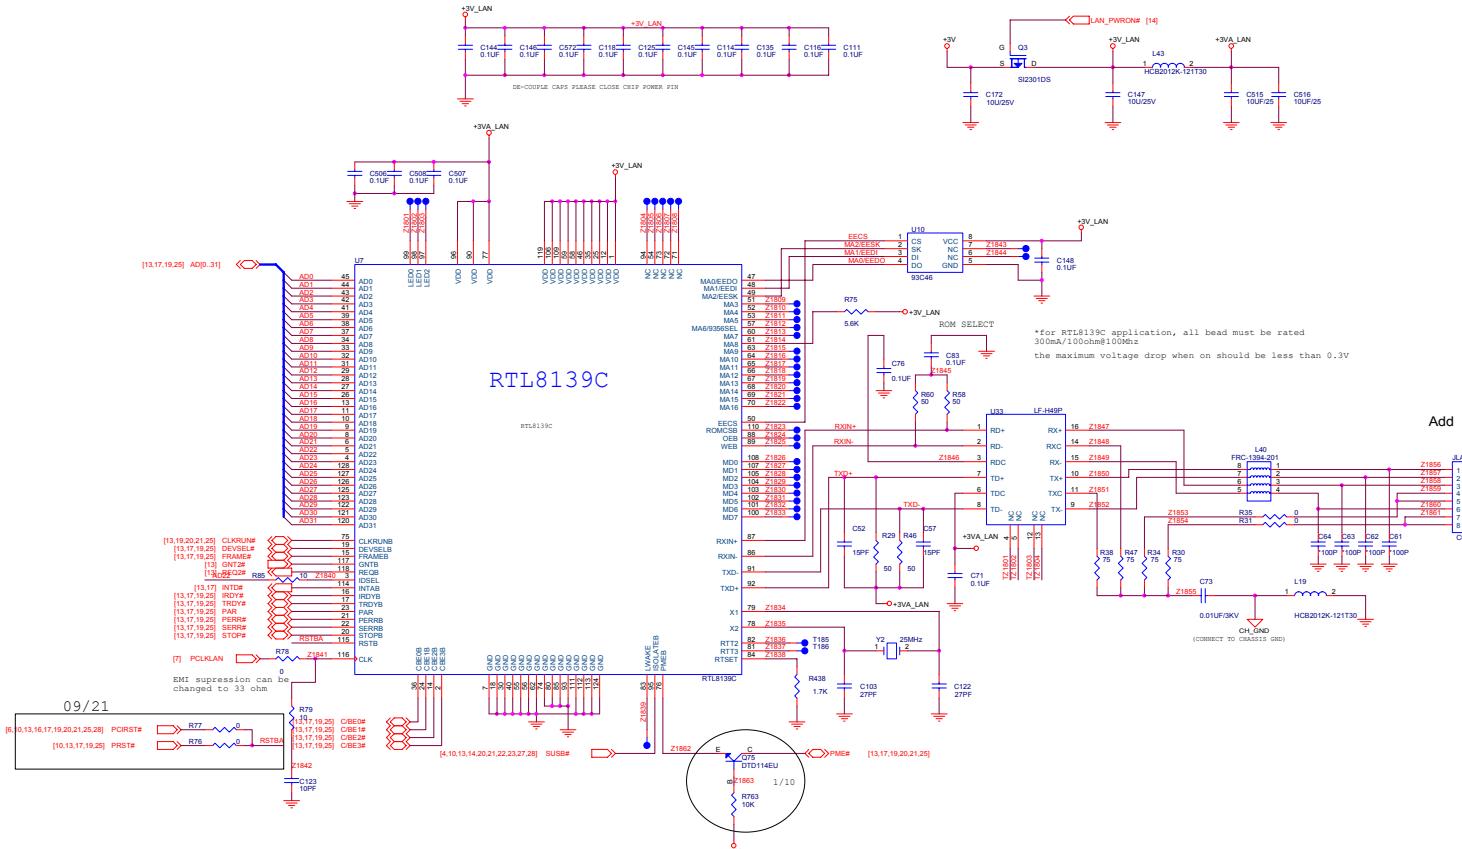

Schematic Diagrams


TI 1394 (43AB22)

Sheet 18 of 28
TI1394 (43AB22)

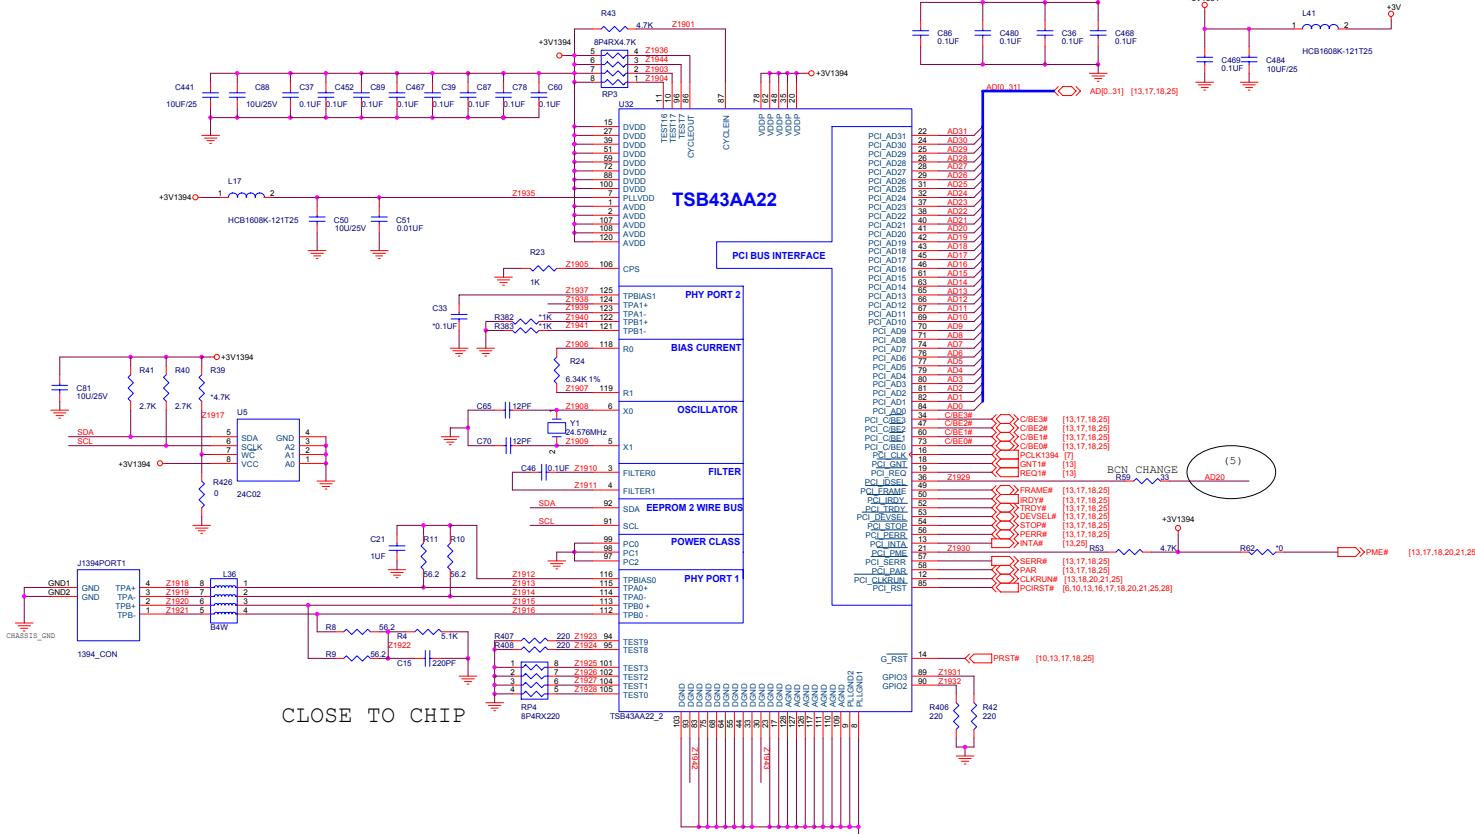

NS-PC87393; IR; ROM

Sheet 19 of 28
NS-PC87393; IR; ROM

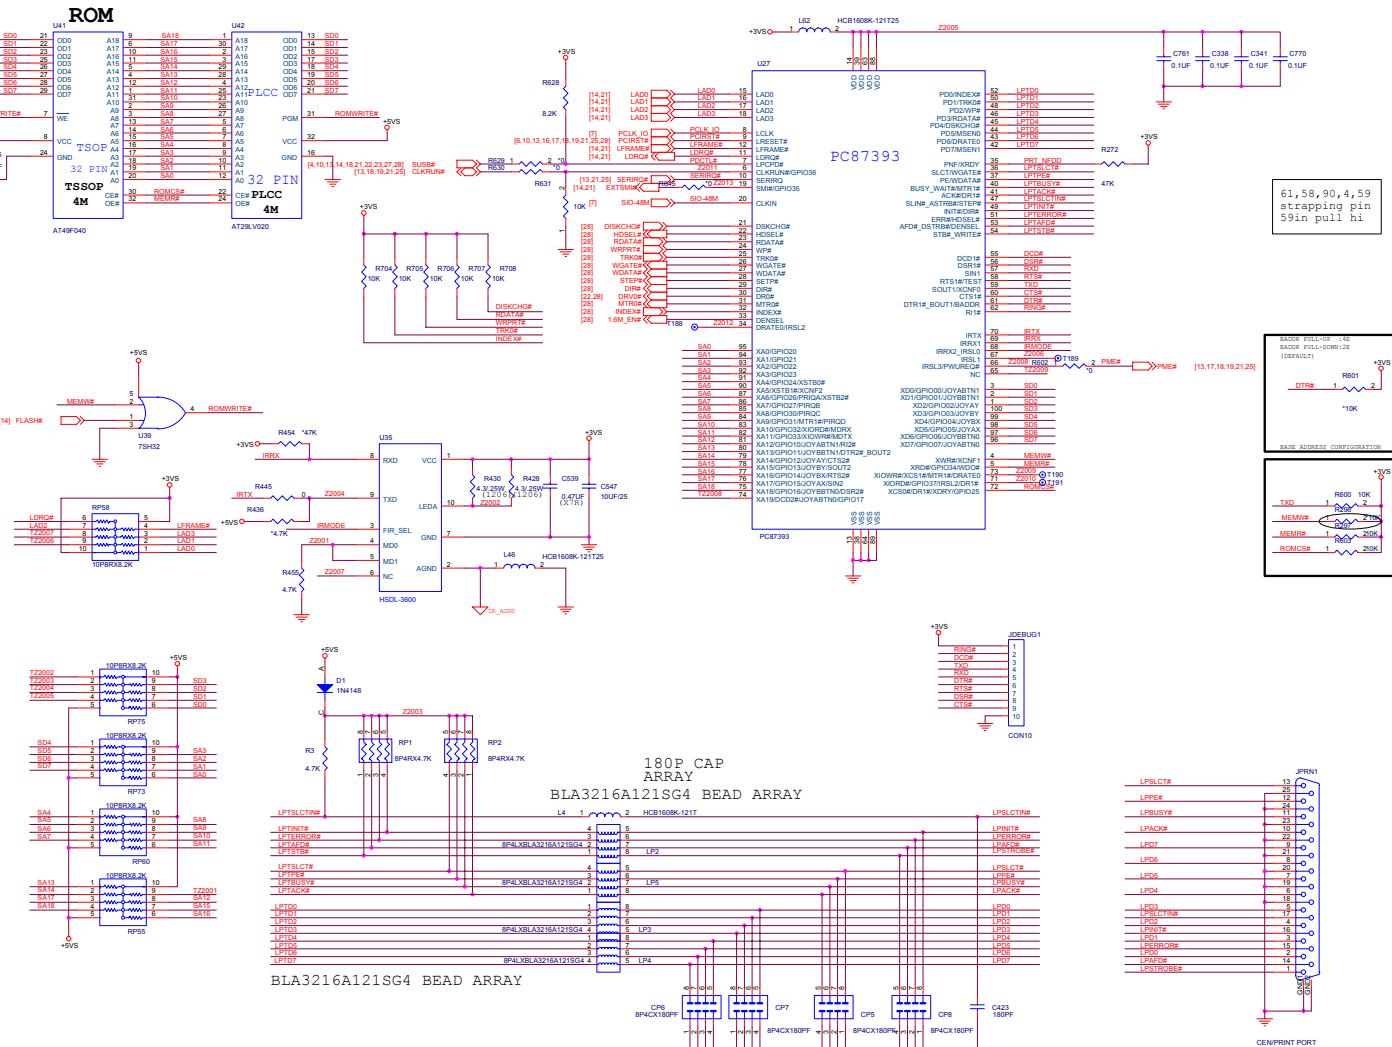


Schematic Diagrams

Schematic Diagrams

H8


Sheet 20 of 28
H8

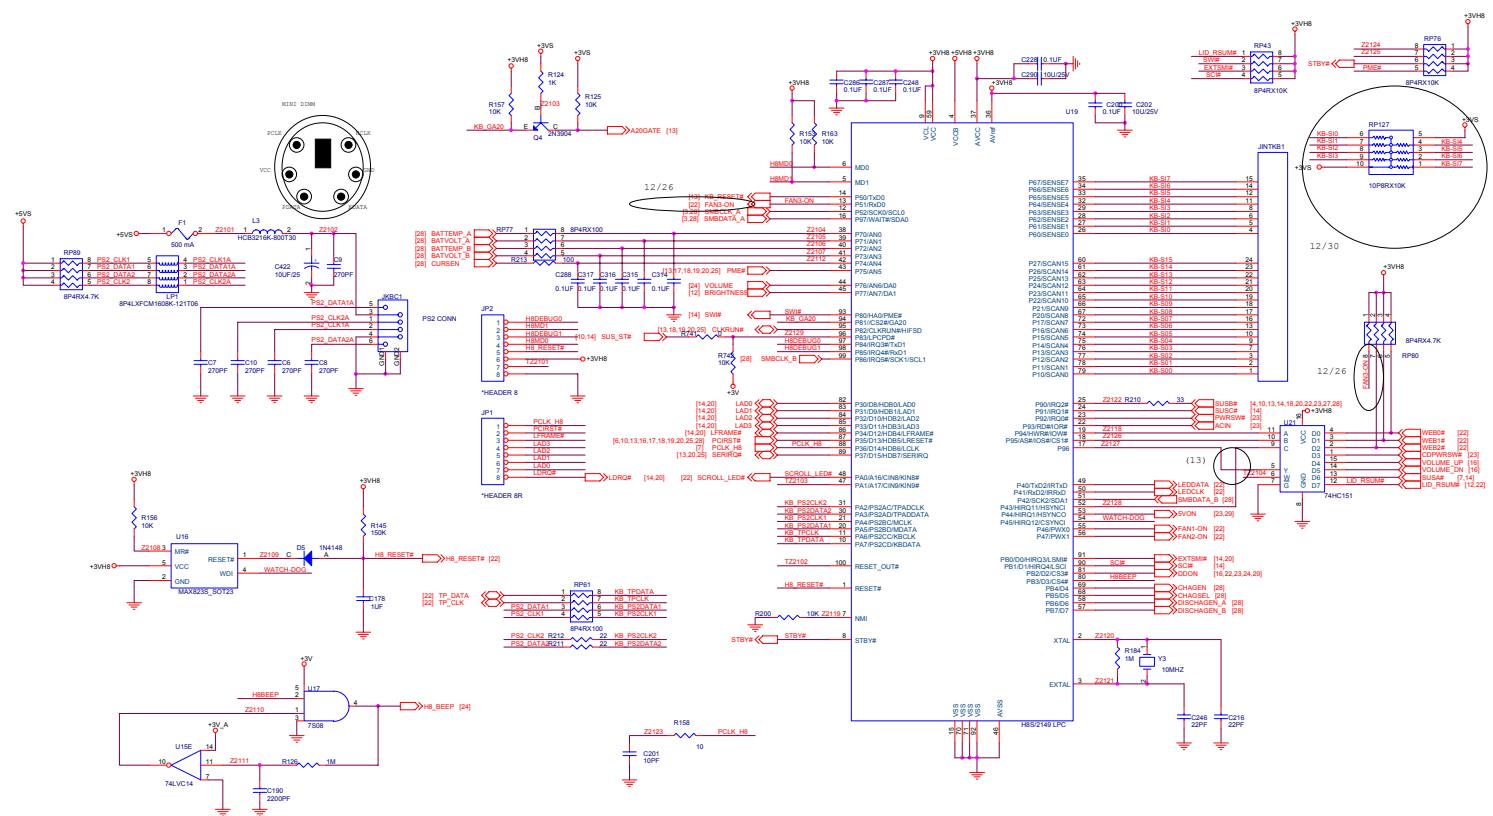

B - 22 Mainboard (71-56P00-D03)

KBC Conn; Fan Conn; LDO


Sheet 21 of 28
KBC Conn; Fan Conn; LDO

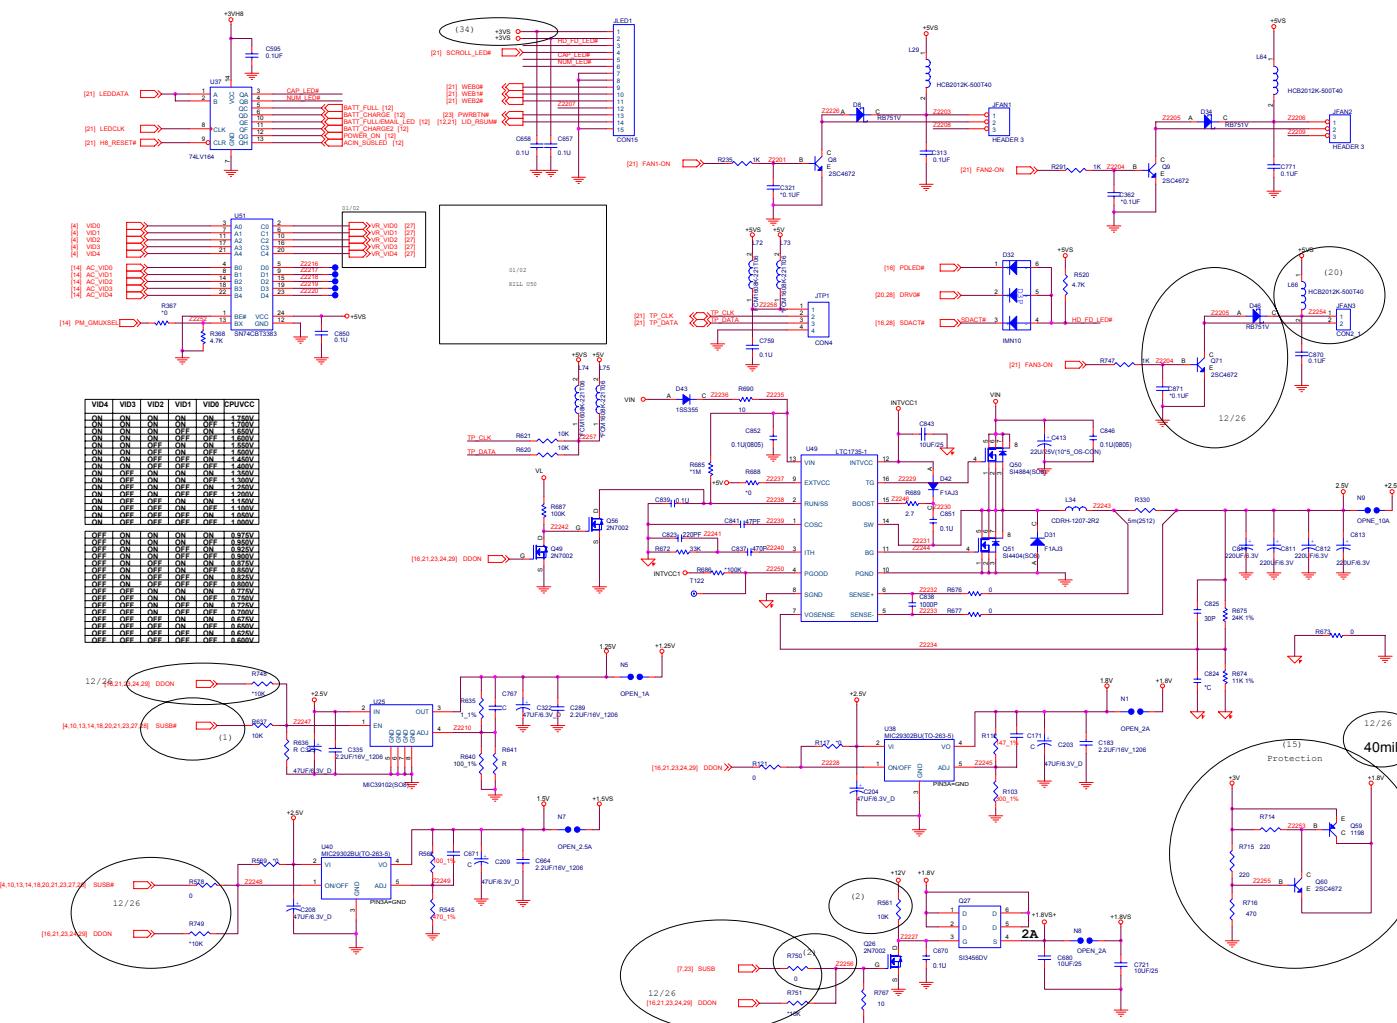

Schematic Diagrams


AC-In; Power Button

Sheet 22 of 28
AC-In; Power Button

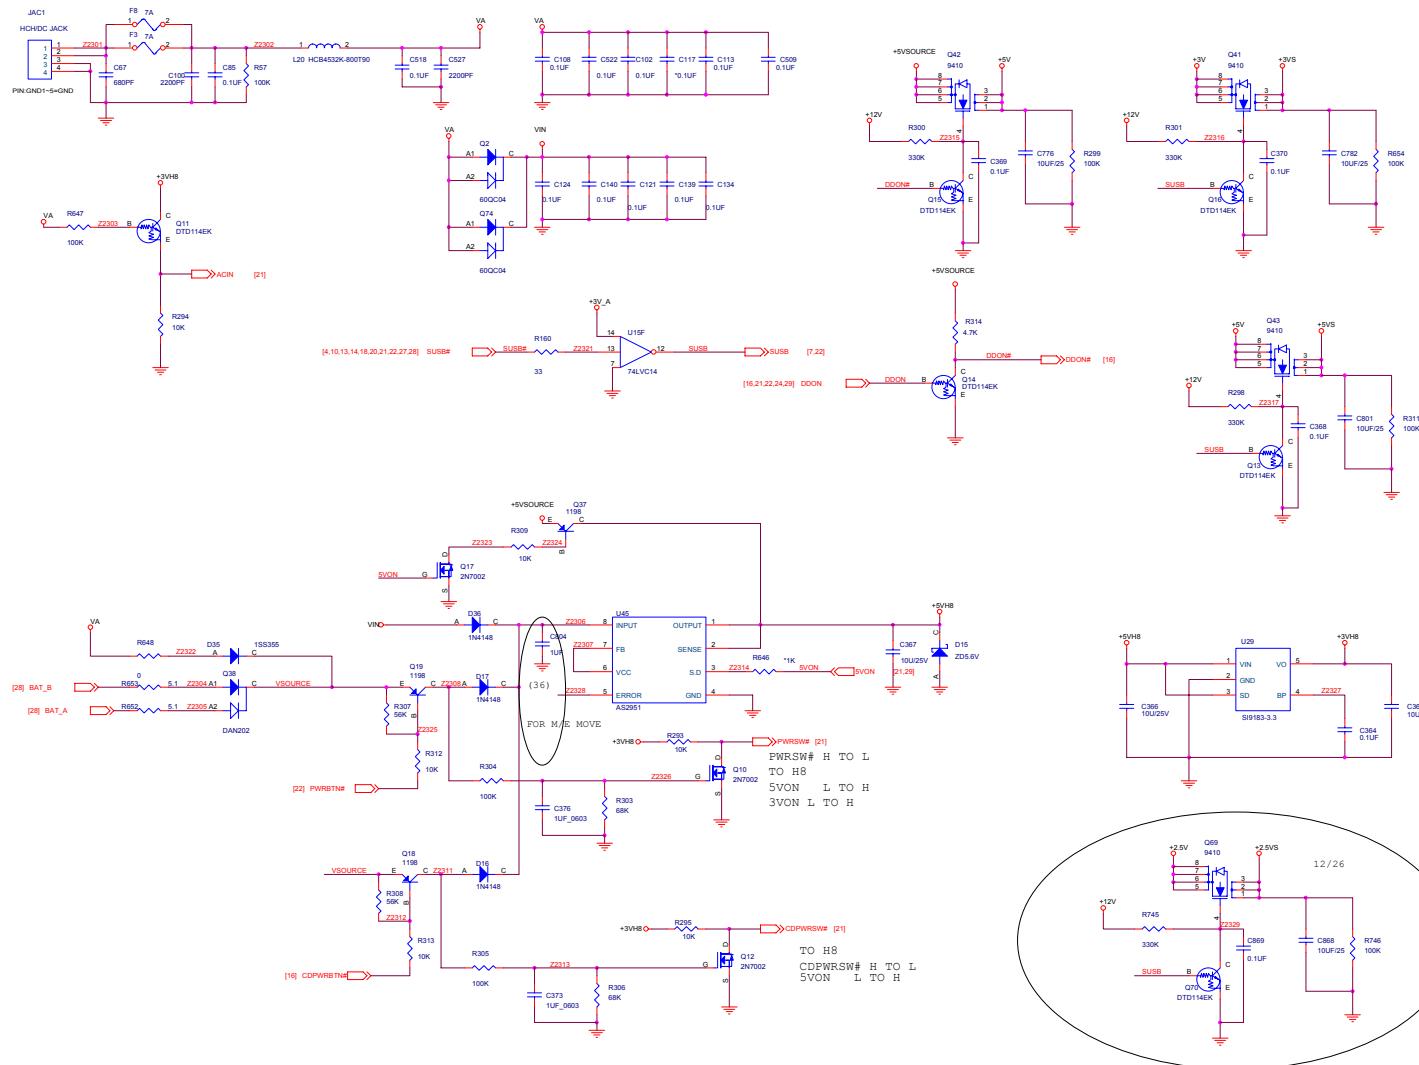

AC '97 AD 1886

Sheet 23 of 28
AC '97 AD 1886

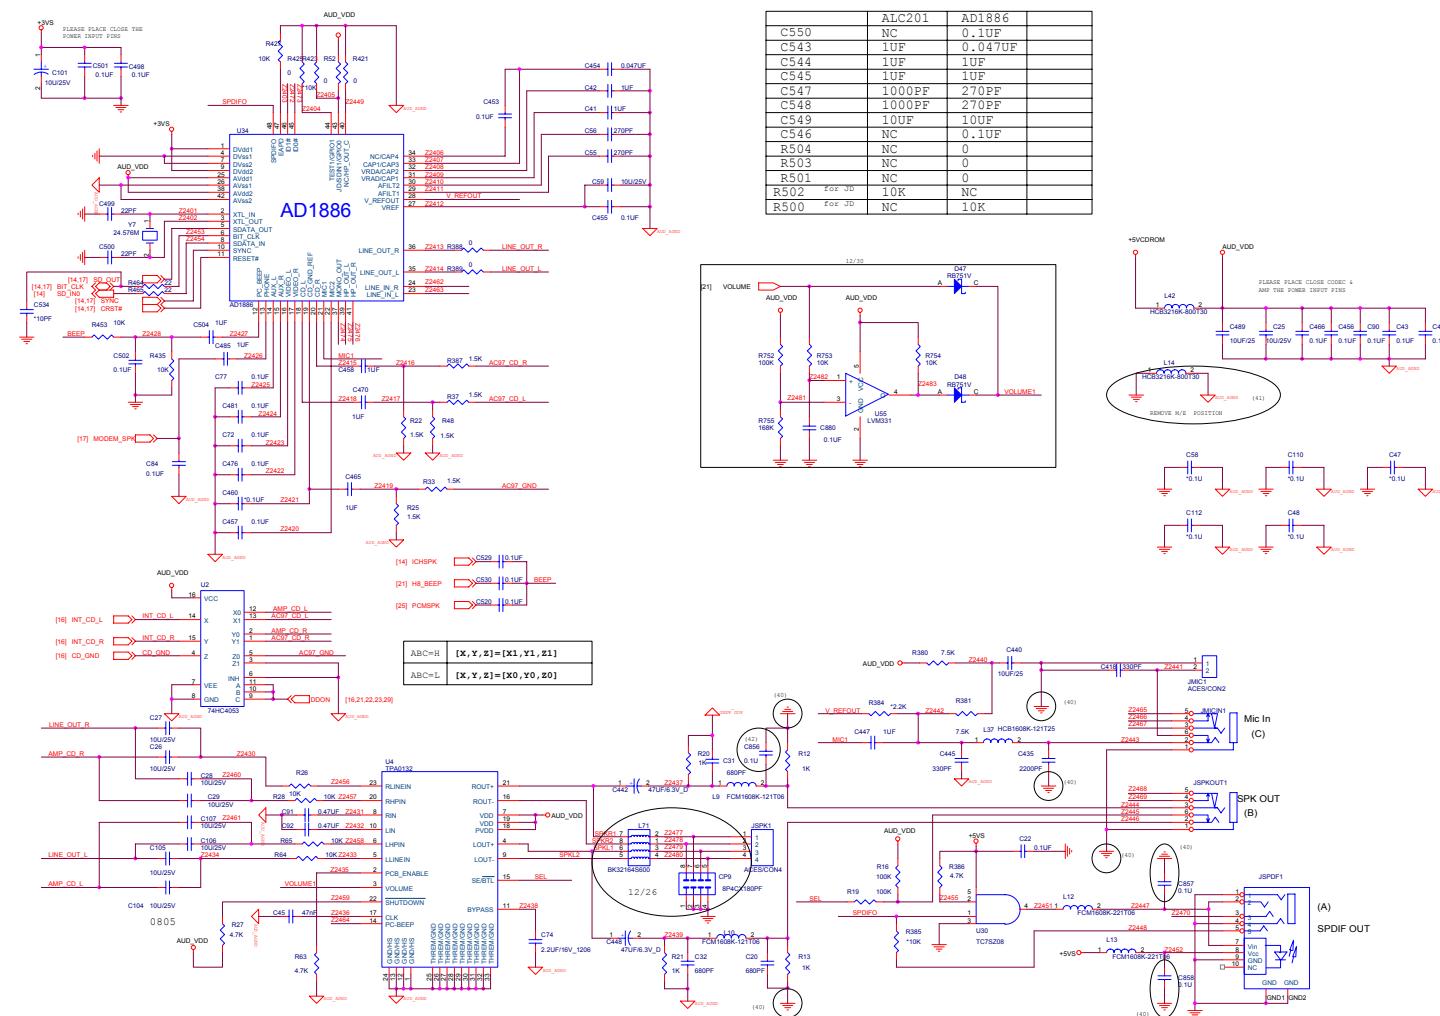


Schematic Diagrams

Schematic Diagrams

PCI 1410


Sheet 24 of 28
PCI 1410

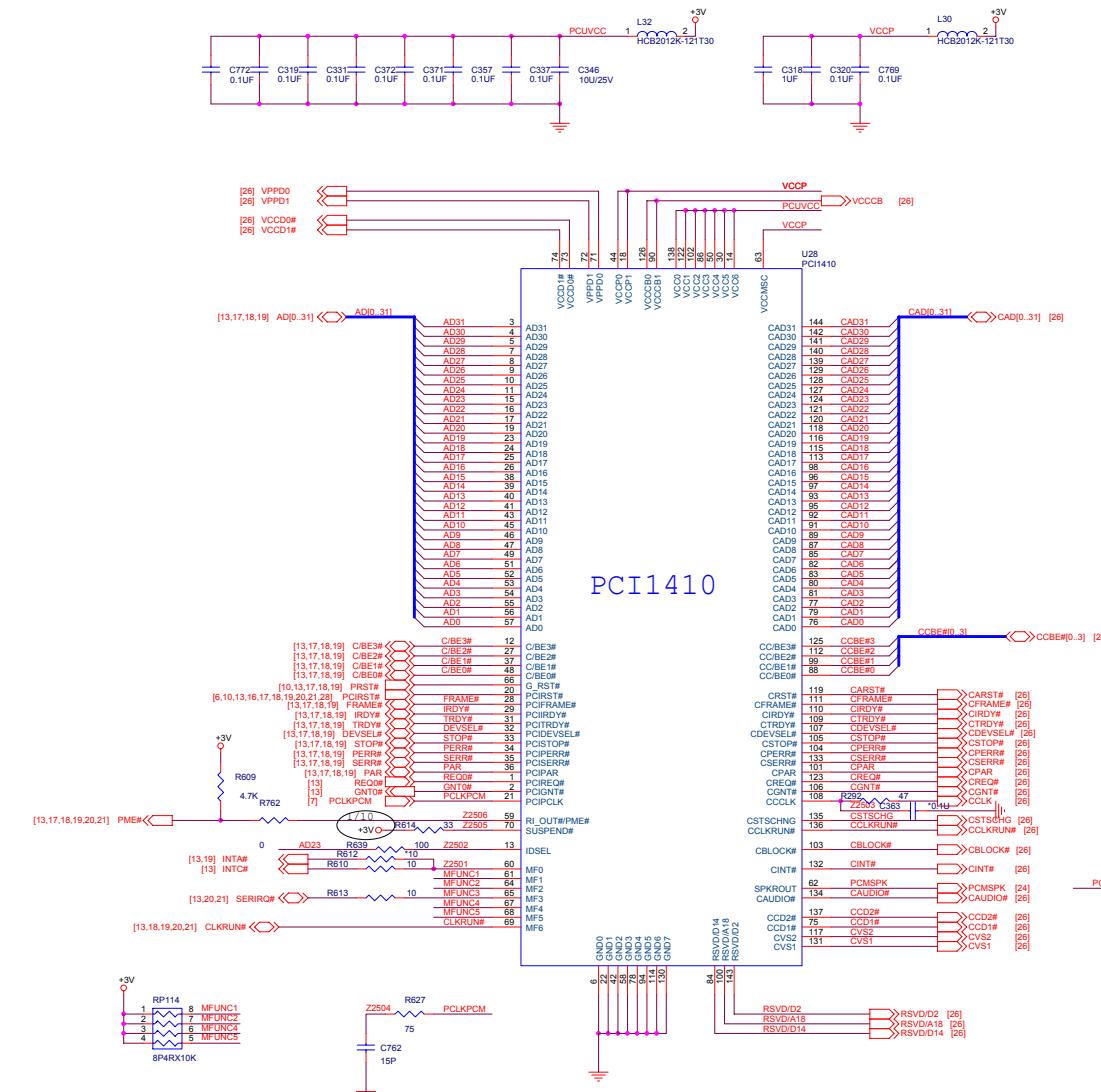

B - 26 Mainboard (71-56P00-D03)

PCMCIA Socket

Sheet 25 of 28
PCMCIA Socket

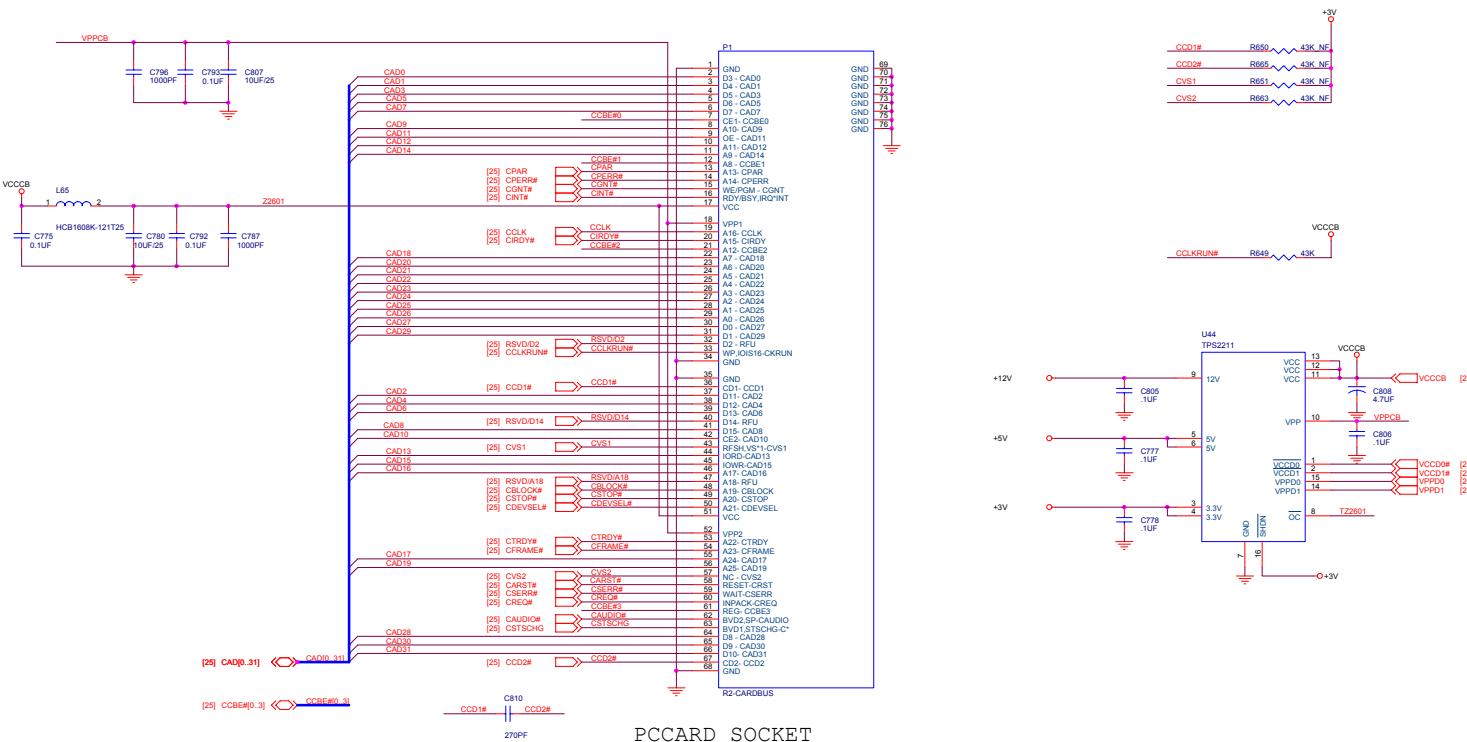


Schematic Diagrams

Schematic Diagrams



Schematic Diagrams

CPU Core Power

Sheet 26 of 28
CPU Core Power

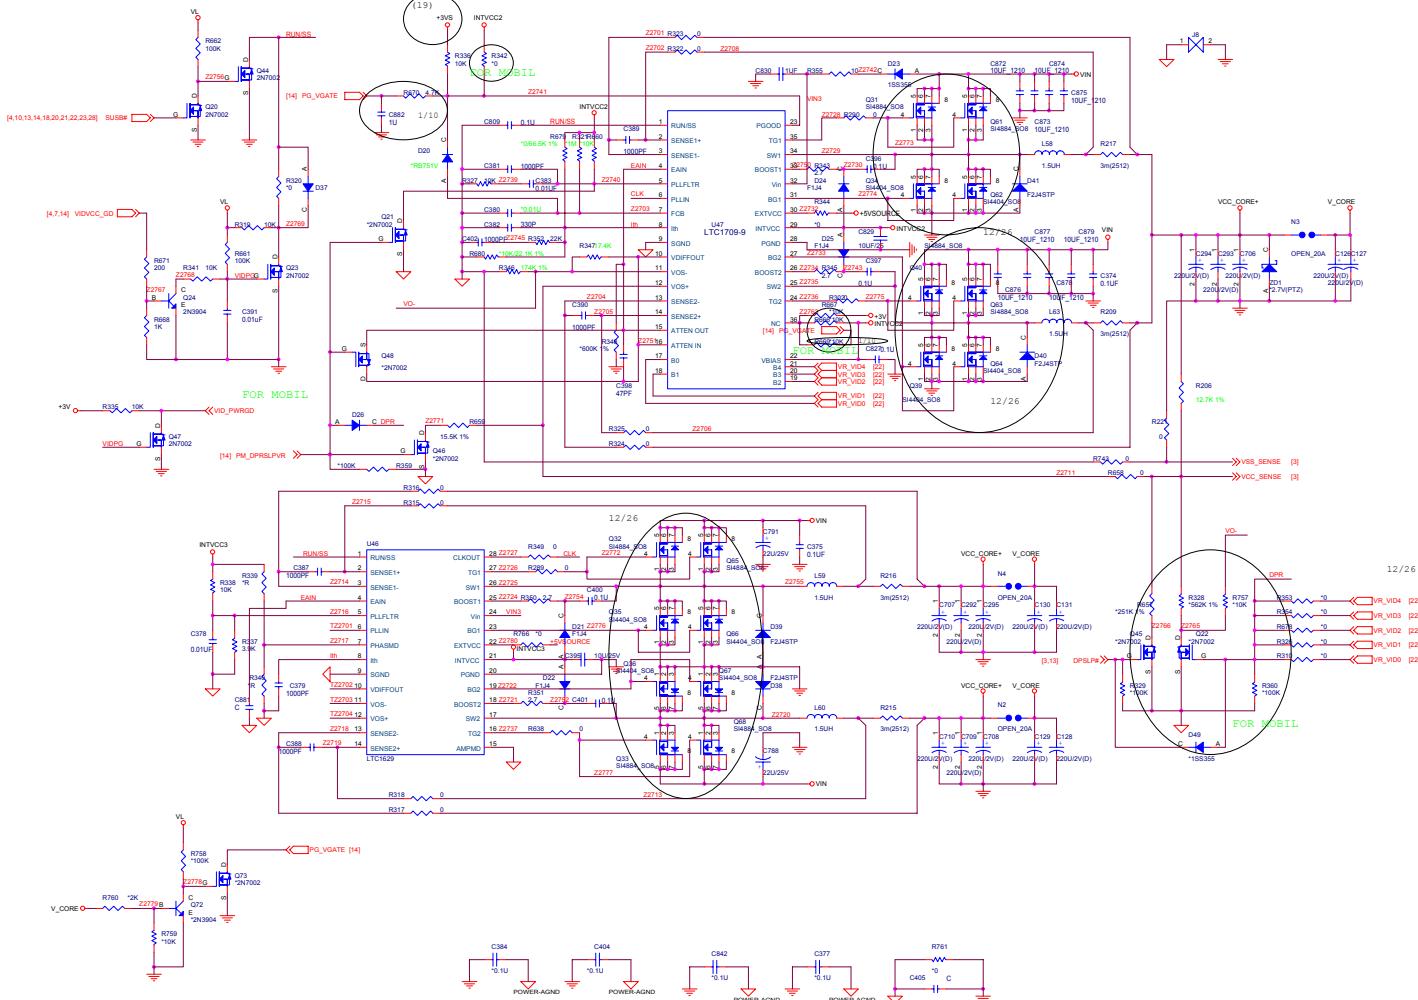

D/D Conn

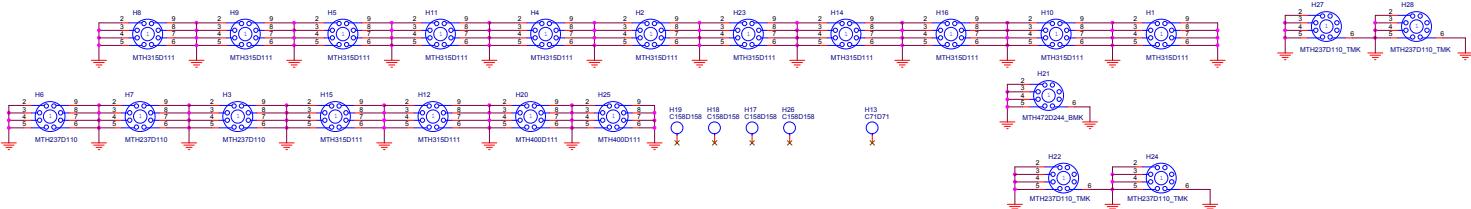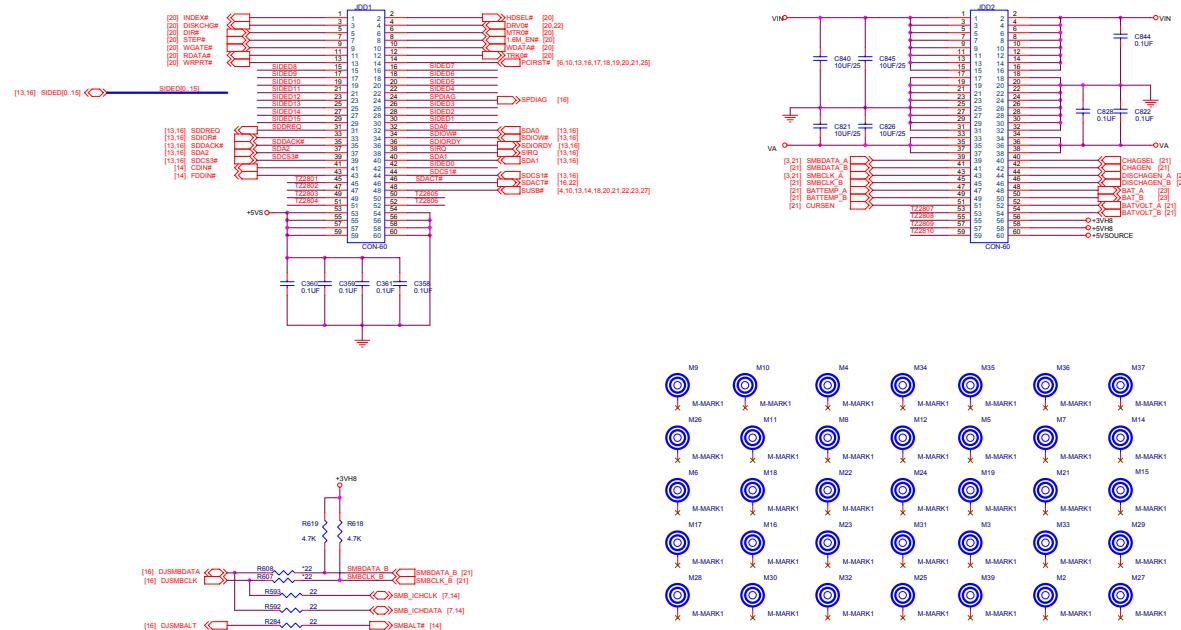


Schematic Diagrams

Schematic Diagrams


+3V; +5V

Sheet 28 of 28
+3V; + 5V

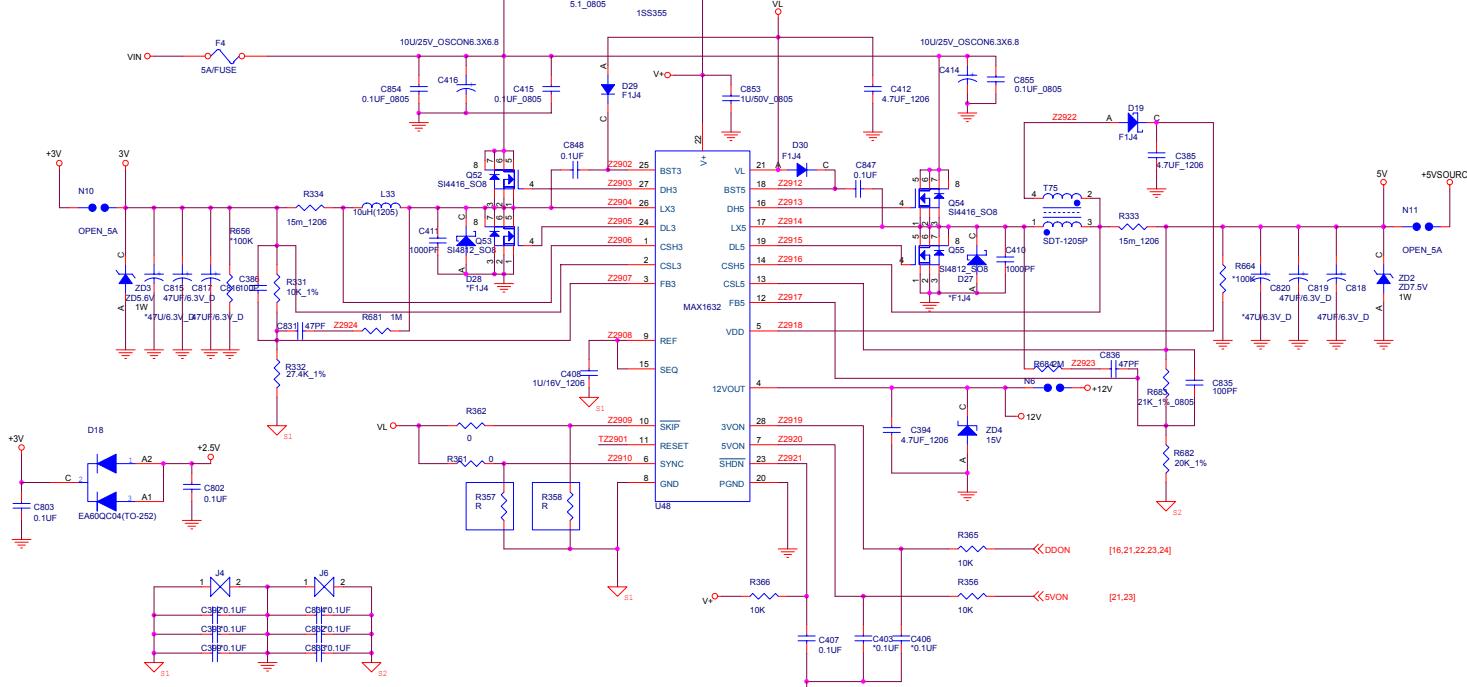

LED Board

Sheet 1 of 1
LED Board

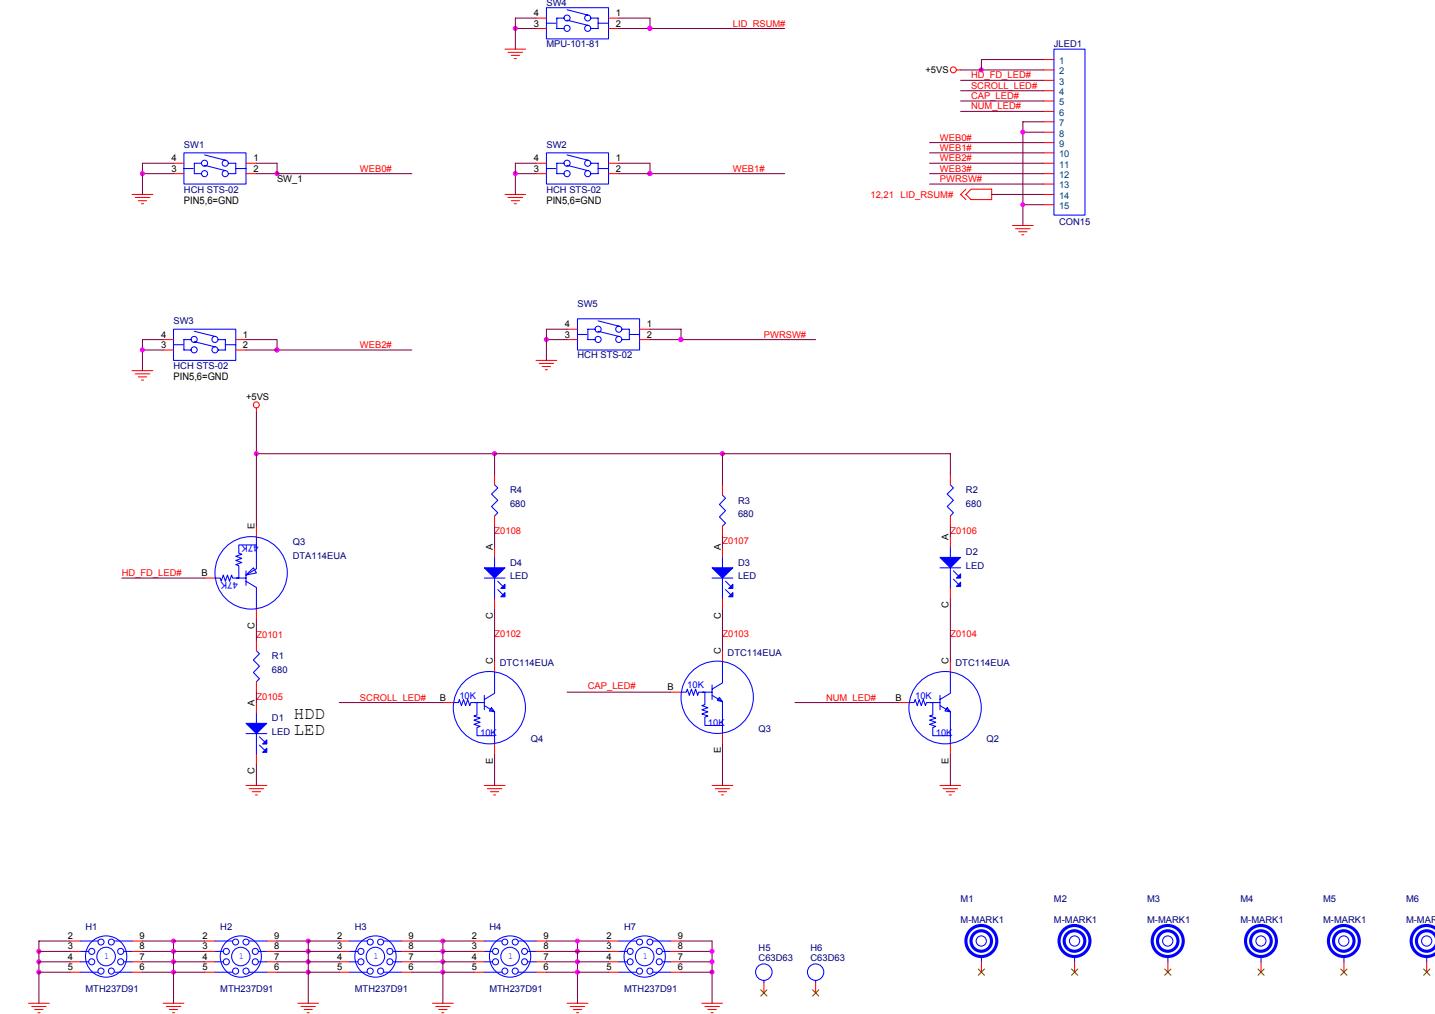


Schematic Diagrams

Schematic Diagrams


Charger Board - PCharger

Sheet 1 of 2
Charger Board -
PCharger

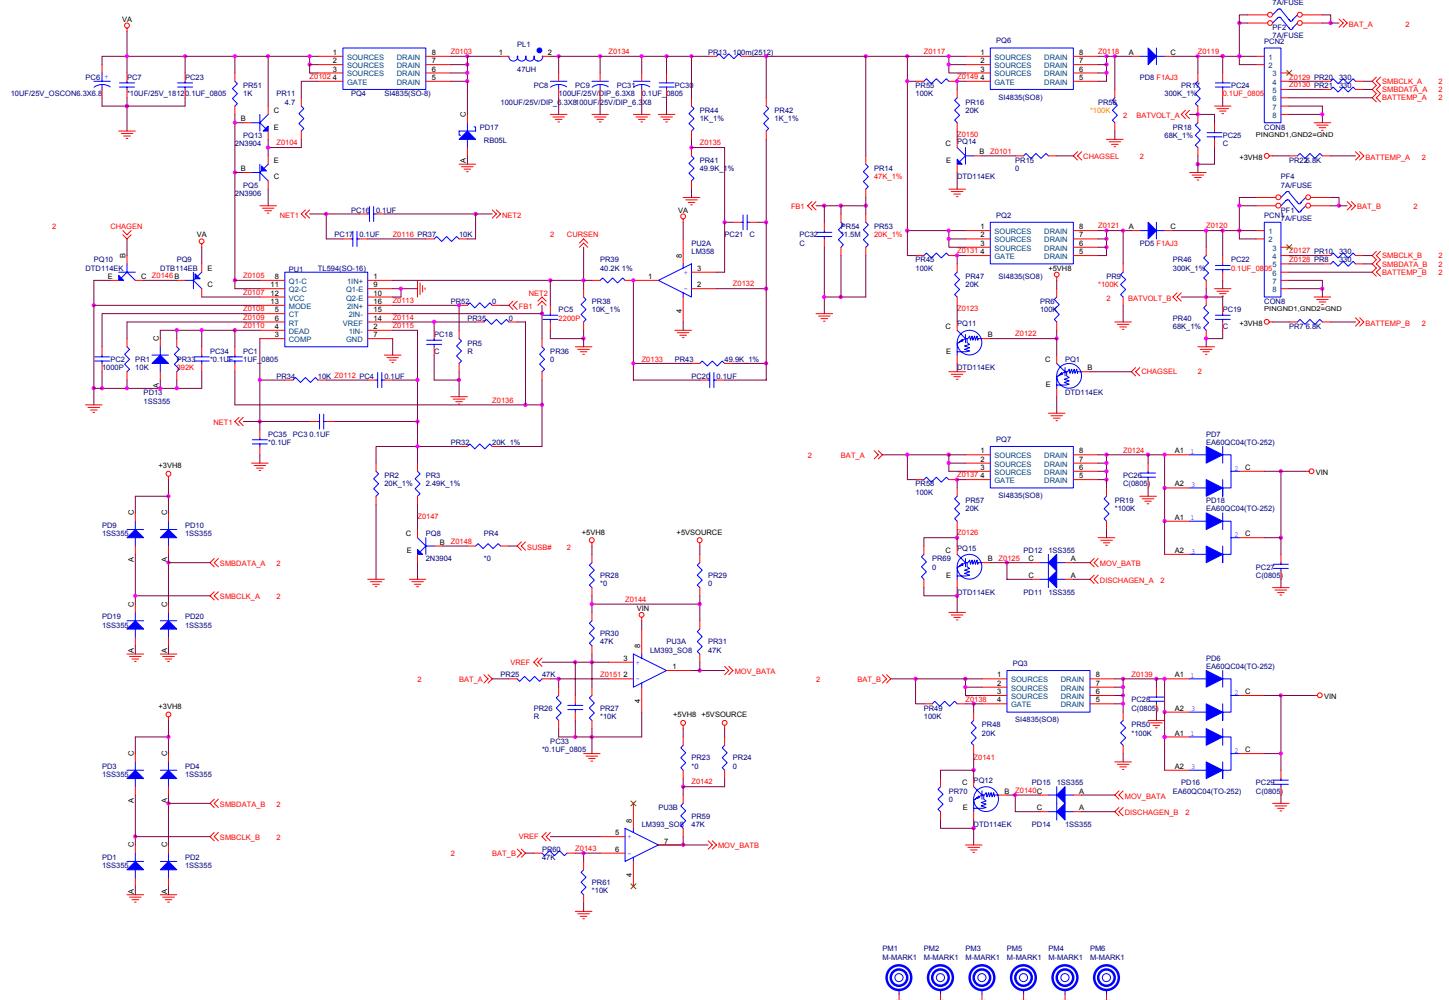

Charger Board - PConn

Sheet 2 of 2
Charger Board -
PConn

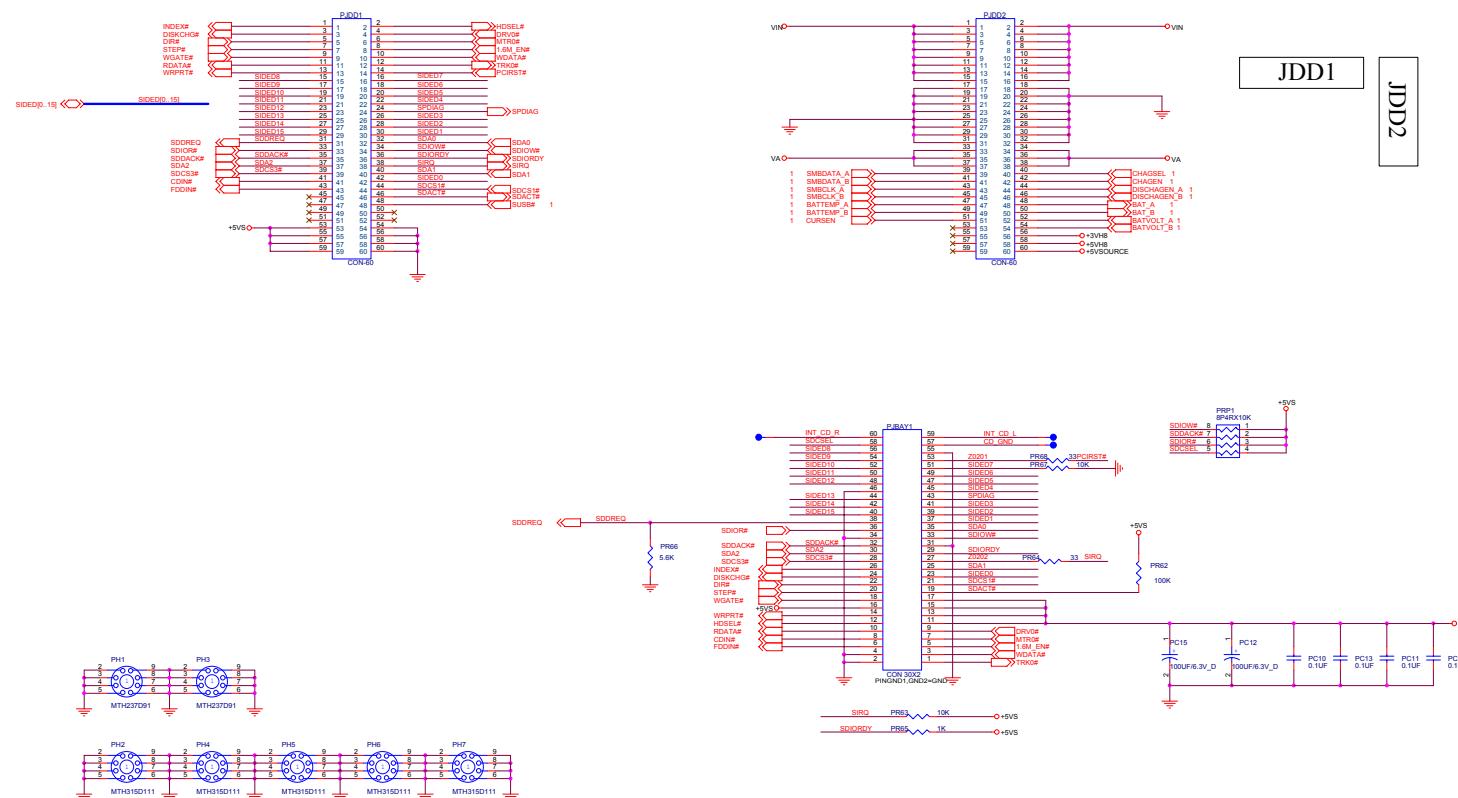

Schematic Diagrams

Appendix C: Updating the FLASH ROM BIOS

To update the FLASH ROM BIOS you must:

- Download the BIOS update from the web site.
 - Unzip the files onto a bootable Floppy Disk.
 - Reboot your computer from the FDD.
 - Use the flash tools to update the flash BIOS.
 - Restart the computer booting from the HDD.
1. Using your web browser go to www.clevo.com.tw
 2. Choose **Download** from the menu bar at the top of the page.
 3. In the **Driver** section select the model of your computer (**5600P/5620P/5800P/5820P Series**) and the driver type (**BIOS**).
 4. Select **GO**.
 5. Click on 56Pxxxx.zip. to download the BIOS files (including BIOS refresh tools).

Unzip the file you have just downloaded on to a bootable floppy disk.

(Some of the files you should see on this disk are: Autoexec, Platform.bin, Phlash.exe & 56PXXXX.rom)

With the bootable floppy disk containing the BIOS files in your Floppy Drive, restart the computer.

1. Make sure you are not loading any memory management programs such as HIMEM by holding the **F8** key as you see the message “**Starting MS-DOS**”. You will then be prompted to give “**Y**” or “**N**” responses to the programs being loaded by DOS. Choose “**N**” for any memory management programs.
2. You should now be at the DOS prompt : DISK A:\>
3. If you have chosen to extract the zipped files to the floppy disk (A:) type the following command at the DOS prompt :

Phlash 56PXXXX.rom

4. Remove the floppy disk from the drive.

Your notebook is now running normally with the updated BIOS.

BIOS Update
