



P4i45PE

User Manual

Version 1.0

Published May 2003

Copyright©2003 ASRock INC. All rights reserved.

Copyright Notice:

No part of this manual may be reproduced, transcribed, transmitted, or translated in any language, in any form or by any means, except duplication of documentation by the purchaser for backup purpose, without written consent of ASRock Inc.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Disclaimer:

Specifications and information contained in this manual are furnished for informational use only and subject to change without notice, and should not be constructed as a commitment by ASRock. ASRock assumes no responsibility for any errors or omissions that may appear in this manual.

With respect to the contents of this manual, ASRock does not provide warranty of any kind, either expressed or implied, including but not limited to the implied warranties or conditions of merchantability or fitness for a particular purpose.

In no event shall ASRock, its directors, officers, employees, or agents be liable for any indirect, special, incidental, or consequential damages (including damages for loss of profits, loss of business, loss of data, interruption of business and the like), even if ASRock has been advised of the possibility of such damages arising from any defect or error in the manual or product.

ASRock Website: <http://www.asrock.com>

Contents

1	Introduction	4
1.1	Package Contents	4
1.2	Specifications	5
1.3	Motherboard Layout	9
1.4	ASRock I/O™	10
2	Installation	11
2.1	Screw Holes	11
2.2	Pre-installation Precautions	11
2.3	CPU Installation	12
2.4	Installation of Heatsink and CPU fan	12
2.5	Installation of Memory Modules (DIMM)	13
2.6	Expansion Slots	13
2.7	Jumpers Setup	14
2.8	Connectors	15
3	BIOS Setup	18
3.1	BIOS Setup Utility	18
3.1.1	BIOS Menu Bar	18
3.1.2	Legend Bar	18
3.2	Main Menu	19
3.3	Advanced, Security, Power, Boot, and Exit Menus	21
4	Software Support	22
4.1	Installing Operating System	22
4.2	Support CD Information	22
4.2.1	Running Support CD	22
4.2.2	Drivers Menu	22
4.2.3	Utilities Menu	22
4.2.4	ASRock "PC-DIY Live Demo" Program	22
4.2.5	Contact Information	22
	Appendix: Advanced BIOS Setup	23
1.	Advanced Menu	23
2.	Security Menu	28
3.	Power Menu	29
4.	Boot Menu	30
5.	Exit Menu	31

Chapter 1 Introduction

Thank you for purchasing ASRock P4i45PE motherboard, a reliable motherboard produced under ASRock's consistently stringent quality control. It delivers excellent performance with robust design conforming to ASRock's commitment to quality and endurance.

Chapter 1 and 2 of this manual contain introduction of the motherboard and step-by-step installation guide for new DIY system builders. Chapter 3 and 4 contain basic BIOS setup and Support CD information.

For advanced users' reference, the Appendix appearing on page 23 offers more advanced BIOS setup information.



Because the motherboard specifications and the BIOS software might be updated, the content of this manual will be subject to change without notice. In case any modifications of this manual occur, the updated version will be available on ASRock website without further notice.

ASRock website <http://www.asrock.com>

1.1 Package Contents

ASRock P4i45PE motherboard

(ATX form factor: 12" x 8.6", 30.5 x 21.8 cm)

ASRock P4i45PE Quick Installation Guide

ASRock Intel-Intel Series Support CD

1 Cable for IDE devices (1 x ATA 66/100)

1 Cable for floppy drive (1 x ribbon cable)

1 ASRock I/O shield

1.2 Specifications

- Platform:** ATX form factor (12" x 8.6", 30.5 x 21.8 cm)
- CPU:** Socket 478 for Intel® Pentium® 4/ Celeron® processor
- Chipsets:** North Bridge:
Intel® 845PE chipsets, standard FSB 400 / 533MHz,
Max. 800+ MHz (overclocking, see **CAUTION 1**),
supports Hyper-Threading Technology (see **CAUTION 2**);
South Bridge:
Intel® ICH4
- Clock Generator:** 100 MHz - 248MHz
- Memory:** 2 DDR DIMM slots: DDR1 and DDR2 (PC2100 / PC2700), Max. 2GB
- IDE:** IDE1: ATA 100 / Ultra DMA Mode 5;
IDE2: ATA 100 / Ultra DMA Mode 5;
Can connect up to 4 IDE devices
- Floppy Port:** Supports 1 floppy disk drive
- Audio:** 5.1 channels AC'97 Audio
- LAN:** Speed: 802.3u (10/100 Ethernet), supports Wake-On-LAN
- Hardware Monitor:** CPU temperature sensing (ASRock U-COP);
Chassis temperature sensing;
CPU overheat shutdown to protect CPU life (ASRock U-COP)
(see **CAUTION 3**);
Voltage monitoring: +12V, +5V, +3V, Vcore;
CPU fan tachometer; Chassis fan tachometer
- PCI slots:** 5 PCI slots with PCI Specification 2.2
- AGP slot:** 1 AGP slot, supports 1.5V, 4X AGP card (see **CAUTION 4**)
- USB 2.0:** 4 default USB 2.0 ports and one extra set of header for two additional USB 2.0 ports upgrade (see **CAUTION 5**)
- ASRock I/O™:** PS/2: 1 keyboard port / 1 mouse port;
1 RJ 45 port;
4 rear default USB 2.0 ports;
1 serial port: COM1; 1 parallel port: ECP/EPP support;
Audio Jack: Line Out/ Line In/ Microphone + 1 Game port
- BIOS:** AMI legal BIOS; Supports "Plug and Play";
ACPI 1.1 compliance wake up events;
Supports jumperfree; SMBIOS 2.3.1 support;
CPU frequency stepless control
(only for advanced users' reference, see **CAUTION 6**);
- OS:** Microsoft® Windows® 98 SE / ME / 2000 / XP compliant

CAUTION!

1. P4i45PE motherboard may be fine tuned to support higher CPU bus frequencies on certain condition (over-clocking mode). Please refer to the NOTE on page 7 for the details.
2. About the setting of "Hyper Threading Technology", please check page 23.
3. While CPU overheat is detected, the system will automatically shutdown. Please check if the CPU fan on the motherboard functions properly before you resume the system. To improve heat dissipation, remember to spray thermal grease between the CPU and the heatsink when you install the PC system.
4. Do NOT plug a 3.3V AGP card in the AGP slot on P4i45PE motherboard! It may cause permanent damage!
5. Power Management for USB 2.0 works fine under Microsoft® Windows® XP. It may not work properly under Microsoft® Windows® 98/ME/2000. Please refer to Microsoft® official document at <http://www.microsoft.com/HWDEV/BUS/usb/USB2support.asp>
6. Although P4i45PE offers stepless control, it is not recommended to perform over clocking.
When the CPU frequency of P4i45PE is set to perform over clocking, other clocks, such as PCI clock, AGP clock, and Memory clock will also be overclocked proportionally. Frequencies other than the recommended CPU bus frequencies may cause the instability of the system or damage the CPU and the motherboard.

NOTE

P4i45PE may be fine tuned to support higher CPU front side bus frequencies on certain condition at over-clocking mode. Please refer to the tables below for the details.

	CPU FSB	Configuration Note
P4i45PE	800 MHz	1. Set the "FSB" jumper to "TEST" mode (see page 18).
		2. Only support one DDR 400 memory module on DDR1 DIMM. (If it is set to DDR 400 mode, then it does not support CL3 module.)
		3. Update BIOS version to 1.10 or later version.

The Recommended Memory Modules lists for **P4i45PE** motherboard.

FSB 800 MHz / DDR 400 Mode

DRAM VENDOR	SIZE (MB)	TYPE	CELL VENDOR	CELL NO.	SINGLE SIDE / DOUBLE SIDE
TWINMOS	512	DDR400	TWINMOS	TTD7608F8E50B	DOUBLE SIDE
TWINMOS	512	DDR400	M.TEC	TTD7608F8E50B	DOUBLE SIDE
TWINMOS	256	DDR400	M.TEC	TTD7608F8E50B	SINGLE SIDE
TWINMOS	256	DDR400	TWINMOS	TMD7608F8E50B	SINGLE SIDE
TWINMOS	256	DDR400	TWINMOS	TMD7608F8E50C	SINGLE SIDE
TWINMOS	256	DDR400	WINBOND	W942508BH-5	SINGLE SIDE
KINGMAX	256	DDR400	KINGMAX	KDL684T4AA	DOUBLE SIDE
ADATA	256	DDR400	WINBOND	W942508BH-5	SINGLE SIDE
TWINMOS	512	DDR466	TWINMOS	TMD7608F8E43B	DOUBLE SIDE
TWINMOS	256	DDR466	TWINMOS	TMD7608F8E43B	SINGLE SIDE

FSB 533 MHz / DDR 266 Mode


DRAM VENDOR	SIZE (MB)	TYPE	CELL VENDOR	CELL NO.	SINGLE SIDE / DOUBLE SIDE
TWINMOS	256	DDR266	M.TEC	TTD7608F8E75B	SINGLE SIDE
KINGSTON	256	DDR266	KINGSTON	D328DM-75 0240PT10	SINGLE SIDE
TRANSCEND	128	DDR266	SAMSUNG	K4H280838D-TCB0	SINGLE SIDE
TRANSCEND	256	DDR266	MITSUBISHI	M2S56D30ATP	SINGLE SIDE
APACER	128	DDR266	NANYA	NT5DS32M8AT-6	SINGLE SIDE

FSB 533 MHz / DDR 333 Mode

DRAM VENDOR	SIZE (MB)	TYPE	CELL VENDOR	CELL NO.	SINGLE SIDE / DOUBLE SIDE
TWINMOS	512	DDR333	WINBOND	W942508AH-6	DOUBLE SIDE
KINGMAX	256	DDR333	KINGMAX	KDL684T4AA-60	DOUBLE SIDE
KINGSTON	512	DDR333	INFINEON	HYB25D256800BT-6	DOUBLE SIDE
TRANSCEND	256	DDR333	SAMSUNG	K4H5608380-TCB3	SINGLE SIDE
NANYA	512	DDR333	NANYA	NT5DS32MBAT-6	DOUBLE SIDE


Since the memory types are changing rapidly, please visit ASRock website (<http://www.asrock.com/support/index.htm>) for the latest recommended memory support list.

1.3 Motherboard Layout

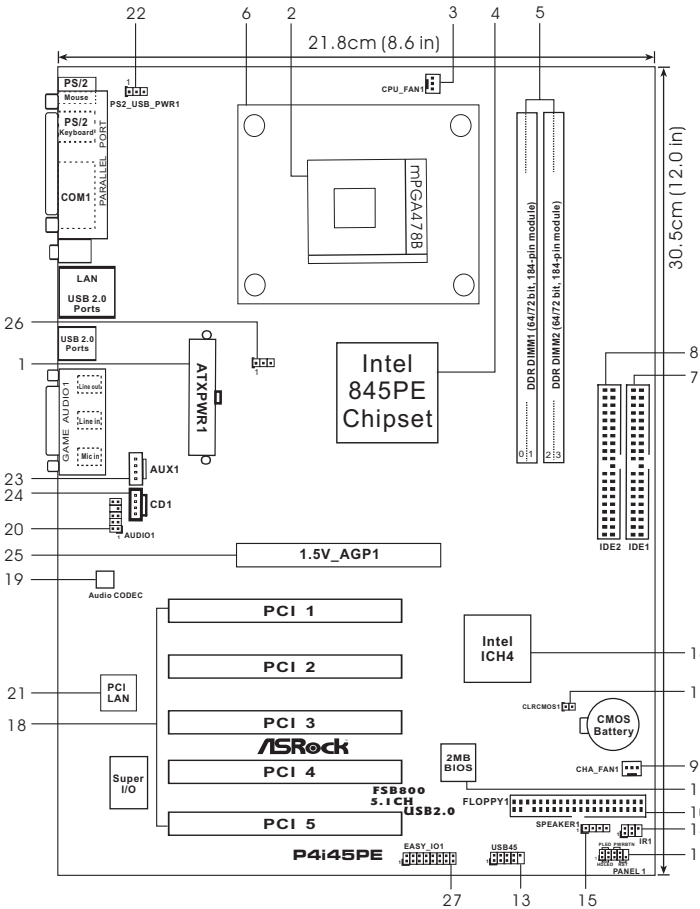

- | | | | |
|----|---------------------------------------|----|---|
| 1 | ATX power connector (ATXPWR1) | 14 | Infrared module connector (IR1) |
| 2 | CPU socket | 15 | Chassis speaker connector (SPEAKER1) |
| 3 | CPU fan connector (CPU_FAN1) | 16 | South Bridge controller |
| 4 | North Bridge controller | 17 | Clear CMOS (CLR_CMOS1, 2-pin jumper) |
| 5 | 184-pin DDR DIMM slots (DDR1, DDR2) | 18 | PCI slots (PCI 1-5) |
| 6 | CPU heatsink retention module | 19 | Audio CODEC |
| 7 | Primary IDE connector (IDE1, Blue) | 20 | Front panel audio connector (AUDIO1) |
| 8 | Secondary IDE connector (IDE2, Black) | 21 | PCI LAN |
| 9 | Chassis fan connector (CHA_FAN1) | 22 | PS2_USB_PWR1 jumper |
| 10 | Floppy connector (FLOPPY1) | 23 | Internal audio connectors: AUX1 (White) |
| 11 | BIOS FWH chip | 24 | Internal audio connectors: CD1 (Black) |
| 12 | System panel connector (PANEL1) | 25 | AGP slot (1.5V_AGP1) |
| 13 | USB 2.0 header (USB45, Blue) | 26 | FSB select jumper (FSB) |
| | | 27 | Easy I/O header (EASY_IO1) |

1.4 ASRock I/O™

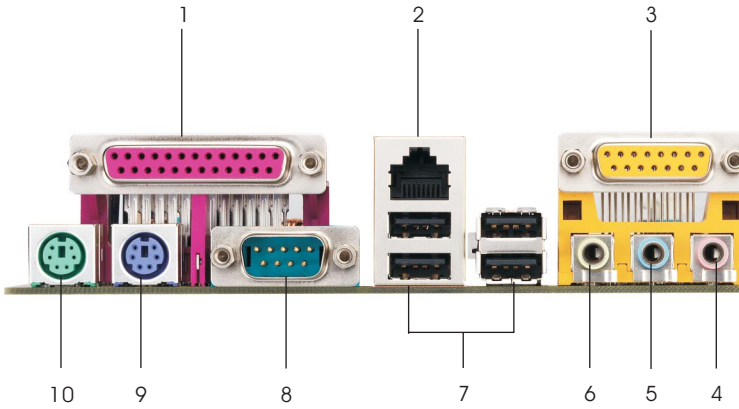

- | | | | |
|---|----------------------|----|-----------------------------|
| 1 | Parallel port | 6 | Line Out (Lime) |
| 2 | RJ-45 port | 7 | USB 2.0 ports |
| 3 | Game port | 8 | Serial port (COM1) |
| 4 | Microphone (Pink) | 9 | PS/2 keyboard port (Purple) |
| 5 | Line In (Light Blue) | 10 | PS/2 mouse port (Green) |

Chapter 2 Installation

P4i45PE is an ATX form factor (12" x 8.6", 30.5 x 21.8 cm) motherboard. Before you install the motherboard, study the configuration of your chassis to ensure that the motherboard fits into it.



Make sure to unplug the power cord before installing or removing the motherboard. Failure to do so may cause physical injuries to you and damages to motherboard components.

2.1 Screw Holes

Place screws into the holes indicated by circles to secure the motherboard to the chassis.



Do not over-tighten the screws! Doing so may damage the motherboard.

2.2 Pre-installation Precautions

Take note of the following precautions before you install motherboard components or change any motherboard settings.

1. Unplug the power cord from the wall socket before touching any component.
2. To avoid damaging the motherboard components due to static electricity, NEVER place your motherboard directly on the carpet or the like. Also remember to use a grounded wrist strap or touch a safety grounded object before you handle components.
3. Hold components by the edges and do not touch the ICs.
4. Whenever you uninstall any component, place it on a grounded antistatic pad or in the bag that comes with the component.

Before you install or remove any component, ensure that the power is switched off or the power cord is detached from the power supply. Failure to do so may cause severe damage to the motherboard, peripherals, and/or components.


2.3 CPU Installation

- Step 1. Unlock the socket by lifting the lever up to a 90° angle.
- Step 2. Position the CPU directly above the socket such that its marked corner matches the base of the socket lever.
- Step 3. Carefully insert the CPU into the socket until it fits in place.



The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to avoid bending of the pins.

- Step 4. When the CPU is in place, press it firmly on the socket while you push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.

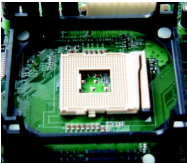

Step 1



Step 2, 3



Step 4

2.4 Installation of CPU Fan and Heatsink

Intel® Pentium®4 CPU requires larger heatsink and cooling fan. Thermal grease between the CPU and the heatsink is also needed to improve heat dissipation. Make sure that the CPU and the heatsink are securely fastened and in good contact with each other. For proper installation, please kindly refer to the instruction manuals of the CPU fan and heatsink vendors.


2.5 Installation of Memory Modules (DIMM)

P4i45PE motherboard provides two 184-pin DDR (Double Data Rate) DIMM slots.



Please make sure to disconnect power supply before adding or removing DIMMs or the system components.

- Step 1. Unlock a DIMM slot by pressing the retaining clips outward.
- Step 2. Align a DIMM on the slot such that the notch on the DIMM matches the break on the slot.
- Step 3. Firmly insert the DIMM into the slot until the retaining clip snap back in place and the DIMM is properly seated.

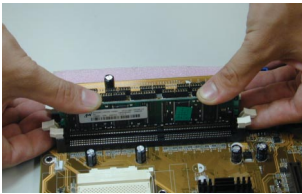

2.6 Expansion Slots (PCI and AGP Slots)

There are 5 PCI slots and 1 AGP slot on P4i45PE motherboard.

PCI slots: PCI slots are used to install expansion cards that have the 32-bit PCI interface.

AGP slot: The AGP slot is used to install a graphics card. The ASRock AGP slot has a special locking mechanism which can securely fasten the graphics card inserted.




Please do not plug a 3.3V AGP card in the AGP slot on P4i45PE motherboard! It may cause permanent damage!



Installing an expansion card



- Step 1. Before installing the expansion card, read the documentation of the expansion card and make necessary hardware settings for the card.
- Step 2. Remove the system unit cover (if your motherboard is already installed in a chassis).
- Step 3. Remove the bracket facing the slot that you intend to use. Keep the screws for later use.
- Step 4. Align the card connector with the slot and press firmly until the card is completely seated on the slot.
- Step 5. Fasten the card to the chassis with screws.
- Step 6. Replace the system cover.

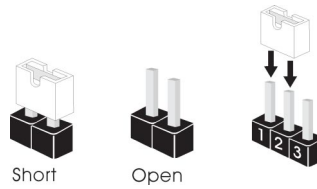2.7 Jumpers Setup

The illustration shows how jumpers are setup. When the jumper cap is placed on pins, the jumper is “SHORT”. If no jumper cap is placed on pins, the jumper is “OPEN”. The illustration shows a 3-pin jumper whose pin1 and pin2 are “SHORT” when jumper cap is placed on these 2 pins.




Jumper	Setting	Description
FSB (see p.9 item 26)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1_2</p>  <p>NORMAL</p> </div> <div style="text-align: center;"> <p>2_3</p>  <p>TEST</p> </div> </div>	<p>“NORMAL” (short pin1, pin2) is the default setting for the FSB jumper. “TEST” (short pin2, pin3) is the setting for the over clocking of CPU frequency.</p>

PS2_USB_PWR1 (see p.9 item 22)	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1_2</p>  <p>+5V</p> </div> <div style="text-align: center;"> <p>2_3</p>  <p>+5VSB</p> </div> </div>	<p>Short pin2, pin3 to enable +5VSB (standby) for PS/2 or USB wake up events.</p>
-----------------------------------	--	---

Note: To select +5VSB, it requires 2 Amp and higher standby current provided by power supply.

Clear CMOS

CLRCMOS1 (see p.9 item 17)	 <p>2-pin jumper</p>
-------------------------------	--

Note: CLRCMOS1 allows you to clear the data in CMOS. The data in CMOS includes system setup information such as system password, date, time, and system setup parameters. To clear and reset the system parameters to default setup, please turn off the computer and unplug the power cord, then use a jumper cap to short the pins on CLRCMOS1 for 3 seconds.

Please remember to remove the jumper cap after clearing the CMOS.

2.8 Connectors



Connectors are NOT jumpers. DO NOT place jumper caps over these connectors.

Connector	Figure	Description
-----------	--------	-------------

FDD connector
(33-pin FLOPPY1)
(see p.9 item 10)



Note: Match the red marking on the floppy ribbon cable with Pin1.

Primary IDE connector (Blue)
(39-pin IDE1, see p.9 item 7)

Secondary IDE connector (Black)
(39-pin IDE2, see p.9 item 8)



Connect this BLUE end to the motherboard




Connect this BLACK end to the IDE devices

80-Pin ATA 100 cable


Note: To optimize compatibility and performance, please connect your hard disk drive to the primary IDE connector (IDE1, blue) and CD-ROM to the secondary IDE connector (IDE2, black).

USB 2.0 header
(9-pin USB45)
(see p.9 item 13)

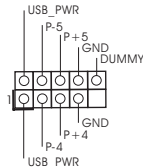


ASRock I/O™ on P4i45PE motherboard provides you 4 default USB 2.0 ports. If the default USB ports on the rear panel are not sufficient, this extra USB 2.0 header is available to support 2 additional USB 2.0 ports.

Infrared module connector
(5-pin IR1)
(see p.9 item 14)




This connector supports an optional wireless transmitting and receiving infrared module.

Internal audio connectors
(4-pin CD1, 4-pin AUX1)
(CD1: see p.9 item 24)
(AUX1: see p.9 item 23)

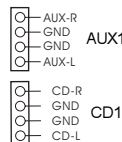


These connectors allow you to receive stereo audio input from sound sources such as a CD-ROM, DVD-ROM, TV tuner card, or MPEG card.

Front panel audio connector
(9-pin AUDIO1)
(see p.9 item 20)




This is an interface for front panel audio cable that allows convenient connection and control of audio devices.

System panel connector
(9-pin PANEL1)
(see p.9 item 12)

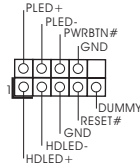


This connector accommodates several system front panel functions.

Chassis speaker connector
(4-pin SPEAKER 1)
(see p.9 item 15)




This connector allows you to attach to an external speaker.

Chassis fan connector
(3-pin CHA_FAN1)
(see p.9 item 9)



Connect the fan cable to the connector matching the black wire to the ground pin.

CPU fan connector
(3-pin CPU_FAN1)
(see p.9 item 3)




Connect the fan cable to the connector matching the black wire to the ground pin.

ATX power connector
(20-pin ATXPWR1)
(see p.9 item 1)



Connect an ATX power supply to the connector.

Easy I/O header
(16-pin EASY_IO1)
(see p.9 item 27)

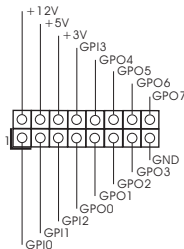

This header is designed to meet advanced users' needs for processing specific electronic experiments or specific application. The tables below display each pin's coordinated pin of the super I/O or the south bridge controller.

Input Pins

Pins of Easy I/O	GPI0	GPI1	GPI2	GPI3
Coordinated Pins of South Bridge (ICH4)	GPI032	GPI033	GPI034	GPI035

Output Pins

Pins of Easy I/O	GPO0	GPO1	GPO2	GPO3	GPO4	GPO5	GPO6	GPO7
Coordinated Pins of Super I/O (W83627HF-AW)	GP23	GP24	GP27	GP30	GP31	GP32	GP33	GP34

For the detailed information of the super I/O, Winbond 83627HF-AW, please refer to the datasheet provided by Winbond at <http://www.winbond.com.tw/PDF/sheet/w83627hf.pdf>

For the detailed information of the south bridge controller, Intel ICH4, please refer to the datasheet provided by Intel at <http://www.intel.com/design/chipsets/datashts/290744.htm>

Chapter 3 BIOS Setup

3.1 BIOS Setup Utility

This section explains how to configure your system using the BIOS Setup Utility. The BIOS FWH chip on the motherboard stores the BIOS Setup Utility. When you start up the computer, there is a chance for you to run the BIOS Setup. Press <F2> during the Power-On-Self-Test (POST) to enter the BIOS Setup Utility, otherwise, POST continues with its test routines.

If you wish to enter the BIOS Setup after POST, restart the system by pressing <Ctl> + <Alt> + <Delete>, or by pressing the reset button on the system chassis. You can also restart by turning the system off and then back on.

The BIOS Setup Utility is designed to be user-friendly. It is a menu-driven program, which allows you to scroll through its various sub-menus and select among the predetermined choices.



Because the BIOS software is constantly being updated, the following BIOS setup screens and descriptions are for reference purpose only, and may not exactly match what you see on your screen.

3.1.1 BIOS Menu Bar

The top of the screen has a menu bar with the following selections:

MAIN	Sets up the basic system configuration
ADVANCED	Sets up the advanced features
SECURITY	Sets up the security features
POWER	Configures Power Management features
BOOT	Configures the default system device that is used to locate and load the Operating System
EXIT	Exits the current menu or the BIOS Setup

To access the menu bar items, press the right or left arrow key on the keyboard until the desired item is highlighted.


3.1.2 Legend Bar

At the bottom of the Setup Screen is a legend bar. The following table lists the keys in the legend bar with their corresponding functions.

Navigation Key(s)	Function Description
<F1>	Displays the General Help Screen
<ESC>	Jumps to the Exit menu or returns to the upper menu from the current menu
↑ / ↓	Moves cursor up or down between fields
← / →	Selects menu to the left or right
+ / -	Increases or decreases values
<Enter>	Brings up a selected menu for a highlighted field
<F9>	Loads all the setup items to the default values
<F10>	Saves changes and exits Setup

3.2 Main Menu

When you enter the BIOS Setup Utility, the following screen appears.

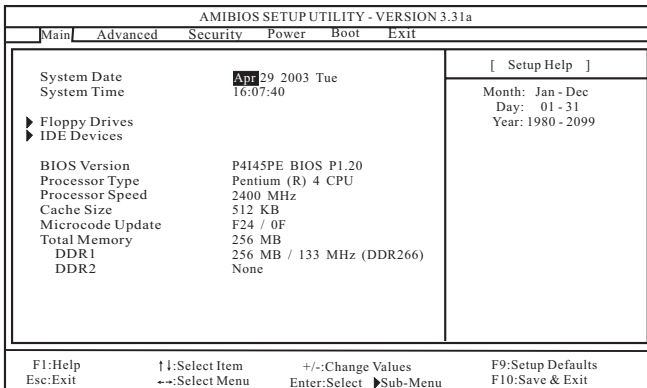

System Date [Month/Day/Year]

Set the system date that you specify. Valid values for month, day, and year are Month: (Jan to Dec), Day: (1 to 31), Year: (up to 2099). Use ↑ ↓ keys to move between the Month, Day and Year fields.

System Time [Hour:Minute:Second]

Set the system to the time that you specify. Use ↑ ↓ keys to move between the Hour, Minute and Second fields.

Floppy Drives

Use this to set the type of floppy drives installed.

IDE Devices

Use this to configure IDE devices.

TYPE

To set the type of the IDE device, first, please select "IDE Devices" on Main menu and press <Enter> to get into the sub-menu. Then, select among "Primary IDE Master", "Primary IDE Slave", "Secondary IDE Master", and "Secondary IDE Slave" to make configuration of its type. After making your selections on this sub-menu, press <ESC> key to return to the upper menu, in which the hard disk drive field will display the size of the hard disk drive that you configured. Below are the configuration options.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Main	
Primary IDE Master:	
Type	Auto
Cylinders	
Heads	
Write Precompensation	
Sectors	
Maximum Capacity	
LBA Mode	On
Block Mode	On
Fast Programmed I/O Modes	Auto
32 Bit Transfer Mode	On
Ultra DMA Mode	Auto
[Setup Help]	
Select how to set the parameters of drive, Or Select [AUTO] to set all HDD parameters automatically.	
F1:Help	F9:Setup Defaults
Esc:Previous Menu	F10:Save & Exit
↑:Select Item	+/-:Change Values
Enter>Select	▶Sub-Menu

[USER]: It allows user to manually enter the number of cylinders, heads, and sectors per track for the drive.



Before attempting to configure a hard disk drive, make sure you have the correct configuration information supplied by the drive manufacturer. Incorrect settings may cause the system to fail to recognize the installed hard disk.

[Auto]: Select [Auto] to automatically detect hard disk drive. If auto-detection is successful, the BIOS Setup automatically fills in the correct values for the remaining fields on this sub-menu. If the auto-detection fails, it may be due to that the hard disk is too old or too new. If the hard disk was already formatted on an older system, the BIOS Setup may detect incorrect parameters. In these cases, select [User] to manually enter the IDE hard disk drive parameters.



After entering the hard disk information into BIOS, use a disk utility, such as FDISK, to partition and format new IDE hard disk drives. This is necessary so that you can write or read data from the hard disk. Make sure to set the partition of the Primary IDE hard disk drives to active.

[CD/DVD]: This is used for IDE CD/DVD drives.

[ARMD]: This is used for IDE ARMD (ATAPI Removable Media Device), such as MO.

Cylinders

This is used to configure the number of cylinders. Refer to the drive documentation to determine the correct value.

Heads

This is used to configure the number of read/write heads. Refer to the drive documentation to determine the correct values.

Write Pre-compensation

Enter Write Pre-compensation sector. Refer to the drive documentation to determine the correct value.

Sectors

This is used to configure the number of sectors per track. Refer to the drive documentation to determine the correct value.

Maximum Capacity

This field shows the drive's maximum capacity as calculated by the BIOS based on the drive information you entered.

LBA Mode

This allows user to select the LBA mode for a hard disk > 512 MB under DOS and Windows; for Netware and UNIX user, select [Off] to disable the LBA mode.

Block Mode

Set the block mode to [On] will enhance hard disk performance by reading or writing more data during each transfer.

Fast Programmed I/O Modes

This allows user to set the PIO mode to enhance hard disk performance by optimizing the hard disk timing.

32 Bit Transfer Mode

It allows user to enable 32-bit access to maximize the IDE hard disk data transfer rate.

Ultra DMA Mode

Ultra DMA capability allows improved transfer speeds and data integrity for compatible IDE devices. Set to [Disabled] to suppress Ultra DMA capability.

3.3 Advanced, Security, Power, Boot, and Exit Menus

Detailed descriptions of these menus are listed in the Appendix. See page 23.

Chapter 4 Software Support

4.1 Install Operating System

This motherboard supports various Microsoft® Windows® operating systems: 98 SE / ME / 2000 / XP. Because motherboard settings and hardware options vary, use the setup procedures in this chapter for general reference only. Refer to your OS documentation for more information.

4.2 Support CD Information

The Support CD that came with the motherboard contains necessary drivers and useful utilities that will enhance the motherboard features.

4.2.1 Running The Support CD

To begin using the support CD, insert the CD into your CD-ROM drive. The CD automatically displays the Main Menu if "AUTORUN" is enabled in your computer. If the Main Menu did not appear automatically, locate and double click on the file ASSETUP.EXE from the BIN folder in the Support CD to display the menus.

4.2.2 Drivers Menu

The Drivers Menu shows the available devices drivers if the system detects installed devices. Install the necessary drivers to activate the devices.

4.2.3 Utilities Menu

The Utilities Menu shows the applications software that the motherboard supports. Click on a specific item then follow the installation wizard to install it.

4.2.4 ASRock PC-DIY Live Demo Program

ASRock presents you a multimedia PC-DIY live demo, which shows you how to install your own PC system step by step. You can find the file through the following path:

..\MPEGAV\AVSEQ01.DAT

To see this demo program, you may run Microsoft® Media Player® to play the file.


4.2.5 Contact Information

If you need to contact ASRock or want to know more about ASRock, welcome to visit ASRock's website at <http://www.asrock.com>; or you may contact your dealer for further information.

Appendix: Advanced BIOS Setup

This section will introduce you the following BIOS Setup menus: “Advanced,” “Security,” “Power,” “Boot,” and “Exit.”

1. Advanced BIOS Setup Menu

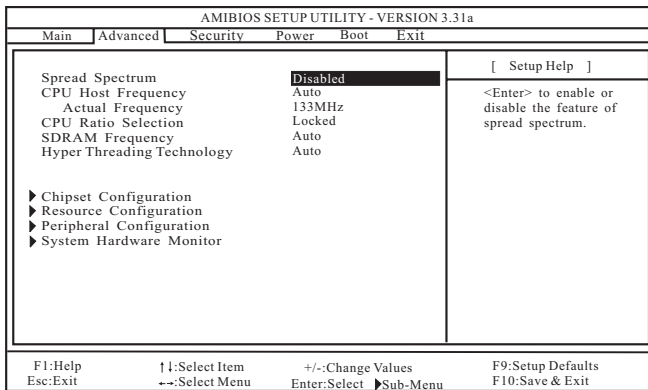

Spread Spectrum:

This field should always be [Disabled] for better system stability.

CPU Host Frequency:

This shows current CPU host frequency of the installed motherboard.

CPU Ratio Selection:

CPU Ratio is the multiple that times the frontside bus frequency will equal the core speed of the installed processor. Whether the option is open or locked is determined by the installed processor.

SDRAM Frequency:

If set to [Auto], the motherboard will detect the inserted memory module(s) and automatically assign appropriate frequency. You may select other value as operating frequency: [133MHz (DDR 266)], [166MHz (DDR 333)].

Hyper Threading Technology:

To enable this feature, it requires a computer system with an Intel Pentium®4 processor at 3.06 GHz or higher and an operating system that includes optimization for this technology, such as Microsoft® Windows® XP. Set to [Auto] if using Microsoft® Windows® XP, or Linux kernel version 2.4.18 or higher. This option will be hidden if the current CPU does not support Hyper-Threading Technology.

Chipset Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a		
Advanced		[Setup Help]
Chipset Configuration		
AGP Aperture Size	64MB	<Enter> to select the size of mapped memory for graphics data.
ICH Delayed Transaction	Disabled	
USB Controller	Enabled	
USB Device Legacy Support	Disabled	
CPU Thermal Throttling	Disabled	
DRAM Write Throttling	Disabled	
***** DRAM Timing *****		
SDRAM CAS Latency	Auto	
Configure SDRAM Timing by SPD	Disabled	
SDRAM RAS# Precharge	3 Clocks	
SDRAM RAS# to CAS# Delay	3 Clocks	
SDRAM Precharge Delay	7 Clocks	
F1:Help ↑↓:Select Item +/-:Change Values F9:Setup Defaults Esc:Previous Menu Enter:Select ▶Sub-Menu F10:Save & Exit		

AGP Aperture Size: It refers to a section of the PCI memory address range used for graphics memory. We recommend that you leave this field at the default value unless your AGP card requires other sizes.

ICH Delayed Transaction: Select [Enabled] will enable delayed transactions for internal register, FWH, and LPC interface accesses.

USB Controller: Use this to enable or disable the use of USB controller.

USB Device Legacy Support: Use this to enable or disable support to emulate legacy I/O devices such as mouse, keyboard,... etc.

CPU Thermal Throttling: Select [Enabled] will enable P4 thermal control circuit to keep CPU from overheated.

DRAM Write Throttling: Select [Enabled] will reduce the temperature of North Bridge and DRAM. However, it will decrease the memory writing throughput.

SDRAM CAS Latency:

This parameter controls the latency between the read command and the time the data available.

Configure SDRAM Timing by SPD: Select [Enabled] will configure the following 3 items by the contents in the SPD (Serial Presence Detect) device.

SDRAM RAS# Precharge:

This controls the idle clocks after a precharge command is issued.

SDRAM RAS# to CAS# Delay:

This controls the latency between the SDRAM active command and the read / write command.

SDRAM Precharge Delay:

This controls the number of DRAM clocks for RAS minimum.

Resource Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Advanced			
Resource Configuration		[Setup Help]	
PCI Latency Timer (PCI Clocks)	32	<Enter> to select PCI clocks. Leave on default setting for the best PCI performance.	
Primary Graphics Adapter	PCI		
F1:Help Esc:Previous Menu	↑:Select Item	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit
		▶Sub-Menu	

PCI Latency Timer (PCI Clocks): The default is 32. We recommend you to keep the default value unless your PCI expansion cards' specifications require other settings.

Primary Graphics Adapter: Select PCI or AGP as the primary graphics adapter.

Peripheral Configuration:

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Advanced			
Peripheral Configuration		[Setup Help]	
OnBoard FDC	Auto	<Enter> to enable or disable the floppy drive controller.	
OnBoard Serial Port	Auto		
OnBoard Infrared Port	Disabled		
OnBoard Parallel Port	Auto		
Parallel Port Mode	ECP + EPP		
EPP Version	1.9		
Parallel Port IRQ	Auto		
Parallel Port DMA Channel	Auto		
OnBoard Midi Port	Disabled		
Midi IRQ Select	5		
OnBoard Game Port	200H		
OnBoard IDE	Both		
OnBoard LAN	Enabled		
OnBoard AC'97 Audio	Auto		
OnBoard MC'97 Modem	Auto		
F1:Help Esc:Previous Menu	↑:Select Item	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit
		▶Sub-Menu	

OnBoard FDC: You may select [Auto], [Disabled], or [Enabled] for the on-board floppy drive controller.

OnBoard Serial Port: Use this to set addresses for the on-board serial ports or disable serial ports.

Configuration options: [Auto], [Disabled], [3F8 / IRQ4 / COM1], [2F8 / IRQ3 / COM2], [3E8 / IRQ4 / COM3], [2E8 / IRQ3 / COM4].

OnBoard Infrared Port: You may select [Auto] for the on-board infrared port feature, which will enable this feature if the infrared module is installed.

Or you may disable the feature by selecting [Disabled]

OnBoard Parallel Port: Use this option to select Parallel Port address or disable the on-board Parallel Port.

Configuration options: [Auto], [Disabled], [378], [278].

Parallel Port Mode: Set the operation mode of the parallel port.

The default value is [ECP+EPP]. If this option is set to [ECP+EPP], it will show the EPP version in the following item, "EPP Version".

OnBoard Midi Port: Select address for the on-board Midi Port or disable it.

Configuration options: [Disabled], [330], [300], [310], [320].

Midi IRQ Select: Use this to select Midi IRQ.

Configuration options: [3], [4], [5], [7], [10], [11].

OnBoard Game Port: Select address for the on-board Game Port or disable it.

Configuration options: [200H], [208H], [Disabled].

OnBoard IDE: You may enable either the primary IDE channel or the secondary IDE channel. Or you may enable both the primary and the secondary IDE channels by selecting [Both]. Set to [Disabled] will disable the both.

Configuration options: [Disabled], [Primary], [Secondary], [Both].

OnBoard LAN: This allows you to enable or disable the on-board LAN feature.

OnBoard AC'97 Audio: Select [Enabled], [Auto] or [Disabled] for the on-board AC'97 Audio feature.

OnBoard MC'97 Modem: You may select [Auto] or [Disabled] for the on-board MC'97 modem feature.

System Hardware Monitor: You may check the status of the hardware on your system. It allows you to monitor the parameters for CPU temperature, Motherboard temperature, CPU fan speed, and critical voltage.

AMIBIOS SETUP UTILITY - VERSION 3.31a	
Advanced	
System Hardware Monitor	[Setup Help]
CPU Temperature	39°C / 102°F
M/B Temperature	31°C / 87°F
CPU Fan Speed	4197 RPM
Chassis Fan Speed	0 RPM
Vcore	1.504 V
+ 3.30V	3.280 V
+ 5.00V	4.865 V
+12.00V	12.045 V

F1:Help	F11:Select Item	+/-:Change Values	F9:Setup Defaults
Esc:Previous Menu	Enter>Select	▶Sub-Menu	F10:Save & Exit

2. Security Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a			
Main	Advanced	Security	Power Boot Exit
Supervisor Password Is	Clear		[Setup Help]
User Password Is	Clear		<Enter> to enable or disable the quick boot mode.
Set Supervisor Password	[Enter]		
Set User Password	[Enter]		
Password Check	Setup		
F1:Help Esc:Exit	↑↓:Select Item ←→:Select Menu	+/-:Change Values Enter:Select	F9:Setup Defaults F10:Save & Exit

Supervisor Password Is: This field shows the status of the Supervisor Password.

[Clear]: No password has been set.

[Set]: Supervisor password has been set.

User Password Is: This field shows the status of the User Password.

[Clear]: No password has been set.


[Set]: User password has been set.

Set Supervisor Password: Press <Enter> to set Supervisor Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you must enter your current password first in order to create a new password.

Set User Password: Press <Enter> to set User Password. Valid password can be a 1 to 6 alphanumeric characters combination. If you already have a password, you must enter your current password first in order to create a new password.

Password Check: Select the check point for "Password Check". Configuration options: [Setup], [Always]. If [Setup] option is selected, the "Password Check" is performed before BIOS setup. If [Always] option is selected, the "Password Check" is performed before both boot-up and BIOS setup.

3. Power Setup Menu

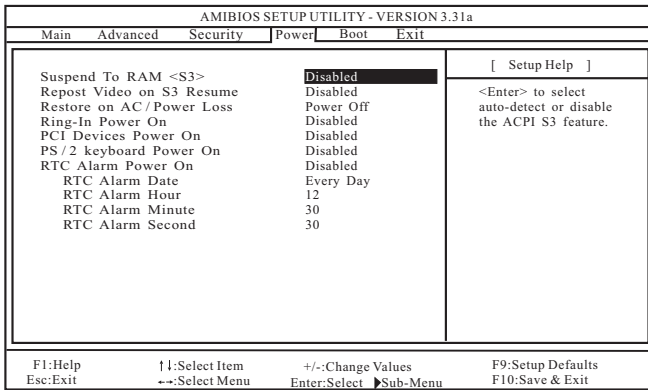

Suspend To RAM (S3): This field allows you to select whether to auto-detect or disable the ACPI Suspend-to-RAM feature. Select [Auto] will enable this feature if the system supports it.

Repost Video on S3 Resume: This feature allows you to repost video on S3 resume. It is recommended to enable this feature under Microsoft® Windows® 98 / ME.

Restore on AC/Power Loss: This allows you to set the power state after an unexpected AC/power loss. If [Power Off] is selected, the AC/power remains off when the power recovers. If [Power On] is selected, the AC/power resumes and the system starts to boot up when the power recovers.

Ring-In Power On: Use this to enable or disable Ring-in signals to turn on the system from the power-soft-off mode.

PCI Devices Power On: Use this to enable or disable PCI devices to turn on the system from the power-soft-off mode.

PS/2 Keyboard Power On: You may select [Any Key] to enable PS/2 keyboard to turn on the system from the power-soft-off mode. Or you may disable this feature by selecting [Disabled].

RTC Alarm Power On: Use this to enable or disable RTC (Real Time Clock) to power on the system. If [Enable] is selected, you must fill the RTC Alarm Date / Hour / Minute / Second sub-fields with the actual wake up time you desire.

4. Boot Setup Menu

AMIBIOS SETUP UTILITY - VERSION 3.31a					
Main	Advanced	Security	Power	Boot	Exit
Quick Boot Mode	Enabled	[Setup Help]			
Boot Up Num-Lock	On	<Enter> to enable or			
Boot To OS/2	No	disable the quick boot			
Boot From Network	Disabled	mode.			
▶ Boot Device Priority					
F1:Help	↑:Select Item	+/:Change Values	F9:Setup Defaults		
Esc:Exit	←:Select Menu	Enter>Select	▶Sub-Menu F10:Save & Exit		

Quick Boot Mode: Enable this mode will speed up the boot-up routine by skipping memory retestings.


Boot Up Num-Lock: Select [On] to activate the Numeric Lock function automatically after boot-up.

Boot To OS/2: Select [Yes] to enable boot-up to OS/2 operating system.

Boot From Network: Use this to enable or disable “boot from network” feature.

Boot Device Priority: This allows you to set the boot device priority.

5. Exit Menu

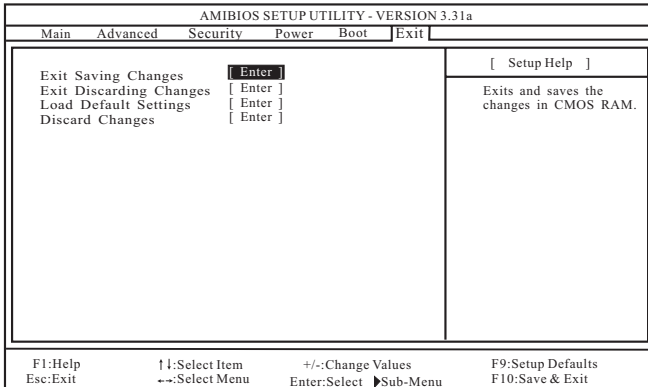

Exit Saving Changes: After you enter the sub-menu, the message “Save current settings and exit” will appear. If you press <ENTER>, it will save the current settings and exit the BIOS SETUP Utility.

Exit Discarding Changes: After you enter the submenu, the message “Quit without saving changes” will appear. If you press <ENTER>, you will exit the BIOS Setup Utility without making any changes to the settings.

Load Default Settings: After you enter the submenu, the message “Load default settings” will appear. If you press <Enter>, it will load the default values for all the setup configuration.

Discard Changes: After you enter the sub-menu, the message “Load setup original values” will appear. If you press <ENTER>, original values will be restored and all changes are discarded.