



# **SY-D6IGA Motherboard**

\*\*\*\*\*

Single or Dual Xeon™ processor supported  
(Pentium® II Xeon™ & Pentium® III Xeon™)

82440 GX AGP/PCI Motherboard

100MHz Front Side Bus supported

Custom ATX Form Factor

LAN Chip onboard (10/100 Mbps)

Ultra2 SCSI onboard

\*\*\*\*\*

## **User's Guide & Technical Reference**

### About This Guide

This User's Guide is for assisting system manufacturers and end users in setting up and installing the motherboard. Information in this guide has been carefully checked for reliability; however, no guarantee is given as to the correctness of the contents. The information in this document is subject to change without notice.

### Copyright Notice

Copyright 1999, Soyo Computer Inc. All rights reserved. This manual is copyrighted by Soyo Computer Inc. You may not reproduce, transmit, transcribe, store in a retrieval system, or translate into any language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, any part of this publication without express written permission of Soyo Computer Inc.

### Trademarks

Soyo is a registered trademark of Soyo Computer Inc. All trademarks are the property of their owners.

### Disclaimer

Soyo Computer Inc. makes no representations or warranties regarding the contents of this manual. We reserve the right to revise the manual or make changes in the specifications of the product described within it at any time without notice and without obligation to notify any person of such revision or change. The information contained in this manual is provided for general use by our customers. Our customers should be aware that the personal computer field is the subject of many patents. Our customers should ensure that their use of our products does not infringe upon any patents. It is the policy of Soyo Computer Inc. to respect the valid patent rights of third parties and not to infringe upon or assist others to infringe upon such rights.

### Restricted Rights Legend

Use, duplication, or disclosure by the Government is subject to restrictions set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at 252.277-7013.

### Product Rights

Products mentioned in this manual are mentioned for identification purpose only. Product names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies.

If you need any further information, please come to our home page on the Internet. The address is "<http://www.soyo.com.tw>".

**Edition: April 1999**  
**Version 1.0**  
**D6IGA SERIAL**

**FC** Tested To Comply  
With FCC Standards  
FOR HOME OR OFFICE USE

**100%** POST CONSUMER  
RECYCLED PAPER

# Table of Contents

**THE SY-D6IGA MOTHERBOARD.....1**

**SY-D6IGA MOTHERBOARD LAYOUT.....2**

**CHAPTER 1 INTRODUCTION .....3**

1-1 KEY FEATURES.....3

1-2 HANDLING THE MOTHERBOARD.....6

1-3 ELECTROSTATIC DISCHARGE PRECAUTIONS ....6

**CHAPTER 2 HARDWARE SETUP .....7**

2-1 PREPARATIONS .....7

2-2 UNPACKING THE MOTHERBOARD .....8

2-3 INSTALLATION GUIDE.....9

**CHAPTER 3 BIOS SETUP UTILITY .....33**

3-1 SOYO COMBO SETUP .....35

3-2 STANDARD CMOS SETUP .....40

3-3 BIOS FEATURES SETUP .....43

3-4 CHIPSET FEATURES SETUP .....48

3-5 POWER MANAGEMENT SETUP .....51

3-6 PNP/PCI CONFIGURATION SETUP.....55

3-7 LOAD SETUP DEFAULTS .....58

3-8 INTEGRATED PERIPHERALS .....59

3-9 SUPERVISOR PASSWORD .....64

3-10 USER PASSWORD .....65

3-11 IDE HDD AUTO DETECTION.....66

**CHAPTER 4 DRIVERS INSTALLATION.....67**


**CHAPTER 5 PRO/100+™ LAN ADAPTER INSTALLATION.....73**

- 5-1 PRO/100+™ - MICROSOFT  
INSTALLATION NOTES.....73
- 5-2 PRO/100+™ - ALL NETWARE PRODUCTS  
INSTALLATION NOTES.....88
- 5-3 PRO/100+™ - UNIX INSTALLATION NOTES ..... 107


**CHAPTER 6 ULTRA2 SCSI I/O SUBSYSTEM ..... 112**

- 6-1 INTRODUCTION TO ULTRA2 SCSI ..... 112
- 6-2 INSTALLING SCSI DEVICES..... 113
- 6-3 CONNECTING INTERNAL SCSI DEVICES ..... 114

# THE SY-D61GA MOTHERBOARD

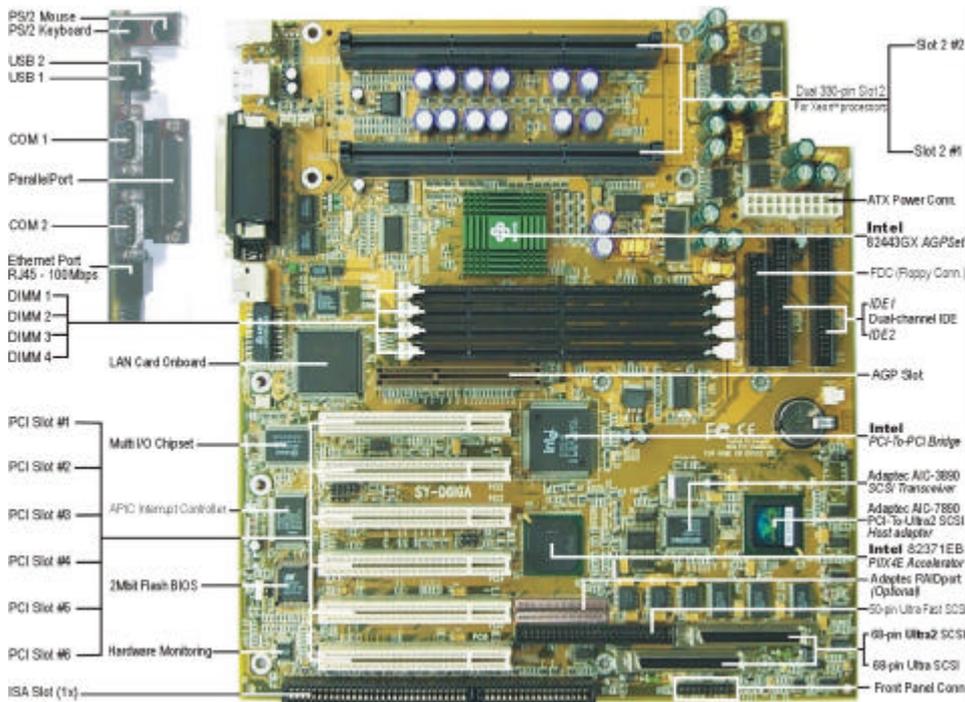

# SY-D6IGA MOTHERBOARD LAYOUT

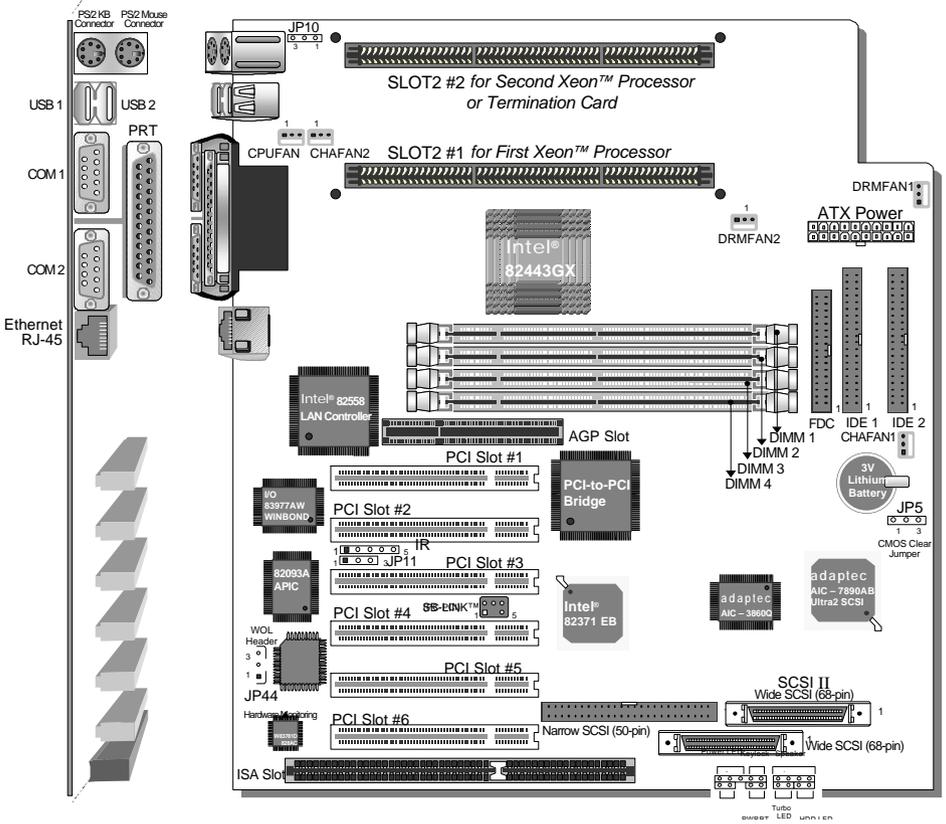

Back Panel

SY-D6IGA Platform

# Chapter 1

## INTRODUCTION

The **SY-D6IGA** AGP/PCI motherboard is a high-performance, **Single or Dual Pentium® II Xeon™ & Pentium® III Xeon™ processor** supported, custom ATX form-factor system board. **SY-D6IGA** uses the 82440 GX Chipset technology and supports most Xeon™ class processors. This motherboard is fully compatible with industry standards and adds many technical enhancements.

### 1-1 KEY FEATURES

Supports Single or Dual Xeon™ processor supported

- Pentium® II Xeon™ processor (400/450 MHz)
- Pentium® III Xeon™ processor (500/550 MHz)

Auto-detect CPU voltage

Soft CPU settings in BIOS with the "SOYO COMBO Setup"

Ultra2 SCSI adapter and SCSI port onboard

PC98, APM, ACPI, Ultra DMA/33

Supports system memory up to 2GB

Power-on by modem or alarm

Supports Wake-On-LAN (WOL)

Supports Power-On by PS/2 keyboard

Supports Creative SB-LINK™ (PC-PCI) for PCI audio

Supports onboard hardware monitoring  
and includes Hardware Doctor™ utility

LAN chip onboard supports dual mode 10BASE-T/100BASE-TX

1 x 32-bit AGP slot

6 x 32-bit bus mastering PCI slots

2 x USB ports onboard

1 x IrDA port

Supports multiple-boot function

Y2K compliant

ATX power connector

Power failure resume

**SY-D6IGA PLATFORM FEATURES**

Board Size	6-layer PCB, 28x30.5cm (11" x 12"), Custom ATX Form Factor
Slot2	2 x Slot2 for Xeon™ processors <ul style="list-style-type: none"><li>➤ Supports Single or Dual Xeon™ processor</li><li>➤ Supports the following processors with 100MHz FSB: Pentium® II Xeon™ 400/450 MHz Pentium® III Xeon™ 500/550 MHz</li><li>➤ Supports both boxed and non-boxed type of CPUs</li><li>➤ Includes one FSB Termination Card</li><li>➤ Includes one DRM (Dual Retention Mechanism ) assembly</li><li>➤ Also includes one CPU Heat-Sink &amp; Fan assembly</li><li>➤ Features Auto-detection of CPU voltage</li></ul>
Chipset	82440 GX AGP/PCI Set
ATX Power	20-pin Male Connector
CPUFAN	Slot2 #1 CPU: 3-pin CPU Cooling Fan Connector
DRMFA1,2	DRM Assembly Cooling Fan Connectors (2x)
CHAFA1,2	Chassis Cooling Fan Connectors (2x)
Memory	DIMM Bank (DIMM1~4) <ul style="list-style-type: none"><li>➤ Four strips of 168-pin Unbuffered and Registered SDRAM DIMM</li><li>➤ Supports 8/16/32/64/128/256/512MB DIMM modules in each bank</li><li>➤ Provides up to 2 Gbytes of main memory</li><li>➤ Supports ECC configuration</li></ul>
BIOS	System BIOS built-in, Award BIOS <ul style="list-style-type: none"><li>➤ APM, ACPI and "Plug-and-Play" functions</li><li>➤ Supports multiple-boot function</li><li>➤ Onboard FLASH memory for easy upgrade</li><li>➤ DMI utility</li></ul>
Bus Controller	Compliant with v2.1 PCI specifications

---

PCI Slots	6 x 32-bit Bus Mastering PCI Slots
AGP Slot	1 x 32-bit AGP Slot
ISA Slot	1 x 16-bit ISA Slot
IDE1, IDE2	2 x 40-pin Bus Mastering E-IDE/ATAPI Ports <ul style="list-style-type: none"><li>➤ IDE1: Primary IDE Device Connector</li><li>➤ IDE2: Secondary IDE Device Connector</li><li>➤ Supports Ultra DMA/33</li></ul>
FDC	1 Floppy Disk Drive (FDD) Port (Supports 1.2MB/1.44MB/2.88MB and LS120/3-mode FDD)
IR	5-pin Serial Infrared Device Header
Keylock	5-pin KeyLock Header
Reset	2-pin Reset Switch Header
Speaker	4-pin PC Speaker Header
TB_LED	2-pin Turbo LED Header
HDD_LED	2-pin IDE Device LED Header
PWRBT	ATX Power On/Off Switch 2-pin Header
JP5	CMOS Clear Jumper
JP10	Power-On by PS/2 Keyboard Jumper
JP11	Power Button Enable Jumper
JP44	WOL (Wake-On-LAN) 3-pin Header
SBLINK™	PCI Audio Card Header, (PC-PCI)
Ultra2 SCSI	68-pin SCSI II Connector onboard
Wide SCSI	68-pin Wide SCSI Connector onboard
Narrow SCSI	50-pin Narrow SCSI Connector onboard

## SY-D6IGA BACK-PANEL FEATURES

PRT	1 x Onboard 25-pin Female Parallel Printer Port <ul style="list-style-type: none"><li>➤ ECP/EPP/SPP multi-mode parallel printer port</li></ul>
COM1, COM2	2 x Onboard RS-232 Serial Ports <ul style="list-style-type: none"><li>➤ Feature 2 x high-speed UARTs (with 16550 FIFO)</li></ul>
PS/2 KB	1 x Onboard PS/2 Keyboard Connector
PS/2 Mouse	1 x Onboard PS/2 Mouse Connector
USB1, USB2	2 x Onboard USB (Universal Serial Bus) Connectors
RJ-45	Direct Ethernet connection with 10/100 Mbps indicator

## 1-2 HANDLING THE MOTHERBOARD

To avoid damage to your motherboard, follow these simple rules while unpacking:

- Before handling the motherboard, ground yourself by grasping an unpainted portion of the system's metal chassis.
- Remove the motherboard from its anti-static packaging. Hold the motherboard by the edges and avoid touching its components.
- Check the motherboard for damage. If any chip appears loose, press carefully to seat it firmly in its socket.



**Warning:** Do not apply power if the motherboard appears damaged. If there is damage to the board, contact your dealer immediately.

---

## 1-3 ELECTROSTATIC DISCHARGE PRECAUTIONS

Make sure to ground yourself before handling the motherboard or other system components. Electrostatic discharge can easily damage the components. Note that you must take special precautions when handling the motherboard in dry or air-conditioned environment.

To protect your equipment from electrostatic discharge, take the following precautions:

- Do not remove the anti-static packaging until you are ready to install.
- Ground yourself before removing any system component from its protective anti-static packaging. (To ground yourself, grasp the expansion slot covers or other unpainted portions of the computer chassis.)
- Frequently ground yourself while working or use a grounding strap.
- Handle the motherboard by its edges and avoid touching its components.

## Chapter 2

### HARDWARE SETUP

Congratulations on your purchase of **SY-D6IGA** Motherboard. You are about to install and connect your new motherboard.



---

**Note:** Do not unpack the motherboard from its protective anti-static packaging until you have made the following preparations.

---

#### 2-1 PREPARATIONS

Gather and prepare all the following hardware equipment to complete the installation successfully:

1. Single or Dual Pentium® II Xeon™ & Pentium® III Xeon™ processor with or without built-in CPU cooling fan.



---

**Note:** Preferably use the CPU cooling fan & heat sink assembly included with this motherboard.

---

2. DIMM memory module
3. Computer case and chassis with adequate power supply unit
4. Monitor
5. PS/2 Keyboard
6. Pointing Device (PS/2 mouse)
7. Speaker(s) (optional)
8. Disk Drives: HDD, CD-ROM, Floppy drive ...
9. External Peripherals: Printer, Plotter, and Modem (optional)
10. Internal Peripherals: Modem and LAN cards (optional)
11. Internal SCSI Devices: Hard/Floppy/CD-ROM Drives, Tape Drives, Removable Media Drives, etc. (*optional*)

## 2-2 UNPACKING THE MOTHERBOARD

When unpacking the motherboard, check for the following items:

- The **SY-D6IGA** 82440 GX AGP/PCI Motherboard
- The *Quick Start Guide* \*
- The Installation CD-ROM \*
- Three SCSI Driver Installation Diskettes labeled "7800 Family Manager Set V3.02"
- One DRM (Dual Retention Mechanism) Assembly
- One IDE Device Flat Cable
- One Floppy Disk Drive Flat Cable
- One 50-pin Narrow SCSI Cable
- One 68-pin Wide SCSI Cable
- One 68-pin Ultra2 SCSI Cable with Terminator

\* If your board comes with a driver disc and a paper manual, the Quick Start Guide and the CD-ROM are not included in the package.



---

**Warning:** Do not unpack the motherboard from its anti-static packaging until you are ready to install it.

---

Like most electronic equipment, your motherboard may be damaged by electrostatic discharge. To avoid permanent damage to components ground yourself while working by using a grounding strap. Otherwise, ground yourself frequently by touching the unpainted portion of the computer chassis to drain the static charges.

Handle the motherboard carefully, holding it by the edges. You are now ready to start the installation.

## 2-3 INSTALLATION GUIDE

We will now begin the installation of the motherboard. Please follow the step-by-step procedure designed to lead you to a complete and correct installation.



---

**Warning:** Turn off the power to the motherboard, system chassis, and peripheral devices before performing any work on the motherboard or system.

---

### Step 1. Single or Dual CPU Installation



---

**Notice 1 (Dual processor):** When installing two processors (Dual CPU), please make sure the front side bus, working frequency, and the specification number are identical for both processors.



**Notice 2 (Single processor):** If you are using a single processor, preferably install the processor in Slot2 #1, then insert the FSB Termination Card in the available Slot2 #2.

---


Your SY-D6IGA motherboard comes with a DRM (Dual Retention Mechanism) Assembly. The DRM Assembly is used to hold both Single or Dual Pentium® II Xeon™ & Pentium® III Xeon™ processors attached to the Slot2 #1 or Slot2 #2 slot connectors on the motherboard.

Follow these instructions to install your Xeon™ processor correctly.

## 1. Mount the Motherboard on the Computer Chassis

You must first install the SY-D6IGA motherboard on the computer chassis. The motherboard should be **bare (without DRM and CPU)** and **disconnected** from any power source.


Position the motherboard with its mounting holes facing the corresponding attachment holes on the chassis and tighten the motherboard mounting screws.

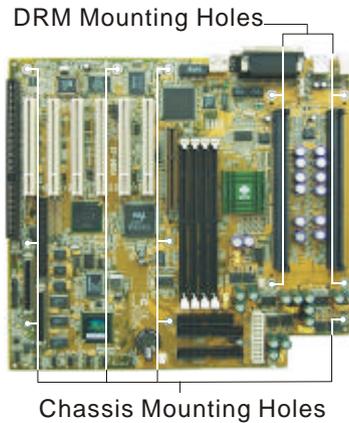

## 2. Check the Parts Required for CPU Installation


### ❑ Part 1: DRM (Dual Retention Mechanism)

This motherboard is shipped with a **DRM (Dual Retention Mechanism)** assembly to hold the single or dual Xeon™ processor in Slot2 #1 and Slot2 #2.

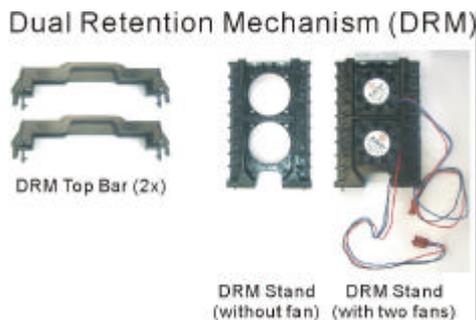


**❑ Part 2: CPU Heat Sink & Fan**

SOYO has also included a heavy-duty **Heat Sink & Fan** assembly for better heat dissipation of the CPU. We recommend that you use this instead of the heat sink that comes with your CPU.

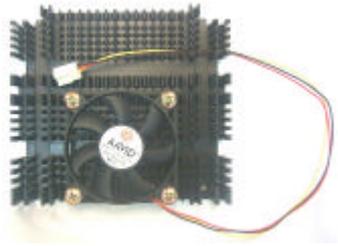**❑ Part 3: FSB Termination Card**


The **FSB (Front Side Bus) Termination Card** must be inserted in the unoccupied Slot2 connector #2 in a Single processor configuration. If you install only one processor, fit it in Slot2 #1, and insert the FSB Termination Card in the available Slot2 #2.

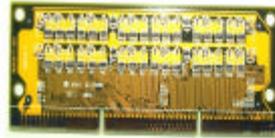

**FSB Termination Card  
(To be inserted in Slot2 #2)**

**3. Mount the CPU Heat Sink & Fan Assembly**


The CPU Heat Sink & Fan assembly provided by SOYO provides better heat dissipation capability. Remove the original heat sink at the back of the CPU SEC cartridge and affix SOYO's Heat Sink & Fan assembly by securing the four mounting screws to the CPU's thermal plate.

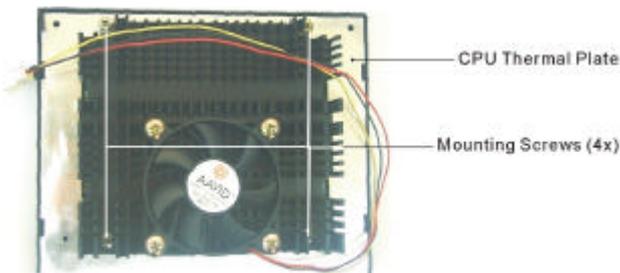

Heat Sink & Fan Assembly Mounted on Xeon™ Processor


#### 4. Install the DRM Assembly

- 4(a)** Locate Slot2 #1 & Slot2 #2 connectors and the DRM mounting holes on the motherboard. Note that Slot2 #1 is located closer to the middle of the motherboard while Slot2 #2 is situated near the edge of the board.

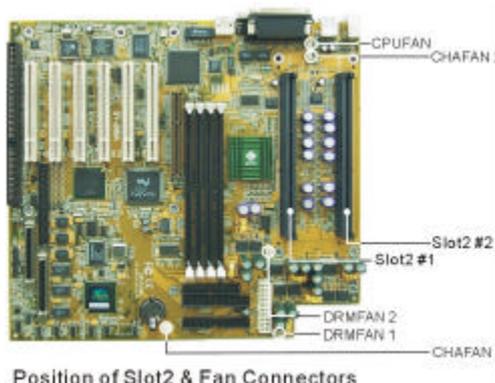

Position of Slot2 & Fan Connectors

- 4(b)** Attach the two fan cables of the DRM Stand (the one equipped with 2 fans) to the fan power connectors labeled **DRMFAN 1 & 2** on the motherboard.
- 4(c)** Affix this DRM Stand (the one equipped with 2 fans) to the motherboard and then fix the DRM Stand by securing two DRM mounting screws at the base of the DRM Stand to the chassis.

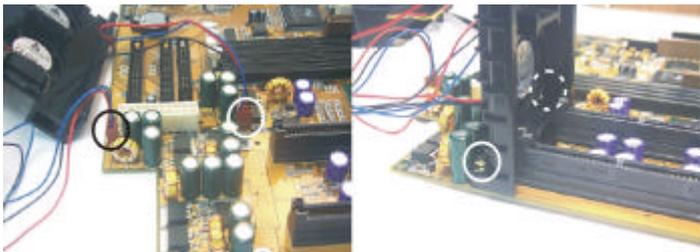


Plug the DRM Stand fan cables to the DRMFAN 1 & 2 connectors

Use the two mounting screws to secure the base of the DRM Stand

4(d) Mount the second DRM Stand (the one without fans) opposite from the DRM fans (between the back panel connectors and Slot2 sockets) and use two DRM mounting screws to secure its base to the motherboard.

**Note:**If your system is using two chassis cooling fans, plug the second fan cable to the chassis fan power connector labeled CHAFAN 2, **now**. Once the second DRM Stand is mounted, it will block the CHAFAN 2 connector, providing insufficient clearance to either attach or remove the fan power connector cable.

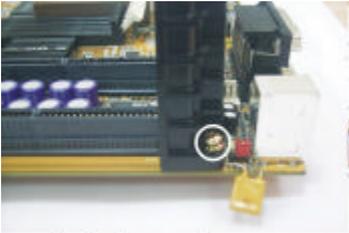

Use the two mounting screws to secure the DRM Stand (without fan)



View of the DRM Assembly

5. Install the First Processor in Slot2 #1


Record the working frequency and specification number of your CPU that should be clearly marked on the CPU cover.

Pentium® II Xeon™ Processor	Pentium® III Xeon™ Processor
<input type="checkbox"/> 400 MHz (100 x 4.0)	<input type="checkbox"/> 500 MHz (100 x 5.0)
<input type="checkbox"/> 450 MHz (100 x 4.5)	<input type="checkbox"/> 550 MHz (100 x 5.5)
<input type="checkbox"/>	<input type="checkbox"/>
S/N:	S/N:

**5(a)** Clip the DRM Top onto the processor with the DRM Top mounting holes facing away from the processor's heat sink assembly.


**5(b)** Slide-in the processor into the DRM Assembly and insert it in Slot2 #1, while making sure that the heat sink assembly is facing towards the center of the motherboard.

**Important:** The Slot2 connector is directionally keyed, and the processor will not go in unless it is properly oriented, as shown in the figure.

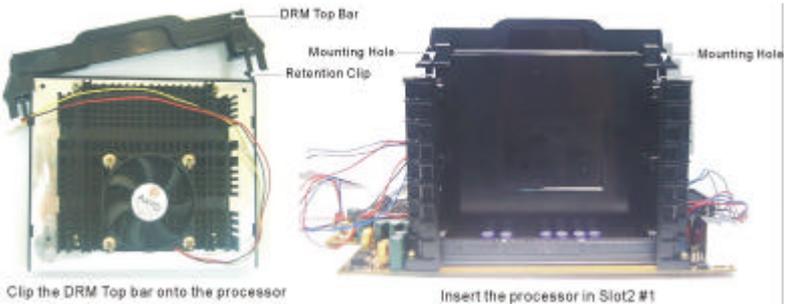

**5(c)** Secure the DRM Top bar to both DRM stands by using two mounting screws.

**5(d)** Connect the processor cooling fan cable to the CPU fan power connector labeled **CPUFAN** on the motherboard.

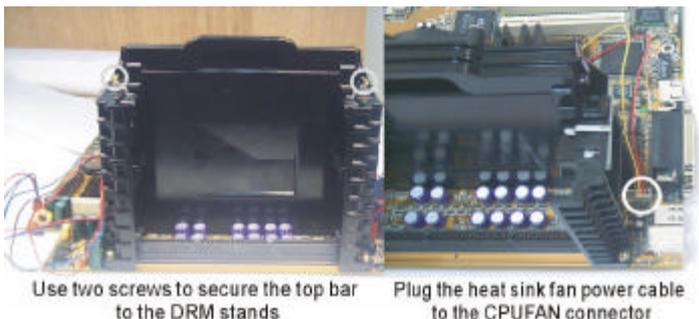

## 6. (Dual Processor Configuration)

### Install the Second Processor in Slot2 #2

If you are installing a second processor in Slot2 #2, apply the same procedure as in *step 5*. However, in *step 5(a)*, clip the DRM Top onto the processor with the mounting holes facing **towards** the heat sink.

---

**Notice 1:** When installing two processors, make sure the front side bus and working frequency are identical for both processors. Do NOT install different types of CPU at the same time, for example, Pentium® II Xeon™(400/450 MHz) and Pentium® III Xeon™ (500/550 MHz) processors may not work properly when installed together in a dual configuration. We strongly recommend using two processors with the same specification number in dual processor configuration.

---

**Notice 2:** If two processors are installed in the DRM assembly, then the clearance between processors will be insufficient and not allow the use of a heat sink & fan assembly on the second processor (the one installed in Slot2 #2). Cooling of the second processors will be provided by the two DRM fans. If you install a heat sink on the second processor, only use a narrow gage heat sink so as not to obstruct the flow of air between the two processors.

---

## 7. (Single Processor Configuration)

### Install the Termination Card in Slot2 #2

If only one processor is installed in your system, you are required to insert the **FSB Termination Card** in the available Slot2 #2.

**Note:** If you are using a single processor, you must install the **processor in Slot 2 #1**, then insert the **Termination Card in Slot 2 #2**, in this order.


---

**7(a)** Insert the termination card in Slot2 #2, while making sure that the two notches at the base of the card align perfectly with the keys in Slot2 #2 connector.

***Important:*** The Slot2 connector is directionally keyed, and the termination card will not go in unless it is properly oriented, as shown in the figure.

## Step 2. SDRAM Memory Module Installation

This motherboard features 4 x DIMM Banks for 168-pin 3.3V unbuffered and registered DIMM modules.

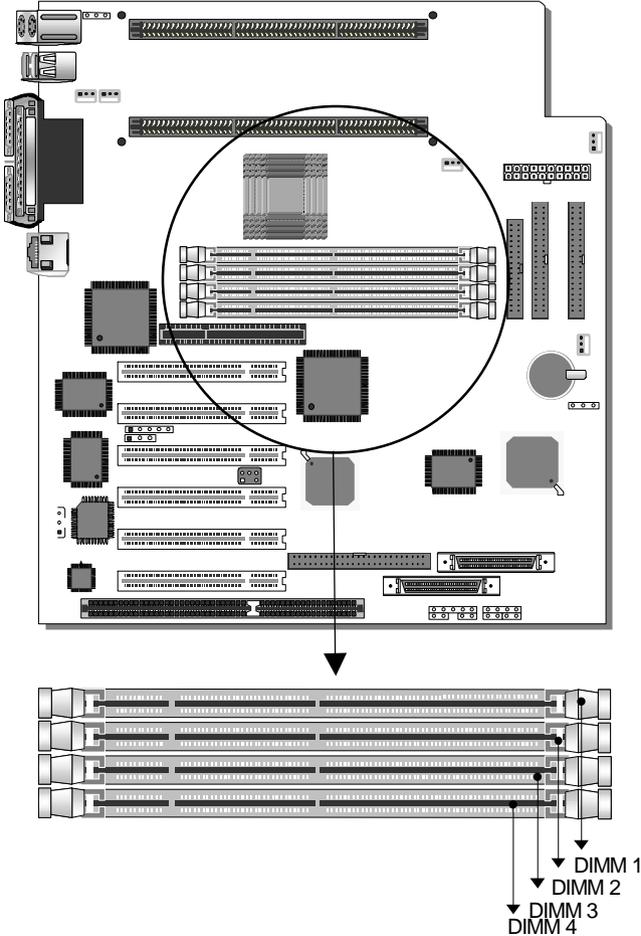

Your board comes with four DIMM sockets, providing support for up to **2GB** of main memory using DIMM modules from 8MB to 512MB. Use only 8ns (100MHz, PC100 compliant) or faster memory.

### Memory Configuration

Number of Memory Modules	DIMM 1	DIMM 2	DIMM 3	DIMM 4
1	1 <sup>st</sup>			
2	1 <sup>st</sup>	2 <sup>nd</sup>		
3	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	
4	1 <sup>st</sup>	2 <sup>nd</sup>	3 <sup>rd</sup>	4 <sup>th</sup>
<b>RAM Type</b>	SDRAM			
<b>Memory Module Size (MB)</b>	8/16/32/64/128/256/512 Mbytes			
<b>Notice 1:</b> 256 & 512 MB memory modules only available on PC registered DIMM.				
<b>Notice 2:</b> Always install memory modules in the order prescribed in this table.				
<b>Notice 3:</b> Do not install unbuffered and registered memory modules together.				



**Important:** It is of prime importance that you install DIMM modules as outlined in the table above in order to preserve signal integrity on 100MHz front side bus systems.

### Step 3. IDE Device Installation (HDD, CD-ROM)

This motherboard offers two primary and secondary IDE device connectors (IDE1, IDE2.) It can support up to four high-speed HDD or CD-ROM.

Connect one side of the 40-pin flat cable to the IDE device (HDD or CD-ROM) and plug the other end to the primary (IDE1) or secondary (IDE2) directionally keyed IDE connector on the motherboard.

This motherboard can support up to four HDDs.


### Step 4. Floppy Drive Installation

The system supports 5 possible floppy drive types: 720 KB, 1.2 MB, 1.44 MB, 2.88 MB, and LS-120. In addition, this motherboard supports a 3-mode (720KB/1.2MB/1.44MB) floppy commonly used in Japan.

Connect one side of the 34-pin flat cable to the floppy drive and plug the other end to the floppy drive connector on the motherboard.

This motherboard can support up to 2 floppy drives.

### Step 5. Front Panel Connections

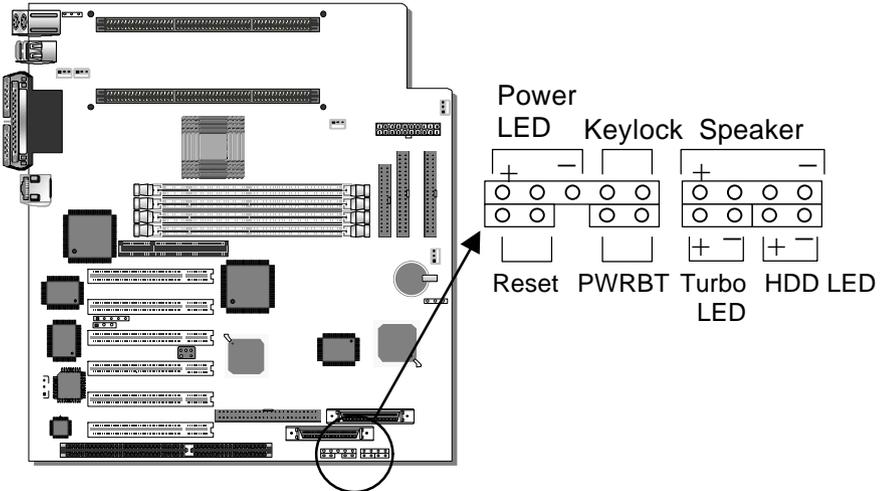

Plug the computer case's front panel devices to the corresponding headers on the motherboard.

#### 1. Power LED & KeyLock

Plug the Power LED cable into the 5-pin Keylock header.

Some systems may feature a KeyLock function with a front panel switch for enabling or disabling the keyboard. Connect the KeyLock switch to the 5-pin Keylock header on the motherboard, according to the following pin assignment: pin 1,3 are for Power LED and pin 4,5 are for Keylock.

**2. Reset**

Plug the Reset push-button cable into the 2-pin Reset header on the motherboard. Pushing the Reset button on the front panel will cause the system to restart the boot-up sequence.

**3. Speaker**

Attach the 4-pin PC speaker cable from the case to the Speaker header on the motherboard.

**4. Turbo LED**

Connecting the 2-pin Turbo LED cable to the corresponding Turbo LED header will cause the LED to light whenever the system is in Turbo mode.

The manufacturer has permanently set this motherboard in Turbo mode due to most hardware and software compliance to turbo mode.

**5. IDE LED**

Attach the 2-pin IDE device LED cable to the corresponding IDE LED header on the motherboard. This will cause the LED to lighten when an IDE (HDD, CD-ROM) device is active.

**6. ATX Power On/Off Switch**


Attach the 2-pin momentary type switch to the PWRBT header for turning On or Off your ATX power supply.

### Step 6. Back Panel Connections

All external devices such as the PS/2 keyboard, PS/2 mouse, printer, modem, USB can be plugged directly onto the motherboard back panel.

Only after you have fixed and locked the motherboard to the computer case can you start connecting the external peripheral devices.

When connecting an external device, use the following figure to locate and identify which back panel connector to plug the device to.

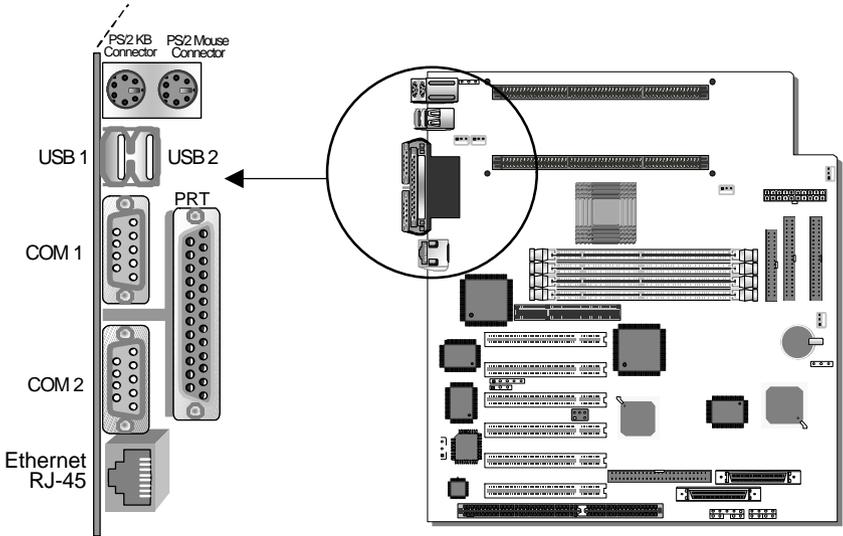

#### 1. Onboard Serial Ports COM1/COM2

External peripherals that use serial transmission scheme include:

- serial mouse,
- and modem.

Plug the serial device cables directly into the COM1/COM2 9-pin male connectors located at the rear panel of the motherboard.

**2. Parallel Port PRT**

This parallel port is used to connect the printer or other parallel devices.

Plug the parallel device cable into the 25-pin female connector located at the rear panel of the motherboard.

**3. PS/2 Keyboard**

Plug the keyboard jack directly into the 6-pin female PS/2 keyboard connector located at the rear panel of the motherboard.

**4. PS/2 Mouse**

Similarly, plug the mouse jack directly into the 6-pin female PS/2 mouse connector.

**5. Universal Serial Bus USB1/USB2**


This motherboard provides two USB ports for your additional devices. Plug the USB device jack into the available USB connector USB1 or USB2.

- USB devices under Win98 are allowed.
- With Win95, use the flow UHCI specifications.

**Step 7. Other Connections****1. Wake-On-LAN (WOL)**

Attach the 3-pin connector from the LAN card which supports the Wake-On-LAN (WOL) function to the JP44 header on the motherboard. This WOL function lets users wake up the connected computer through the LAN card.


Please install according to the following pin assignment:

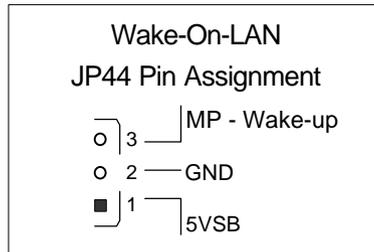

## 2. Infrared (IR1)

Plug the 5-pin infrared device cable to the IR1 header. This will enable the infrared transfer function. This motherboard meets both the ASKIR and HPSIR specifications.

Please install according to the following pin assignment:

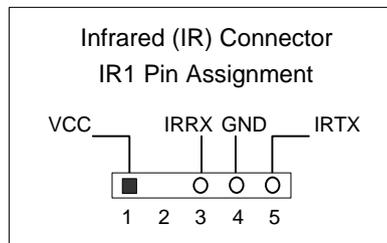


## Step 8. Cooling Fan Installation

### 1. CPU Cooling Fan (CPUFAN)

After you have seated the first processor properly in Slot2 #1, attach the 3-pin fan cable from the CPU Heat & Fan Assembly to the corresponding CPUFAN connector on the motherboard.


The CPU fan will stop when the system enters into Suspend Mode. (Suspend mode can be enabled from the BIOS Setup Utility, [POWER MANAGEMENT] menu.)

To avoid damage to the system, install according to the following pin assignment:

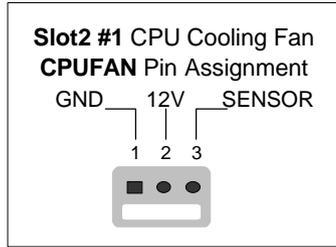


**2. DRM Cooling Fans (DRMFA1, DRMFA2)**

Attach the two fan cables from the DRM Assembly to the fan power connectors labeled DRMFAN 1 & 2 on the motherboard. Install according to the following pin assignment:

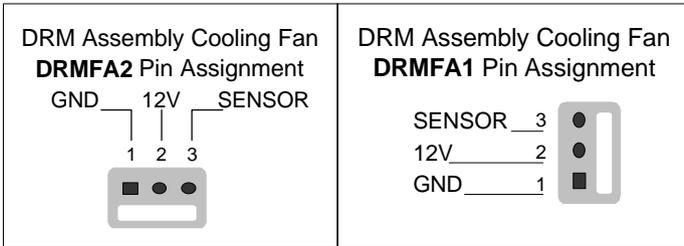

**3. Chassis Cooling Fans (CHAFA1, CHAFA2)**

Some chassis also include one to two cooling fans. This motherboard features two connectors (CHAFA1, CHAFA2) to provide 12V power to the chassis fans. Connect the cables from the chassis fans to the 3-pin connectors on the motherboard, according to the following pin assignment:

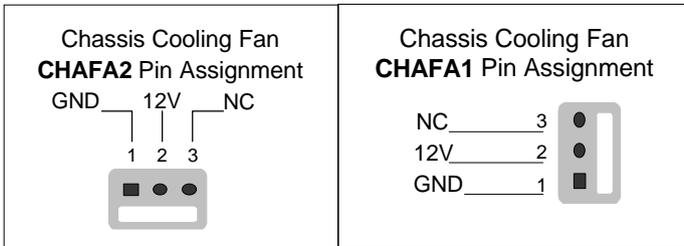

### Step 9. AGP VGA Card

Insert the AGP VGA card into the AGP slot. Then connect the monitor information cable to the AGP card back plane external connector.

Follow the manufacturer's instructions to perform the AGP VGA drivers installation.


**Other Display Cards:** Insert other types of VGA cards into the PCI or ISA expansion slots according to card specifications.

### Step 10. PCI Audio Card

Some PCI soundcards require a PC-PCI DMA channel. Attach the 5-pin cable from your Creative sound blaster PCI audio card to the SB-LINK™ header on the motherboard. The SB-LINK™ will forward requests for legacy DMA channel to the PCI Bus.

### Step 11. ATX Power Supply

Plug the connector from the power directly into the 20-pin male ATX PW connector on the motherboard, as shown in the following figure.

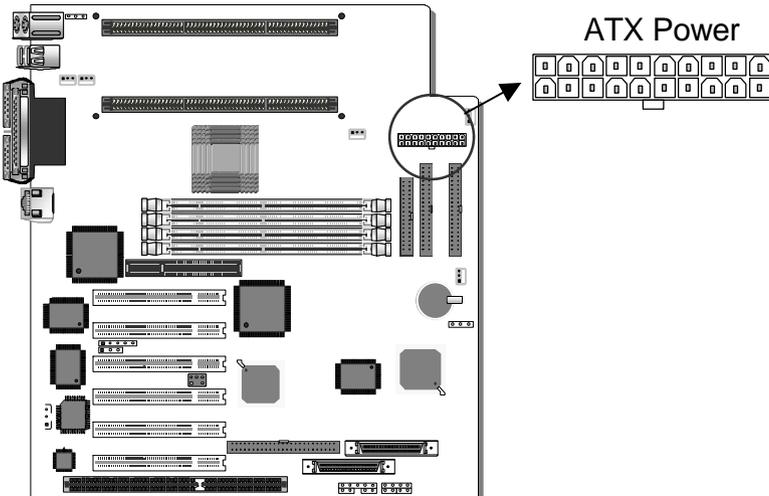



**Warning:** Follow these precautions to preserve your motherboard from any remnant currents when connecting to


ATX power supply:

**Turn off the power supply and unplug the power cord of the ATX power supply before connecting to ATX PW connector.**

This motherboard requires a power supply with a "power good" signal. Make sure the ATX power supply can meet the following power requirements:

Motherboard Power Requirements					
+3.3V	3	20.0A	-5V	3	0.2A
+5V	3	35.0A	+12V	3	5.5A
+5VSB	3	1A	-12V	3	0.25

Please install the ATX power according to the following pin assignment and power requirements:

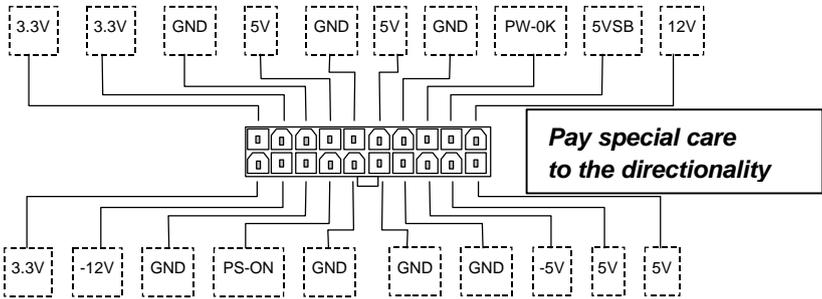

ATX Power

## Step 12. CMOS Clearing (JP5)

After you have turned off your computer, clear the CMOS memory by momentarily shorting pins 2-3 on jumper JP5, for a few seconds. Then restore JP5 to the initial 1-2 jumper setting in order to recover and retain the default settings.

After you have turned off your computer, clear the CMOS memory by momentarily shorting pin 2-3 on jumper JP5 for at least 5 seconds. Then permanently short pin 1-2 to retain new settings.

Jumper JP5 can be easily identified by its white colored cap.

CMOS Clearing	Retain CMOS Data	Clear CMOS Data
<b>JP5 Setting</b>	Short pin 1-2 to retain the new CMOS settings.  1 2 3	Short pin 2-3 for <b>at least 5 seconds</b> to clear the CMOS.  1 2 3
<b>Note:</b> You must unplug the ATX power cable from the ATX power connector when performing the CMOS Clear operation.		

## Step 13. Power-On by PS/2 Keyboard Jumper (JP10)

You can choose to enable the Power-On by PS/2 Keyboard function by shorting pin 2-3 on jumper JP10; otherwise, short pin 1-2 to disable this function.

Power-On by PS/2 Keyboard	Enable	Disable
<b>JP10 Setting</b>	Short pin 2-3 to enable the Power-On by PS/2 Keyboard function.  1 2 3	Short pin 1-2 to disable the Power-On by PS/2 Keyboard function.  1 2 3



**Note:** When using the Power-On by PS/2 Keyboard function, please make sure the ATX power supply can take at least 1A load on the 5V Standby lead (5VSB).

### Step 14. Power Button Enable (JP11)

Your system can be powered on either by pressing the power switch or by entering a system password at the prompt. (Note that the system password can be configured in the BIOS “SOYO COMBO Setup”).

In case you forget the system password, you will be denied access to the system. To avoid this, you can short pin 1-2 on jumper JP11, which will override the password and always enable the power button function.

Power Button Enable	Always Enable The Power Button	Power Button Function According to BIOS Setting
<b>JP11 Setting</b>	Short pin 1-2 to always enable the Power Button function. 	Short pin2-3 for a Power Button function according to BIOS setting. 

### Step 15. Power On

You have now completed the hardware installation of your motherboard successfully.

1. Turn the power on
2. To enter the BIOS Setup Utility, press the <DEL> key while the system is performing the diagnostic checks,




---

**Note:** If you fail to enter the BIOS, wait until the boot up sequence is completed. Then push the RESET button and press <DEL> key again at the beginning of boot-up, during diagnostic checks.


---

Repeat this operation until you get the following screen.



### 3. Select [SOYO COMBO SETUP]

Move the cursor to the [CPU Frequency] field to set the CPU working frequency, as shown in the following display.

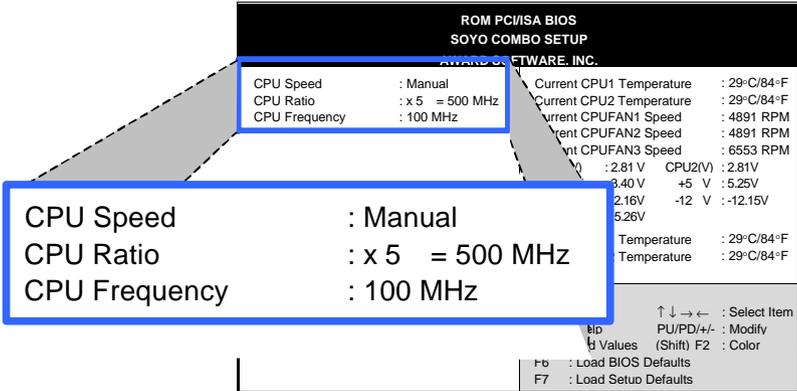

Available [CPU Speed] settings on your SY-D6IGA Motherboard are detailed in the following table. If you set this field to [Manual], you are then required to fill in the next two consecutive fields: (1) the CPU Ratio, and (2) the CPU Frequency.

CPU Frequency	
<input type="checkbox"/> 400MHz (100 x 4.0)	Select the working frequency of your Xeon™ processor among these preset values.
<input type="checkbox"/> 450MHz (100 x 4.5)	
<input type="checkbox"/> 500MHz (100 x 5.0)	
<input type="checkbox"/> 550MHz (100 x 5.5)	
<input type="checkbox"/>	
	<b>Note:</b> <input checked="" type="checkbox"/> Mark the checkbox that corresponds to the working frequency of your Xeon™ processor in case the CMOS configuration should be lost.
	You can also write your own frequency combination in the space provided.

### 4. Select [SAVE & EXIT SETUP]

Press <Enter> to save the new configuration to the CMOS memory, and continue the boot sequence.

**Step 17. Power Off**

There are two possible ways to turn off the system:

1. Use the **Shutdown** command in the **Start Menu** of Windows 95/98 to turn off your computer.
2. Press the mechanical power-button and **hold down for over 4 seconds**, to shutdown the computer. If you press the power-button for less than 4 seconds, then your system will enter into **Suspend Mode**.

## Troubleshooting at First Start

- **What should I do if the motherboard refuses to start?**

The 350MHz setting is used as default so whenever the BIOS settings are erased or reset, the board will be able to boot up. If the CPU speed was set too high and the motherboard refuses to start up, you can always load the default values by pressing the [Ins] key during boot up.

- **Over-clocking may cause system malfunctions!**

The SY-D6IGA motherboard provides over-clocking capability. Due to the over-clocking setting your system may fail to boot up or hang during run time. If this occurs, please perform the following steps to recover your system from the abnormal situation:

1. Turn off system power. (If you use an ATX power supply, and depending on your system, you may have to press the power button for more than 4 seconds to shut down the system.)
2. Press and hold down the <Insert> key while turning on the system power. Keep holding down the <Insert> key until you see the message of the CPU type and frequency (133MHz or 200MHz) appear on screen.
3. Press the <Del> key during the system diagnostic checks to enter the Award BIOS Setup program.
4. From the BIOS main menu, select [SOYO COMBO SETUP] and move the cursor to the [CPU Frequency] field to set the proper working frequency.
5. Select [Save & Exit SETUP] and press <Enter> to save the configuration to the CMOS memory, and continue the boot sequence.



**Note:** SOYO **does not** guarantee system stability if the user over clocks the system. Any malfunctions due to over-clocking **are not** covered by the warranty.

---


## Chapter 3

# BIOS SETUP UTILITY

This motherboard's BIOS setup program uses the ROM PCI/ISA BIOS program from Award Software Inc.

To enter the Award BIOS program's Main Menu:

1. Turn on or reboot the system.
2. After the diagnostic checks, press the [Del] key to enter the Award BIOS Setup Utility.

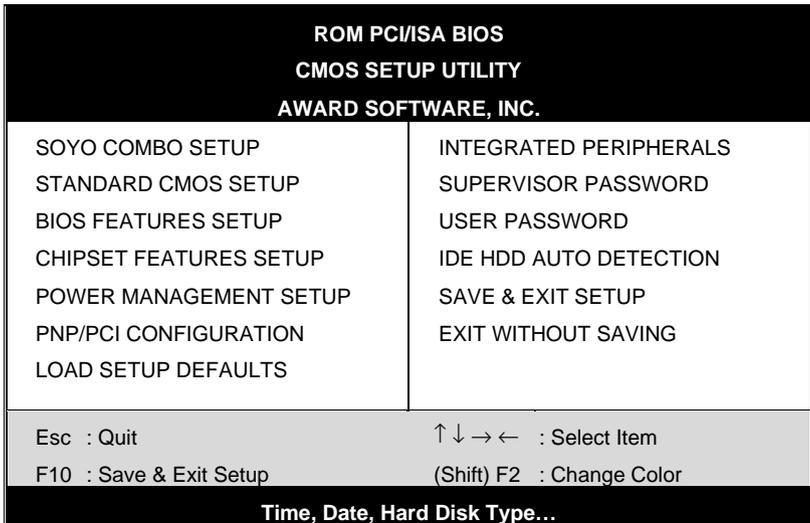

### Selecting items

- Use the arrow keys to move between items and select fields.
- From the Main Menu press arrow keys to enter the selected submenu.

### Modifying selected items


- Use the [Up]/[Down] keys to modify values within the selected fields. Some fields let you enter values directly.

**Hot Keys:** Function keys give you access to a group of commands throughout the BIOS utility.

Function	Command	Description
F1	Help	Gives the list of options available for each item.
Shift F2	Color	Change the color of the display window.
F5	Old values	Restore the old values. These are the values that the user started the current session with.
F6	Load BIOS Defaults	Loads all options with the BIOS Setup default values.
F7	Load Setup Defaults	Loads all options with the Power-On default values.
F10	Save & Exit Setup	Saves your changes and reboots the system.
[Esc]	Quit	Lets you return at anytime and from any location to the Main Menu.

**SAVE AND EXIT SETUP**


Select the [SAVE & EXIT SETUP] option from the Main Menu to save data to CMOS and exit the setup utility. This option saves all your changes and causes the system to reboot.

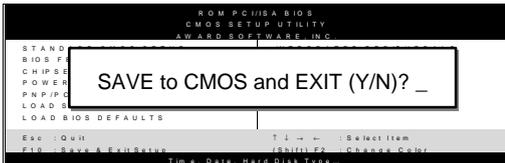

Type [Y] to save the changes and exit or [N] to return to the Main Menu and keep current values.

**EXIT WITHOUT SAVING**

Selecting the [EXIT WITHOUT SAVING] option allows you to abandon all data and exit setup, therefore ignoring all your changes.

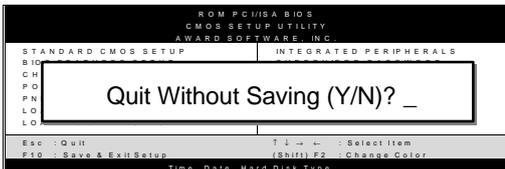

Type [Y] to abandon changes and exit or [N] to return to the Main Menu and keep current values.

### 3-1 SOYO COMBO SETUP

This motherboard does not use any hardware jumpers to set the CPU frequency. Instead, CPU settings are software configurable with the BIOS **[SOYO COMBO SETUP]**.

ROM PCI/ISA BIOS			
SOYO COMBO SETUP			
AWARD SOFTWARE, INC.			
CPU Speed	: Manual	Current CPU1 Temperature	: 29°C/84°F
CPU Ratio	: x 5 = 500 MHz	Current CPU2 Temperature	: 29°C/84°F
CPU Frequency	: 100 MHz	Current CPUFAN1 Speed	: 4891 RPM
Boot Sequence	: A,C,SCSI	Current CPUFAN2 Speed	: 4891 RPM
Quick Power On Self Test	: Enabled	Current CPUFAN3 Speed	: 6553 RPM
POWER ON Function	: BUTTON ONLY	CPU1(V)	: 2.81 V
KB Power ON Password	: Enter	CPU2(V)	: 2.81V
Hot Key Power ON	: Ctrl-F1	+3.3 V	: 3.40 V
Soft-Off by PWR-BTTN	: Instant-Off	+5 V	: 5.25V
Power-On by Ring/LAN	: Enabled	+12 V	: 12.16V
Power-On by Alarm	: Disabled	-12 V	: -12.15V
		-5 V	: -5.26V
		Current CPU1 Temperature	: 29°C/84°F
		Current CPU2 Temperature	: 29°C/84°F
		ESC : Quit	↑ ↓ → ← : Select Item
		F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values	(Shift) F2 : Color
		F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

After the hardware installation is complete, turn the power switch on, then press the <DEL> key during the system diagnostic checks to enter the Award BIOS Setup program. The CMOS SETUP UTILITY will display on screen. Then, select the **[SOYO COMBO SETUP]** option from the main menu and press the <Enter> key.

The **[SOYO COMBO SETUP]** menu combines the main parameters that you need to configure, all in one menu, for a quick setup in BIOS.

3-1.1 Quick CPU Speed Settings

Quick CPU Speed Settings	Setting	Description	Note
<b>CPU Speed</b>  (*Default)	Manual	Select the working frequency of your Pentium® II Xeon™ or Pentium® III Xeon™ processor among these preset values.	
	350MHz (100 x 3.5)		
	400MHz (100 x 4)		
	450MHz (100 x 4.5)		
	500MHz (100 x 5)		
	550MHz (100 x 5.5)		
	600MHz (100 x 6)		
	650MHz (100 x 6.5)		
	700MHz (100 x 7)		
	750MHz (100 x 7.5)		
	800MHz (100 x 8)		
If [CPU Speed] field is set to [Manual]			
<b>CPU Frequency</b>	103 MHz	Select the host clock of your Pentium® II Xeon™ or Pentium® III Xeon™ processor among these values.	
	112 MHz	<b>Note:</b> For the GX chipset, the FSB specification is 100MHz. The system stability is not guaranteed for other frequencies due to the limitations of this chipset.	
	133 MHz		
	100 MHz		
If [CPU Speed] field is set to [Manual]			
<b>CPU Ratio</b>	After you have selected the host clock, choose the right multiplier for the CPU. Options are: [2, 2.5, 3., 3.5, 4, 4.5, 5, 5.5, 6, 6.5, 7, 7.5, 8]. The CPU frequency is then defined as [host clock freq.]x[multiplier], and should match the working frequency of your Pentium® II Xeon™ or Pentium® III Xeon™ processor.		

3-1.2 System Boot Control Settings

System Boot Control Settings	Setting	Description	Note
<b>Boot Sequence</b>	A,C,SCSI	Choose the boot sequence adapted to your needs, for example: ● [A,C,SCSI] means the BIOS will look for an operating system first in drive A, then in drive C, and eventually in SCSI device.	
	C,A,SCSI		
	C,CD-ROM,A		
	CD-ROM,C,A		
	D,A,SCSI		
	E,A,SCSI		
	F,A,SCSI		
	SCSI,A,C		
	SCSI,C,A		
	C only		
LS/ZIP,C			
<b>Quick Power On Self Test</b>	Disabled	Provides a fast POST (Power-On Self Test) at boot-up.	Default
	Enabled		

3-1.3 Power Management

PM Events	Setting	Description	Note
<b>POWER ON Function</b>	BUTTON-ONLY	Disables the Wake-Up by Keyboard function.	Default
	KB Power ON Password	Enables you to wake-up the system by entering a password at the keyboard.	
	Hot Key	You can wake-up the system by pressing the key combination of your choice (Ctrl-F1~F12).	
If [POWER ON Function] is set to [KB Power ON Password]			
<b>KB Power ON Password</b>	Enter (your password)	Set the password that will wake-up your system.	
If [POWER ON Function] is set to [Hot Key]			
<b>KB Power ON Password</b>	Ctrl-F1~F12	Choose the key combination that will wake-up the system. [Ctrl-F1 to Ctrl-F12]	
<b>Soft-Off by PWR-BTTN</b>	Instant-off		Default
	Delay 4 Sec.	Turns off the system power 4 seconds after pushing the power button.	
<b>Power-On by Ring/LAN</b>	Disabled		
	Enabled	The system will self-power on me when the modem is ringing.	Default
<b>Power-On by Alarm</b>	Disabled	The system ignores the alarm.	Default
	Enabled	Set alarm to power on the system by the date (1-31) or time (hh:mm:ss). If the date is set to [0], the system will self-power on by alarm everyday at the set time.	

3-1.4 CPU Device Monitoring

<b>CPU Device Monitoring</b>	<b>Setting</b>	<b>Description</b>	<b>Note</b>
<b>Current CPU1 Temperature</b>	°C/°F	Shows the current status of the CPU1 temperature.	Slot2 #1
<b>Current CPU2 Temperature</b>	°C/°F	Shows the current status of the CPU2 temperature.	Slot2 #2
<b>Current CPUFAN1 Speed</b>	°C/°F	Shows the current status of CPU Fan speed for CPU1.	Slot2 #1
<b>Current CPUFAN2 Speed</b>	°C/°F	Shows the current status of CPU Fan speed for CPU2.	Slot2 #2
<b>Current CPUFAN3 Speed</b>	°C/°F	Shows the current status of the Chassis Fan speed	
<b>CPU1(V), +3.3V, +12V, -5V</b>	V	Shows the current voltage status on CPU1.	Slot2 #1
<b>CPU2(V), +5V, -12V</b>	V	Shows the current voltage status on CPU2.	Slot2 #2

### 3-2 STANDARD CMOS SETUP

Select the [STANDARD CMOS SETUP] option from the Main Menu and press [Enter] key.

ROM PCI/ISA BIOS								
STANDARD CMOS SETUP								
AWARD SOFTWARE, INC.								
Date (mm:dd:yy)	: Mon, Feb 22 1999							
Time (hh:mm:ss)	: 11 : 30 : 33							
HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master	: AUTO	0	0	0	0	0	0	AUTO
Primary Slave	: None	0	0	0	0	0	0	----
Secondary Master	: None	0	0	0	0	0	0	----
Secondary Slave	: None	0	0	0	0	0	0	----
Drive A	: 1.44M, 3.5 in.							
Drive B	: None							
Floppy 3 Mode Support				: Disabled				
Video	: EGA/VGA							
Halt On	: All Errors							
Base Memory:		640K						
Extended Memory:		31744K						
Other Memory:		384K						
Total Memory:		32768K						
Esc	: Quit	↑ ↓ → ←	: Select Item		PU/PD/+/-	: Modifv		
F1	: Help	(Shift) F2	: Change Color		F3	: Toggle Calendar		

This screen allows you to modify the basic CMOS settings. After you have completed the changes, press [Esc] key to return to the Main Menu.

#### 3-2.1 Date & Time

	Display	Setting	Please Note
Date	mm/dd/yyyy	Type the current date	You can also press the PUp/PDn keys to toggle between values.
Time	hh:mm:ss	Type the current time	24-hour clock format 3:15 PM is displayed as 15:15:00

### 3-2.2 Hard Disks Type & Mode

Choose the type and mode for the hard disks that you have already installed.

Primary (Secondary) Master & Slave	Setting	Description	Note
<b>Type</b>	Auto	BIOS detects hard disk type automatically.	Default
	User	User defines the type of hard disk.	
	None		
<b>Mode</b>	Auto	BIOS detects hard disk mode automatically.	Default
	Normal	Normal IDE hard disk	<528MB
	LBA	Enhanced IDE hard disk	>528MB
	Large	Large IDE hard disk (for certain hard disk)	



**Note:** If you have any questions on your hard disk type or mode, ask your hard disk provider or previous user for details.

### 3-2.3 Floppy Drives

Floppy Drives	Setting	Description	Note
<b>Drives A &amp; B</b>	360KB, 5.25 in.		
	1.2MB, 5.25 in.		
	720KB, 3.5 in.		
	1.44MB, 3.5 in.		Default
	2.88MB, 3.5 in.		
	None	Not installed	
<b>Floppy 3-Mode Support</b>	Disabled		Default
	Drive A Drive B Both	Supports 3-mode floppy diskette: 740KB/1.2MB/1.44MB on selected disk drive.	Special disk drive commonly used in Japan

**3-2.4 Video**

Select the video mode: EGA/VGA (Default), CGA 40, CGA 80, MONO (Monochrome).

**3-2.5 Halt On**

When the BIOS detects system errors, this function will stop the system. Select which type of error will cause the system halt: All Errors (Default), No Errors, All But Keyboard, All But Diskette, All But Disk/Key.

### 3-3 BIOS FEATURES SETUP

Select the [BIOS FEATURES SETUP] option from the Main Menu and press [Enter] key.

ROM PCI/ISA BIOS			
BIOS FEATURES SETUP			
AWARD SOFTWARE, INC.			
Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
Processor Number Feature	: Disabled	D0000-D3FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D4000-D7FFF Shadow	: Disabled
Boot Up NumLock Status	: On	D8000-DBFFF Shadow	: Disabled
Typematic Rate Setting	: Disabled	DC000-DFFFF Shadow	: Disabled
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: Setup		
PCI/VGA Palette Snoop	: Disabled		
Assign IRQ for VGA	: Enabled		
MPS Version Control For OS	: 1.4	ESC : Quit	↑ ↓ → ← : Select Item
OS Select for DRAM > 64MB	: Non-OS2	F1 : Help	PU/PD/+/- : Modify
HDD S.M.A.R.T. capability	: Disabled	F5 : Old Values	(Shift) F2 : Color
Report No FDD For WIN 95	: Yes	F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

After you have completed the changes, press [Esc] key and follow the instructions on your screen to save your settings or exit without saving.

#### 3-3.1 Virus Warning

	Setting	Description	Note
Virus Warning	Disabled		Default
	Enabled	Enable this option to protect the boot sectors and partition tables of your hard disk. Any attempt to write to them will the system to halt and display a warning message.	

### 3-3.2 Cache Memory Options

	Setting	Description	Note
<b>CPU Internal Cache</b>	Disabled		
	Enabled	Enables the CPU's internal cache.	Default
<b>External Cache</b>	Disabled		
	Enabled	Enables the external memory.	Default

### 3-3.3 Processor Number Feature

	Setting	Description	Note
<b>Processor Number Feature</b>	Disabled		Default
	Enabled	This function enables your motherboard to automatically read and display the <i>Specification Number</i> of your Pentium® III CPU.	

### 3-3.4 System Boot Control Settings

	Setting	Description	Note
<b>System Boot Control Settings</b>			
<b>Swap Floppy Drive</b>	Disabled		Default
	Enabled	Changes the sequence of A and B drives.	
<b>Boot Up NumLock Status</b>	On	Puts numeric keypad in NumLock mode at boot-up.	Default
	Off	Puts numeric keypad in arrow key mode at boot-up.	

3-3.5 Typematic Settings

Typematic Settings	Setting	Description	Note
<b>Typematic Rate Setting</b>	Disabled		Default
	Enabled	Enables to adjust the keystroke repeat rate.	
The following [Typematic Rate] and [Typematic Delay] fields are active only if [Typematic Rate Setting] is set to [Enabled]			
<b>Typematic Rate</b>	6 (Char/sec)	Choose the rate at which a character is repeated when holding down a key.	Default
	8 (Char/sec)		
	10 (Char/sec)		
	12 (Char/sec)		
	15 (Char/sec)		
	20 (Char/sec)		
	24 (Char/sec)		
30 (Char/sec)			
<b>Typematic Delay</b>	250 (msec)	Choose how long after you press a key down the character begins repeating.	Default
	500 (msec)		
	750 (msec)		
	1000 (msec)		

3-3.6 Security Option

Use this feature to prevent unauthorized system boot-up or use of BIOS Setup. The following table describes the security settings.

Security Option	Setting	Description	Note
<b>Security Option</b>	System	Each time the system is booted, the password prompt appears.	
	Setup	If a password is set, the password prompt only appears when you attempt to enter the BIOS Setup program.	Default

3-3.7 Other Control Options

Other Control Options	Setting	Description	Note
<b>PCI/VGA Palette Snoop</b>	Disabled		Default
	Enabled	The color of the monitor may be altered when using an MPEG card. Enable this option to restore the monitor's normal color.	
<b>Assign IRQ For VGA</b>	Disabled		
	Enabled	Use this default setting.	Default
<b>MPS Version Control For OS</b>	1.1	To specify which MPS version to use.	
	1.4		Default
<b>OS Select for DRAM&gt;64MB</b>	OS2	When using an OS2 operating system.	
	Non-OS2	When using another, non-OS2 operating system.	Default
<b>HDD S.M.A.R.T. capability</b>	Disabled		Default
	Enabled	Enable this field when your HDD supports the S.M.A.R.T. function. Consult your HDD provider for details.	
<b>Report No FDD For WIN 95</b>	Yes	Windows will release IRQ line 6 (normally used by the Floppy Disk Drive) after you disable your on-board FDD and set this field to [Yes].	Default
	No	Windows will reserve INT 6 for your FDD, whether it is disabled or not.	

**Other Control Options (continued)**

<b>Other Control Options</b>	<b>Setting</b>	<b>Description</b>	<b>Note</b>
<b>Video BIOS Shadow</b>	Disabled		
	Enabled	The BIOS is shadowed in a 16K segment if it is enabled and if it has BIOS present. These 16 segments can be shadowed from ROM to RAM. BIOS shadow copies BIOS code from slower ROM to faster RAM. BIOS can then execute from RAM.	Default
<b>C8000-CBFFF/ CC000-CFFFF/ D0000-D3FFF/ D4000-D7FFF/ D8000-DBFFF/ DC000-DFFFF/ Shadow</b>	Disabled		Default
	Enabled	The ROM data at the specified address range will be copied to RAM.	

### 3-4 CHIPSET FEATURES SETUP



**Caution:** Change these settings only if you are already familiar with the Chipset.

The [CHIPSET FEATURES SETUP] option changes the values of the chipset registers. These registers control the system options in the computer.

ROM PCI/ISA BIOS CHIPSET FEATURES SETUP AWARD SOFTWARE, INC.	
SDRAM CAS latency Time : 3	
DRAM Data Integrity Mode : Non-ECC	
System BIOS Cacheable : Disabled	
Video BIOS Cacheable : Disabled	
Video RAM Cacheable : Disabled	
8 Bit I/O Recovery Time : 1	
16 Bit I/O Recovery Time : 1	
Memory Hole At 15M-16M : Disabled	
Passive Release : Enabled	
Delayed Transaction : Enabled	
AGP Aperture Size (MB) : 64	
Spread Spectrum Modulated : Disabled	
	ESC : Quit                    ↑ ↓ → ← : Select Item F1 : Help                     PU/PD/+/- : Modify F5 : Old Values            (Shift) F2 : Color F6 : Load BIOS Defaults F7 : Load Setup Defaults

After you have completed the changes, press [Esc] and follow the instructions on your screen to save your settings or exit without saving.

The following table describes each field in the CHIPSET FEATURES SETUP Menu and how to configure each parameter.

## CHIPSET FEATURES SETUP

CHIPSET FEATURES	Setting	Description	Note
SDRAM Cache Latency Time	3	Use the default setting	Default
	2		
DRAM Data Integrity Mode	Non-ECC	Choose according to the DRAM type you have.	Default
	ECC		
System BIOS Cacheable	Disabled	The ROM area F0000H-FFFFFH is cacheable.	Default
	Enabled		
Video BIOS Cacheable	Disabled	The video BIOS C0000H-C7FFFH is cacheable.	Default
	Enabled		
Video RAM Cacheable	Disabled	The ROM area A0000-BFFFF is cacheable.	Default
	Enabled		
8 BIT I/O Recovery Time	1	Use the default setting	Default
	2-8,NA		
16 BIT I/O Recovery Time	1	Use the default setting	Default
	2-4,NA		
Memory Hole At 15M-16M	Disabled	Some interface cards will map their ROM address to this area. If this occurs, select [Enabled] in this field.	Default
	Enabled		

**CHIPSET FEATURES SETUP (Continued)**

<b>CHIPSET FEATURES</b>	<b>Setting</b>	<b>Description</b>	<b>Note</b>
<b>Passive Release</b>	Enabled	Use the default setting	Default
<b>Delayed Transaction</b>	Enabled	Use the default setting	Default
<b>AGP Aperture Size</b>	64 4-256MB	AGP could use the DRAM as its video RAM. Choose the DRAM size that you wish to allocate as video RAM.	Default
<b>Spread Spectrum Modulated</b>	Disabled		Default
	Enabled	When using Spread Spectrum modulated 1.5% or 6% for FCC or DOC testing.	

### 3-5 POWER MANAGEMENT SETUP

The [POWER MANAGEMENT SETUP] sets the system's power saving functions.

ROM PCI/ISA BIOS		
POWER MANAGEMENT SETUP		
AWARD SOFTWARE, INC.		
Power Management	: User Define	** Reload Global Timer Events **
PM Control by APM	: Yes	IRQ [3-7,9-15], NMI : Enabled
Video Off Method	: V/H SYNC+Blank	Primary IDE 0 : Disabled
Video Off After	: Standby	Primary IDE 1 : Disabled
MODEM Use IRQ	: 3	Secondary IDE 0 : Disabled
Doze Mode	: Disable	Secondary IDE 1 : Disabled
Standby Mode	: Disable	Floppy Disk : Disabled
Suspend Mode	: Disable	Serial Port : Enabled
HDD Power Down	: Disable	Parallel Port : Disabled
PCI/VGA Act-Monitor	: Disabled	
CPUFAN Off In Suspend	: Enabled	
IRQ 8 Break Suspend	: Disabled	
		ESC : Quit                    ↑ ↓ → ← : Select Item
		F1 : Help                    PU/PD/+/- : Modifv
		F5 : Old Values    (Shift) F2 : Color
		F6 : Load BIOS Defaults
		F7 : Load Setup Defaults

After you have completed the Power Management Setup, press [Esc] to return to the Main Menu.

3-5.1 Power Management Controls

Power Management Controls	Setting	Description				Note
<b>Power Management</b>	User Define	Lets you define the HDD and system power down times.				Default
	Disable	Disables the Green PC Features.				
		Doze timer	Standby timer	Suspend timer	HDD power down	
	Min Saving	1 Hour	1 Hour	1 Hour	15 Min	
	Max Saving	1 Min	1 Min	1 Min	1 Min	
<b>PM Control by APM</b>	Yes	To use Advanced Power Management (APM) you must run [power.exe] under DOS V6.0 or later version.				Default
	No					
<b>Video Off Method</b>	V/H Sync+Blank	Selects the method by which the monitor is blanked.				Default
	Blank Screen					
	DPMS					
<b>Video Off After</b>	Standby	Choose the PM mode you want video to go off after the mode is being active.				Default
	Suspend					
	Doze					
	NA					
<b>MODEM Use IRQ</b>	3	Assigns an IRQ# to the modem device.				Default
	3-11,NA					

3-5.2 PM Timers

PM Timers	Setting	Description	Note
The following [Doze Mode] field may be configured only if [Power Management] is set to [User Define]			
<b>Doze Mode</b>	Disable		Default
	1Min-1Hour	When the set time has elapsed, BIOS sends a command to the system to enter Doze Mode.	System clock drops to 33MHz.
The following [Standby Mode] field may be configured only if [Power Management] is set to [User Define]			
<b>Standby Mode</b>	Disable		Default
	1Min-1Hour	When the set time has elapsed, BIOS sends a command to the system to enter Standby Mode.	
The following [Suspend Mode] field may be configured only if [Power Management] is set to [User Define]			
<b>Suspend Mode</b>	Disable		Default
	1Min-1Hour	In Suspend mode, the CPU stops completely (no instructions are executed.)	Only an SL-Enhanced (or SMI) CPU can enter this mode.
<b>HDD Power Down</b>	Disabled		Default
	1-15Min	When the set time has elapsed, BIOS sends a command to the HDD to power down. This turns off the HDD motor.	Some older model HDDs may not support this advanced function.

3-5.3 PM Events

PM Events	Setting	Description	Note
<b>PCI/VGA Act-Monitor</b>	Disabled		Default
	Enabled	Enables the power management timers when a [no activity] event is detected on the PCI device and monitor.	
<b>CPUFAN Off In Suspend</b>	Disabled	Disables the PM timer.	
	Enabled	Switches off the CPU Fan when the system enters Suspend Mode.	Default
<b>IRQ 8 Break Suspend</b>	Disabled		Default
	Enabled	Alarm function is active.	

3-5.4 Reload Global Timer Events

Power Down & Resume Events	Setting	Description	Note
<b>IRQ [3-7,9-15], NMI</b>	Disabled		
	Enabled	The system monitors these elements for activity. The system will resume if an [IRQ activity] is detected.	Default
<b>IDE0, IDE1</b> ➤ Primary ➤ Secondary	Disabled		Default
	Enabled	Enables the PM timers when [No Activity Event] is detected.	
<b>Floppy Disk</b>	Disabled		Default
	Enabled	Enables the PM timers when [No Activity Event] is detected on the floppy disk drive.	
<b>Serial Port</b>	Disabled		
	Enabled	Enables the PM timers when [No Activity Event] is detected on the serial port.	Default
<b>Parallel Port</b>	Disabled		Default
	Enabled	Enables the PM timers when [No Activity Event] is detected on the parallel port.	

### 3-6 PNP/PCI CONFIGURATION SETUP

This option sets the motherboard's PCI Slots.

ROM PCI/ISA BIOS	
PNP/PCI CONFIGURATION	
AWARD SOFTWARE, INC.	
PnP OS Installed	: No
Resources Controlled By	: Manual
Reset Configuration Data	: Disabled
Used MEM base addr	: N/A
Assign IRQ For USB	: Enabled
IRQ-3 assigned to	: Legacy ISA*
IRQ-4 assigned to	: Legacy ISA*
IRQ-5 assigned to	: PCI/ISA PnP*
IRQ-7 assigned to	: PCI/ISA PnP*
IRQ-9 assigned to	: PCI/ISA PnP*
IRQ-10 assigned to	: PCI/ISA PnP*
IRQ-11 assigned to	: PCI/ISA PnP*
IRQ-12 assigned to	: PCI/ISA PnP*
IRQ-14 assigned to	: PCI/ISA PnP*
IRQ-15 assigned to	: PCI/ISA PnP*
DMA-0 assigned to	: PCI/ISA PnP*
DMA-1 assigned to	: PCI/ISA PnP*
DMA-3 assigned to	: PCI/ISA PnP*
DMA-5 assigned to	: PCI/ISA PnP*
DMA-6 assigned to	: PCI/ISA PnP*
DMA-7 assigned to	: PCI/ISA PnP*
ESC	: Quit
F1	: Help
F5	: Old Values (Shift) F2 : Color
F6	: Load BIOS Defaults
F7	: Load Setup Defaults
↑ ↓ → ←	: Select Item
PU/PD/+/-	: Modify



**Note:** Starred (\*) items will disappear when the [Resources Controlled By] option is set to [Auto].

After you have completed the PCI Slot Configuration, press [Esc] and follow the instructions on your screen to save your settings or exit without saving.

3-6.1 PNP/PCI Configuration Controls


PNP/PCI Controls	Setting	Description	Note
<b>PnP OS Installed</b>	Yes	Set this field to [Yes] if you are running Windows 95/98, which are PnP compatible.	
	No	If the OS you are running does not support PnP configuration.	Default (If there is any doubt, set this field to [No])
<b>Resources Controlled By</b>	Manual	BIOS does not manage PCI/ISA PnP card IRQ assignment. Requires to assign IRQ-# and DMA-# to PCI or ISA PnP manually. IRQ-3,4,5,7,9,10,11,12,14,15 assigned to: _ DMA-0,1,3,5,6,7 assigned to: _	
	Auto	The Plug-and-Play BIOS auto manages PCI/ISA PnP card IRQ assignment automatically.	<b>Recommended</b>
<b>Reset Configuration Data</b>	Disabled	Retain PnP configuration data in BIOS.	Default
	Enabled	Reset PnP configuration data in BIOS.	

3-6.2 PNP/PCI Configuration Setup

PNP/PCI Setup	Setting	Description	Note
If [Resources Controlled By] is set to [Manual]			
IRQ-# and DMA-# assigned to:	PCI/ISA PnP	Choose IRQ-# and DMA-# assigned to PCI/ISA PnP card.	IRQ-3,4,5,7,9,10,11,12,14,15 DMA-0,1,3,5,6,7
	Legacy ISA	Choose IRQ-# and DMA-# assigned to Legacy ISA card.	IRQ-3,4,5,7,9,10,11,12,14,15 DMA-0,1,3,5,6,7
Used MEM base addr	N/A		Default
	I/O address	C800,CC00,D000,D400,D800,DC00. (Asking card provider for the exactly I/O address of this add-on card.)	Use this function only when problems occur while using some certain add-on cards.
Used MEM Length	Memory length	8K,16K,32K,64K. (Please ask your card provider for the exactly memory length of this add-on card.)	This item appears only when the [Used MEM base addr] field is set to I/O address.
Assign IRQ For USB	Enabled	BIOS will assign IRQ for USB port.	Default
	Disabled	BIOS won't assign IRQ for USB port.	

### 3-7 LOAD SETUP DEFAULTS

Select the [LOAD SETUP DEFAULTS] option from the Main Menu to load the system values you have previously saved. This option is recommended if you need to reset the system setup and to retrieve the old values.

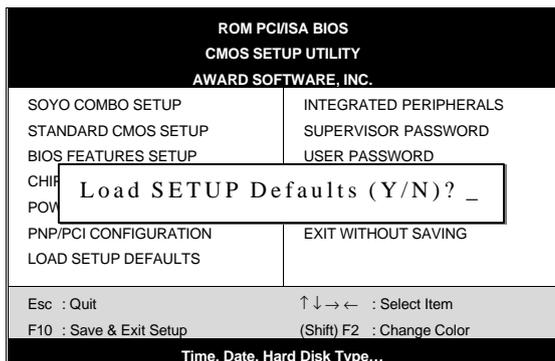

Type [Y] to use the Setup Defaults followed by [Enter] or otherwise [N] to return to the Main Menu and keep current values.



**Warning:** If you run into any problem after changing the BIOS configuration, please load the SETUP DEFAULTS for stable performance.

### 3-8 INTEGRATED PERIPHERALS



**Caution:** Change these settings only if you are already familiar with the Chipset.

The [INTEGRATED PERIPHERALS] option changes the values of the chipset registers. These registers control the system options in the computer.

The following screen shows setup default settings.

ROM PCI/ISA BIOS			
INTEGRATED PERIPHERALS			
AWARD SOFTWARE, INC.			
IDE HDD Block Mode	: Enabled	Onboard FDC Controller	: Enabled
IDE Primary Master PIO	: Auto	Onboard Serial Port 1	: 3F8/IRQ4
IDE Primary Slave PIO	: Auto	Onboard Serial Port 2	: 2F8/IRQ3
IDE Secondary Master PIO	: Auto	URART Mode Select	: Normal
IDE Secondary Slave PIO	: Auto	RxD , TxD Active	: Hi,Lo
IDE Primary Master UDMA	: Auto	IR Transmission Delay	: Enabled
IDE Primary Slave UDMA	: Auto	Onboard Parallel Port	: 378/IRQ7
IDE Secondary Master UDMA	: Auto	Parallel Port Mode	: SPP
IDE Secondary Slave UDMA	: Auto	ECP Mode Use DMA	: 3
On-Chip Primary PCI IDE	: Enabled	EPP Mode Select	: EPP1.7
On-Chip Secondary PCI IDE	: Enabled		
Onboard PCI SCSI Chip	: Enabled	ESC : Quit	↑ ↓ → ← : Select Item
USB Keyboard Support	: Disabled	F1 : Help	PU/PD/+/- : Modifv
Init Display First	: PCI Slot	F5 : Old Values	(Shift) F2 : Color
KBC Input Clock	: 12	F6 : Load BIOS Defaults	
		F7 : Load Setup Defaults	

The following tables describe each field in the INTEGRATED PERIPHERALS Menu and provide instructions on how to configure the IDE controls, FDC controls, and the onboard serial and parallel ports.

## 3-8.1 IDE Device Controls

IDE Controls	Setting	Description	Note
<b>IDE HDD Block Mode</b>	Disabled		
	Enabled	Invokes multi-sector transfer instead of one sector per transfer. Not all HDDs support this function.	Default
<b>IDE</b> ➤ Primary Master PIO ➤ Primary Slave PIO ➤ Secondary Master PIO ➤ Secondary Slave PIO	mode 0-4	0 is the slowest speed 4 is the fastest speed	
	Auto	For better performance and stability, we suggest you use the Auto setting to set the HDD control timing.	Default
<b>IDE</b> ➤ Primary Master UDMA ➤ Primary Slave UDMA ➤ Secondary Master UDMA ➤ Secondary Slave UDMA	Disabled		
	Auto	Select Auto to enable Ultra DMA Mode support.	Default
<b>On-Chip PCI IDE</b> ➤ Primary ➤ Secondary	Disabled	Turn off the on-board IDE	
	Enabled	Use the on-board IDE	Default

## 3-8.2 Onboard SCSI Subsystem Controls

SCSI Subsystem Controls	Setting	Description	Note
<b>Onboard PCI SCSI Chip</b>	Disabled		
	Enabled	Enables the on-board SCSI function. Also, allows you to configure the SCSISelect™ BIOS utility. (Press <Ctrl-A> during boot-up to enter the SCSI BIOS utility.)	Default

**3-8.3 USB Keyboard Support**

USB Keyboard	Setting	Description	Note
USB Keyboard Support	Disabled		Default
	Enabled	Use a USB keyboard	

**3-8.4 Display Controls**

Display Controls	Setting	Description	Note
Init Display First	PCI Slot	Choose which card – AGP Display card or PCI VGA card – to initialize first.	Default
	AGP		

**3-8.5 Keyboard Controls**

Keyboard Controls	Setting	Description	Note
KBC Input Clock	6	Controls the frequency of the clock signal (MHz) of the keyboard.	Default
	8		
	12	Set this value to 8 (MHz) if experiencing problems with your keyboard.	
	16		

## 3-8.6 FDC Controls

FDC Controls	Setting	Description	Note
Onboard FDC controller	Disabled	Turn off the on-board floppy controller	
	Enabled	Use the on-board floppy controller	Default

## 3-8.7 Onboard Serial Ports

Onboard Serial Ports	Setting	Description	Note
Onboard ➤ Serial Port 1 ➤ Serial Port 2	Disabled		
	3F8/IRQ4	Choose serial port 1 & 2's I/O address.	Default (port 1)
	2F8/IRQ3	Do not set port 1 & 2 to the same address except for [Disabled] or [Auto].	Default (port 2)
	3E8/IRQ4		
	2E8/IRQ3		
UART Mode Select	Auto		
	Normal	Supports a Standard serial infrared IrDA.	Default
	IrDA 1.0		
	ASKIR	Supports a Sharp serial interface format.	
VxD,TxD Active	FIR	Fast Infrared Interface	
	Hi,Lo/Lo,Hi/Lo,Lo/Hi,Hi	Check with your IR-device provider for exact setting.	
IR Transmission Delay	Enabled	Check with your IR-device provider for exact setting.	Default
	Disabled		

3-8.8 Onboard Parallel Ports

Onboard Parallel Ports	Setting	Description	Note
<b>Onboard Parallel Port</b>	378/IRQ7	Choose the printer I/O address.	Default
	3BC/IRQ7		
	278/IRQ5		
	Disable		
<b>Parallel Port Mode</b>	ECP/EPP	The mode depends on your external parallel device that connects to this port.	
	SPP		Default
	ECP		
	EPP		
If [Parallel Port Mode] is set to [ECP] or [ECP/EPP] mode			
<b>ECP Mode use DMA</b>	3	Choose DMA3	Default
	1	Choose DMA1	
If [Parallel Port Mode] is set to [EPP] or [ECP/EPP] mode			
<b>EPP Mode Select</b>	EPP1.7	Select the correct EPP operating mode of your on-board parallel port. (This setting should match your parallel device requirements.)	Default
	EPP1.9		

3-8.9 MULTI I/O ADDRESSES

Default settings for multi-I/O addresses are as follows:

Port	I/O Address	IRQ	Status
LPT1	378	7	SPP
COM1	3F8	4	
COM2	2F8	3	



**Warning:** If a default I/O address conflicts with other I/O cards such as sound card, you must change one of the I/O addresses to remedy to this address conflict. (I/O addresses can be adjusted from the BIOS Setup Utility)

### 3-9 SUPERVISOR PASSWORD

Based on the setting you have made in the [Security Option] of the [BIOS FEATURES SETUP] section, the password prevents access to the system or the setup program by unauthorized users. Follow this procedure to set a new password or disable the password:

1. Choose [BIOS FEATURES SETUP] in the Main Menu and press [Enter]. Select the [Security Options] item and set the field to:
  - a. [System]: The password is required every time the system is booted. This means only a person who knows the password can use this computer.
  - b. [Setup]: The password is required only when you attempt to enter the BIOS Setup program.
2. Choose [SUPERVISOR PASSWORD] from the Main Menu and press [Enter]. The following prompt appear:

Enter Password:



---

**Warning:** If you forget or lose the password, the only way to access the system is to set jumper JP5 to clear the CMOS RAM. All setup information is lost and you must run the BIOS setup program again.

---



---

**Note:** If you do not wish to use the password function, press [Enter] directly and the following message appears:

Password Disabled!!


---

- 3. Enter your new password and press [Enter]. The following message appears, prompting to confirm the new password:

Confirm Password:

- 4. Re-enter your password and then press [Enter] to exit to the Main Menu.

This diagram outlines the password selection procedure:

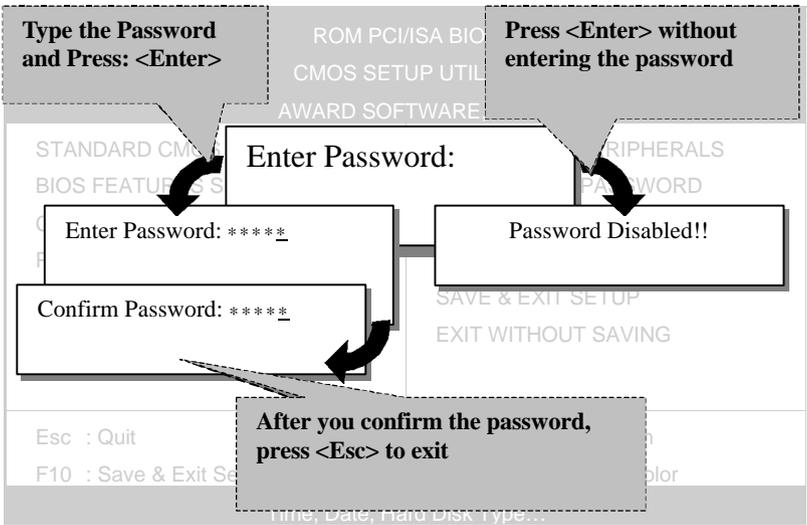

### 3-10 USER PASSWORD

When the user password option is on, you are not allowed to change any setting in the [CMOS SETUP UTILITY] except for changing the user's password.

The password setting procedure is similar to that for the [SUPERVISOR PASSWORD] (Refer to section 3-9).

### 3-11 IDE HDD AUTO DETECTION

This Main Menu function automatically detects the hard disk type and configures the STANDARD CMOS SETUP accordingly.

**ROM PCI/ISA BIOS  
CMOS SETUP UTILITY  
AWARD SOFTWARE, INC.**

HARD DISKS	TYPE	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE
Primary Master :								
Select Primary Master Option (N=Skip) : N								
OPTIONS	SIZE	CYLS	HEAD	PRECOMP	LANDZ	SECTOR	MODE	
2(Y)	1707	827	64	0	3308	63	LBA	
1	1707	3309	16	65535	3308	63	NORMAL	
3	1707	827	64	65535	3308	63	LARGE	

Note: Some Oses( SCO-UNIX Before v5.0) must use "NORMAL" for installation

ESC : Skip



**Note:** This function is only valid for IDE type of hard disk drives.

## Chapter 4

### DRIVERS INSTALLATION

Your SY-D6IGA Motherboard comes with a CD-ROM labeled "SOYO CD." The SOYO CD contains the user's manual file for your new motherboard, the drivers software available for installation, and a database in HTML format with information on SOYO motherboards and other products.

The SOYO CD Start Up Program automatically detects which SOYO motherboard you own and displays the corresponding model name.

#### Step 1. Insert the SOYO CD into the CD-ROM drive

The SOYO CD will auto-run, and the SOYO CD Start Up Menu will display as shown below.




## Step 2. Install Drivers


Click the **Install Drivers** button to display the list of drivers software that can be installed with your motherboard. The Start Up program displays the drivers available for the particular model of motherboard you own. We recommend that you only install those drivers.

To display the list of all drivers software available with SOYO motherboards, click the **Display all drivers on the SOYO CD** button. Please make sure to install only the drivers adapted to your system, or otherwise this cause system malfunctions.

The following drivers are available for **Windows® 95**.

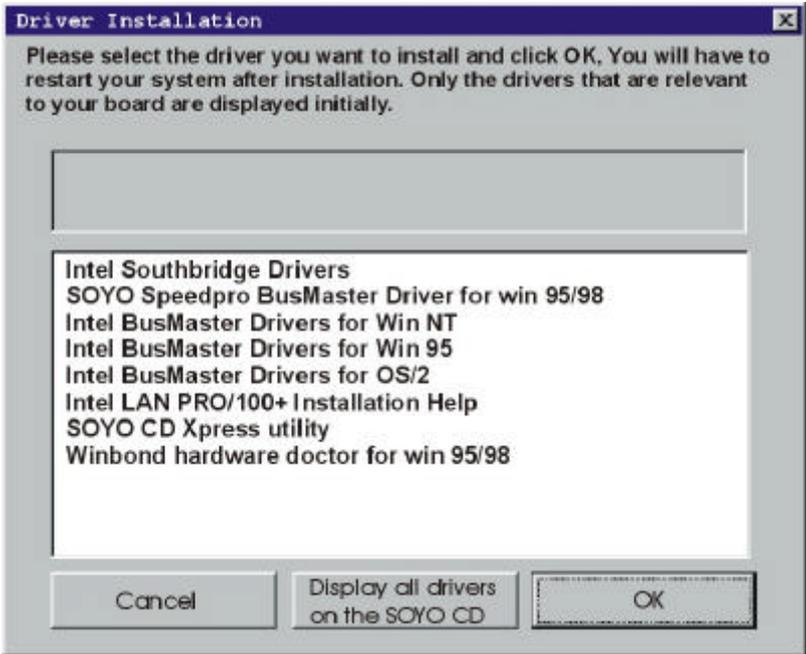

The following drivers are available for **Windows® 98**.

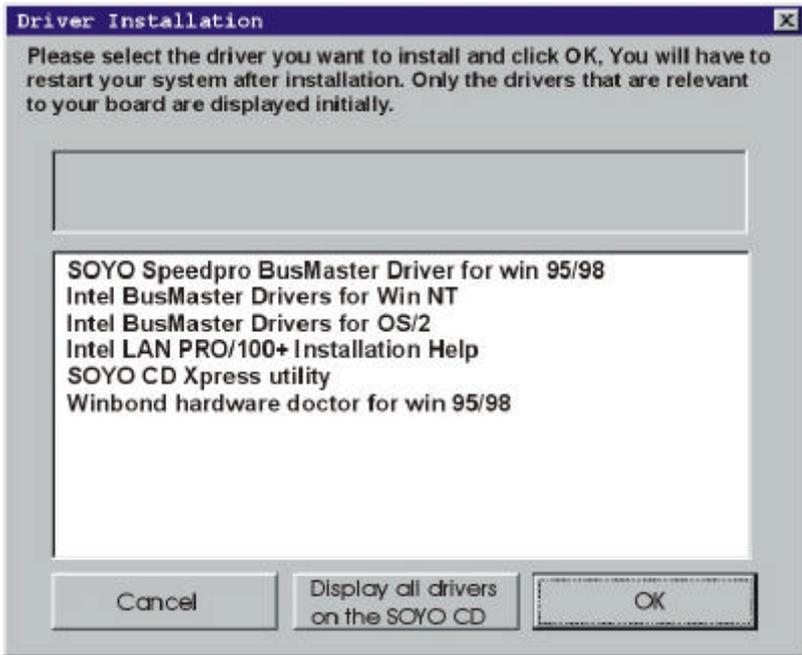

A short description of all available drivers follows:

➤ **Intel Southbridge Drivers**

Because Windows 95 does not recognize the Southbridge of the newer Intel chipsets (TX, BX, ZX etc) this utility has to be run, it will update the necessary Windows files. (Only for Windows 95)

➤ **SOYO SpeedPro Busmaster Driver for Win 95/98**

Without the busmaster drivers the CPU will need to be involved every time data is read from or written to the Harddisk. The busmaster drivers make use of DMA (Direct Memory Access) to relieve the CPU of this burden, thus speeding up the system.

The SOYO SpeedPro driver makes use of an advanced caching algorithm, which gives it an advantage over other busmaster drivers.

➤ **Intel Busmaster Drivers for Windows 95**

➤ **Intel Busmaster Drivers for Win NT**

➤ **Intel Busmaster Drivers for OS/2**

These are the official busmaster drivers as supplied by Intel.



**Note: Do NEVER install two types of busmaster drivers on your system, this will lead to conflicts and system instability. Therefore, if you install the SOYO SpeedPro Busmaster driver you can NOT install the Intel Busmaster drivers. Before installing a new busmaster driver first UNINSTALL the old busmaster driver.**

➤ **Intel LAN PRO/100+ Installation Help**

These are the electronic help files as provided by Intel, for more information on the installation of the Intel LAN PRO/100+ drivers, select this item and click 'OK'.

➤ **SOYO CD Xpress Utility**

This utility will enhance your CD-ROM Drive data-throughput by using space on the Harddisk as cache. This way application programs can access data faster. This utility is suitable for Windows 95/98.

➤ **Winbond hardware doctor for Windows xx**

Your motherboard comes with a hardware monitoring IC. By installing this utility Temperature, Fan speed and Voltages can be monitored. It is also possible to set alarms when current system values exceed or fall below pre-set values.

Because the Hardware monitor comes with default monitoring settings that may not be appropriate to the configuration of the actual system, it is possible that the user will have to change some of these settings.

● **Core voltage**

The core voltage differs between generations of Intel CPUs, if the Hardware monitor gives a warning, the settings for the safe range of the core voltage has to be adjusted. This can be done by simply clicking and dragging the upper and lower limit bars.

For example:

Newer Slot 1 CPUs have a core voltage of 2.0V. Therefore, set the CPU Vcore limits to 1.8V and 2.2V. For 2.8V core voltage CPUs the limits would be 2.6V and 3.0V.

- **Fan speed**

The Hardware monitor can keep track of three fans. If the user does not use all fans, the fans that are not in use should be disabled in the Hardware monitor program, Otherwise the Hardware monitor will give an alarm. If this happens, make sure to disable monitoring for that fan.

**Note 1: EZ-SCSI Utility**

The SOYO CD contains a SCSI utility (EZ-SCSI) for use with the onboard Adaptec® SCSI chip. The *EZ-SCSI Utility* is located in the `\drivers\EZ-SCSI` directory and is suitable for DOS or Windows 3.1 environment only. The manual file in PDF format for the EZ-SCSI Utility can be found at the following location: *Manual\EZ-SCSI.pdf* .

**Note 2:** However, to display the list of all drivers software available with SOYO Motherboards, click the **Display all drivers on the SOYO CD** button. Please make sure to install only the drivers adapted to your system, or otherwise this cause system malfunctions.

### **Step 3. Check the Latest Releases**

Click the 'Check the latest Releases' button to go the SOYO Website to automatically find the latest BIOS, manual and driver releases for your motherboard. This button will only work if your computer is connected to the internet through a network or modem connection. Make sure to get your modem connection up before clicking this button.

## **Step 4. Select which driver you want to install and click *OK***

**Notice 1:** You may click ***Cancel*** to abort the driver installation and return to the main menu.

**Notice 2:** Once you have selected a driver, the system will automatically exit the SOYO CD to begin the driver installation program. When the installation is complete, most drivers require you to restart your system before they can become active.

## Chapter 5

# PRO/100+™ LAN ADAPTER INSTALLATION

This section contains the installation notes for PRO/100+ Server and Client Adapters in **Microsoft**, **Novell**, and **Unix** operating systems.

*Microsoft and Windows 95/98/NT/Workgroups are registered trademarks of Microsoft Corporation.*

*Third-party trademarks are the property of their respective owners.*

### PRO/100+™ - Microsoft Installation Notes

#### Contents

- **Installing the PRO/100+ Driver When Installing Windows NT**
  - General Instructions
- **Windows NT 4.0 Installation Notes**
  - General Instructions
- **Windows NT 3.51 Installation Notes**
  - General Instructions
- **Windows 98 Installation Notes**
  - Manually Adding an Adapter in Windows 98
- **Windows 95 Installation Notes**
  - Determining Your Version of Windows 95
  - Advanced Configuration Parameters
  - Manually Adding an Adapter in Windows 95
  - Hints and Tips
- **Changing Adapter Settings with PROSet**
  - Other Settings
- **Windows for Workgroups 3.11 Installation Notes**
  - General Instructions
  - Hints and Tips

## **Installing the PRO/100+ Driver When Installing Windows NT**

This section describes how to install the PRO/100+ LAN driver when you are performing a first time Windows NT installation.

The *PRO/100+ LAN driver* is **not** embedded in the Windows NT 3.51 and 4.0 operating systems. Therefore, you must install this driver manually from the PRO/100+ adapter disk or CD.

---

**Note:** The *PRO/100+ LAN driver* for Windows NT (all versions) is contained in the *SOYO CD* that ships with your motherboard.

---


### ***General Instructions***

To complete the PRO/100+ LAN driver installation while installing Windows NT, follow these steps:


1. From the *Windows NT Setup* screen, select *Windows NT Server Setup*.




- To begin the search for network adapters in *Windows NT Server Setup*, click [Select from list .].
- The list of network adapters embedded in the Windows NT installation disk appears.

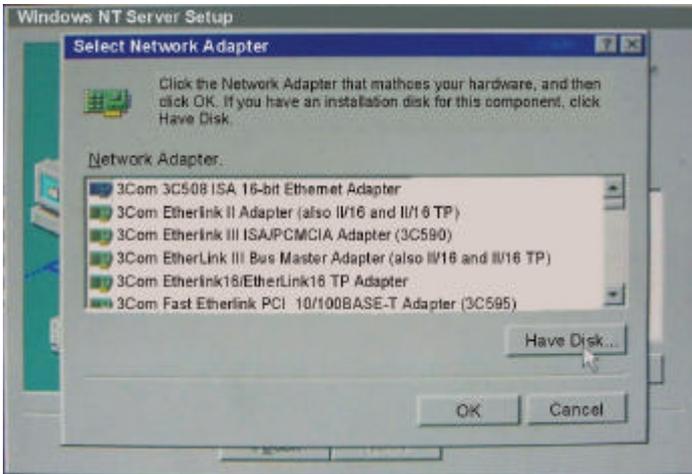


- Do **not** select an adapter from this list. Instead click [Have Disk ..] to select from the driver disk.

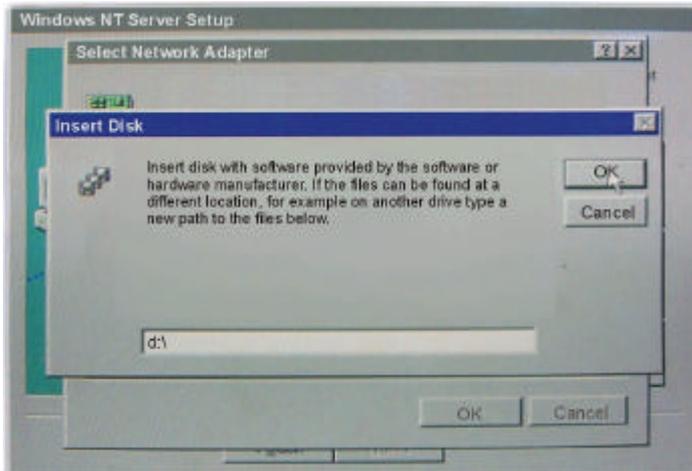


5. Type "**d:1**" in the *Insert Disk* dialog box, insert the *SOYO CD* into the appropriate CD-ROM drive, and click [OK].
6. When the list of adapter appears in the *Select OEM Option* dialog box, select **Intel® PRO Adapter** and click [OK].

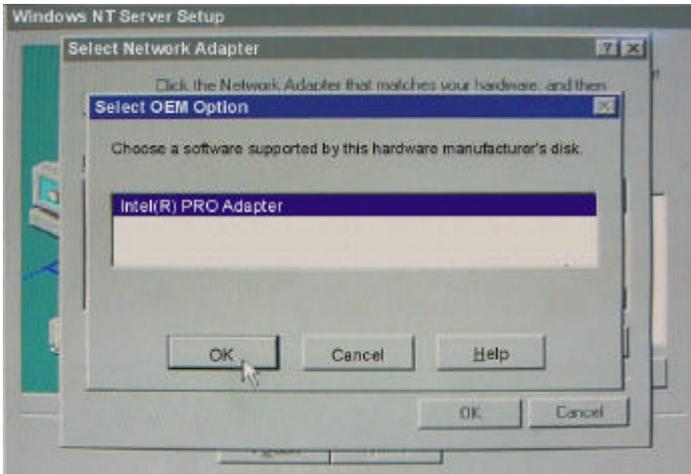

7. As *Windows NT Server Setup* screen returns, make sure that the *Network Adapters* dialog box displays **Intel® PRO Adapter**. If **Intel® PRO Adapter** is not checked, click once in the checkbox to mark it as .

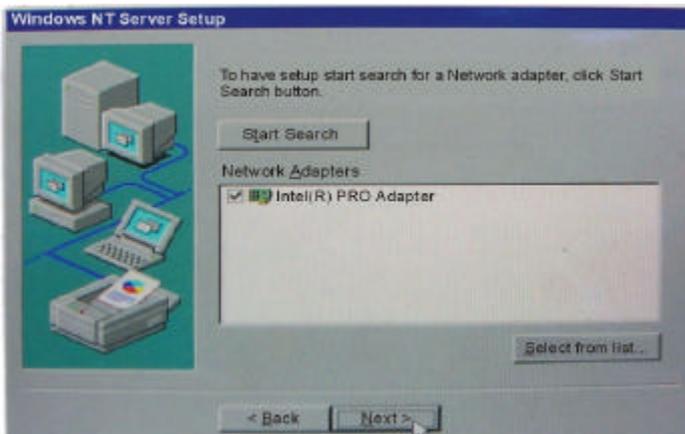

8. Click [Next] to complete the driver installation.
9. Take out the *SOYO CD* and insert the *Windows NT Installation CD* to continue the Windows setup process.

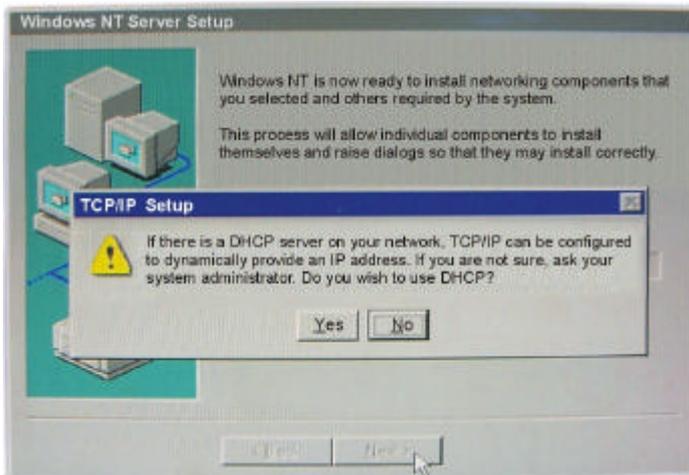

## **Windows® NT 4.0 Installation Notes**

Location of Driver: \NT\E100BNT.SY\_ (NDIS 4.0 compressed)  
                  \OEMSETUP.INF

---

**Note:** NT 4.0 ships with a driver for the *PRO/100B* adapter. However, you **must** install the more recent driver from the *PRO/100+* adapter disk or CD.

---

### ***General Instructions***

After installing the adapter in the computer, you will need to configure it under *Windows NT*, as instructed below:

1. Double-click the [Network] icon in the [Control Panel].
2. Select the *Adapter* tab.
3. Click [Add]. You will see a list of adapters.
4. Do **not** select an adapter from this list. Instead, insert the *PRO/100+* adapter disk or CD into the appropriate drive and click [Have Disk].
5. Type "**D:1**" (for CD) or "**A:1**" (for floppy) in the dialog box and click [OK]. Then follow the prompts to complete installation. When the adapter is added you will see a new adapter listed in the *Network Adapters* list.
6. Click [Close] to finish and configure any protocols as prompted.
7. Restart *Windows NT* when prompted.

## **Windows® NT 3.51 Installation Notes**

Location of Driver: \E100B.SY\_ (NDIS 3 compressed)

\OEMSETUP.INF

### ***General Instructions***

After installing the adapter in the computer, you will need to configure it under *Windows NT*, as instructed below:

1. Double-click the [Network] icon in the [Control Panel].
2. Click the [Add Adapter] button.
3. Do **NOT** select an Intel adapter from the list. Instead, scroll to the end of the list and select:  
[Other] (*Requires disk from manufacturer.*)
4. Click the [Continue] button.
5. Insert the Intel PRO/100+ disk or CD into the corresponding drive, specify that drive, and click [OK].
6. Select the name that corresponds to the adapter you are installing and click [OK].
7. Click [OK] in the *Network Settings* dialog. Other configuration screens may appear. Configure as desired. When prompted, restart Windows NT.

---

**Note:** The NDIS 3 miniport driver will automatically get installed in Windows NT 3.51.

---

## **Windows® 98 Installation Notes**

Location of Driver: \E100BNT5.SY\_ (NDIS 5.0 compressed)

Location of Setup File: \NET82557.INF

### ***Manually Adding an Adapter in Windows 98***

If the *New Hardware Found* dialog box does not appear at startup and you cannot connect to the network, check the *Device Manager* list to verify if the new adapter is present. If it is missing from the *Device Manager* list, follow these steps to configure the new adapter:

1. From the [Control Panel], double-click the [System] icon.
2. Click the *Device Manager* tab.
3. Double-click [Other Devices] or [Network Adapters] in the list area.
4. Double-click a *PCI Ethernet Controller*.
5. Click the *Driver* tab, then click [Update Driver].
6. Click [Next] at the *Update Device Driver Wizard*.
7. Select "Search for a better driver..." and click [Next].
8. Insert the PRO/100+ adapter disk and select "Specify a location", then enter the appropriate drive for your disk media (A:, D:\, etc.), and Click [Next].
9. The *Update Wizard* displays the message that it has found the driver D:\ NET82557.INF (where D: is your media drive). Click [Next].
10. Click [Finish].
11. Now restart your computer.

---

**Note:** At this point, you may be required to insert the Windows 95/98 CD. Insert the CD when prompted by the system.

---

## **Windows® 95 Installation Notes**

Location of Driver: \NTE100BNT.SY\_ (NDIS 4.0 compressed)

Location of Setup File: \NET82557.INF

### ***Determining Your Version of Windows 95***

Follow the steps below to determine which version of Windows 95 is running on your system:

1. Click on the [Start] button.
2. Select [Settings].
3. Select the [Control Panel].
4. Double-click on the [System] icon. The *System Properties* dialog box opens.
5. Select the *General* tab. Information about your system is displayed, including the version of Windows 95 you are running, under *System*.

### ***Advanced Configuration Parameters***

An advanced configuration utility called **PROSet** was installed on your system when you installed the PRO/100+ adapter. To start *PROSet*, double-click on the [PROSet] icon in the Windows control panel. For additional information, click [Help] in the *PROSet* window. The defaults specified for the adapter work correctly for most configurations. When making changes to any adapter settings, be sure to use **PROSet** rather than the *Advanced* tab under *Properties* in the Network control panel.

### ***Manually Adding an Adapter in Windows 95 (For version 950B Only)***

If the *New Hardware Found* dialog box does not appear at startup and you cannot connect to the network, check the *Device Manager* list to see if the new adapter is present. If it is not, follow these steps:

1. From the [Control Panel], double-click the [System] icon.
2. Click the *Device Manager* tab.
3. Double-click [Other Devices] (question mark icon) in the list area.
4. Double-click a *PCI Ethernet Controller*.
5. Click the *Driver* tab, then click [Update Driver].
6. Insert the *Configuration and Drivers* disk or CD in the appropriate drive, and at the *Update Device Driver Wizard*, select [Yes] and click [Next].
7. Select “*Network adapter*” and click [Next].
8. Click [Have Disk], insert the *Configuration and Drivers* disk in the appropriate drive, type “*D:\*”, and click [OK].
9. At the *Select Device* dialog box, select “*INTEL 82558*”, and click [OK] again.
10. Fill out the correct configuration for your network if Windows requires such information.
11. Follow any prompts for Windows 95 installation disks and restart when prompted.

---

**Note:** The Windows 95 system files are typically available on the Windows 95 CD in the “*win95*” directory (*D:\win95*).

---

## Changing Adapter Settings with PROSet™

There are two ways to run **PROSet** which allows changing the adapter settings.

- From the *Control Panel*, double-click on the [PROSet] icon.
- From the *Control Panel*, double-click on the [Network] icon, select the *Adapters* tab, and double-click on the "*Intel(R) PRO/100+ PCI Adapter*".

From the main **PROSet** menu, you can click the *Advanced* tab to view and modify adapter settings. The defaults work correctly for most configurations. The following table lists the PROSet parameters that can be configured in the *Advanced* menu.

PROSet Parameter	Description
<p><b>Speed</b></p> <p>Recommended Setting</p> <p><b>[Auto Detect] (default)</b></p>	<p>This parameter lets the PRO/100+ adapter know what speed to use on the Ethernet connection. The choices are <b>10 Mbps</b>, <b>100 Mbps</b>, and <b>Auto Detect</b>.</p> <p>In <i>Auto Detect</i> mode, the adapter detects if its networking environment can support 100 Mbps speed. It then sets the speed to 100Mbps if so, or otherwise to 10Mbps.</p> <p><b>Note:</b> If you want to choose a <i>Duplex Mode</i> other than Auto Detect, you must set the speed to either 10 Mbps or 100 Mbps.</p>
<p><b>Duplex</b></p> <p>Recommended Setting</p> <p><b>[Auto Detect]</b></p>	<p><b>Auto Detect</b></p>
	<p><b>Auto Detect:</b> The adapter negotiates with the hub or switch how to send/ receive packets, either full or half duplex.</p> <p><b>Full-Duplex:</b> The adapter sends and receives packets at the same time. This improves the performance of your adapter. Set duplex mode to full duplex only if you have a switch that also supports full duplex.</p> <p><b>Half-Duplex:</b> The adapter performs one operation at a time. It either sends or receives.</p> <p><b>Note:</b> In order to allow changing the Duplex mode, you must set the Speed to either 10 Mbps or 100 Mbps.</p> <p>The PRO/100+ adapter has the ability to send and receive packets at the same time (full-duplexing) at both 10 and 100 Mbps. In order to reap the benefits of full duplexing, you MUST have a full duplex hub or switch.</p> <p>The PRO/100+ adapter has the added ability to "talk" to the hub or switch and determine at which mode to communicate (either full or half duplex). This is called <b>auto-negotiation</b>. You must have an auto-negotiating hub or switch to get full duplex support with the Duplex Mode set to Auto. If you don't have an auto-negotiating hub or switch and want to run at full duplex, set Duplex Mode to Full and then set the SPEED parameter to either 100 Mbps or 10 Mbps.</p> <p>The PRO/100B T4 adapter can not operate in full duplex mode at 100 Mbps.</p> <p>The PRO/10+ PCI adapter can only operate in full duplex mode at 10 Mbps and only on the TPE connector. The PRO/10+ PCI adapter does not support auto-negotiation; it will run at half duplex unless forced.</p>
<p><b>Other Settings</b></p>	<p><b>For information on other settings in the PROSet Advanced tab, use PROSet's context-sensitive online help.</b></p>

## **Windows® for Workgroups 3.11 Installation Notes**

Location of Driver: **WFWE100B.38\_**

Location of Setup File:\WFW\OEMSETUP.INF

### ***General Instructions***

**Before You Begin:** If your adapter was shipped with a CD, create an installation diskette from the CD before starting the installation procedure. Put the CD into your CD-ROM drive and a blank formatted diskette into a diskette drive. Run the **MAKEMS.BAT** from the **MAKEDISK** directory on your CD. The command syntax is **MAKEMS <source drive> <destination diskette>**.

*Example:* MAKEMS D: A:

---

**Note:** If you are running Novell NetWare on this workstation, see the *Novell NetWare* section of *Hints and Tips* below before continuing with this installation.

---

Follow these steps, to perform the installation for Windows Workgroups 3.11:

1. Double-click the [Network Setup] icon in the *Network Group*.
2. If you are replacing a previous LAN adapter, click the [Remove] button to delete that adapter.
3. Click the [Networks] button. Select [Install Microsoft Windows Network] and click [OK].

**Optional 1:** To add Novell NetWare support to this workstation, click [Other], then select [Novell NetWare Shell 3.x] if you are using *NETX*, or select [Novell NetWare Shell 4.x] if you use *VLMs*. Click [OK].

**Optional 2:** To share files and printers on this workstation, click the [Sharing] button, then click on [OK].

4. Click the [Drivers] button.
5. Click the [Add Adapter] button. Select [Unlisted or Updated Network Adapter] and click on [OK].
6. Insert the adapter driver disk in the drive and specify the path **<drive>:\WFW** for the location of the driver.
7. Select the “*Intel PRO/100+ PCI*” adapter from the list box and click [OK].
8. Specify the correct speed for your network. If you are using the TX-based adapter, specify the correct duplex mode. If you are unsure of the correct settings, contact your Network Administrator.

---

**Notice 1:** If you set the PRO/100+ TX adapter to FULL duplex and you are running at 100 Mbps, you must change your speed setting to 100.

---

---

**Notice 2:** These options will not come up if you already have the NetWare ODI driver installed. These settings are set in the *NET.CFG* file.

---

9. The driver and default protocols will appear in the *Network Drivers* window. If you need to add or remove a protocol, do so here.
10. In the *Network Drivers* window, click [Close].
11. In the *Network Setup* window, click [OK].
12. In the *Microsoft Windows Network Names* window, enter a unique user name, the name of your new or existing workgroup, and a unique computer name for your workstation, then click [OK].

13. Choose [Yes To All] when *WFW* asks if you want to replace the files currently installed with the versions you are installing now.
14. Insert the *WFW* disks, as required. If prompted for the NetWare files, insert the *Novell* disk containing the drivers for the Novell file *WINDR3.EXE*.  
If prompted for the path of *E100B.386*, insert the *Configuration and Drivers* disk into a drive and for the path, type:  
    **“A:\WFW”** or **“D:\WFW”** if using the CD-ROM.  
If prompted for the path of *E100B.DOS*, specify: **“A:\DOS”** or **“D:\DOS”** if using the CD-ROM.
15. When finished updating the files, *WFW* reports that it modified several files. Click on [OK]. *WFW* changes your last drive to *P:*. If you want to change this setting, do so in your *CONFIG.SYS* file. *WFW* also modifies your *NET.CFG* file (for NetWare users). Check this file to make sure your frame types load in the correct order for your network.
16. When *WFW* prompts you to restart your computer for the changes to take effect, click on [Restart Computer].

## *Hints and Tips*

### *General*

1. If you are installing multiple *PRO/100* adapters in *WFW*, follow the instructions above for installing each adapter. Then, enter the adapter's 12-digit hexadecimal Ethernet address in the *[IN\$E100B]* and *[IN\$E100B1]* sections of the *PROTOCOL.INI* file. (The Ethernet address is printed on a sticker placed on the adapter. For dual-port adapters, increment the Ethernet address by 1 for the Ethernet address of the second port.)

***Novell NetWare***

1. Before you begin installing driver support for *WFW* and *Novell NetWare* on the same workstation, you will need these Novell NetWare files:

**NETWARE.DRV,  
NETWARE.HLP,  
NWPOPOP.EXE,  
VIPX.386,  
and VNETWARE.386.**

You may obtain these files by one of the following ways:

- a. Download the self-extracting file *WINDR3.EXE* from *Novell NetWare forum* on CompuServe or *Novell's FTP server* on the Internet (***ftp.novell.com***) or WWW (***ftp://ftp.novell.com/pub/updates/nwos/dsclnt12***).
  - b. Contact *Novell* to have the files sent to you.
  - c. Contact a *Novell NetWare* dealer in your area.
2. Set up the workstation to connect to *NetWare* using the *DOS ODI* client driver.
  3. Load the *ODI* driver and login to your *NetWare* server.
  4. Start *WFW* and set up the driver for the *PRO/100+* adapter by following the instructions shown above. When the driver is chosen, *WFW* detects the *ODI* driver that is already loaded and automatically installs the appropriate support. Next to the adapter name in the *Network Drivers* window, you will see [ODI/NDIS3], which indicates it recognized the *ODI* driver.

## PRO/100+™ - All NetWare Products Installation Notes

Installation Notes for PRO/100+ Server and Client Adapters in **Novell NetWare** Operating Systems.

### Contents

- **Network 3.12 and 4.10 Server Driver Installation Notes**
  - Sample Load Commands
  - General Instructions
  - Hints and Tips
- **Netware 3.11 Server Driver Installation Notes**
  - Overview
  - Sample Load Commands
  - General Instructions
  - Hints and Tips
- **Netware Client 32 for Windows 95**
  - General Instructions
- **Netware Client 32 for DOS/Windows 3.1x**
  - General Instructions
  - Hints and Tips
  - Sample Configurations
- **Netware OS/2 ODI Client Driver Installation Notes**
  - Sample Configuration Files
  - Introduction
  - General Instructions
  - Hints and Tips
  - NET.CFG Optional Parameters
  - Detailed Example
- **Netware DOS ODI Client Driver Installation Notes**
  - Quick Installation
  - Sample Configuration Files
  - General Installation for NetWare 3.11/3.12 Clients
  - General Installation for NetWare 4.1/3.12 Client with VLMs
  - NET.CFG Optional Parameters
  - Detailed Example
- **Netware Client Services for Windows NT 4.0 Using ODI Server Driver**
  - General Instructions

## **Netware 3.12 and 4.10 Server Driver** **Installation Notes**

Location of driver: **\\NWSERVER\3X4X.OLD\E100B.LAN**  
**(ODI Assembly Specification version 3.3)**

Location of NLMs: **On Novell's automated services**  
**(ODI33F.EXE or greater)**

---

**Note:** *ODI33x.EXE* is a Novell archive that contains the latest server NLMs and support files. The *x* in *ODI33x.EXE* is subject to change with each new release of the archive.

---

These instructions are for use with the *ODI Assembly Specification v3.31 NLMs*. The *\\NWSERVER\E100B.LAN* driver on this disk is written to this specification. To load the driver on NetWare 4.10 or 3.12 requires updated *ETHERTSM*, *MSM* and the new *NBI.NLM*. Obtain these files from *Novell's automated services*.

- **For NetWare 4.10:**

- *NBI.NLM* (ver 1.64, 08/29/97 or newer)
- *MSM.NLM* (ver 3.71, 12/02/97 or newer)
- *ETHERTSM.NLM* (ver 3.61, 12/08/97 or newer)

- **For NetWare 3.12:**

- *NBI31X.NLM* (ver 1.64, 08/29/97 or newer)
- *MSM31X.NLM* (ver 3.71, 12/02/97 or newer)
- *ETHERTSM.NLM* (ver 3.61, 12/08/97 or newer)

---

**Notice1:** *NBI.NLM* (or *NBI31X.NLM*) must be loaded before *MSM* and *ETHERTSM*.

**Notice2:** NetWare 3.12 needs *MSM31X.NLM* renamed to *MSM.NLM*.

---

**Important:** When using command line options with the .LAN driver for *NWSERVER*, make sure the equal sign is followed by a value. Otherwise, unpredictable results may occur.

---

### **General Instructions**

1. Install *NetWare 3.12* or *4.10* according to the *NetWare* instructions.
2. Copy the *PRO/100+* server driver (*NWSERVER\E100B.LAN*) and any updated *NLMs*, to the *NetWare* server's hard drive.
  - If you can't log in to the server (before starting the server) copy the *E100B.LAN* driver from the *\NWSERVER* directory on the *Configuration and Drivers* disk to the root directory of the server's hard drive.
  - If you can log into the server, copy the driver to the *SYSTEM* subdirectory. If you do this, you won't need to specify a path on the load line. If you copy it to another directory, make sure the *LOAD* statement includes the correct path.
3. Start the server. At the server console, load *NBI*, *MSM* and *ETHERTSM* (for *NetWare 3.12* load *NBI31X*, *MSM31X* and *ETHERTSM*) in this order.

Next, load and bind the server driver as follows:

```
LOAD C:<PATH>\E100B SLOT=x FRAME=ETHERNET_802.2  
BIND IPX TO E100B NET=xxxxxxx
```

Where:

**SLOT=x** Specifies the *NBI (NetWare Bus Interface)* slot number. Substitute *x* with the valid value for the adapter. You will be prompted with the slot number(s) of installed *PRO/100+* adapters. The *NBI* numbers are different from the slot number indicated in the *SETUP.EXE* utility.

**NET=xxxxxxx** is the unique network address for that LAN segment.

The default frame type is 802.2. If your workstation needs to use the 802.3 frame type, see the section later in this document about using multiple frame types on one adapter.

4. Add the load and bind statements you need to the server's *AUTOEXEC.NCF* file so the PRO/100+ adapter driver loads automatically each time the server starts.

### *Hints and tips*

1. If the error message:

**"Loader cannot find public symbol: <symbol name>"**

is encountered then:

Upgrade the *ETHERTSM.NLM* and *MSM31x.NLM* and be sure to rename *MSM31x.NLM* to *MSM.NLM*.

2. Installing multiple adapters:

If you have multiple adapters in a single server, each adapter must have a different *NET* number and *SLOT* number. Also, you may want to name each adapter. For example:

```
LOAD C:\E100B SLOT=3 NAME=LAN_A
```

```
BIND IPX TO LAN_A NET=222
```

```
LOAD C:\E100B SLOT=4 NAME=LAN_B
```

```
BIND IPX TO LAN_B NET=333
```

3. If you have problems loading the driver on multiple adapters and the initialization fails due to "*Insufficient RCBs*," increase the number of buffers allocated to the server. Add the following to *STARTUP.NCF*:

```
SET MINIMUM PACKET RECEIVE BUFFERS = 100 (or larger)
```

```
SET MAXIMUM PACKET RECEIVE BUFFERS = 500 (or larger)
```

The *MINIMUM* value you specify must be at least *30 times* the number of PRO/100+ adapters in the computer. Recommended settings are:

**1-3 adapters: 100**

**4 adapters: 150**

The *MAXIMUM* you can specify depends on the amount of memory in the server, but it must be greater than the *MINIMUM*.

4. Installing one adapter with multiple frame types:

When binding multiple frame types to one adapter, enter a *LOAD* and *BIND* statement for each frame type. Each *LOAD* statement uses the same *SLOT* number, but each *BIND* statement needs a unique network number.

You must also include a name on each load line to avoid being prompted for the adapter to bind *IPX* to.

Example:

```
LOAD C:\E100B SLOT=3 FRAME=ETHERNET_802.2 NAME=LAN8022
```

```
BIND IPX TO LAN8022 NET=88888
```

```
LOAD C:\E100B SLOT=3 FRAME=ETHERNET_802.3 NAME=LAN8023
```

```
BIND IPX TO LAN8023 NET=77777
```

5. Optional *LOAD* line parameters:

See the *NetWare Server Parameters readme (NLPARAM.TXT)* for additional information.

## **Netware 3.11 Server Driver Installation Notes**

Location of driver: **\\WSERVER\311LAN\E100B.LAN**  
**(ODI 3.2 Assembly Specification driver)**

Location of NLM's: **On Novell's automated services.**

<b>ETHERTSM.NLM</b>	<b>04-18-95</b>
<b>LSLENH.NLM</b>	<b>12-21-94</b>
<b>PATCHMAN.NLM</b>	<b>01-22-96</b>
<b>MSM31X.NLM</b>	<b>11-23-94</b>
<b>MONITOR.NLM</b>	<b>10-26-92 (v1.75 or higher, otherwise abends will occur)</b>

---

**Note:** *NetWare 3.1x* needs *MSM31X.NLM* renamed to *MSM.NLM*.

---

### ***Overview***

*NetWare 3.11* requires an *ODI 3.2 Assembly Specification* driver. This driver is in the *\\WSERVER\311LAN\* directory of the *Configuration and Drivers* disk. The directory contains the following files:

- E100B.LAN (3.2 spec server driver)
- E100B.LDI (Installation file)
- NW311.TXT (This file)

### ***Sample Load Commands***

- LOAD C:<PATH>\PATCHMAN
- LOAD C:<PATH>\LSLENH
- LOAD C:<PATH>\MSM
- LOAD C:<PATH>\ETHERTSM
- LOAD C:<PATH>\E100B SLOT=n FRAME=ETHERNET\_802.3
- BIND IPX TO E100B NET=xxxxxxxx

### **General Instructions**

1. Install NetWare 3.11 according to the *NetWare 3.11 installation manual*.
2. Copy the *E100B.LAN* server driver and any updated *NLMs* to the *NetWare server's hard drive*.
  - If you can't log in to the server (before starting the server) copy the *E100B.LAN* driver to the root directory of the server's hard drive.
  - If you can log into the server, copy the files to the *SYSTEM* subdirectory. If you do this, you won't need to specify a path on the load line. If you copy it to another directory, make sure the *LOAD* statement includes the correct path.

3. Modify the server's *STARTUP.NCF* to pre-allocate server buffers with the following:

**SET MAXIMUM PHYSICAL RECEIVE PACKET SIZE = 2048 (or larger)**

4. Start the server. At the server console, issue the load and bind statement.

**LOAD C:<PATH>\PATCHMAN**

**LOAD C:<PATH>\LSLENH**

**LOAD C:<PATH>\MSM**

**LOAD C:<PATH>\ETHERTSM**

**LOAD C:<PATH>\E100B SLOT=x FRAME=ETHERNET\_802.3**

**BIND IPX TO E100B NET=xxxxxxx**

Where:

**SLOT=x** specifies the *PCI device number*. Substitute **x** with the valid value for the adapter. You will be prompted if you don't specify a slot number.

**NET=xxxxxxx** is the unique network address for that LAN segment.

The default frame type is *802.2*. If your workstations needs to use the *802.3* frame type, see the section later in this document about using multiple frame types on one adapter.

5. Add the load and bind statements you need to the server's *AUTOEXEC.NCF* file so the *PRO/100+* adapter driver loads automatically each time the server starts.

### ***Hints and Tips***

1. Installing multiple adapters:

If you have multiple adapters in a single server, each adapter must have a different *NET* number and *SLOT* number. Also, you may want to name each adapter. For example:

```
LOAD C:\E100B SLOT=3 NAME=LAN_A  
BIND IPX TO LAN_A NET=222  
LOAD C:\E100B SLOT=4 NAME=LAN_B  
BIND IPX TO LAN_B NET=333
```

2. If you have problems loading the driver on multiple adapters and the initialization fails due to "*Insufficient RCBs*," increase the number of buffers allocated to the server.

Add the following to *STARTUP.NCF*:

```
SET MINIMUM PACKET RECEIVE BUFFERS = 100 (or larger)  
SET MAXIMUM PACKET RECEIVE BUFFERS = 500 (or larger)
```

The *MINIMUM* value you specify must be at least *30 times* the number of *PRO/100+* adapters in the computer.

Recommended settings are:

```
1-3 adapters:    100  
4 adapters:     150
```

The *MAXIMUM* you can specify depends on the amount of memory in the server, but it must be greater than the *MINIMUM*.

3. Installing one adapter with multiple frame types:

When binding multiple frame types to one adapter, enter a *LOAD* and *BIND* statement for each frame type. Each *LOAD* statement uses the same *SLOT* number, but each *BIND* statement needs a unique network number.

You must also include a name on each load line to avoid being prompted for the board to bind *IPX* to.

Example:

**LOAD C:\E100B SLOT=3 FRAME=ETHERNET\_802.2 NAME=LAN8022**

**BIND IPX TO LAN8022 NET=88888**

**LOAD C:\E100B SLOT=3 FRAME=ETHERNET\_802.3 NAME=LAN8023**

**BIND IPX TO LAN8023 NET=77777**

4. Optional *LOAD* line parameters:

See readme *NWPARAM.TXT* titled *NetWare Server Parameters* for additional information.

## **Netware Client 32 for Windows 95**

Use of *Client 32* for *Windows 95* with the 32-bit ODI driver is no longer supported by *Novell* or *Intel*. While it may still work, no testing or effort has been made to validate it. Please use the appropriate *NDIS* driver for *Client 32*.

## **Netware Client 32 for DOS/Windows 3.1x**

### ***General Instructions***

1. From the *Novell NetWare Client 32* software, run *INSTALL.EXE*.
  2. Select the *NetWare Client 32* products you want to install on your workstation from the list:
    - NetWare Client 32 for DOS**
    - NetWare Client 32 for Windows**
    - NetWare TCP/IP protocol stack**
    - NetWare IP (TCP/IP Required)**
    - Desktop SNMP**
    - HOSTMIB for SNMP (SNMP Required)**
    - NetWare TSA for SMS**
- 

**Note:** "*NetWare Client 32 for DOS*" and "*NetWare Client 32 for Windows*" are usually selected by default.

---

3. From the *Customize Support for Windows* menu, specify if you want to use multiple country codes or if you want to set the shared Windows path. The default for both of these is [NO].
  4. From the *Select LAN Driver Type* menu, select "*32-bit LAN drivers*".
-

5. From the *32-Bit Network Board Drivers* menu, select:  
**"USER SPECIFIED 32 BIT DRIVER"**.  
 Insert the driver diskette and type **"<drive>:NWSERVER"**.  
 Select:  
**"Intel EtherExpress PRO/100+ LAN Adapter"**
6. (Optional) Specify the following settings for the PRO/100+ adapter:

Parameter	Default
Speed (100B only)	0 (auto detect)
IOMAPMODE	Memory Mapped
Forceduplex	0 (auto negotiate)
Frame Type	Ethernet_802.2 Ethernet_802.3

**Note:** The default settings will work for most installations. If you use multiple frame types, please see *Hints and Tips* section below.

7. From the Installation Configuration Summary, verify the default settings for Client 32 are correct, or modify as necessary.
- Modify AUTOEXEC.BAT and CONFIG.SYS:                   **[YES]**
- Client Directory:                   **C:\NOVELL\CLIENT32**
- Windows Directory:               **C:\WINDOWS**
- LAN driver type:                   **32-bit LAN drivers**
- LAN driver:                       **Intel EtherExpress™PCI Adapters**
8. *Novell NetWare* will now copy the files to your workstations and modify the configuration files to match your selected configuration.

### ***Hints and tips***

1. If you are using multiple frame types, you will get the following message when you load the driver:

***"Do you want to load another frame type for a previously loaded board? Y/N"***

The way to avoid this is to add the slot number to the load line for the driver in the *STARTNET.BAT* (by default it is located in the *NOVELL\CLIENT32* directory). The only way to determine the slot number Novell is expecting is to put an invalid value on the load line. For example (and the load line should be all on one line):

```
LOAD C:\NOVELL\CLIENT32\E100B.LAN SPEED=0 IOMAPMODE=0  
FORCEDUPLEX=0 FRAME=ETHERNET_802.2 SLOT=e
```

When you next reboot, you will be prompted with the correct value.

Modify the *STARTNET.CFG* again, and use that value. If the slot is not specified correctly, only the first frame type will load. You can remove the parameters for *Speed*, *Forceduplex* and *Iomapmode* if you want to use the default. This may make your *STARTNET.BAT* file easier to use.

2. Check for a *LASTDRIVE* statement in the *CONFIG.SYS* file. You must have *LASTDRIVE=Z* in *config.sys* when using *Client 32*.
3. Verify that you have *FIRST NETWORK DRIVE = F* in the *NET.CFG* file under the *NetWare DOS Requester* section.

---

**Note:** *NET.CFG* is position sensitive, so be careful to indent lines with one space or one tab as shown above in the example.

---

4. Verify that the *PRO/100+* adapter passes the diagnostics test by running *SETUP.EXE* on the *Configuration and Drivers* disk. If the adapter fails diagnostics it will not function correctly running *Client 32*.

5. Using 16-bit ODI driver with Client 32 requires CLIENT32.NLM dated 10/09/96 or later. The driver will not load with older versions.
6. If you encounter the error message:  
***“An attempt to load E100B.LAN failed because the module references an undefined external: MSMHardwareFailure”***  
when the driver loads, you need to update the *NetWare client* files. Download *ODI33x.EXE* (where x=latest revision number) from *Novell's electronic services* and run the update utility.

---

## **Netware OS/2 ODI Client Driver Installation Notes**

### ***Introduction***

To connect an OS/2 workstation to a *NetWare* server, you must have the latest version of the *Novell NetWare Requester for OS/2* and the *PRO/100+ adapter OS/2 ODI* driver.

These installation instructions assume you're using the *INSTALL* program that ships with *Novell's OS/2 requester*. For more information about OS/2 workstations, see the *Novell manual, "NetWare Requester for OS/2."*

---

**Note:** If you're running *IBM OS/2 2.0, 2.1* or *Warp*, you must have the *OS/2 Requester version 2.01* or later.

---

### ***Before You Begin***

If your adapter was shipped with a CD, you can create an installation diskette from the CD before starting the installation procedure. Put the CD into your CD-ROM drive and a blank formatted diskette into a diskette drive. Run the *MAKENW.BAT* from the *MAKEDISK* directory on your CD. The command syntax is *MAKENW <source drive> <destination diskette>*.

Example; "**MAKENW D: A:**"

### ***General Instructions***

1. Run *Novell's INSTALL* utility on the *OS/2 requester* disk and follow its instructions. If asked for the name of the network interface driver, enter "**E100BODI.SYS**".
2. Choose the session support you need. This is based on your configuration. See the *NetWare Requester* manual if you need help.
3. Save the configuration.

4. When asked for the path and filename for the driver, insert the *Configuration and Drivers* disk into the drive and press <Enter>.
5. After completing the installation section, choose *CONFIGURATION* from the main menu. Then choose *THIS WORKSTATION*. This allows you to modify the *NET.CFG* file. (*NET.CFG* must reside in the root directory.)

---

**Note:** The default frame type for *E100BODI.SYS* is *802.2*. If you're using the *802.3* frame type, you have to include a *FRAME* statement in the *NET.CFG* file. List the *802.3 FRAME* type first in the *NET.CFG* file.

---

---

## **Netware DOS ODI Client Driver Installation Notes**

### ***Quick Installation***

Use the *Automatic* setup option in the *SETUP* utility on the *Configuration and Drivers* disk to quickly and easily install the *ODI* driver using *NETX*. For workstations using *VLMs*, see the *VLM client* section below.

---

**Note:** This version of *E100BODI.COM* requires *VLM client version 1.21* or higher. You can download this version from *Novell's electronic services*. It is comprised of 6 archives named *VLM121\_x.EXE* where *x* equals 1-6.

---

### ***General Installation for NetWare 3.11/3.12 Clients***

All the files necessary to connect to the *NetWare* servers are supplied on the *Configuration and Drivers* disk. Newer versions of the shell files (*LSL.COM*, *IPXODI.COM*, *NETX.EXE*) may be available from *Novell*.

1. From the *VDOS* directory on the *Configuration and Drivers* disk, copy the following files onto your hard drive:  
**LSL.COM, E100BODI.COM, IPXODI.COM, NETX.EXE, and NET.CFG.**
2. Add the commands to your *AUTOEXEC.BAT* file as shown above under the *Sample Configuration Files* section. Make sure you change to the subdirectory where the drivers are loaded before executing the files.  
In the example above, the drivers are located in the *NWCLIENT* subdirectory.

3. Edit the *NET.CFG* file per your requirements.
  - If you don't know which frame type to load, type "**CONFIG**" at your file server console to see which frame type your file server is loading and load one of these frame types on the workstation.
  - If you list two or more *NetWare* frame types in the *NET.CFG*, the first frame type will bind to the *IPX* protocol.
  - The *NET.CFG* file should be in the same directory as the adapter driver.
  - If you're running *EMM386*, make sure you are using *v4.49* or later. It's the version that ships with *DOS 6.22*.
4. Reboot the computer and the drivers will load and connect you to the network.

### ***General Instructions for IntranetWare 4.11 Client with VLMs***

The installation of the *NetWare 4.11* client software is much easier than earlier versions. The installation procedure transfers files to a specific directory on the workstation and creates or modifies existing configuration files to fit your specific needs. The installation utility, *INSTALL.EXE*, is located on the *IntranetWare* distribution CD in *\PRODUCTS\VLM\IBM\_6* (or *\PRODUCTS\VLM\IP\IBM\_6* for the *TCP/IP* client).

The install program is also located in *\PUBLIC\CLIENT\DOSWIN* on the server. *NetWare 3.12* does not automatically create this directory on the server during installation.

---

**General Instructions for NetWare 4.1/3.12 Client with VLMs****Installation procedure for NetWare 4.1/3.12 client with VLMs**

1. Run *INSTALL.EXE* on the workstation you are configuring. It can be found on the *NetWare Workstation for DOS* disk.

---

**Note:** *INSTALL.EXE* must be version 1.22 or greater. This version is supplied with *IntranetWare 4.11*.

---

2. The *NetWare Client Install* program screen appears. You must complete each of the options as they are specific to your needs.
  - **Step #1:** Specifies the directory on the hard drive that you want to install the client software. The default directory is *C:WWCLIENT*. You can specify another directory if you desire.
  - **Step #2:** Gives you the option to automatically update the *CONFIG.SYS* and the *AUTOEXEC.BAT* files or modify them at a later time manually.
  - **Step #3:** Installs *Windows* software for your system if your workstation supports *Windows* and asks you to specify the directory where *Windows* is located. You will also have the option to customize for *Windows*.
  - **Step #4:** Gives you the option to configure your workstation for backup by a *NetWare* server.
  - **Step #5:** Asks you to select a network driver and provide configuration options. It uses the specifications you select to create the *NET.CFG* file. Do **NOT** select a *Driver* from the list *Novell* provides, rather choose *OTHER DRIVER* and insert the *PRO/100+ adapter Configuration and Drivers* disk. Select the *Intel PRO/100+ LAN Adapter*.

There are four configurable settings:

- **Frame Type:** You must set the frame type to match the file server.

---

**Note:** If **Duplex Mode** is set to [full], the *Line Speed* defaults to [10 Mbps]. Also, the *PRO/100B T4* and *PRO/10+ PCI* adapters do not support [auto-negotiate].

---

- **Line Speed:** (*Optional*) Sets the line speed to either [10] or [100] Mbps. If you don't use this parameter, the driver automatically detects the network speed.
  - **Step #6:** The *install* program copies the appropriate files to your hard drive. This is the final step.
3. Be sure to add *LASTDRIVE=Z* to your *CONFIG.SYS* file and *FIRST NETWORK DRIVE=F* in the *NET.CFG* file under the *Netware DOS Requester* section.

## **Netware Client Services for Windows NT 4.0** **Using ODI Server Driver**

Use of Client 32 for Windows NT with the 32-bit ODI driver is no longer supported by Novell or Intel. While it may still work, no testing or effort has been made to validate it. Please use the appropriate NDIS driver for Client 32.

**PRO/100+™ - UNIX Installation Notes**

Installation Notes for *PRO/100+ Server and Client Adapters* in **UNIX** Operating Systems.

**Contents**

- **Obtaining UNIX Drivers, Installing and Configuring Them**
- **Installing the eeE Driver**
  - SCO3: SCO OpenDeskTop driver (eeE.img)
  - SCO5: SCO OpenServer driver (eeE.vol)
  - UW2: UnixWare 2.x driver (eeE.pkg)
  - UW7: UnixWare 7 driver (eeE.pkg)

**Obtaining UNIX Drivers, Installing and Configuring Them**

- UNIX drivers for Intel LAN controllers are provided and supported by the independent software vendor (ISV), unless otherwise noted.
- Release schedules included in this file are based on the latest information available and are subject to change. All dates are estimated for the calendar year. Products listed are trademarks of the corresponding ISV.
- Directions to specific World Wide Web addresses and archive file names, were current as of December, 1997 and are subject to change.
- SCO Unix
- SunSoft (Solaris) driver updates are currently located at this web page.

## Installing the eeE Driver

### *SCO3: SCO OpenDeskTop driver (eeE.img)*

Instructions for installing the eeE Driver (*eeE.img*) for SCO OpenDeskTop.

1. Copy the **eee.img** file to any directory, such as */tmp*, on the SCO system.
2. Transfer the file to a 3.5-inch floppy disk using “**dd**” command. For example:  
**# dd if=/tmp/eee.img of=/dev/dsk/f03ht**
3. If there is an older version of the eeE driver on the system, you must first remove it. To do this, run *NETCONFIG*. Remove all instances of the “*Intel ...*” adapters. Exit *NETCONFIG* without opting to relink the kernel. Run *CUSTOM*. Remove the older *Intel* adapter driver.
4. Using *CUSTOM*, install the new driver from the floppy disk. After the installation of the driver is complete, exit *CUSTOM*.
5. Run *NETCONFIG*. Add the adapters. For each adapter that is present in the system, enter the appropriate *TCP/IP* parameters. Exit *NETCONFIG* and choose to relink the kernel.
6. Reboot the system.

---

**Note:** The adapter automatically detects the *link speed* and *duplex mode*. If you want to force any of these settings, edit the file “*/etc/conf/pack.d/eeE/space.c*”. Modify the value of the [eeE\_LineSpeedDuplex] variable to set the line speed and duplex mode for each board in the system. (The *space.c* file has the values for setting this variable). Save the file. Rebuild the *Unix* kernel using *IDBUILD* and reboot the system.

---

**Caution:** This should be done by expert *Unix* system users only.

---

**SCO5: SCO OpenServer driver (eeE.vol)**

Instructions for installing the *eeE (eeE.vol) Driver* for SCO OpenServer.

1. Copy the **eee.vol** file to any directory, say */tmp*, on the SCO system, renaming the file as *VOL.000.000*. Also, make the file read-only by using *CHMOD*.

For example:

```
# cp eee.vol /tmp/VOL.000.000
# chmod 444 /tmp/VOL.000.000
```

2. If there is an older version of the *eeE driver* on the system, you must first remove it. To do this, run *NETCONFIG*. Remove all instances of the "*Intel ...*" adapters. Exit *NETCONFIG* without opting to relink the kernel. Run *CUSTOM*. Remove the older driver for the *Intel* adapter.
3. Install the new driver using *CUSTOM*. When asked for the installation media, choose [media images], and type the directory path to the *VOL.000.000* file. (In *step 1*, if you copied it to */tmp*, type "*/tmp*"). After the installation of the driver is complete, exit *CUSTOM*.
4. Run *NETCONFIG* and add the adapters. For each adapter that is present in the system, enter the appropriate *TCP/IP* parameters. By default, the driver automatically detects the *line speed* and *duplex mode*. If you want to force any of these settings, choose [Advanced Options] and set the speed and duplex modes. Exit *NETCONFIG* and choose to relink the kernel.
5. Reboot the system.

**UW2: UnixWare 2.x driver (eeE.pkg)**

To install the eeE driver for UnixWare 2.x:

1. Copy the **eee.pkg** file into any directory on the *UnixWare* system, such as in the */tmp* directory.
2. Make sure no other users are logged on and all user applications are closed.
3. If there is an older version of the eeE driver on the system, first run *NICCFG* and remove any configured *NICs*. Exit *NICCFG*. Remove the old driver by typing "**pkgrm eeE**". (You can find the driver version by typing "**pkginfo -l eeE**".)
4. Install the new driver using *PKGADD*.  
For example:  
**# pkgadd -d /tmp/eee.pkg**
5. Run *NICCFG* to add the *NICs* to the system. (Sometimes, *NICCFG* might bring up a window with an error message saying that it could not find the adapter that is being configured. If this happens, ignore the error and continue. When the system reboots in *step 7*, the driver should find the adapter.)
6. Run **etc/inet/menu** to configure *TCP/IP* parameters.
7. Reboot the system.

---

**Note:** The adapter automatically detects the *link speed* and *duplex mode*. If you want to force any of these settings, edit the file "**/etc/conf/pack.d/eeE/space.c**". Modify the value of the [eeE\_LineSpeedDuplex] variable to set the line speed and duplex mode for each board in the system. (The *space.c* file has the values for setting this variable). Save the file. Rebuild the *Unix* kernel using *IDBUILD* and reboot the system.

---

**Caution:** This should be done by expert *Unix* system users only.

---

**UW7: UnixWare 7 driver (eeE.pkg)**

To install the eeE driver for UnixWare 7:

1. Copy the **eee.pkg** file into any directory on the *UnixWare* system, such as in the */tmp* directory.
2. Make sure no other users are logged on and all user applications are closed.
3. If there is an older version of the eeE driver on the system, first run *NICCFG* and remove any configured *NICs*. Exit *NICCFG*. Remove the old driver by typing "**pkgrm eeE**". (You can find the driver version by typing "**pkginfo -l eeE**".)
4. Install the new driver using *PKGADD*.  
For example:  
**# pkgadd -d /tmp/eee.pkg**
5. Run *NETCFG* to add and configure the *NICs*.
6. Reboot the system.

---

**Note:** The adapter automatically detects the *link speed* and *duplex mode*. If you want to force any of these settings, edit the file "**/etc/conf/pack.d/eeE/space.c**". Modify the value of the [eeE\_LineSpeedDuplex] variable to set the line speed and duplex mode for each board in the system. (The *space.c* file has the values for setting this variable). Save the file. Rebuild the *Unix* kernel using *IDBUILD* and reboot the system.

---

**Caution:** This should be done by expert *Unix* system users only.

---

## Chapter 6

# ULTRA2 SCSI I/O SUBSYSTEM

---

**Note:** For details on how to perform the SCSI driver installation, refer to the “Adaptec® 7800 Family Manager Set User’s Guide” included on the *Installation CD-ROM* that comes with your motherboard. You may also obtain additional SCSI driver information by visiting Adaptec®’s Web site at: <http://www.adaptec.com>

Follow the instructions in Adaptec’s SCSI driver installation guide to install the SCSI driver specific to your system:

- Microsoft Windows NT®
- Microsoft Windows® 95
- Novell NetWare
- IBM OS/2
- SCO UNIX
- SCO UnixWare

---

### 6-1 INTRODUCTION TO ULTRA2 SCSI

Your new **SYD6IGA** high-performance motherboard is equipped with the onboard **Adaptec® AIC-7890 Ultra2 SCSI host adapter** for your high bandwidth applications, providing data transfer rates of up to 80 Mbytes per second. The Ultra-wide SCSI is an input/output bus interface that provides a powerful multitasking interface between your computer’s PCI bus and your SCSI devices.


With SCSI, you can connect a variety of devices on your computer (Hard/Floppy Disk Drives, CD-ROM Drives, Scanners, Tape Drives, Removable Media Drives, etc.) in a daisy-chain topology to a common host adapter. Daisy-chaining SCSI devices allows them to communicate with each other by sending commands and data via the SCSI bus.

The AIC-7890 Ultra2 SCSI host adapter provides maximum data transfer rates of 20 Mbytes/sec in the narrow 8-bit mode (Fast SCSI), 40 Mbytes/sec in the wide 16-bit mode (Ultra-wide SCSI), and 80 Mbytes/sec with Ultra2 SCSI.

## 6-2 INSTALLING SCSI DEVICES

Your motherboard features three internal SCSI connectors onboard, and comes with one 50-pin flat cable, one 68-pin flat cable, and one 68-pin Ultra2 flat cable with terminator.

### 6-2.1 50-pin Fast SCSI Connector

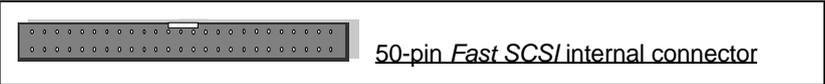

Narrow SCSI bus allows data transfer rates of up to 20 Mbytes/sec. With Narrow SCSI, you can connect up to 7 internal Fast SCSI devices to the 50-pin Fast SCSI connector on the motherboard. Use the enclosed Narrow SCSI cable to connect up to 2 internal SCSI devices.

If you are connecting more than 2 internal SCSI devices, you must use an internal SCSI cable with enough connectors to accommodate all your devices. Contact your dealer for special cable service.

When Fast SCSI devices are connected to the bus, the total length of all cables is not to exceed 3 meters (9.8 ft.) to ensure reliable operation.

### 6-2.2 68-pin Ultra-Wide SCSI Connector



Ultra-Wide SCSI bus allows you to connect up to 15 devices (7 Narrow internal and 8 Wide internal or external SCSI devices, or 15 Wide internal or external SCSI devices) to the 68-pin Ultra-Wide SCSI connector on the motherboard. Devices that connect to the 16-bit Wide SCSI bus can transfer data at the maximum rate of 40 Mbytes/sec.

### 6-2.3 68-pin Ultra2 SCSI II Connector



Ultra2 SCSI bus allows you to connect up to 15 devices (7 Narrow internal and 8 Wide internal or external SCSI devices, or 15 Wide internal or external SCSI devices) to the 68-pin Ultra-Wide SCSI connector on the motherboard. Devices that connect to the 32-bit Wide SCSI bus can transfer data at the maximum rate of 80 Mbytes/sec.

## 6-3 CONNECTING INTERNAL SCSI DEVICES

If you are connecting several internal SCSI devices (more than 2 SCSI drives), make sure you have an internal SCSI cable with enough connectors to accommodate all of your devices. The enclosed 50-pin and 68-pin SCSI flat cables can each serve up to 2 SCSI drives while the 68-pin Ultra2 SCSI cable can accommodate up to 4 SCSI drives.

Follow these steps to ensure a proper installation of your internal SCSI devices:

1. Prepare each CD-ROM drive for installation; configure the device **SCSI ID** and terminators (**terminate** the last internal device attached to the cable by setting its termination to the ON position; all other internal devices on the SCSI bus must have their termination set to OFF).  
**Note:** The *68-pin Ultra2 SCSI cable* is already equipped with a **Terminator**, therefore you do not need terminate the last SCSI drive. All SCSI device terminations must set to OFF when using this particular cable.
2. Install the CD-ROM drive in your computer.

3. Plug the connector at one end of the internal SCSI cable into the host adapter's SCSI connector on the motherboard.

**Note:** Make sure the cable's colored stripe is aligned with pin-1 of the host adapter's connector. Pin-1 of the SCSI connector is usually designated by a small triangle (▲), or a "1" at one corner of the connector.

4. Connect the remaining connectors on the cable to the SCSI devices (CD-ROM drives, etc.).

**Note:** Make sure the cable's colored stripe is aligned with pin-1 of the SCSI device's connector.

5. Connect a DC power cable (from your computer's power supply) to the power connector on each SCSI device.

