

PT-TIZT
440ZX SOCKET 370
AT MAINBOARD

USER'S MANUAL

V 1.X

440ZX
SOCKET 370
AT MAINBOARD

USER'S MANUAL

V 1.X

TABLE OF CONTENTS

Chapter & Section	Page
1. INTRODUCTION	1-1
1.1 OVERVIEW	1-1
1.2 MAINBOARD LAYOUT	1-2
1.3 SPECIFICATIONS	1-3
2. INSTALLATION	2-1
2.1 UNPACKING	2-1
2.2 HOW TO POWER ON THE PC SYSTEM	2-1
2.3 POWER OFF THE PC SYSTEM	2-3
3. HARDWARE SETUP	3-2
3.1 INSTALLATION OF CPU	3-2
3.2 INSTAL THE DRAM MODULES	3-3
3.3 CONNECTORS	3-4
3.4 JUMPERS	3-19
3.5 INSTALLATION OF DEVICE DRIVER	3-25
4. AWARD BIOS SETUP	4-1
4.1 GETTING STARTED	4-1
4.2 MAIN MENU	4-2
4.3 CONTROL KEYS	4-2
4.4 STANDARD CMOS SETUP	4-3
4.5 BIOS FEATURES SETUP	4-4
4.6 CHIPSET FEATURES SETUP	4-6
4.7 POWER MANAGEMENT SETUP	4-11
4.8 PNP/PCI CONFIGURATION	4-16
4.9 INTEGRATED PERIPHERALS	4-19
4.10 LOAD SETUP DEFAULTS	4-22
4.11 SUPERVISOR PASSWORD	4-23
4.12 USER PASSWORD	4-24
4.13 IDE HDD AUTO DETECTION	4-26
4.14 "SAVE & EXIT SETUP" & " EXIT WITHOUT SAVING"	4-27

SOMETHING IMPORTANT !

☆ TRADEMARKS

All trademarks used in this manual are the property of their respective owners.

☆ LOAD SETUP DEFAULTS

“LOAD SETUP DEFAULTS” is the function which will have the BIOS default settings loaded into the CMOS memory, these default settings are the best-case values that should optimize system performance and increase system stability .This function will be necessitated when you receive this mainboard, or when the system CMOS data is corrupted. Please refer to the Section 4-10 for the details.

☆ DISCHARGE CMOS DATA

Whenever you want to discharge the CMOS data or open the system chassis, Make sure to disconnect the AC power first because there is always the 5V standby voltage connected to this mainboard when using an ATX switching power supply. Without disconnecting the AC power connector from the PC system, the mainboard may be damaged by any improper action . Please refer to the Section 3-3 for details.

☆ WAKE ON LAN

In order to support the Wake On LAN feature, the system requires a ATX type SPS (switching power supply), Such power supply must be able to provide at least 700 mA of driving capability on the “5V standby” voltage. Please refer to the Section 3-3 for details.

☆ WARNING !

The "Static Electricity" may cause damage to the components on the mainboard, In order to avoid the damage to the mainboard accidentally, please discharge all static electricity from your body before touching this mainboard.

☆ NOTICE

Information presented in this manual has been carefully checked for reliability; however, no responsibility is assumed for inaccuracies. The information contained in this manual is subject to change without notice.

1. INTRODUCTION

1.1 OVERVIEW

This Mainboard is a high performance personal computer AT form-factor mainboard designed for Celeron™ processors with A.G.P. (Accelerated Graphics Port) and PCI Local Bus on board. Designed based on the Intel® AGPset™ system chipset and it supports both 66MHz and 100MHz front side bus frequency.


This mainboard has built-in two channel “PIO” and “Ultra DMA/33 Bus Master” mode PCI IDE ports, one Floppy Disk control port, two high speed Serial ports (UARTs) and one multi-mode Parallel port and supports PS/2™ mouse, IR and USB ports. It is designed to support the high performance Celeron™ processor for the high-end and true GREEN-PC computer systems.

The ESS Solo-1 (ES1938S) PCI sound chip is designed on board (ESS sound chip is optional on the board). The ES1938S has built-in the 3D stereo effects processor, 16-bit stereo wave ADC and DAC, 16-bit stereo music DAC, MPV-401 UART mode serial port dual game port and ESFM™ music synthesizer. When you find the ES1938S sound interface (CN18) installed on the mainboard, you don't have to purchase another sound card because there is the 3D audio interface on your mainboard.

The Celeron™ Processor is a 64-bit processor with RISC technology, which offers several key features such as built-in 128K L2 cache, 12-stage super-pipeline architecture, out of order execution etc. In order to optimize of its capabilities and performances, the 32-bit Operating System (such as Windows® NT and OS/2™) and 32-bit applications are recommended.

The Accelerated Graphics Port (A.G.P.) on the mainboard is designed for AGP 3D video display card. Unlike PCI-based display cards, the AGP technology provides lightning data throughput to fully facilitate the 3-Dimensional and multimedia graphics display. The data transfer rate on AGP can be up to 133Mhz and which is much faster than the traditional 33MHz PCI VGA card.

1.2 MAINBOARD LAYOUT

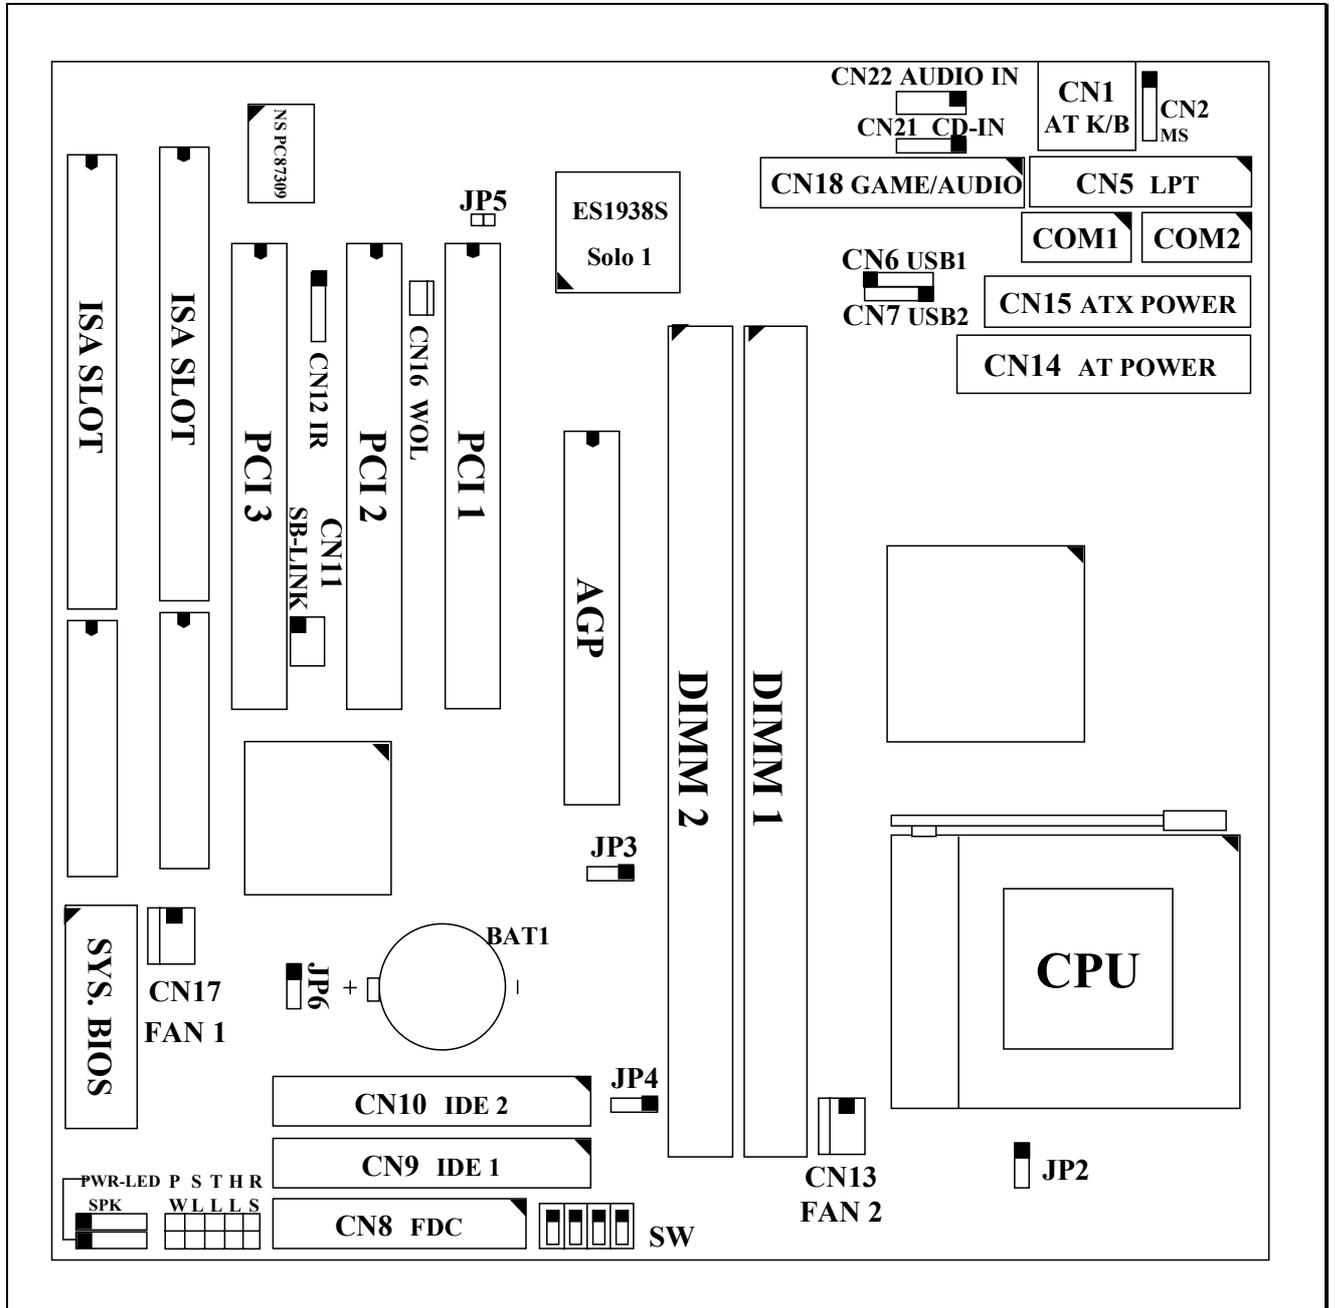

1.3 SPECIFICATIONS

⊙ CPU

Intel® Celeron™ processor 266 MHz, 300 MHz, and 333MHz. 366MHz, 400MHz, 433MHz and up to 466MHz or higher speed processors.

⊙ CPU VCC

Three sets Voltage Regulator circuits on board, supports +1.30V DC through +2.05V DC CPU Core Voltage and all lower-voltage components.

Note : The CPU Core Voltage will be Detected and adjusted automatically by the VID-pin on the CPU, so there is no manual-adjustment required to select the CPU voltage. Simply plug in the CPU and start immediately.

⊙ WORD SIZE

Data Path : 8-bit, 16-bit, 32-bit, 64-bit
Address Path : 32-bit

⊙ PC SYSTEM CHIPSET

Intel® 82440ZX AGPset™ (82443ZX, 82371EB)

⊙ SUPER I/O CHIPSET

NS PC87309 I/O chip

⊙ FRONT SIDE BUS FREQUENCY

66 MHz or 100 MHz, (auto selected by CPU of selected by jumper settings)

⊙ MEMORY

Two 168-pin DIMM sockets are designed onboard, Maximum memory size can be up to 256 MB support 8, 16, 32, 64 or 128MB 3.3V SDRAM DIMM module,

Cache memory: 128KB or 256KB pipelined burst SRAM in Celeron™ processor.

⊙ BIOS

AWARD Plug & Play System BIOS, supports ACPI, DMI and Green functions.

⊙ EXPANSION SLOTS

AGP Slots : 32-bit x 1 (Supports 1x or 2x AGP graphics cards)
PCI Slots : 32-bit x 3 (All master / Slave, PCI 2.1 compliant)
ISA Slots : 16-bit x 2 (One of the slot is PCI/ISA shared)

- ⊙ **WOL PORTS** (active only with ATX power supply)
One WOL connector supports Wake-On-LAN (WOL up-designed)

- ⊙ **SB-LINK PORT** (optional)
One SB-LINK feature connector to support PCI sound cards. (such as Creative™ Labs EMU8008 sound chip)

- ⊙ **USB PORTS**
Two Universal Serial Bus (USB) ports.

- ⊙ **IDE PORTS**
Two channels of Ultra DMA/33 Bus Master IDE ports, which will support up to 4 IDE devices like IDE hard disk, ATAPI CD-ROM and LS-120/ZIP-100 devices. The IDE ports can be programmed to support PIO Mode 4, DMA mode 2 and Ultra DMA/33.

- ⊙ **SUPER I/O PORTS**
 1. Two high speed NS16C550 compatible serial ports (UARTs).
 2. One parallel port, supports SPP/EPP/ECP mode.
 3. One Floppy Disk Control port.

- ⊙ **IR PORT**
One HPSIR and ASKIR compatible IR transmission connector (5-pin).

- ⊙ **MOUSE AND KEYBOARD**
One PS/2™ mouse connector and one AT type keyboard connector.

- ⊙ **3D AUDIO INTERFACE** (*optional*)
ESS Solo-1(ES1938S) PCI sound chip on board, built-in 3D stereo effects processor, 16-bit stereo wave ADC and DAC, 16-bit stereo music DAC, MPU-401 UART mode serial port, dual game port, ESFM™ music synthesizer.

© HARDWARE MONITORING (optional)

Winbond W83783S (U5) is designed on the board to monitor hardware healthy status such as system voltage, system temperature, and cooling fans. When the CPU temperature is too high, the system board to give a series of beeping alarm or display the warning message on the screen so that you can take proper action to prevent your system from damage. When you hear the beeping alarm or the warning message on the screen, be sure to turn the power off and open the chassis immediately, check on the appropriate component on the mainboard (especially the CPU cooling fan) to see whether it is working properly or not. If you don't know how to handle it, please ask for the technical support from your dealer.

This mainboard provides the hardware monitoring program so that you can monitor the healthy status of your PC system. When you find there is the Winbond W83783S installed on the board, you can run the hardware monitoring program in the CD (the hardware monitoring program is in the "Driver" sub-directory.) and then the hardware monitoring feature will inform you the system status all the time.

© ACPI (Active only with ATX power supply)

Advanced Configuration and Power Interface (ACPI) function is strongly recommended by PC'98, because it will let you have many additional features and your PC system will becomes very friendly and convenient. When you have the ATX power supply connected to the mainboard, you will have the following features:

1. On Now: power on the system by panel-switch, Modem ring-in, and LAN signal.
2. Power off (soft-off) by OS or Panel-switch.
3. Resuming of PC system. (such as Modem ring-in, RTC alarm, etc.)

© DIMENSION

1. Width & Length : 220 mm x 220 mm.
2. Height : 2 1/2 inches with CPU Retention Mechanism.
3. PCB Thickness : 4 layers, 0.05 inches normal.
4. Weight : 18 ounces.

© ENVIRONMENT LIMIT

1. Operating Temperature : 10□ to 40□. (50□ to 104□)
2. Required Airflow : 50 linear feet per minute across CPU.
3. Storage Temperature : - 40□ to 70□. (- 40□ to 158□)
4. Humidity : 0 to 90% non-condensing.
5. Altitude : 0 to 10,000 feet.

2. INSTALLATION

2.1 UNPACKING

The mainboard contains the following components in the package. Please inspect the following contents and confirm that everything is there in the package. If anything is missing or damaged, call your supplier for instructions before proceeding.

- This mainboard.
- One USER'S MANUAL.
- One Cable set for IDE and I/O devices.
- One CD diskette for device drivers and utility programs.

This mainboard contains electrostatic sensitive components and it can be easily damaged by static electricity. So please leave it sealed in the original packing until when installing the mainboard in the PC system.

A grounded anti-static mat is recommended when unpacking and installation. Please also attached an anti static wristband to your wrist and have it grounded to the same point as the anti-static mat. After the opening of the mainboard carton, please observe the mainboard carefully to make sure there is no shipping and handling damage before you can start to install the PC system.

2.2 HOW TO POWER ON THE PC SYSTEM

When this mainboard has been installed successfully and the ATX type power supply is used to connect to the mainboard, there are several ways to power on the system. Please read the following description for all the details.

POWER BUTTON (PW SWITCH)

When there is the ATX type power supply connected to the mainboard, the power button on the front panel can be programmed by the BIOS setup program and it will have different features. The power button can be used as a power button or suspend switch according to the selection in the system BIOS. The PW switch can also be used as suspend switch when the ACPI function is selected when installing Windows 98. Please refer to page 3-16 for detail function description.

□ **RTC ALARM** (active only with ATX type power supply)

PC system can be waked up by the RTC setting in the CMOS. You can set the alarming date and time in the RTC memory, When RTC alarms, the PC system will be triggered and wakes up automatically.

Enable the “Resume by Alarm” selection in the BIOS setup utility, and then input the accurate date and time in following fields. (the “Resume by Alarm” is located in the “POWER MANAGEMENT SETUP”, please refer to Section 4.7), Having stored the RTC alarm setting, the PC system will be turned on automatically according to the date and time which is recorded in the CMOS memory.

Same as the above, you have to reboot the PC system and wait for the POST (Power On Self Test) is completed to enable the RTC alarm.

□ **MODEM RING-IN** (active only with ATX type power supply)

The PC system can be triggered and powered on by a modem ring-in signal. When you have a *external* modem installed, you can leave the PC system power off. Whenever there is the incoming modem ring-in message, the PC system will be triggered by the ring-in signal and wake up automatically

In order to use the ring-in signal to wake up your PC system, you will have to use the *EXTERNAL MODEM* and have it connected to one of the *SERIAL PORTS* (COM 1 or COM 2). When the system power is off, this mainboard will continue to detect the serial port status. When it detects the ring-in signal from the serial port, the system power will be turned on automatically.

To enable the Modem Ring-In feature, you have to run the BIOS setup utility and enable the “PowerOn by Ring / LAN” option (it is located in the “POWER MANAGEMENT SETUP”, please refer to Section 4-7 for the settings). Having completed the BIOS setup, you have to reboot the PC system so that BIOS can verify the setting. (the “DMI pool data” will be verified by the BIOS when loading the operating system). Simply speaking, shut down the PC system and then re-start the system. The modem ring-in feature will be enabled when the operation system has been loaded.

Note: This function is not available when using the internal MODEM card.

□ **WAKE ON LAN (WOL)** (active only with ATX type power supply)

There is a WOL connector CN16 (see Section 3.3) on the mainboard which is designed to connect to the signal from a LAN card which supports the Wake On LAN feature. When such LAN card is installed, you may turn on the PC system from your remote server and monitor the PC status.

To enable this feature, you will have to use the BIOS setup utility to enable the “PowerOn by Ring / LAN” (it is located at “POWER MANAGEMENT SETUP”, please refer to Section 4-7 for the settings). Having completed the BIOS setup, you have to reboot the PC system so that BIOS can verify the setting. (the “DMI pool data” will be verified by the BIOS when loading the operating system). Simply speaking, reboot the PC system, the Wake On LAN feature will be enabled when the operation system has been loaded

Note: This function will be disabled if you turn off the power before the system can verify the DMI pool data.

2.3 POWER OFF THE PC SYSTEM

1. When ATX power supply is connected.

There are two ways to power off the system. They are “Shut Down by Power Button” and “ Shut Down by OS”. (such as Windows® 95 and Windows® 98, you can choose the **Shut Down** from the file menu and the system will be powered off immediately).

2. When AT power supply is connected.


You can not use the OS to shut down the PC system, you can only use the power switch on the power supply to turn the system power off.

3. HARDWARE SETUP

Before you can start to install this mainboard, some hardware settings is required to make sure it will work perfectly with the component which you are going to install in your PC system. To configure this mainboard is a simple task, only a few jumpers, connectors, cables and sockets need to be selected and configured. (please refer to section 1.2 “mainboard layout” for the component location).

3.1 INSTALLATION OF CPU



When you have installed the Celeron™ processor onto the mainboard, this mainboard will detect the CPU type and decide the proper CPU voltage and its front side bus frequency (FSB clock) automatically. So you may not have to make any jumper or switch setting to select the CPU type. All you have to do is plug the CPU onto the mainboard and use the default BIOS setting to decide the FSB clock (either 66MHz or 100MHz will be decided by the mainboard automatically). If you want to select different FSB clock for the CPU, you may use the BIOS setup program to make other selection. The socket where we are going to install the CPU is a 370-pin socket type connector. Such connector is designed for Celeron™ processor and we call it the **SOCKET 370** as shown in the following picture:

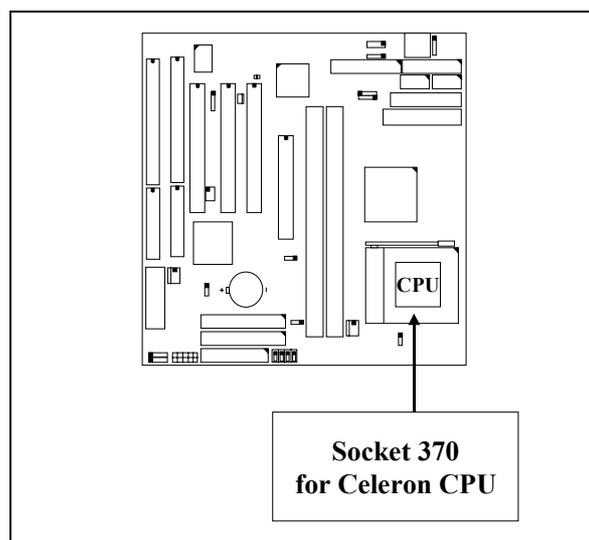

Note: Please make sure to attach a CPU cooling fan to the CPU to reduce the CPU temperature. Without the cooling fan, the CPU can be damaged because of high temperature.

3.2 INSTAL THE DRAM MODULES

This mainboard has the 168-pin DIMM sockets designed on the board, each DIMM can be single-bank or double-bank. It supports two types of DRAM memory and they are either the Extended Data Out (EDO) or Synchronous (SDRAM) memory. (Both Symmetrical and Asymmetrical DRAM addressing are supported.) Please note the DIMM modules suggested on the mainboard must be 3.3V, un-buffered and DRAMs' speed must be either 60ns or 50ns,.

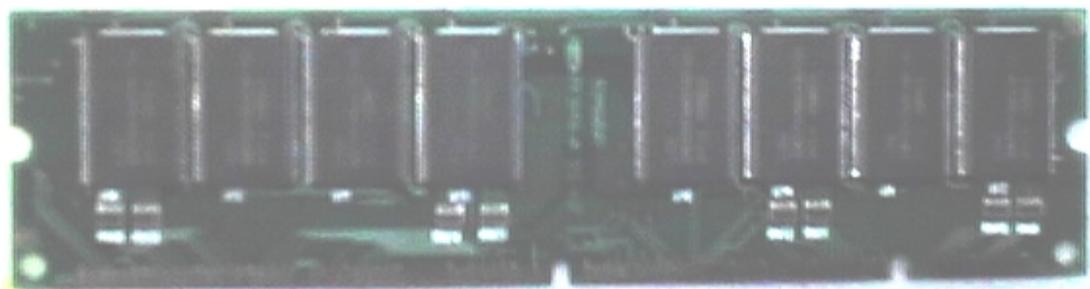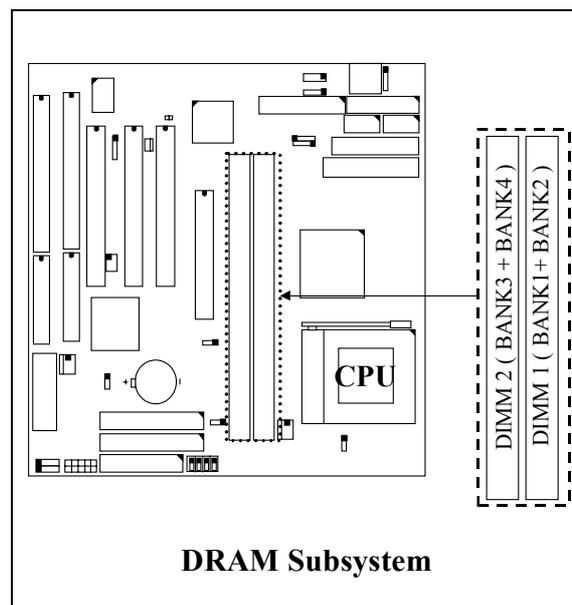

Picture of DIMM module

This mainboard integrates a main memory controller that supports a 64-bit DRAM interface. The DRAM controller supports the following features:

- 1. DRAM type: Synchronous (SDRAM) DRAM.**
- 2. Memory size: 8MB to 256MB.**
- 3. Memory modules supported: Single and double density 3.3V DIMMs.**

In order to increase of the system performance and steability, please take a notice on the following suggestion:




Note: *Always avoid populating EDO DIMM module and SDRAM DIMM module on the mainboard at the same time to avoid damage to memory modules.*


3.3 CONNECTORS

The connectors on mainboard will be used to connect the accessories or peripheral devices (such as power, mouse, printer,...etc.). Following is the connectors with its description and pin assignment which is designed on the mainboard.

(A) BAT1: Battery Socket (Use the 3 Volts Lithium battery : CR2032)

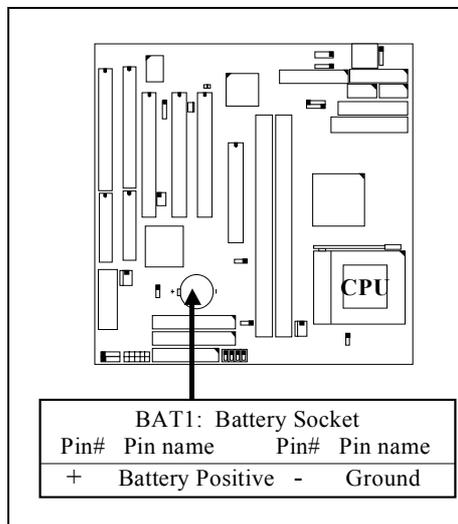

(B) CN1: Keyboard Connectors

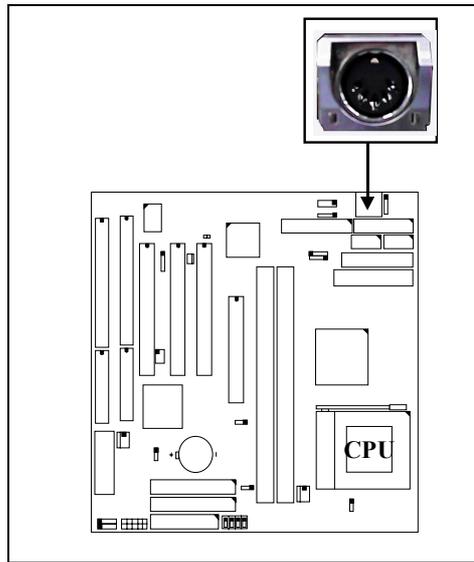


Pin assignment of AT keyboard connector: (CN1)


<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>
1	Keyboard clock	3	No connection	5	+ 5V DC
2	Keyboard data	4	Ground		

Note: The PS/2 type keyboard connector is also designed on the mainboard and it share the same location as the AT type keyboard connector. However, one keyboard can be installed on this mainboard. When you see one keyboard connector on the mainboard, the other type of connector will be absent from the mainboard.

(C) CN2: PS/2 Mouse Connector

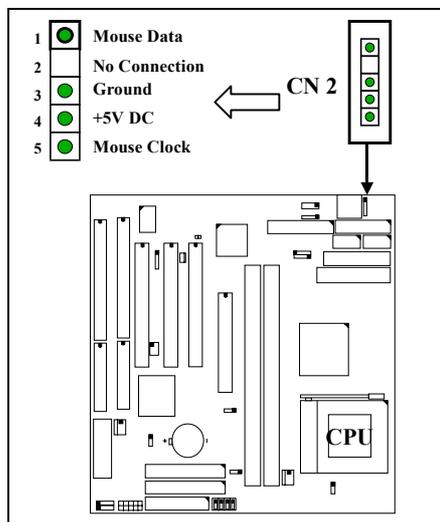

- (D) CN3: COM 1 (Serial Port 1) Connector**
- (E) CN4: COM 2 (Serial Port 2) Connector**

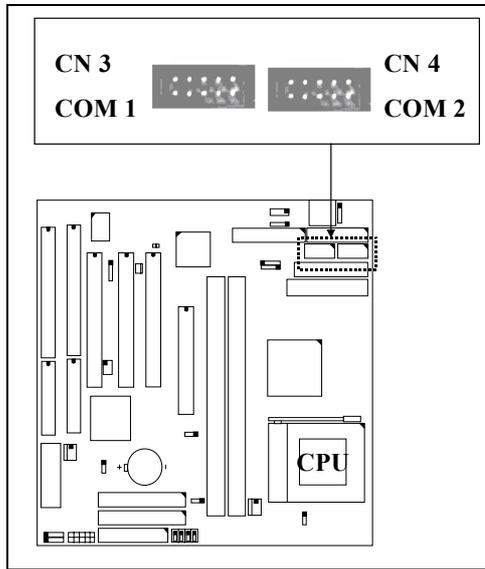


Ping assignment of serial port connector:

1	2	Pin #	Signal name
<input type="checkbox"/>	<input type="checkbox"/>	1	DCD (Data Carrier Detect)
<input type="checkbox"/>	<input type="checkbox"/>	3	TD (Transmit Data)
<input type="checkbox"/>	<input type="checkbox"/>	5	Ground
<input type="checkbox"/>	<input type="checkbox"/>	7	RTS (Request To Send)
<input type="checkbox"/>		9	RI (Ring Indicator)

Pin #	Signal name
2	RD (Received Data)
4	DTR (Data Terminal Ready)
6	DSR (Data Set Ready)
8	CTS (Clear To Send)

I/O address 3F8H/2F8H/3E8H/2E8H, IRQ3/IRQ4, selected by CMOS setup.

- (F) CN5: Parallel Port Connector**

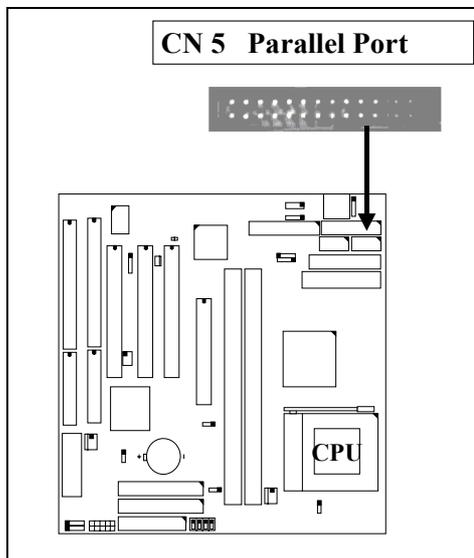


Pin assignment of parallel port:

1	14	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>
<input type="checkbox"/>	<input type="checkbox"/>	1	STROBE <input type="checkbox"/>	14	AUTO FEED <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	2	Data Bit 0	15	ERROR <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	3	Data Bit 1	16	INIT <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	4	Data Bit 2	17	SLCT IN <input type="checkbox"/>
<input type="checkbox"/>	<input type="checkbox"/>	5	Data Bit 3	18	Ground
<input type="checkbox"/>	<input type="checkbox"/>	6	Data Bit 4	19	Ground
<input type="checkbox"/>	<input type="checkbox"/>	7	Data Bit 5	20	Ground
<input type="checkbox"/>	<input type="checkbox"/>	8	Data Bit 6	21	Ground
<input type="checkbox"/>	<input type="checkbox"/>	9	Data Bit 7	22	Ground
<input type="checkbox"/>	<input type="checkbox"/>	10	ACK <input type="checkbox"/>	23	Ground
<input type="checkbox"/>	<input type="checkbox"/>	11	BUSY	24	Ground
<input type="checkbox"/>	<input type="checkbox"/>	12	PE	25	Ground
<input type="checkbox"/>		13	SLCT	26	N.C.
	13				
	25				

(G) CN6: USB 1 (Universal Serial Bus) Connector

(H) CN7: USB 2 (Universal Serial Bus) Connector

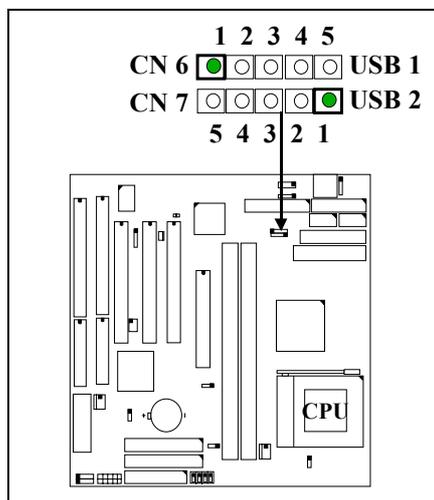


Note:

Wrong connection of USB cable or wrong type of USB cable may destroy the USB device or this mainboard, please check your mainboard dealer for the correct USB cable.

Pin assignment of USB connector:


CN 7			CN 6		
<u>Pin #</u>	<u>Assignment</u>		<u>Pin #</u>	<u>Assignment</u>	
●	5	Ground (BLACK WIRE)	●	1	+5V DC (RED WIRE)
●	4	Ground (BLACK WIRE)	●	2	DATA- (WHITE WIRE)
●	3	DATA+ (GREEN WIRE)	●	3	DATA+ (GREEN WIRE)
●	2	DATA- (WHITE WIRE)	●	4	Ground (BLACK WIRE)
●	1	+5V DC (RED WIRE)	●	5	Ground (BLACK WIRE)

(I) CN8: Floppy Disk Control Port Connector (IRQ6, DMA 2):

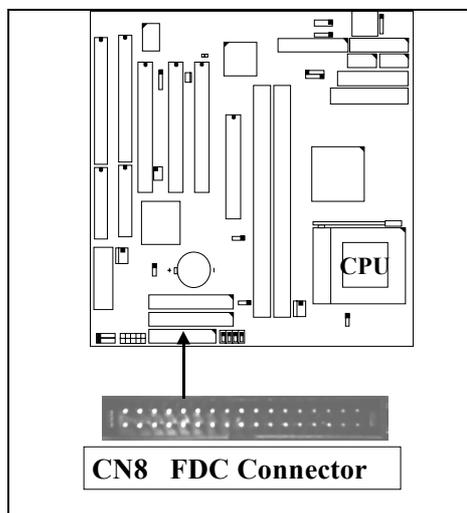


(J) CN9: IDE 1 Connectors, (Primary IDE Port: 1F0H, IRQ 14)

(K) CN10: IDE 2 Connectors, (Secondary IDE Port: 170H, IRQ 15)

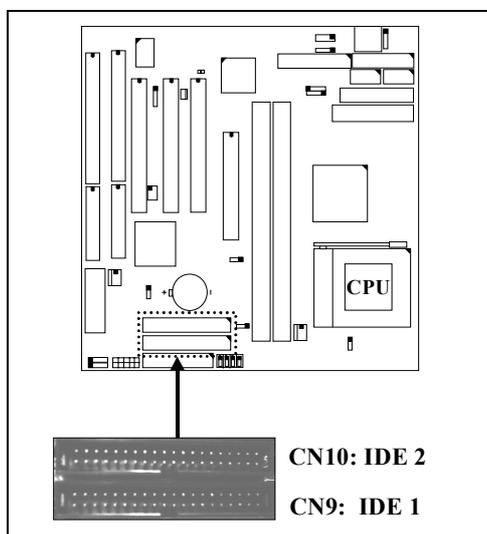

(L) CN11: SB-LINK Connector (optional)


(For PCI bus sound cards, such as Creative™ Labs EMU8008 sound chip)

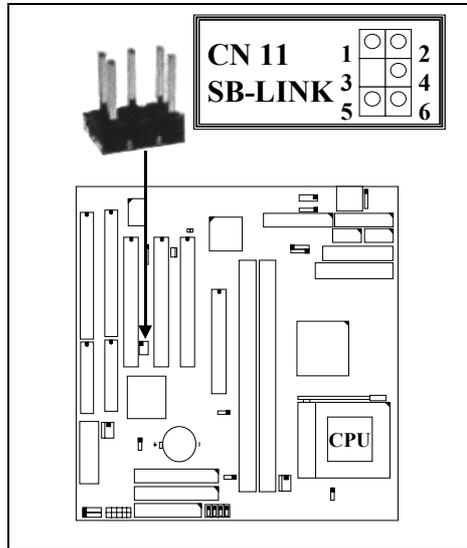


Pin assignment of SB-LINK Connector:

1	2	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>
□	□	1	GNT#	2	Ground
	□	3	Key	4	REQ#
□	□	5	Ground	6	SERIRQ
5	6				

(M) CN12: IR (Infrared Rays) Connector

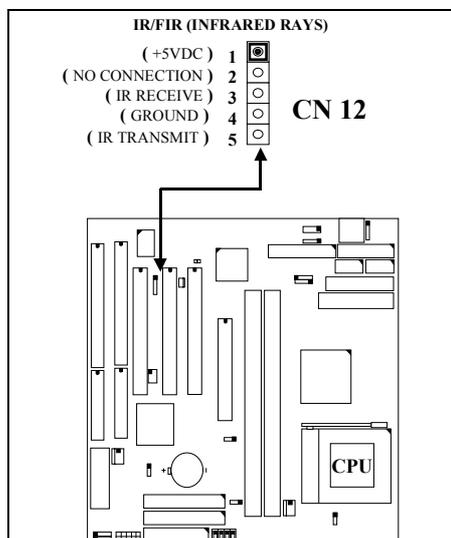


(N) CN13: Cooling Fan Power Connector

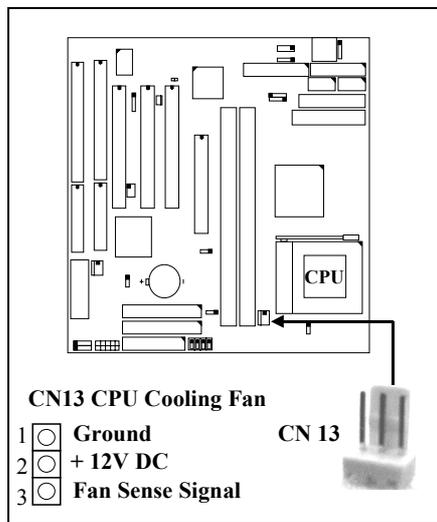

Note: This cooling fan connector can be used as CPU cooling fan connector or Chassis cooling fan connector.

(O) CN14: AT Power Connector:

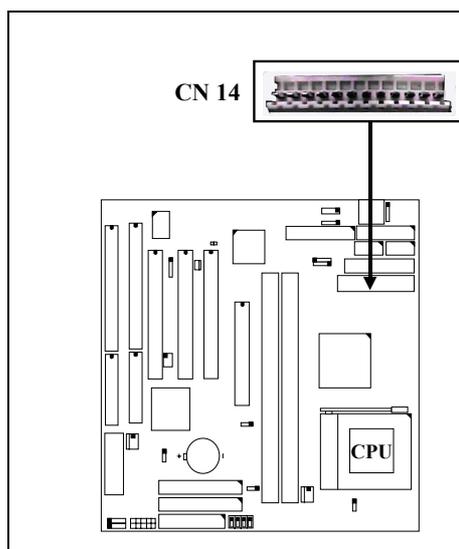


		<u>Pin #</u>	<u>Assignment</u>	
P8	1	1	Power Good	(Orange)
	2	2	+5V DC	(Red)
	3	3	+12V DC	(Yellow)
	4	4	-12V DC	(Blue)
P9	5	5	Ground	(Black)
	6	6	Ground	(Black)
	7	7	Ground	(Black)
	8	8	Ground	(Black)
	9	9	-5V DC	(White)
	10	10	+5V DC	(Red)
	11	11	+5V DC	(Red)
	12	12	+5V DC	(Red)



Note: There are two connectors from the switching power supply (P8 & P9), Wrong connection will cause permanent damage to the mainboard. Be sure to make the power connector correctly all the time. Joint the black cable and then have the connectors connected to the mainboard.


(P) CN15: ATX Power Connector:

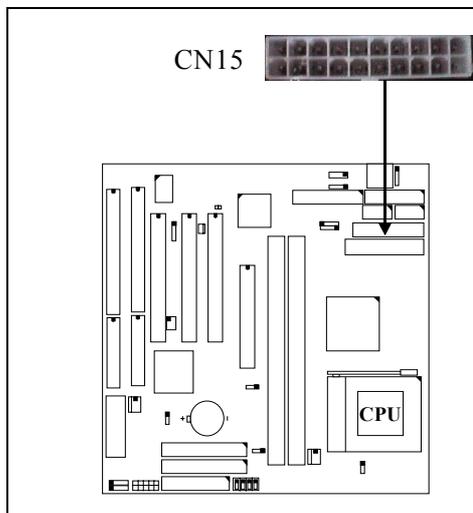

Pin assignment of ATX power connector


11	1	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>
<input type="checkbox"/>	<input type="checkbox"/>	11	+ 3.3V DC	1	+ 3.3V DC
<input type="checkbox"/>	<input type="checkbox"/>	12	- 12V DC	2	+ 3.3V DC
<input type="checkbox"/>	<input type="checkbox"/>	13	Ground	3	Ground
<input type="checkbox"/>	<input type="checkbox"/>	14	PS-ON	4	+ 5V DC
<input type="checkbox"/>	<input type="checkbox"/>	15	Ground	5	Ground
<input type="checkbox"/>	<input type="checkbox"/>	16	Ground	6	+ 5V DC
<input type="checkbox"/>	<input type="checkbox"/>	17	Ground	7	Ground
<input type="checkbox"/>	<input type="checkbox"/>	18	- 5V DC	8	PW-OK
<input type="checkbox"/>	<input type="checkbox"/>	19	+ 5V DC	9	+ 5V SB
<input type="checkbox"/>	<input type="checkbox"/>	20	+ 5V DC	10	+ 12V DC
20	10				

(Q) CN16: WOL (Wake On LAN) Connector

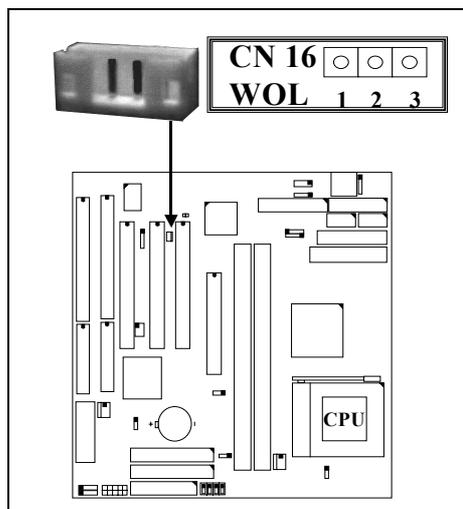

Pin assignment of WOL Connector


1	2	3	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>	<u>Pin #</u>	<u>Signal name</u>
<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	1	5V standby	2	Ground	3	WOL Signal

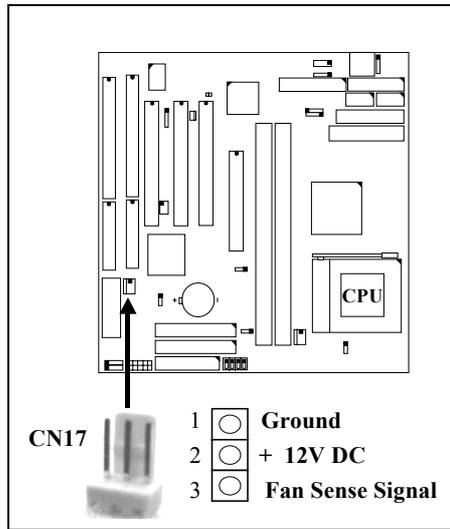(R) CN17: Cooling Fan Power Connector


Note: This cooling fan connector can be used as CPU cooling fan connector or Chassis cooling fan connector.

(S) CN18: AUDIO/GAME CONNECTOR *(Optional)*

There is the 3D audio sound interface designed on this mainboard which is optional. When the audio interface is installed on the board, there is the adapter which comes with the mainboard. The adapter will be connected to CN18 so that you can connect the audio devices. Please refer to the following picture for the connection:

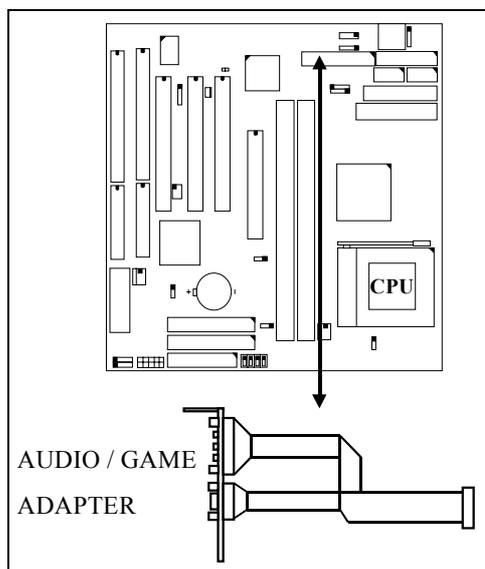


Please refer to the following picture for the connections on the Audio/Game adapter: *(this adapter is optional)*

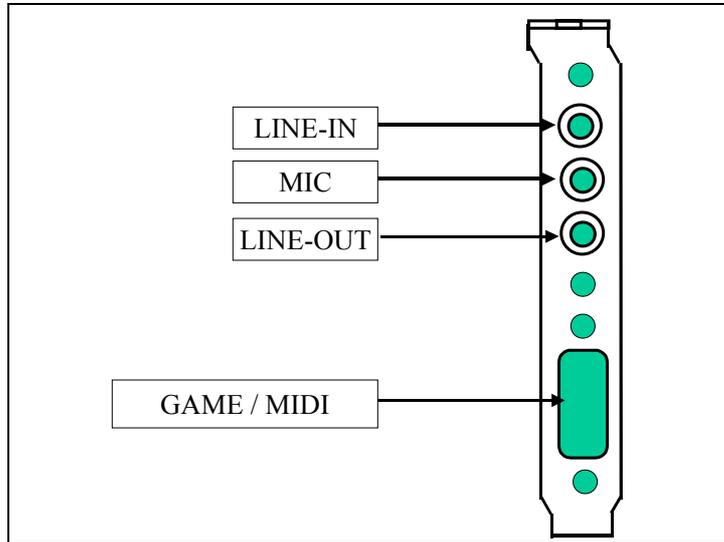

(T) CN21/CN22 : CD-IN CONNECTOR (optional)


The CD-IN connectors on the board is designed to connect to the CD ROM audio out. There are two different types of cable which comes with the CD ROM drive, please check your CD ROM drive and decide which connector will be used to connect to the CD ROM drive.

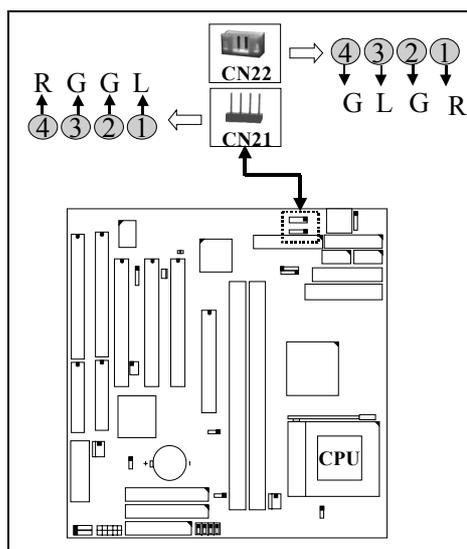

Note: L = Left channel audio-out
 R = Right channel audio-out
 G = Audio Ground

(U) Push buttons and LED connectors

A series of connectors are designed on the board to connect the push buttons and LED indicators. Followings are the details:

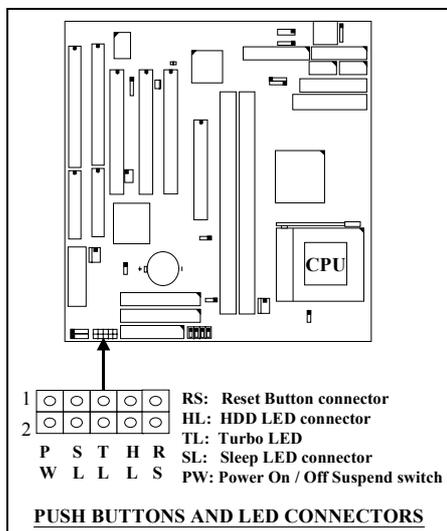**1. RS Reset Button Connector**

<u>Pin #</u>	<u>Signal name</u>	<u>Pin1&2</u>	<u>Function</u>
1	Reset Control	Open	No action
2	Ground	Short	System Reset

2. HL IDE HDD LED Connector

<u>Pin #</u>	<u>Signal name</u>
1	+ 5V DC Pull-up
2	HDD Active Signal

3. TL TURBO LED Connector

<u>Pin #</u>	<u>Signal name</u>
1	+ 5V DC Pull-up
2	Ground

4. SL Sleep LED Connector (*valid only with ATX power supply*)

This LED will be lightened when the AC power is connected and the system is power off, darkened when the AC power is disconnected or the system is powered on.

<u>Pin #</u>	<u>Signal name</u>
1	Signal Pin
2	Ground

5. PW Power On / Off and External Suspend Switch Connector



Note: The power button on the front panel will be connected to the PW connector here. When different type of power supply is connected to the mainboard, the PW button will have different function as following:

5-a. When this mainboard has the ATX power supply connected, According to the setup in CMOS, the PW connector has different functions. It can be the Power Switch or Suspend Switch of your PC system.(please refer to Section- 4.7 and section 4.8 for BIOS setup)

- ① **If the setup in CMOS is “Delay 4 Sec.”, the switch function will be:**
A.When system is power OFF:


A short click on this switch, the system will be powered on.

B.When system power is ON :

- a. The system is in Full-ON mode :
- a-1. Click on this switch (less than 4 seconds), the system will be turned into Suspend mode. (get into a GREEN mode)
 - a-2. Press and hold this switch for more than 4 seconds, the system will be powered off.
- b. When the system is in Suspend mode :
- b-1. Click on this switch (less than 4 seconds), the system will return to Full-ON mode.
 - b-2. Press and hold this switch more than 4 seconds, the system will be powered off.

- ② **The setup in CMOS is “Instant-off”:**
- A. When system power is OFF :
Click on this switch, the system will be powered on.
- B. When system power is ON :
Click on this switch, the system will be powered off instantly.
- 5-b. When this mainboard has the AT power supply connected, According to the setup in CMOS, the PW connector has two functions. It can be the Reset button or Suspend Switch of your PC system.(please refer to Section 4.7 and section 4-8 for BIOS setup)
- A. When the BIOS setup is “Delay 4 sec.”:
The PW switch can be used as a suspend switch. When it is first pressed, the PC system will be turned into suspend mode, when clicked again, the PC system will be back to the normal state.
- B. When the BIOS setup is “Instant off”:
The PW switch can be used as a reset button in the PC system. When you click on this button, the PC system will be reset and restart again.

(V) Speaker and Power-LED Connector:

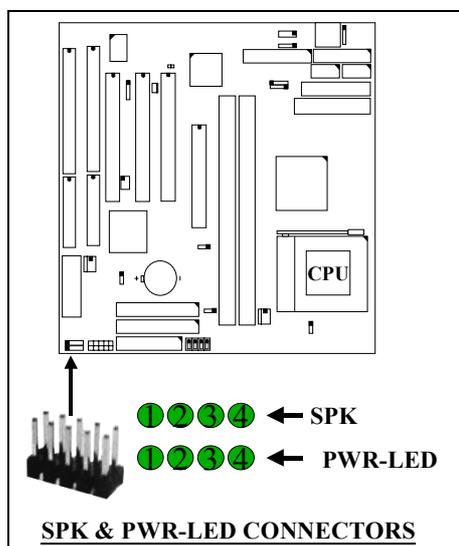

SPK: Speaker connector

1	<u>Pin #</u>	<u>Signal name</u>
<input type="checkbox"/>	1	+ 5V DC
<input type="checkbox"/>	2	No Connection
<input type="checkbox"/>	3	No Connection
<input type="checkbox"/>	4	Speaker Data Signal

4

PWR-LED: Panel Power LED

1	<u>Pin #</u>	<u>Signal name</u>
<input type="checkbox"/>	1	Pullup (+ 5V DC for Power LED)
<input type="checkbox"/>	2	Ground
<input type="checkbox"/>	3	Ground
<input type="checkbox"/>	4	No connection

4


3.4 JUMPERS

When you have different devices connected to the mainboard, you may have to change some of the hardware settings so that the mainboard will work properly in your PC system. Basically, the hardware configuration can be made by either jumper setting or switch setting. This section will discuss the jumper and switch settings on this mainboard.


JUMPER SETTINGS:

A jumper is a set of two, three or more jumper pins which allows users to make different system configuration by putting the plastic type connector plug (mini-jumper) on it. The jumper setting is necessary when installing different components onto the mainboard.

In order to let you have better idea of the jumper setting, please see below for the explanation of jumper settings before you start this section.

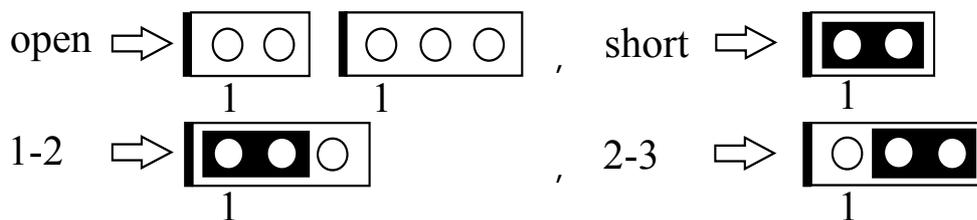


The jumpers mentioned in this chapter which labeled with “optional” means they are the optional choice for customers and the related components are normally not populated on the mainboard. In order to make the mainboard works properly in your PC system, please make sure all jumper settings are at correct before installing this mainboard.

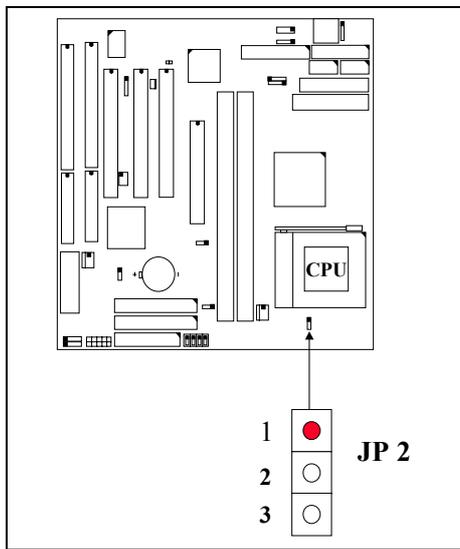
(A) JP2: CPU Vcore Adjustment Setting

Pin2-Pin3 Short:
Normal Default setting

Pin1-Pin2 Short:
Vcore will be 0.05Volt higher than the regular Vcore selected by the CPU.

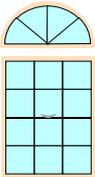

Note: JP2 is designed for some special requirement. For example, you may feel like to have higher CPU voltage when you "Over clock" your CPU. In this case, JP2 is possible to meet your requirement. However, it does not mean that JP2 will give you the guarantee on the CPU over clock.

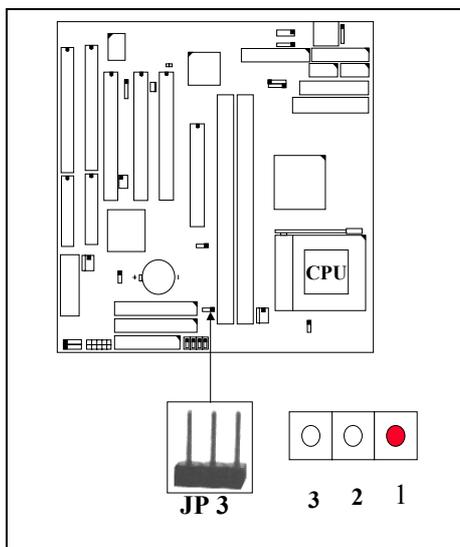(B) JP4: CPU Front Side Bus (FSB) clock selection

Pin 1 & Pin 2 Short: *(Default setting)*
CPU will detect the FSB clock automatically.

Pin 2 & Pin3 Short:
FSB clock will be forced to run at 66MHz frequency.


Open:
FSB clock will be forced to run at 100MHz frequency.



Note: JP4 is designed for some special purpose. When you have installed the Celeron processor onto the mainboard, the processor itself will decide the FSB clock and you don't have to make any choice on the FSB clock. JP4 allows you to select different FSB clock for your CPU. However, if you use JP4 on the "Over clock" purpose, it is not recommended because the system board may become unstable.

(C) JP5: Sound Interface Enable / Disable Selection *(Optional)*


The sound interface is optional on this mainboard. When you found the sound interface (CN18) is installed on the mainboard, you may use JP5 to Enable or Disable the sound interface.

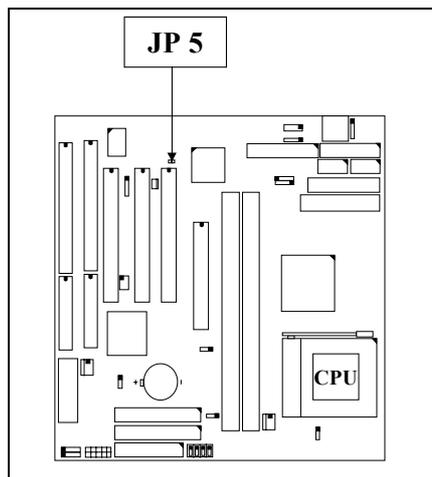

Short on JP5: Sound interface Enabled.

Open on JP5: Sound interface Disabled.

(D) JP6: Clear CMOS Data Button

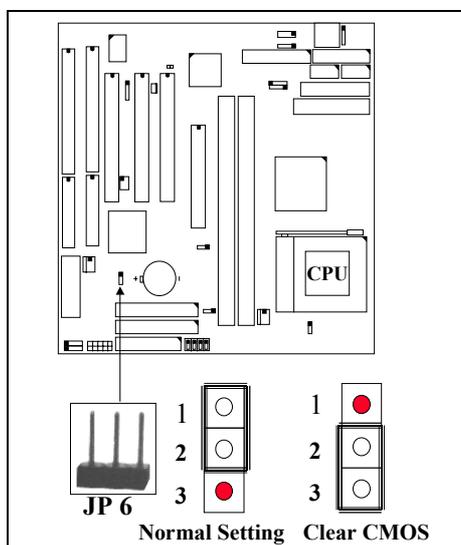

Pin1 & Pin 2 Short: Normal Setting
(Default setting)

Pin2 & Pin3 Short: Clear CMOS



Note: Improper BIOS setting may cause hang-up to the PC system, In case that it should be happened, you may use JP6 to clear the CMOS memory and get the PC system back to normal. Please refer to the following steps to clear the CMOS


- 1. Unplug the AC power cable from the PC system.*
- 2. Put the mini jumper on pin 2-3 of JP6 around 3 to 5 seconds and then return it to the original position (pin 1-2).*
- 3. Re-connect the AC power cable*

(E) SWITCH SETTINGS (optional)

There is one "toggle switch" designed on the mainboard to select the CPU clock ratio. Such "toggle switch" is optional because you may not need to use the switch setting to select the CPU clock ratio. When you found the "toggle switch" on the board, you will have the option to use switch settings to select the CPU clock ratio.




Basically, when you have installed the Celeron Processor onto the mainboard, the CPU clock ratio is decided and "locked" automatically. In this case, the switch setting on the mainboard will not change the clock ratio.

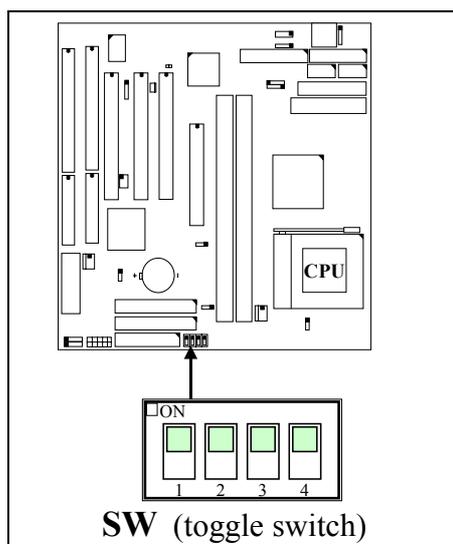

CPU (MHz)	Clock Ratio	SW1	SW2	SW3	SW4
233,350	3.5X	OFF	OFF	ON	ON
266,400	4.0X	ON	ON	OFF	ON
300,450	4.5X	OFF	ON	OFF	ON
333,500	5.0X	ON	OFF	OFF	ON
366,550	5.5X	OFF	OFF	OFF	ON
400	6.0X	ON	ON	ON	OFF
433	6.5X	OFF	ON	ON	OFF
466	7.0X	ON	OFF	ON	OFF
500	7.5X	OFF	OFF	ON	OFF
533	8.0X	ON	ON	OFF	OFF


How to make the Switch Setting

The following pictures will show you how to make the setting on the "toggle switch" step by step.:

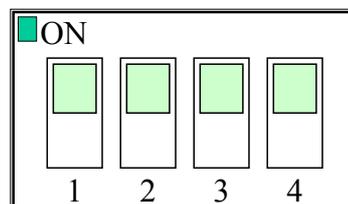


(Picture of "toggle switch")

Toggle Switch Setting For "OFF"

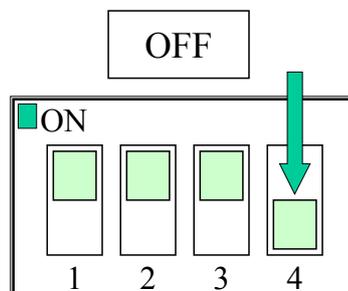


Push the switch downward to select "OFF"

Toggle Switch Setting for "ON"

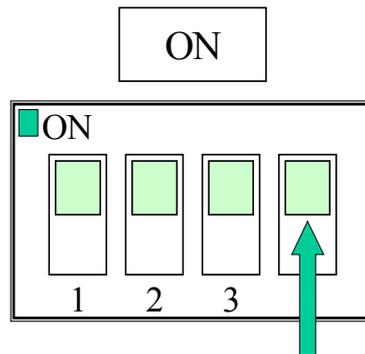

Push the switch upward to select "ON"

For example, if you want to select the clock ratio for a 333MHz Celeron™ CPU, according to the CPU clock ratio selection table mentioned in page 3-23, the switch setting will be "ON, OFF, OFF, ON". Following is the setting on the toggle switch:

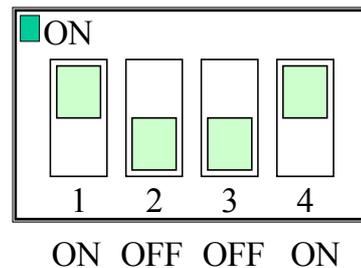

Note: In most case, you don't have to use the switch setting to select the CPU clock ratio because it can be detected by the mainboard automatically. The Celeron™ processor, Pentium™ II and Pentium™ III processors do not allow you to change the clock ratio, so the setting on the toggle switch will be invalid..

3.5 INSTALLATION OF DEVICE DRIVER

There is a CD which comes with the mainboard. The CD contains the device drivers which is necessary when installing the mainboard. Please refer to the following procedures to install the device drivers.

A. Install PCI Bridge:

(You don't have to install this driver if you are installing Windows 98. This driver is designed for Windows 95 and Windows NT only)

Step 1. Insert the CD into the CD ROM drive.

Step 2. Change the directory to "\Driver\mainboard\Intel\Utility "

Step 3. Run " WINP2X4.EXE" to complete the installation.

B. Install the IDE driver:

(You don't have to install this driver if you are installing Windows 98. This driver is designed for Windows 95 and Windows NT only)

Step 1. Insert the CD into the CD ROM drive.

Step 2. Change the directory to "\Driver\mainboard\Intel\IDE Driver "

Step 3. See "README.TXT" and choose the OS to install the device driver.

C. Install the Hardware Monitoring Program: (optional)

(Please note that the Hardware Monitoring is optional on the board)

Step 1. Insert the CD into the CD ROM drive.

Step 2. Select directory "\Driver\mainboard\Hardware Monitoring\W83783S"

Step 3. Run "SETUP.EXE" to install the hardware monitoring program.

D. Install the Sound card driver: (optional)

Please use the following procedure to install the device driver the ES1938S Solo1 chip installon the board

Step1. During the installation of Windows or when you select "refresh" in the Windows' system manager, Windows will detect the sound interface and request for the sound card device driver. Insert the CD into the CD ROM drive and specify the directory to complete the installation of sound card device driver.

Step2. Select "Driver\Sound\ESS\Solo 1\rackap\setup.exe" directory

Step3. Run "SETUP.EXE" to install the "RACK PLAYER" utility.

4. AWARD BIOS SETUP

4.1 GETTING STARTED

When the system is first time powered on or reset by user, the BIOS will enter the Power On Self Test routines (POST, which will display a copyright message on the screen and execute a diagnostics and initialization procedure.) In case that there is any error or malfunction detected, the BIOS will give a series of beep sound or display the error message on screen.

When the system is working normally, you will see the following screen (**Fig. 4-1**) on your PC system when power on.

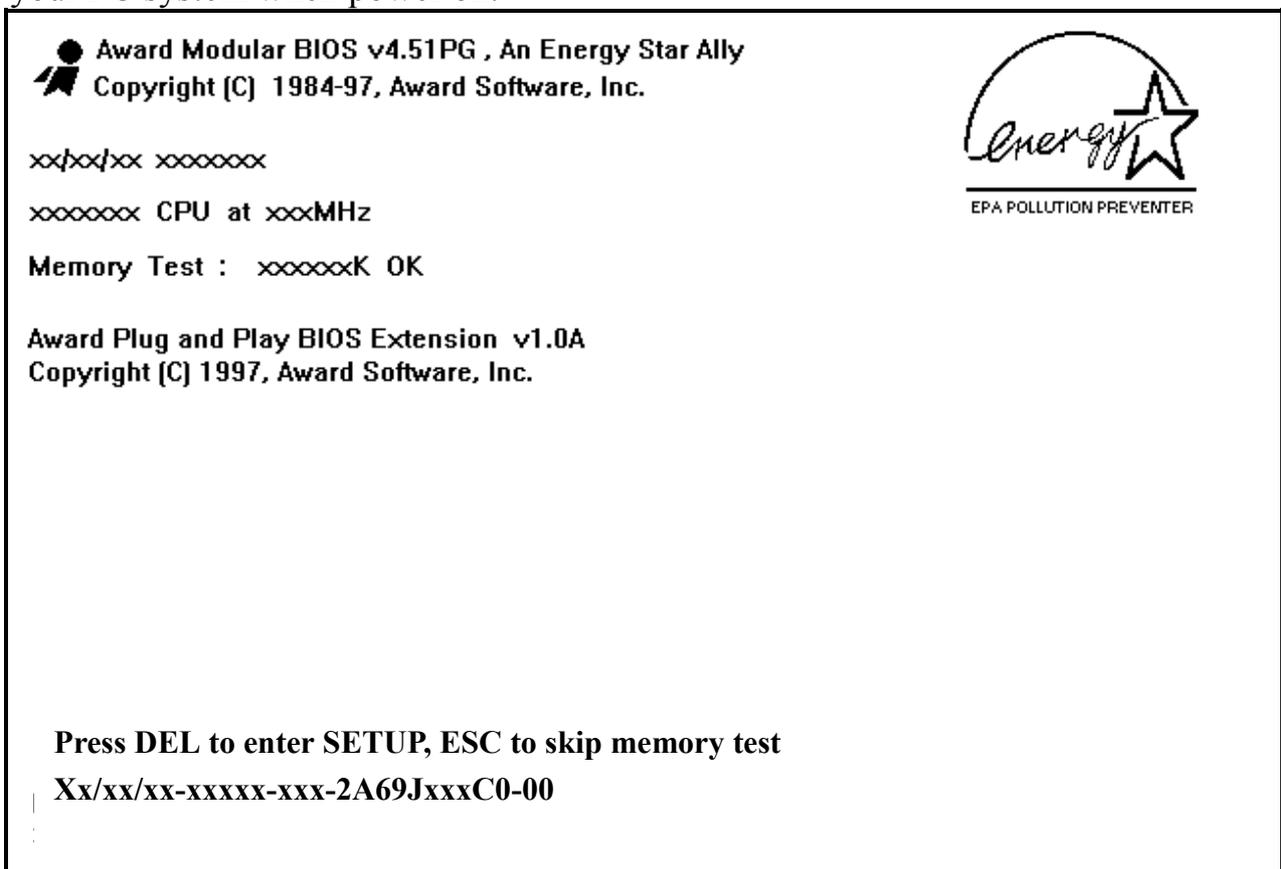


Fig. 4-1 Power-On Initial screen.

During the power on self testing (POST), the following message appears at the lower left corner of the screen:

" Press **DEL** to enter SETUP "

To execute the Award® BIOS CMOS Setup program, please press the **DEL** key. The STANDARD CMOS SETUP screen as shown in figure Fig. 4-2 will be triggered:

4.2 MAIN MENU

ROM PCI / ISA BIOS (2A69KXXX)
 CMOS SETUP UTILITY
 AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	SUPERVISOR PASSWORD
BIOS FEATURES SETUP	USER PASSWORD
CHIPSET FEATURES SETUP	IDE HDD AUTO DETECTION
POWER MANAGEMENT SETUP	SAVE & EXIT SETUP
PNP/PCI CONFIGURATION	EXIT WITHOUT SAVING
INTEGRATED PERIPHERALS	
LOAD SETUP DEFAULTS	
ESC : Quit	□□□□ : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Time, Date, Hard Disk Type ...	

Fig. 4-2 CMOS SETUP MAIN MENU screen.

4.3 CONTROL KEYS

Listed below is the explanation of the keys displayed at the bottom of the screens which will be used in the CMOS SETUP program :

- Arrow Keys** : Use the arrow keys to move the cursor to the desired item.
- Enter** : Select the desired item.
- F1** : Display the help screen for the selected feature.
- (Shift)F2** : To change the screen color, total 16 colors.
- ESC** : Exit to the previous screen.
- PgUp(-)/PgDn(+)** : To modify or change the content of the highlighted item.
- F5** : Retrieves the previous value from CMOS data, (only the current page setup will be retrieved).
- F7** : Loads the SETUP default values from BIOS default table, (only the current page setup will be loaded).
- F10** : Save all changes to CMOS RAM from the MAIN MENU

4.4 STANDARD CMOS SETUP

ROM PCI / ISA BIOS (2A69JXXX)
 STANDARD CMOS SETUP
 AWARD SOFTWARE, INC.

Date (mm : dd : yy) : Thr, Apr. 7 1999					
Time (hh : mm : ss) : 14 : 59 : 21					
HARD DISKS	TYPE SIZE CYLS HEAD PRECOMP LANDZ SECTOR MODE				
Primary Master	Auto 0 0 0 0 0 0 Auto				
Primary Slave	None 0 0 0 0 0 0 -----				
Secondary Master	Auto 0 0 0 0 0 0 Auto				
Secondary Slave	None 0 0 0 0 0 0 -----				
Drive A : 1.44M, 3.5 in.	<table border="1"> <tr> <td>Base Memory : 640 K</td> </tr> <tr> <td>Extended Memory : xxxxxx K</td> </tr> <tr> <td>Other Memory : xxxxxx K</td> </tr> <tr> <td><hr/>Total Memory : xxxxxx K</td> </tr> </table>	Base Memory : 640 K	Extended Memory : xxxxxx K	Other Memory : xxxxxx K	<hr/> Total Memory : xxxxxx K
Base Memory : 640 K					
Extended Memory : xxxxxx K					
Other Memory : xxxxxx K					
<hr/> Total Memory : xxxxxx K					
Drive B : None					
Floppy 3 mode support : Disabled					
Video : EGA/VGA					
Halt On : All Errors					
ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item				
F1 : Help	(Shift)F2 : Change Color				
	PU/PD/+/- : Modify				

Fig. 4-3 STANDARD CMOS SETUP screen.

MODE :

The BIOS on the mainboard is the updated one and which provides three different modes to support both normal IDE HDD and the one which is above 528MB:

- NORMAL** : For IDE hard disk drives which is smaller than 528MB.
- LBA** : For IDE hard disk drive which is above 528MB and it uses Logic Block Addressing (LBA) mode.
- Large** : For IDE HDD which is above 528MB and does not support LBA mode.
- Auto** : This mode will auto-detect your IDE driver during boot-up.

- Note :**
1. "large mode" may not be fully supported by all operation systems. It is suggested to be used with the MS-DOS but such hard disk drive is not very popular nowadays.
 2. Some certain operation systems (such as SCO®-UNIX™), only "NORMAL mode" is allowed when installation.)

Floppy 3 Mode Support: (Default setting: disabled)

This mode is for 3.5 inch high capacity floppy disk drive. If you have such drive installed in your PC system, please select enable, otherwise, use the default setting.

4.5 BIOS FEATURES SETUP

ROM PCI / ISA BIOS (2A69KXXX)
 BIOS FEATURES SETUP
 AWARD SOFTWARE, INC.

Virus Warning	: Disabled	Video BIOS Shadow	: Enabled
CPU Internal Cache	: Enabled	C8000-CBFFF Shadow	: Disabled
External Cache	: Enabled	CC000-CFFFF Shadow	: Disabled
Quick Power On Self Test	: Enabled	D0000-D3FFF Shadow	: Disabled
Boot Sequence	: A,C,SCSI	D4000-D7FFF Shadow	: Disabled
Swap Floppy Drive	: Disabled	D8000-DBFFF Shadow	: Disabled
Boot Up Floppy Seek	: Enabled	DC000-DFFFF Shadow	: Disabled
Boot Up NumLock Status	: On		
Gate A20 Option	: Fast		
Typematic Rate Setting	: Disabled		
Typematic Rate (Chars/Sec)	: 6		
Typematic Delay (Msec)	: 250		
Security Option	: Setup		
PS/2 Mouse function control	: Enabled		
PCI/VGA Palette Snoop	: Disabled		
OS Select For DRAM > 64MB	: Non-OS2	ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
Report No FDD For WIN 95	: Yes	F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values	(Shift)F2 : Color
		F7 : Load Setup Defaults	

Fig. 4-4 BIOS FEATURES SETUP screen.

Virus Warning :

Basically, The default setting of this feature is "Disabled" In order to avoid virus infection happens on your PC system, This mainboard provides the virus warning features in the BIOS. During and after the operation system is loaded, any attempt to write to the boot sector or partition table on the IDE hard disk drive will trigger this feature and give you some warning messages on the screen and then halt the system. When you find the message on your screen, please run the anti-virus program to see whether your system is infected by a virus or not.

Enabled : A warning message will be displayed on the screen when something attempts to access the boot sector or hard disk partition table.

Disabled : No warning message will appear on the screen when anything attempts to access the boot sector or hard disk partition table.

CPU Internal Cache / External Cache : (default setting: Enabled)

These fields allow you to turn on or turn off the Level 1 and Level 2 cache that built-in Celeron™ II processors.

Boot Sequence : (default setting: A,C,SCSI))

This field allows you to use some other device to boot the operating system. The options available are “A,C,SCSI”, “C,A,SCSI”, “C,CDROM,A”, “CDROM,C,A”, “D,A,SCSI”, “E,A,SCSI”, “F,A,SCSI”, “SCSI,A,C”, “SCSI,C,A”, “C only” and “LS/ZIP,C”.

When select to load the OS from “CDROM,C,A” or “LS/ZIP,C”, you must select the “HARD DISK TYPE and MODE” properly, the “Auto” selection is recommended so that you can use CDROM or LS/ZIP device to load the OS into your system. (You can find these items in the “STANDARD CMOS SETUP”)

Swap Floppy Drive : (default setting: Disabled)

When enable this option, the device name of the floppy drives will be swapped, For example, drive A will be treated as drive B, and drive B as Drive A.

PCI/VGA Palette Snoop : (default setting: Disabled)

Some display cards are non-standard VGA card (such as graphics accelerator or MPEG Card) which may not display color properly on your screen. “Enable” the setting in this field may correct this problem. Please leave it “Disabled” as the default setting shown above if you are using the normal display card.

OS Select For DRAM > 64MB : (default setting: Non-OS/2)

When you are using the “OS/2™” operating system and the system memory is more than 64MB, you will have to select the setting to “OS2”, otherwise, leave this on the default setting “Non-OS2” for all other operating systems.

PS/2 mouse function control : (default setting: Enabled)

This mainboard built-in a PS/2™ mouse port, In case that you prefer to connect your mouse to the serial port instead of using the PS/2™ mouse, you may choose “Disable” in this field so that the IRQ12 can be released for the other devices; If you are using the PS/2™ mouse, leave this field “Enabled”.

4.6 CHIPSET FEATURES SETUP

ROM PCI / ISA BIOS (2A69JXXX)
 CHIPSET FEATURES SETUP
 AWARD SOFTWARE, INC.

Auto Configuration	: Enabled	Auto Detect DIMM/PCI Clk	: Enabled
EDO DRAM Speed Selection	: 60ns	Spread Spectrum	: Disabled
EDO CASx# MA Wait State	: 2	CPU Host Clock	: Default
EDO RASx# Wait State	: 2		
SDRAM RAS-to-CAS Delay	: 3	CPU Warning Temperature	: 70□/158□
SDRAM RAS Precharge Time	: 3	Current CPU Temperature	: xx□/XX□
SDRAM CAS latency Time	: 3	Current CHASSIS FAN Speed	: xxxx RPM
SDRAM Precharge Control	: Disabled	Current CPU FAN Speed	: xxxx RPM
SDRAM Data Integrity Mode	: Non-ECC	Vcore : 2.01V, +3.3C	: 3.36V
System BIOS Cacheable	: Disabled	+5 V : 5.10V +12V	: 11.85V
Video BIOS Cacheable	: Disabled	-12V : -12.11V -5V	: -5.04V
Video RAM Cacheable	: Disabled	Shutdown Temperature	: 75□ / 167□
8 Bit I/O Recovery Time	: 1	ESC : Quit	□□□□ : Select Item
16 Bit I/O Recovery Time	: 1	F1 : Help	PU/PD/+/- : Modify
Memory Hole at 15M-16M	: Disabled	F5 : Old Values	(Shift)F2 : Color
Passive Release	: Enabled	F7 : Load Setup Defaults	
Delayed Transaction	: Disabled		
AGP Aperture Size (MB)	: 64		

Fig. 4-5 CHIPSET FEATURES SETUP screen.

WARNING : *The selection fields on this screen are provided for the professional technician who can modify the Chipset features to meet some specific requirement. If you do not have the related technical background, do not attempt to make any change except the following items.*

Auto Configuration : (default setting : “Enabled”)

Auto Configuration selects predetermined optimal values of chipset parameters. When Disabled, chipset parameters revert to setup information stored in CMOS. Many fields in this screen are not available when Auto Configuration is Enabled.

EDO DRAM Speed Selection : (default setting : “60 ns”)

When “Auto Configuration” is “Enabled”, you may use this field to select the *EDO DRAM* access time. There are two optimal values suggested for the chipset and CPU registers. You may select either “60 ns” or “50 ns” according to the different DRAMs which is installed on the board. Basically, “50 ns” will let you have better performance. However, “60ns” is recommended in most case causes it works with most DRAM modules.

When “Auto Configuration” is “Enabled”, the “DRAM speed selection” field will be disappeared and you may use the other fields to configure the DRAM speed. Basically, it is not recommended unless you are the professional technician.

EDO CASx# / RASx# MA Wait State : (default setting : “2”)

This item allows you to select MA Wait State for the related CAS and RAS memory control signal

SDRAM RAS-To-CAS Delay: (default setting : “3”)

This field allows you to set the relative delay between the row and column address strobes from DRAM (EDO).

The choice: 2, 3

SDRAM RAS Precharge Time: (default setting : “3”)

This field allows you to define the length of time for Row Address Strobe from DRAM (EDO) is allowed to precharge.

The choice: 2, 3.

SDRAM CAS latency Time: (default setting : “3”)

This field allows you to define the length of latency time for CAS Address Strobe from DRAM (EDO) is allowed to precharge.

The choice: 2, 3.

SDRAM Precharge Control: (default setting : “Disabled”)

This field allows you to decide whether DRAM (EDO) precharge is allowed.

The choice: Enabled, Disabled.

DRAM Data Integrity Mode: (default setting : “Non-ECC”)

Select Parity, ECC, or Disabled, depending on the type of DRAM installed in your system.

System BIOS Cacheable: (default setting : “Disabled”)

Select Enabled allows caching of the system BIOS ROM at F000h-FFFFh, resulting in better system performance. However, if any program writes to this memory area, a system error may result.

Enabled	BIOS access cached
Disabled	BIOS access not cached

Video BIOS / RAM Cacheable: (default setting : “Disabled”)

Selecting *Enabled* allows caching of the video BIOS ROM at C0000h to C7FFFh and the Video RAM, resulting in better video performance. However, if any program writes to this memory area, a system error may result.

8 Bit I/O Recovery Time: (default setting : “1”)

The recovery time is the length of time, measured in CPU clocks, which the system will delay after the completion of an input/output request. This delay takes place because the CPU is operating so much faster than the input/output bus that the CPU must be delayed to allow for the completion of the I/O. This item allows you to determine the recovery time allowed for 8 bit I/O. Choices are from NA, 1 to 8 CPU clocks

16 Bit I/O Recovery Time: (default setting : “1”)

This item allows you to determine the recovery time allowed for 16 bit I/O. Choices are from NA, 1 to 4 CPU clocks

Memory Hole at 15M-16M : (default setting : “Disabled”)

Some specific add-on cards may require a 1MB address space between 15MB and 16MB area. Please refer to the user’s manual of your add-on card carefully to see whether you will have to enable this field or not when you are installing a add-on card to the system..

Passive Release: (default setting: "Enabled")

When Enabled, CPU to PCI bus accesses are allowed during passive release. Otherwise, the arbiter only accepts another PCI master access to local DRAM..
The Choice: Enabled, Disabled

Delayed Transaction: (default setting: "Disabled")

The chipset has an embedded 32-bit posted write buffer to support delay transactions cycles. Select Enabled to support compliance with PCI specification version 2.1..

The Choice: Enabled, Disabled.

AGP Aperture Size (MB) : (default setting: 64MB)

You may use this field to define the memory size for the AGP card which can be used for 3D texture mapping. The memory size selectable in this field can be 4MB to 256MB.

Auto Detect DIMM/PCI Clk: (default setting : “Enable”)

When you select “Enabled”, the mainboard will detect the presence of devices on DIMM and PCI slots. When there is no device presented, the clock on the related DIMM and PCI slot will be disabled to reduce the electro magnetic interference (EMI).

Spread Spectrum: (default setting : “Disable”)

When you select “Enabled”, the special feature designed in the system chipset will be triggered and reduce the EMI as mentioned above.

CPU Host Clock : (default setting : "Default")

This option is used to select the front side bus frequency (FSB). The selectable option on this field will be 66MHz, 68MHz and 75MHz, for 66MHz processors, 100MHz, 103MHz, 112MHz and 114MHz for 100MHz processors. Basically, the higher host clock will give higher performance to your PC system. However, the system may become unstable when improper components are populated on the board.

When you have selected the FSB frequency, please select the CPU clock to decide the system speed.

The higher CPU “frequency” and “ratio” will surely give you the higher system performance. However, over clock is not recommended because it may cause the system unstable, especially the component like DRAM, HDD, Add on card is not fast enough.

The following events appears only when the hardware monitoring is installed

CPU Warning Temperature : (*Valid when W83783S is installed*)

The hardware monitoring device – Winbond W83783S (U4) is optional on this mainboard. When installed, you may use this field (and the fields below) to monitor the healthy status of your PC system. ***These selection fields can not be seen unless you have the W83783S (U4) installed on the board and you have enable the “Throttle Duty Cycle” in the “Power Management Setup” (see section 4.7)***

There is a CD comes with the mainboard. You will find the hardware monitoring program in the CD. When you have the hardware monitoring software installed in your PC system, it will let you have a bodyguard in your PC system and it will keep monitoring the CPU temperature, Cooling fan speed, system voltage ... etc. Whenever it detects the abnormal condition occurs, it will give you the warning message or slow down the CPU to avoid serious damage to the PC system.

Current CPU Temperature: (*Valid when W83783S is installed*)

Current CHASSIS FAN Speed: (*Valid when W83783S is installed*)

Current CPU FAN Speed: (*Valid when W83783S is installed*)

System Voltages: (*Valid when W83783S is installed*)

The items shown above indicate the status of system healthy status. Such information will be used by the hardware monitoring program which comes with the mainboard.

Shutdown Temperature: (*Valid when W83783S is installed*)

The PC system will be shutdown when reach to the given temperature defined in this field so that the CPU can be protected from damage.

4.7 POWER MANAGEMENT SETUP

ROM PCI / ISA BIOS (2A69KXXX)
 POWER MANAGEMENT SETUP
 AWARD SOFTWARE, INC.

ACPI function	: Disabled	** Reload Global Timer Events **	
Power Management	: User define	IRQ [3-7 , 9-15], NMI	: Enabled
PM Control by APM	: Yes	Primary IDE 0	: Disabled
Video Off Method	: Blank Screen	Primary IDE 1	: Disabled
Video Off After	: Standby	Secondary IDE 0	: Disabled
MODEM Use IRQ	: 3	Secondary IDE 1	: Disabled
Doze Mode	: Disable	Floppy Disk	: Disabled
Standby Mode	: Disable	Serial Port	: Enabled
Suspend Mode	: Disable	Parallel Port	: Disabled
HDD Power Down	: Disable		
Throttle Duty Cycle	: 62.5%		
PCI/VGA Act- Monitor	: Enabled		
Soft-Off by PWR-BTTN	: Instant-off.		
PowerOn by Ring / LAN	: Disabled	ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
Resume by Alarm	: Disabled	F1 : Help	PU/PD/+/- : Modify
		F5 : Old Values	(Shift)F2 : Color
		F7 : Load Setup Defaults	

Fig. 4-6 POWER MANAGEMENT SETUP screen.

WARNING : *The selection fields on this screen are provided for the professional technician who can modify the Chipset features to meet some specific requirement. If you do not have the related technical background, do not attempt to make any change except the following items.*

ACPI function : (Default setting: “Disabled”)

When Enabled, the PC system will have the ACPI function. However, if you want to use the ACPI function, you have to use the most updated operation system like Windows 98 at the same time. When installing Windows 98, you will have to give some specific parameter so that the ACPI function will be installed into your PC system.. (please refer to the manual of Windows 98 for the parameters)

When the ACPI function is installed in your PC system successfully, you will find the ACPI function in the power management icon. The PW switch (mentioned in

Section 3) defined by the ACPI is different to the BIOS setup and it always has the higher priority than what was defined in the system BIOS.

According to what was defined by the ACPI in Windows 98, the PW switch can be either the "Standby switch" or "shutdown switch". When "Standby switch" is selected, the first click on the PW switch will have the PC system turn into standby mode. If you want to "wake up" the PC system, you will have to use the devices (such as keyboard, mouse .. etc) which is specified in the Windows 98 ACPI function to trigger the PC system so that it will be back to full-on mode. For more detail of ACPI function, please refer to Windows 98 user's manual for more detail information.

Power Management : (Default setting: "User Define")

This category allows you to select the type (or degree) of power saving and is directly related to the following modes:

1. Doze Mode
2. Standby Mode
3. Suspend Mode
4. HDD Power Down

There are four selections for Power Management, three of which have fixed mode settings.

Disable (default)	No power management. Disables all four modes
Min. Power Saving	Minimum power management. Doze Mode = 1 hr. Standby Mode = 1 hr., Suspend Mode = 1 hr., and HDD Power Down = 15 min.
Max. Power Saving	Maximum power management -- ONLY AVAILABLE FOR SL CPU . Doze Mode = 1 min., Standby Mode = 1 min., Suspend Mode = 1 min., and HDD Power Down = 1 min.
User Defined	Allows you to set each mode individually. When not disabled, each of the ranges are from 1 min. to 1 hr. except for HDD Power Down which ranges from 1 min. to 15 min. and disable.

PM Control APM: (Default setting: "Yes")

When enabled, an Advanced Power Management device will be activated to

enhance the Max. Power Saving mode and stop the CPU internal clock.
If the Max. Power Saving is not enabled, this will be preset to *No*.

Video Off Method: (Default setting: Blank screen)

When you are using the Green Monitor with your PC system, there are three modes selectable in this field to save the power energy

V/H SYNC+Blank	This selection will cause the system to turn off the vertical and horizontal synchronization ports and write blanks to the video buffer.
Blank Screen	This option only writes blanks to the video buffer.
DPMS	Initial display power management signaling.

Video Off After: (Default setting: "Standby")

When enabled, this feature allows the VGA adapter to operate in a power saving mode.

N/A	Monitor will remain on during power saving modes.
Suspend	Monitor blanked when the systems enters the Suspend mode.
Standby	Monitor blanked when the system enters Standby mode.
Doze	Monitor blanked when the system enters any power saving mode.

Modem Use IRQ: (Default setting: 3)

This mainboard has the ACPI feature designed on the board and it will “wakeup” automatically when it detects the incoming modem Ring-in signal. Before you can use the Ring-in signal to wakeup your PC system, you have to install the “External” modem to your PC system and tell the PC system which serial port connects to the modem by selecting the IRQ in this field. (officially, COM 1 uses IRQ4, and COM 2 uses IRQ3)

Doze Mode: (Default setting: Disable)

When enabled and after the set time of system inactivity, the CPU clock will run at slower speed while all other devices still operate at full speed

Standby Mode: (Default setting: Disable)

When enabled and after the set time of system inactivity, the fixed disk drive and the video would be shut off while all other devices still operate at full speed.

Suspend Mode: (Default setting: Disable)

When enabled and after the set time of system inactivity, all devices except the CPU will be shut off.

HDD Power Down: (Default setting: Disable)

When enabled and after the set time of system inactivity, the hard disk drive will be powered down while all other devices remain active.

PCI/VGA Active Monitor: (Default setting: Enabled)

When CPU enters the Green mode, the system will keep scanning the status of the monitor. You may use this field to select whether you are going to have the monitor get into Green mode or not:

Enable: The screen display will not be off (or powered off) when there is the video signal sending from VGA card to monitor.

Disable: The screen display will be blank off (or powered off) no matter whether there is the video signal sending from VGA card to monitor or not.

Soft-Off by PWR-BTTN : (Default setting: “Instant-off.”)

This field allows user to define the feature of the “PW” connector (it is used to connect the power button). The setting can be either “Delay 4 Sec.” or “Instant-Off”. Please refer to page 3-16 for details of function description.

PowerOn by Ring / LAN : (Default setting: “Disabled”.)

When “Enabled”, you can resume the system from Sleep or Suspend mode by using a MODEM Ring-in or a LAN signal. In order to make this feature works normally, there are some requirement need to be noticed, please see Section 2 for details.

Resume by Alarm : (Default setting : “Disabled”)

When "Enabled", the following two selection fields - "Date (of Month) Alarm" and "Time (hh:mm:ss) Alarm" will appear on the screen. You can use these two fields to set the date and time which you want to resume the system from Sleep or Suspend mode. The "Time" must be set in a 24-hour format. (for more detail information, please refer to Section 2).

Thorttle Duty Cycle: (Default setting: 62.5%)

When there is the Winbond W83783S (U4) installed on the board, the CPU speed will be slowed down ("Throttling Speed") when the W83783S detects over heating on the CPU. Slowing down the CPU speed will be the best way to cool down the CPU temperature and it will protect the CPU from damaged. Use this option to select the "Throttling Speed" to protect your CPU when over heating.

****** Reload Global Timer Events ******

When "Enabled", an event occurring on each device listed below restarts the global time for Standby mode.

IRQ[3 -7, 9-15], NMI
Primary IDE 0
Primary IDE 1
Secondary IDE 0
Secondary IDE 1
Floppy Disk
Serial Port
Parallel Port

4.8 PNP/PCI CONFIGURATION

ROM PCI / ISA BIOS (2A69KXXX)
 PNP/PCI CONFIGURATION
 AWARD SOFTWARE, INC.

PNP OS Installed	: No	Assign IRQ For VGA	: Disabled
Resources Controlled By	: Manual	Used MEM base addr	: N/A
Reset Configuration Data	: Disabled	Assign IRQ For USB	: Enabled
IRQ-3 assigned to	: PCI/ISA PnP		
IRQ-4 assigned to	: PCI/ISA PnP		
IRQ-5 assigned to	: PCI/ISA PnP		
IRQ-7 assigned to	: PCI/ISA PnP		
IRQ-9 assigned to	: PCI/ISA PnP		
IRQ-10 assigned to	: PCI/ISA PnP		
IRQ-11 assigned to	: PCI/ISA PnP		
IRQ-12 assigned to	: Legacy ISA		
IRQ-14 assigned to	: PCI/ISA PnP		
IRQ-15 assigned to	: PCI/ISA PnP		
DMA-0 assigned to	: PCI/ISA PnP		
DMA-1 assigned to	: PCI/ISA PnP	ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
DMA-3 assigned to	: PCI/ISA PnP	F1 : Help	PU/PD/+- : Modify
DMA-5 assigned to	: PCI/ISA PnP	F5 : Old Values	(Shift)F2 : Color
DMA-6 assigned to	: PCI/ISA PnP	F7 : Load Setup Defaults	
DMA-7 assigned to	: PCI/ISA PnP		

Fig. 4-8 PNP/PCI CONFIGURATION setup screen.

WARNING : *The selection fields on this screen are provided for the professional technician who can modify the Chipset features to meet some specific requirement. If you do not have the related technical background, do not attempt to make any change.*

PNP OS Installed : (Default setting is “No”)

Select Yes if the system operating environment is Plug-and-Play aware (e.g., Windows 95/98).

The Choice: Yes and No

Resources Controlled by : (Default setting is “Manual”)

The Award Plug and Play BIOS can automatically configure all the boot and Plug and Play-compatible devices. If you select Auto, all the interrupt request (IRQ) and DMA assignment fields disappear, as the BIOS automatically assigns them.

The choice: *Auto* and *Manual*

Reset Configuration Data : (Default setting is “Disabled”)

Normally, you leave this field Disabled. Select Enabled to reset Extended System Configuration Data (ESCD) when you exit Setup if you have installed a new add-on and the system reconfiguration has caused such a serious conflict that the operating system cannot boot.

IRQ # Assigned to: (Default setting is “PCI/ISA PnP”)

When resources are controlled manually, assign each system interrupt as one of the following types, depending on the type of device using the interrupt:

Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific interrupt (such as IRQ4 for serial port 1).

PCI/ISA PnP Devices compliant with the Plug and Play standard, whether designed for PCI or ISA bus architecture.

DMA # Assigned to: (Default setting is “PCI/ISA PnP”)

When resources are controlled manually, assign each system DMA channel as one of the following types, depending on the type of device using the interrupt:

Legacy ISA Devices compliant with the original PC AT bus specification, requiring a specific DMA channel

PCI/ISA PnP Devices compliant with the Plug and Play standard, whether designed for PCI or ISA bus architecture.

Used MEM base addr: (Default setting is “N/A”)

Select a base address for the memory area used by any peripheral that requires high memory.

The Choice: C800, CC00, D000, D400, D800, DC00, N/A..

Assign IRQ For VGA/USB

The system's IRQ signals are limited and sometimes you may feel like to some more IRQ signals for your add-on cards. The system BIOS of this mainboard allows you to disable the IRQ which is supposed to be connected to VGA and USB ports. When you have choose to disable the IRQ on VGA or USB port, the IRQ on the related port will be released and becomes available for other devices.

Before you decide to proceed with the change, please make sure that your USB and VGA adapter will not use the IRQ signal. Otherwise, your PC system will become abnormal and the devices connected to these ports may not be working at all.

It is very simple to tell the difference. If you are going to disable the IRQ on the USB port, check whether is any device connected to the USB port. If you can not find any device, you may disable the IRQ on the USB port and have the IRQ used by other device.

As for VGA adapter, it will be a little difficult. You may try to find whether your VGA card requires the IRQ signal or not. If you can not find the information from the user's manual of your VGA card. You may use the following information to make your choice:

1. Most VGA cards do not need to have the IRQ signal.
2. If you can not find the feature connector on your VGA card, than it is quite possible that your VGA card does not need the IRQ signal.
3. If your VGA card has the feature connector on the VGA card but it has nothing connected to it. In this case, you still may have the IRQ disabled.

If you have another add on card like video capture card which is connected to the feature connector on the VGA card, In this case, you can not disable the IRQ signal because the IRQ signal will be connected to the video capture card.

4.9 INTEGRATED PERIPHERALS

ROM PCI / ISA BIOS (2A69JXXX)
 INTEGRATED PERIPHERALS
 AWARD SOFTWARE, INC.

IDE HDD Block Mode	: Enabled	Parallel Port Mode	: SPP
IDE Primary Master PIO	: Auto		
IDE Primary Slave PIO	: Auto		
IDE Secondary Master PIO	: Auto		
IDE Secondary Slave PIO	: Auto		
IDE Primary Master UDMA	: Auto		
IDE Primary Slave UDMA	: Auto		
IDE Secondary Master UDMA	: Auto		
IDE Secondary Slave UDMA	: Auto		
On-Chip Primary PCI IDE	: Enabled		
On-Chip Secondary PCI IDE	: Enabled		
USB Keyboard Support	: Disabled		
Init Display First	: PCI Slot		
:			
KBC input clock	: 8 MHz		
Onboard FDC Controller	: Enabled	ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
Onboard Serial Port 1	: 3F8/IRQ4	F1 : Help	PU/PD/+/- : Modify
Onboard Serial Port 2	: 2F8/IRQ3	F5 : Old Values	(Shift)F2 : Color
UR2 Mode	: Standard	F7 : Load Setup Defaults	
Onboard Parallel Port	: 378/IRQ7		

Fig. 5-7 INTEGRATED PERIPHERALS setup screen.

WARNING: *The selection fields on this screen are provided for the professional technician who can modify the Chipset features to meet some specific requirement. If you do not have the related technical background, don't attempt to make any change except the following items.*

You may use the selection options on this screen to Enable or Disable some of the onboard interfaces like IDE, FDC and USB. You can also change the IDE ports to PIO Mode 0, mode 1, mode 2 or mode 4. The default setting is “auto”, It is the recommended setting to users because it will decide the transfer protocol and let your PC system has the best performance.

IDE HDD Block Mode: (Default setting : “Enabled”)

This selection allows your hard disk controller to use the fast block mode to transfer data to and from your hard disk drive (HDD).

Enabled	IDE controller uses block mode.
Disabled	IDE controller uses standard mode.

IDE Primary/Secondary Master/Slave PIO: (Default setting : “Auto”)

The four IDE PIO (Programmed Input/Output) fields let you set a PIO mode (0-4) for each of the four IDE devices that the onboard IDE interface supports. Modes 0 through 4 provide successively increased performance. In Auto mode, the system automatically determines the best mode for each device.

IDE Primary/Secondary Master/Slave UDMA: (Default setting : “Auto”)

Ultra DMA/33 implementation is possible only if your IDE hard drive supports the Ultra DMA/33 mode and the operating environment includes a DMA driver (Windows 95 will need the IDE bus master driver, please use the device driver which is included in the CD). If your hard drive and your system software both support Ultra DMA/33, select Auto to enable BIOS support.

The Choice: Auto, Disabled

On-Chip Primary/Secondary PCI IDE: (Default setting : “Enabled”)

The integrated peripheral controller contains an IDE interface with support for two IDE channels. Select Enabled to activate each channel separately.

Init AGP Display First: (Default setting : PCI slot)

When you have both the AGP and PCI VGA card installed in the system, you can use this field to decide the display priority.

AGP: the display will be active on the AGP adapter.

PCI slot: The display will be active on the PCI VGA adapter

USB Keyboard Support: (Default setting : “Disabled”)

Select "Enabled" in this field will allow operation system to use the USB keyboard. If there is no USB keyboard connected to the PC system, leave it "Disabled".

Onboard FDD Controller: (Default setting : “Enabled”)

This should be enabled if your system has a floppy disk drive (FDD) installed on the system board and you wish to use it. Even when so equipped, if you add a higher performance controller, you will need to disable this feature.

The Choice: Enabled, Disabled

Onboard Serial Port 1/Port 2: (Default setting : “3F8/IRQ4, 2F8/IRQ3”)

This item allows you to determine access onboard serial port 1/port 2 controller with which I/O address.

The Choice: 3F8/IRQ4, 2F8/IRQ3, 3E8/IRQ4, 2E8/IRQ3, Disabled, Auto.

UART 2 Mode: (Default setting : “Standard”)

This item allows you to determine which Infra Red (IR) function of onboard I/O chip.

The Choice: Standard, Sharp IR, IrDa SIR.

Onboard Parallel Port: (Default setting : “378/IRQ7”)

Select a logical LPT port name and matching address for the physical parallel (printer) port.

The choice: 378H/IRQ7, 278H/IRQ5, 3BCH/IRQ7, Disabled

Parallel Port Mode: (Default setting : “SPP”)

Select an operating mode for the onboard parallel port. Select Compatible or Extended unless you are certain both your hardware and software support EPP or ECP mode.

The choice: ECP/EPP, ECP, SPP, EPP 1.7, EPP 1.9.

4.10 LOAD SETUP DEFAULTS

ROM PCI / ISA BIOS (2A69JXXX)
 CMOS SETUP UTILITY
 AWARD SOFTWARE, INC.

STANDARD CMOS SETUP BIOS FEATURES SETUP CHIPSET FEATURES SETUP POWER MANAGEMENT SETUP PNP/PCI CONFIGURATION INTEGRATED PERIPHERALS LOAD SETUP DEFAULTS	SUPERVISOR PASSWORD USER PASSWORD IDE HDD AUTO DETECTION SAVE & EXIT SETUP EXIT WITHOUT SAVING
ESC : Quit F10 : Save & Exit Setup	□□□□ : Select Item (Shift)F2 : Change Color
Time, Date, Hard Disk Type ...	

If you lost the CMOS data or you don't know how to complete the setup procedure, you may use this option to load the SETUP default values from the BIOS default table. It is easy to load the default value, simply highlight the "LOAD SETUP DEFAULTS" field and then press the "Enter" key, when you see the "LOAD SETUP DEFAULTS (Y/N)" displayed on the screen, response to it with "Y" and then press the "Enter" key. the SETUP default values will be loaded. Basically, the SETUP default settings are the best-case values that will optimize system performance and increase system stability.

In case that the CMOS data is corrupted, the SETUP DEFAULTS settings will be loaded automatically when you press the "Del" key and enter the main setup screen. So you may select "SAVE & EXIT SETUP" to leave setup program and the system is loaded with the default settings.

4.12 USER PASSWORD

ROM PCI / ISA BIOS (2A69KXXX)
 CMOS SETUP UTILITY
 AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	SUPERVISOR PASSWORD
BIOS FEATURES SETUP	USER PASSWORD
CHIPSET FEATURES SETUP	IDE HDD AUTO DETECTION
POWER MANAGEMENT SETUP	SAVE & EXIT SETUP
PNP/PCI CONFIGURATION	EXIT WITHOUT SAVING
INTEGRATED PERIPHERALS	
LOAD SETUP DEFAULTS	
ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Time, Date, Hard Disk Type ...	

The User Password can be used to check the user's authority. However, this password entry is somewhat different to the "SUPERVISOR PASSWORD" mentioned in previous page. The User Password will have different function according to the "Supervisor Password" and the "Security Option" setup in Section 4.5:

A. When there is the password stored in the "SUPERVISOR PASSWORD"

1. When "Setup" is selected in Security Option:

Users can use the "User Password" to log into the BIOS setup program, but they can only select "User Password", "SAVE & EXIT SETUP" and "EXIT WITHOUT SAVING". (Use the Supervisor Password to log into the PC system, you will have the complete right to change all settings in the BIOS setup program)

2. When "System" is selected in Security Option:

When turn on the PC system, it will request you to enter the Password. Without the correct password, the PC system will stop and the operation system will not be loaded.

B. When there is no password stored in the "SUPERVISOR PASSWORD"**1. When "Setup" is selected in Security Option:**

Users can use the "User Password" to log into the BIOS setup program, and they can make all the change in the BIOS setup program.

2. When "System" is selected in Security Option:

When turn on the PC system, it will request you to enter the Password. Without the correct password, the PC system will stop and the operation system will not be loaded.

4.13 IDE HDD AUTO DETECTION

ROM PCI/ISA BIOS (2A69JXXX)
 CMOS SETUP UTILITY
 AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	PASSWORD SETTING
BIOS FEATURES SETUP	IDE HDD AUTO DETECTION
CHIPSET FEATURES SETUP	SAVE & EXIT SETUP
POWER MANAGEMENT SETUP	EXIT WITHOUT SAVING
PNP/PCI CONFIGURATION	
INTEGRATED PERIPHERALS	
LOAD SETUP DEFAULTS	
ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Time, Date, Hard Disk Type ...	

In order to make the IDE hard disk known to the system, you need to tell the system what kind of hard disk is connected to the mainboard by giving a set of hard disk parameters. Sometimes it is not easy for users to find the proper parameters for their IDE hard disk drive. In order to help users to find the parameters, the system BIOS provides a convent way – the auto detection of IDE hard disk drive.

To run the auto detection program is extremely easy. Move the selection bar to “IDE HDD AUTO DETECTION” and then press “Enter”, the system BIOS take over the job and try to detect the type of IDE hard disk. If it succeeds, you will see a list of hard disk with its related parameters. You may press on the “Y” key (or select one of the hard disk type listed on the screen). The system BIOS will transfer the parameters to the corresponding fields in the STANDARD CMOS SETUP menu and you have completed the IDE hard disk setup.

4.14 "SAVE & EXIT SETUP" & "EXIT WITHOUT SAVING"

ROM PCI / ISA BIOS (2A69JXXX)
 CMOS SETUP UTILITY
 AWARD SOFTWARE, INC.

STANDARD CMOS SETUP	PASSWORD SETTING
BIOS FEATURES SETUP	IDE HDD AUTO DETECTION
CHIPSET FEATURES SETUP	SAVE & EXIT SETUP
POWER MANAGEMENT SETUP	EXIT WITHOUT SAVING
INTEGRATED PERIPHERALS	
PNP/PCI CONFIGURATION	
LOAD SETUP DEFAULTS	
ESC : Quit	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> : Select Item
F10 : Save & Exit Setup	(Shift)F2 : Change Color
Time, Date	Hard Disk Type

SAVE & EXIT SETUP:

This option will save all setup values to CMOS RAM & EXIT SETUP routine, by moving the selection bar to "SAVE & EXIT SETUP" and pressing "Enter" key, then types "Y" and "Enter" key, the values will be saved and all the information will be stored in the CMOS memory, and then the setup program will be terminated and the system will start to reboot.

EXIT WITHOUT SAVING:

This item exit the setup routine without saving any changed values to CMOS RAM, When you do not want to save your change to the CMOS memory, you may choose to run this option and the setting what you made in the BIOS setup routine will be given away.

Move the selection bar to "EXIT WITHOUT SAVING" and click on the "Enter" key, then you will be asked to confirm the action to exit, press the "Y" and "Enter" key, the setup program will be terminated and the system will start to reboot.