

Warning

To ensure the reliability of the computer. NEVER reconfigure the board while the power is ON.

If you wish to reconfigure the board at any time. Ensure that the power to the system is turned OFF before changing any hardware settings. Such as DIP switches or jumpers.

Checklist

Your 386DX 33/40 Cache package contains the following:

- * One 386DX 33/40 Cache Mother Board
- * One user manual.

Specification:

- * Using Intel 80386DX-33/40 PGA or PQFP.
Intel 80387-33 MHz, IIT 387-40MHz.
Cyrix 486DLC-33 MHz
- * 100% IBM PC/AT compatible.
- * 128KB direct mapped cache.
- * Support up to 32MB memory on board, using 256K, 1MB
4MB SIMM module.
- * Page mode memory architecture.
- * Shadow RAM function for SYSTEM and VIDEO BIOS.
- * Hardware/Software switchable turbo/normal system speed.
- * Programmable bus speed
(1/3, 1/4, 1/5, 1/6 of system clock)

Dimensions:

The 386DX 33/40 Mother Board measures approximately
6.6 inches by 8.6 inches (17.0cm by 22.0cm)

Performance:

AMD 386DX-33MHz


System Speed	33 MHz
Landmark Speed (V2.00)	50.3 MHz
Power Meter (V1.7)	7.8 MIPS

AMD 386DX-40MHz

System Speed	40 MHz
Landmark Speed (V2.00)	60.4 MHz
Power Meter (V1.7)	9.4 MIPS

CHAPTER 2 Configuration and Layout

Physical Layout:

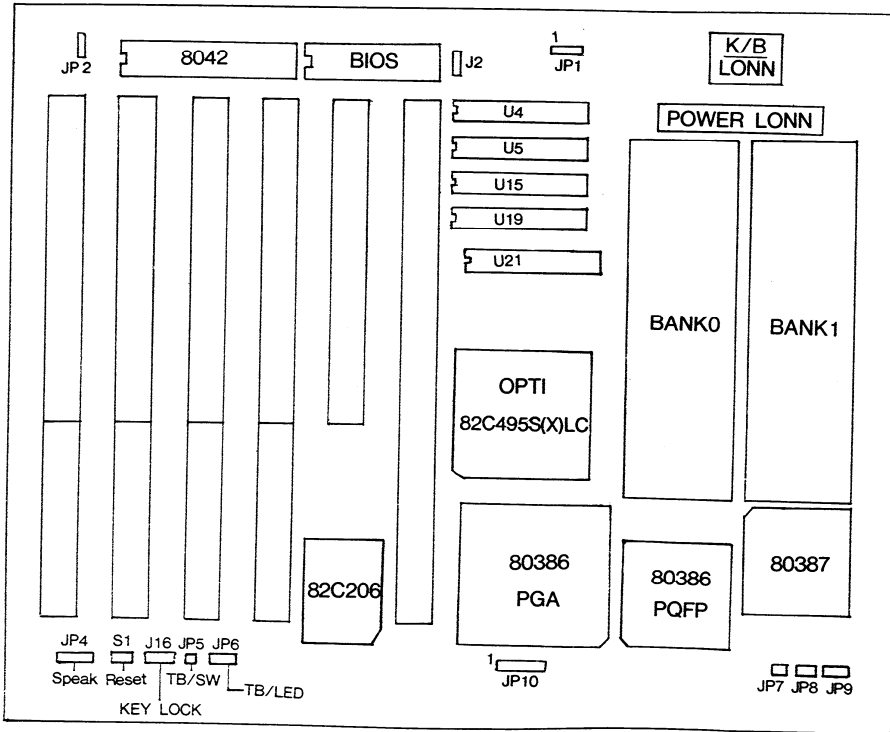

Memory Configuration:

BANK 0	BANK 1	Memory Size
256K		1M
256K	256K	2M
1M		4M
1M	256K	5M
256K	1M	5M
1M	1M	8M
4M		16M
1M	4M	20M
4M	1M	20M
4M	4M	32M

Connector Description

Power Supply Connectors

If you are installing the 386DX 33/40 yourself, the final step is attaching the power supply cable to the motherboard at connector POWER CON. which are located in the upper right quadrant of the board. There are some cables on the power supply.

The table below lists the voltages provided to the motherboard by the power supply output connectors.

<u>Pin No.</u>	<u>Output Voltages</u>
1	Power Good
2	+5V
3	+12V
4	-12V
5	GND
6	GND
1	GND
2	GND
3	-5V
4	+5V
5	+5V
6	+5V

Keyboard Connector

The 386DX 33/40 motherboard has a standard keyboard connection port at the rear of the board.

Pin configurations and signal assignments are shown in the figures below:

<u>Pin No.</u>	<u>Signal Name</u>
1	Clock
2	Data
3	NC
4	GND
5	VCC (+5V)

External Battery Connector: (J2)

J2 on the motherboard is the connector used for the external battery pack. The battery pack connected should range from +4.5V to +6V DC and should never be less than +3.5V DC for proper operation.

The pinouts for the connector are listed below:

<u>Pin No.</u>	<u>Assignment</u>
1	DC Input
2	NC
3	GND
4	GND

Keylock Connector (J16)

J16 is used to connector the keylock connector on the front panel of the case.

Pin assignments are as follows:

Pin No.	Assignment
1	Power Led Anode
2	NC
3	GND
4	Keylock
5	GND

Speaker Connector(JP4)

Speaker connector JP4 is used to connect the speaker to the speaker to the system board.

Pin assignments are as follows:

Pin No.	Assignment
1	Speaker Out
2	NC
3	NC
4	+5V

Clock Selection (JP7 & JP8 & JP9)

Clock Jump	25MHz	33MHz	40MHz
JP7	Open	Open	CLOSE
JP8	Open	CLOSE	CLOSE
JP9	CLOSE	Open	Open

Turbo Switch(JP5)& Turbo Led(JP6)

This feature enables and disables a toggle switch within the system which is able to change the system speed. When the switch is ON, the system speed is in the fast Turbo Mode. When the switch is OFF it is in the Normal Mode.

Turbo Switch	Turbo LED	Speed
Short	Light On	Turbo
Open	Light Off	Normal

Reset Connector (S1)

Reset Switch S1 is used to connect the reset switch to restart the system.

Pin assignments are as follows:

Pin No.	Assignment
1	Reset strobe
2	GND

CMOS RAM Discharge Jumper (JP1)

The factory setting shorts pin2 and pin3 of jumper JP1 for Battery Charge Mode.

JP1	Battery
2-3	Charge
1-2	Discharge

Monitor Display Setting (JP2)

JP2	Monitor
On	Color
Off	Monochrome